

MaxiSys_Citroen_V5.00 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
BERLINGO	Injection	1.1 L HDY/HDZ BOSCH MA3.1	●			●		
BERLINGO	Injection	1.4 L KFX MMIAP	●			●		
BERLINGO	Injection	1.8 L LFX MMIAP	●			●		
BERLINGO	Injection	1.1 L HDY/HDZ BOSCH MA3.1	●			●		
BERLINGO	Injection	1.1 L HFX BOSCH M7.4.4	●	●	●	●	●	
BERLINGO	Injection	1.4 L KFW SAGEM S2000	●			●	●	
BERLINGO	Injection	1.4 L KFW SAGEM S2000	●			●	●	
BERLINGO	Injection	1.4L KFX SAGEM SL96	●			●	●	
BERLINGO	Injection	1.4 L KFX BOSCH MP7.3	●			●	●	
BERLINGO	Injection	1.8 L LFX MMIAP	●			●		
BERLINGO	Injection	2.0 L RHY BOSCH EDC15C2	●	●	●	●	●	
BERLINGO	Injection	1.9 L WJY LUCAS DCN2	●	●	●	●	●	
BERLINGO	Anti-lock brake system		●			●	●	
BERLINGO	Injection	RHY SIEMENS SID801	●	●	●	●	●	
BERLINGO	Airbag		●					
BERLINGO	BSI		●			●	●	
BERLINGO	Radio post-equipment		●			●	●	
BERLINGO	CD player		●			●	●	
BERLINGO	Instrument panel		●			●	●	
BERLINGO	Airbag		●					
BERLINGO	Airbag		●					
BERLINGO (B9)	Power steering electric pump unit	GEP	▲	▲	▲	▲	○	20527,
BERLINGO (B9)	Rain sensor	PLUIE LUMINOSITE	▲	▲	▲	○	○	20527,
BERLINGO (B9)	Air conditioning ECU	CLIM REGULEE	▲	▲	▲	▲	▲	20016, 20019, 20033, 20202, 20474, 20527,
BERLINGO (B9)	Air conditioning ECU	CLIM	▲	▲	▲	▲	▲	20033, 20527,
BERLINGO (B9)	Radio	AUTORADIO	▲	▲	▲	▲	▲	20527, 20186, 20331,
BERLINGO (B9)	Radio	RD45	▲	▲	▲	▲	▲	20844, 20030, 20519, 20527, 20844, 20030, 20519,
BERLINGO (B9)	CD player	CHANGEUR_CD	●	●	●	○	●	20186, 20331, 20110, 20527, 20178, 20390, 20527,
BERLINGO (B9)	Alarm	ALARME	▲	▲	▲	▲	▲	20125, 20115, 20125, 20115, 20115, 20527,
BERLINGO (B9)	Switch module under the steering wheel (Top of column)	HDC	▲	▲	▲	▲	▲	20527,
BERLINGO (B9)	gearbox	CFC300P	●	●	●	●	●	20527,
BERLINGO (B9)	Engine ECU	ME745	●	●	●	●	●	20399, 20631, 20721, 20527,
BERLINGO (B9)	Engine ECU	EDC16C3	●	●	●	●	●	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20468, 20296, 20719, 20226, 20241, 20344, 20470, 20483, 20246, 20635, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
BERLINGO (B9)	Engine ECU	MEV17_4_EURO5	●	●	●	●	●	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
BERLINGO (B9)	Engine ECU	EDC17C10_BR2	●	●	●	●	●	20456, 20456, 20088, 20089, 20456, 20456, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
BERLINGO (B9)	Engine ECU	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
BERLINGO (B9)	Engine ECU	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
BERLINGO (B9)	Engine ECU	HDI_SID807	●	●	●	●	●	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
BERLINGO (B9)	Multifunction display	EMF A	▲	▲	▲	▲	▲	20137, 20151, 20137, 20151, 20527,
BERLINGO (B9)	Multifunction display	EMF C	▲	▲	▲	▲	▲	20137, 20151, 20137, 20151, 20527,
BERLINGO (B9)	Parking aid	AAS	▲	▲	▲	▲	○	20457, 20527,
BERLINGO (B9)	Built-in Systems Interface (BSI)	BSI	▲	▲	▲	▲	▲	20228, 20411, 20844, 20155, 20516, 20763, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527, 20558,
BERLINGO (B9)	Engine relay unit	BSM	▲	▲	▲	▲	▲	20527,
BERLINGO (B9)	Trailer relay unit	BSR	●	●	●	●	●	
BERLINGO (B9)	Bodywork conversion unit	BTC	●	●	●	●	●	
BERLINGO (B9)	Deflation detection (DSG)	DSG	●	●	●	●	○	20168, 20459, 20737, 20530, 20267, 20536, 20303, 20304, 20538, 20543, 20368, 20857, 20826, 20527,
BERLINGO (B9)	Deflation detection (DSG)	DSG UDS	●	●	●	●	○	20536, 20857, 20527,
BERLINGO (B9)	ABS or ESP ECU	ABS81	▲	▲	▲	▲	○	20039, 20527,
BERLINGO (B9)	ABS or ESP ECU	ESP81	▲	▲	▲	▲	▲	20408, 20039, 20527,
BERLINGO (B9)	Air bag	SAC_AUTOLIV	▲	▲	▲	▲	○	20249, 20481, 20744, 20762, 20192, 20249, 20481, 20744, 20762, 20406, 20822, 20527,
BERLINGO (B9)	Instrument panel	COMBINE	▲	▲	▲	▲	▲	20130, 20527,
BERLINGO (B9)	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
BERLINGO (B9)	Hands-free kit (Telephone)	BOITIER NOMADE	●	●	●	●	●	20135, 20135, 20527,
BERLINGO (B9)	Service module	BTA	▲	▲	▲	▲	▲	20847, 20142, 20527,
BERLINGO (B9)	Multiplexed additive pump	PADDGO	●	●	●	●	●	20011, 20586, 20590, 20527,
BERLINGO (B9)	Multiplexed additive pump	PADDGO_E5	●	●	●	●	●	20282, 20235, 20323, 20584, 20235, 20323, 20686, 20235, 20323, 20687, 20235, 20323, 20527,
BERLINGO (B9)	Telematics	RADIONAV_RNEG	▲	▲	▲	▲	▲	20847, 20095, 20119, 20123, 20136, 20137, 20527,
BERLINGO (B9)	Telematics	RNEG2010	▲	▲	▲	▲	▲	20847, 20119, 20123, 20136, 20141, 20140, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
BERLINGO (B9)	High frequency receiver	RHF	●	●	●	●	○	
BERLINGO (B9)	Anti-slip mode selector	ASR	●	●	●	●	○	
BERLINGO (B9)	Central voltage retention device	DMTC	●	○	○	○	○	
BERLINGO (B9)	Battery charge status unit	BECEB	●	●	●	●	○	20527,
BERLINGO (B9)	Battery charge status unit	BECEB GEN2	●	●	●	●	○	20527,
BERLINGO 2	Anti-lock brake system		●	●	●	●	●	6001
BERLINGO 2	Anti-lock brake system			●	●		●	6001
BERLINGO 2	Anti-lock brake system		●			●	●	
BERLINGO 2	Injection	TU3A J34P	●	●	●	●	●	
BERLINGO 2	Injection	MM48P	●	●	●	●	●	7001
BERLINGO 2	Injection	ME749	●	●	●	●	●	7003
BERLINGO 2	Injection	2.0L RFN MM48P	●	●	●	●	●	7001
BERLINGO 2	Injection	NFU BOSCH ME744	●	●	●	●	●	
BERLINGO 2	Injection	KFV SAGEM S2000PM1		●	●		●	
BERLINGO 2	Injection	KFV SAGEM S2000PM2		●	●			
BERLINGO 2	Injection	NFS BOSCH ME745	●	●	●	●	●	
BERLINGO 2	Anti-lock brake system		●	●	●	●	●	5007
BERLINGO 2	Anti-lock brake system		●	●	●	●	●	05003 06001
BERLINGO 2	Anti-lock brake system			●	●		●	05003 06001
BERLINGO 2	Injection	NFU BOSCH ME745	●	●	●	●	●	
BERLINGO 2	Injection	N6A BOSCH ME745	●	●	●	●	●	
BERLINGO 2	Injection	NFR BOSCH ME745	●	●	●	●	●	
BERLINGO 2	Injection	9HX BOSCH EDC16C34 DV6ATED4	●	●	●	●	●	
BERLINGO 2	Injection	RHY SIEMENS SID801	●	●	●	●	●	
BERLINGO 2	Injection	RHY SIEMENS SID801		●	●		●	
BERLINGO 2	Injection	WJY DCN2	●	●	●	●	●	
BERLINGO 2	BSI		●	●	●	●	●	3005
BERLINGO 2	Instrument panel		●	●	●	●	●	
BERLINGO 2	Radio post-equipment		●	●	●	●	●	
BERLINGO 2	CD player		●	●	●	●	●	
BERLINGO 2	Parking aid		●	●	●	●	●	
BERLINGO 2	Alarm		●	●	●		●	
BERLINGO 2	Switch module at the steering wheel			●	●			
BERLINGO 2	Rain sensor/ Brightness		●	●	●	●		
BERLINGO 2	Airbag		●	●	●			
BERLINGO 2	Display or Telematics		●	●	●	●	●	
BERLINGO 2	Display or Telematics		●	●	●	●	●	
BERLINGO 2	Display or Telematics		●	●	●	●	●	
BERLINGO 2	Gas injection			●	●		●	
BERLINGO 2	Gas injection			●	●		●	
BERLINGO 2	additional heating		●	●	●	●	●	
BERLINGO Electric (B9e)	Power steering electric pump unit	GEP	●	●	●	●	○	20527,
BERLINGO Electric	Rain sensor	PLUIE LUMINOSITE	●	●	●	○	○	20527,
BERLINGO Electric	Air conditioning ECU	CLIM REGULEE	●	●	●	●	●	20016, 20019, 20033, 20202, 20474, 20527,
BERLINGO Electric	Air conditioning ECU	CLIM	●	●	●	●	●	20033, 20527,
BERLINGO Electric	Radio	AUTORADIO	●	●	●	●	●	20527, 20186, 20331,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
BERLINGO Electric (B9e)	Radio	RD45	●	●	●	●	●	20844, 20030, 20519, 20527, 20844, 20030, 20519,
BERLINGO Electric (B9e)	Onboard charger of the traction battery	OBC_DCDC	▲	▲	▲	▲	○	20527,
BERLINGO Electric	Alarm	ALARME	●	●	●	●	●	20125, 20115, 20125, 20115, 20115, 20527,
BERLINGO Electric	Traction battery ECU	BMU	▲	▲	▲	▲	○	20773, 20776, 20527, 20812, 20811, 20813,
BERLINGO Electric (B9e)	Switch module under the steering wheel (Top of column)	HDC	●	●	●	●	●	20527,
BERLINGO Electric	Multifunction display	EMF A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
BERLINGO Electric	Multifunction display	EMF C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
BERLINGO Electric	Parking aid	AAS	●	●	●	●	○	20457, 20527,
BERLINGO Electric (B9e)	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20844, 20155, 20516, 20763, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527, 20558,
BERLINGO Electric	Engine relay unit	BSM	●	●	●	●	●	20527,
BERLINGO Electric	ABS or ESP ECU	ABS81	●	●	●	●	○	20039, 20527,
BERLINGO Electric	ABS or ESP ECU	ESP81	●	●	●	●	●	20408, 20039, 20527,
BERLINGO Electric (B9e)	Air bag	SAC_AUTOLIV	●	●	●	●	○	20249, 20481, 20744, 20762, 20192, 20249, 20481, 20744, 20762, 20249, 20481, 20744, 20762, 20406, 20822, 20527,
BERLINGO Electric	Instrument panel	COMBINE	●	●	●	●	●	20130, 20527,
BERLINGO Electric	Service module	BTA	●	●	●	●	●	20847, 20142, 20527,
BERLINGO Electric (B9e)	Telematics	RADIONAV_RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
BERLINGO Electric (B9e)	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
BERLINGO Electric (B9e)	Battery charge status unit Generation 2	BECEB_GEN2_VE	▲	▲	▲	▲	○	20527,
BERLINGO Electric (B9e)	Traction battery cell electronics	CMU_01	▲	○	○	▲	○	
BERLINGO Electric (B9e)	Traction battery cell electronics	CMU_02	▲	○	○	▲	○	
BERLINGO Electric (B9e)	Traction battery cell electronics	CMU_03	▲	○	○	▲	○	
BERLINGO Electric (B9e)	Traction battery cell electronics	CMU_04	▲	○	○	▲	○	
BERLINGO Electric (B9e)	Traction battery cell electronics	CMU_05	▲	○	○	▲	○	
BERLINGO Electric (B9e)	Traction battery cell electronics	CMU_06	▲	○	○	▲	○	
BERLINGO Electric (B9e)	Traction battery cell electronics	CMU_07	▲	○	○	▲	○	
BERLINGO Electric (B9e)	Traction battery cell electronics	CMU_08	▲	○	○	▲	○	
BERLINGO Electric (B9e)	Traction battery cell electronics	CMU_09	▲	○	○	▲	○	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
BERLINGO Electric (B9e)	Traction battery cell electronics	CMU_10	▲	○	○	▲	○	
BERLINGO Electric (B9e)	Passenger compartment air heating resistor	CTPA	▲	▲	▲	▲	▲	20527,
BERLINGO Electric (B9e)	air conditioning compressor	CCE	▲	▲	▲	▲	▲	20527,
BERLINGO Electric (B9e)	Electric vehicle management ECU	EV_ECU	▲	▲	▲	○	○	20226, 20527,
BERLINGO Electric (B9e)	Drive train interface ECU	PIU	▲	▲	▲	▲	○	20145, 20843, 20456, 20456, 20525, 20630, 20647, 20701, 20705, 20527,
BERLINGO Electric (B9e)	Electric machine management ECU	MCU	▲	▲	▲	▲	○	20226, 20527,
C1	ABS			●	●	●	●	
C1	ABS			●	●	●	●	
C1	ABS			●	●	●	●	
C1	Injection	384 F injection		●	●	●	●	
C1	Injection	DV4 injection	●	●	●	●	●	
C1	Gearbox ECU			●	●	●	●	
C1	Airbag		●	●	●	●		
C1	Immobiliser control module(Immobiliser)			●	●	●		
C1	Electric power steering		●	●	●	●		
C1 (B0)	Engine ECU	HDI SID805	●	●	●	●	●	20419, 20527,
C1 (B0)	Engine ECU	ME795	○	●	●	●	●	20438, 20527, 20438,
C1 (B0)	Coded anti-start	ADC	○	●	●	●	○	20558,
C1 (B0)	Power steering	DAE	●	●	●	●	○	20527,
C1 (B0)	Air bag	SAC TRW	●	●	●	●	○	20527,
C1 (B0)	ABS or ESP ECU	ABS 8 0 C1	○	●	●	●	●	20527,
C1 (B0)	ABS or ESP ECU	ESP 8 0 C1	○	●	●	●	●	20465, 20527,
C1 (B0)	Gearbox	MMT	○	●	●	●	●	20100, 20756, 20527,
C1 (B0)	Radio	RDE	●	●	●	●	●	20139, 20334, 20335, 20336, 20337, 20030, 20519, 20527,
C1 (B4)	Engine ECU	V46	▲	▲	▲	▲	▲	20010, 20172, 20419, 20251, 20262, 20260, 20659, 20681, 20685, 20149, 20580, 20527,
C1 (B4)	Engine management (Motor 1KR)	ME17_9_52	○	▲	▲	▲	▲	20438, 20765, 20420, 20527,
C1 (B4)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	RBV	▲	▲	▲	▲	▲	20056, 20170, 20527,
C1 (B4)	Air conditioning ECU	ACN HVAC	▲	▲	▲	▲	▲	20036, 20397, 20527,
C1 (B4)	Power steering	EPS T	▲	▲	▲	▲	○	20281, 20785,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C2 CHINE	Instrument panel		●	●	●	●	●	
C2 CHINE	Air conditioning		●	●	●	●	●	
C2 CHINE	Steering wheel with fixed central controls			●	●			
C2 CHINE	Airbag		●	●	●			
C2 CHINE	Gearbox ECU		●			●	●	7001
C2 CHINE	Gearbox ECU		●			●	●	7001
C2 CHINE	Gearbox ECU		●			●	●	7001
C2 CAN	Injection	KFU MM6LPC	●	●	●	●	●	7001
C2 CAN	Injection	TU1A J34P	●	●	●	●	●	7003
C2 CAN	Injection	TU3A J34P	●	●	●	●	●	7003
C2 CAN	Injection	NFS BOSCH ME745	●	●	●	●	●	
C2 CAN	Injection	NFU BOSCH ME745	●	●	●	●	●	
C2 CAN	Injection	N6A BOSCH ME745	●	●	●	●	●	
C2 CAN	Anti-lock brake system		●	●	●	●	●	6001
C2 CAN	Anti-lock brake system		●	●	●	●	●	6001
C2 CAN	BSI		●	●	●	●	●	3005
C2 CAN	Instrument panel		●	●	●	●	●	
C2 CAN	Radio		●	●	●	●	●	
C2 CAN	CD player		●	●	●	●	●	
C2 CAN	Parking aid		●	●	●	●	●	
C2 CAN	Air conditioning		●	●	●	●	●	
C2 CAN	Alarm		●	●	●	●	●	
C2_CAN	Switch module under the steering wheel		●	●	●	●	●	
C2 CAN	Rain sensor/ Brightness		●	●	●			
C2 CAN	Airbag		●	●	●	●		
C2 CAN	Multifunction screen		●	●	●	●		
C2 CAN	Multifunction screen		●	●	●	●	●	
C2 CAN	Telematic		●	●	●	●	●	
C2 CAN	Telematic		●	●	●	●	●	
C2 CAN	Telematic		●	●	●	●		
C2 CAN	High frequency receiver		●	●	●	●		
C2 CAN	Injection	NFR BOSCH ME745	●	●	●	●	●	
C2 CAN	Injection	KFV SAGEM S2000PM2		●	●		●	
C2_CAN	Injection	9HZ (FAP) BOSCH EDC16C34 DV6TED4	●	●	●	●	●	
C2 CAN	Injection	8HZ BOSCH EDC16C34 DV4TD	●	●	●	●	●	
C2 CAN	Injection	8HZ SIEMENS SID806	●	●	●	●	●	
C2 CAN	Trailer relay unit		●	●	●	●	●	
C2 CAN	Engine relay unit		●	●	●	●	●	
C2 CAN	Anti-lock brake system		●	●	●	●	●	05001 06001
C2 CAN	Anti-lock brake system		●	●	●	●	●	05002 06001
C2 CAN	Gearbox ECU		●	●	●	●	●	
C2 CAN	Electric power steering ECU		●	●	●	●		
C2 CAN	Hands Free Kit		●	●	●	●	●	
C2_CAN	ECU Reversible "Stop-Start" alternator		●	●	●	●	●	
C2 VAN	BSI		●	●	●	●	●	3005

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C2 VAN	Instrument panel		●	●	●	●	●	
C2 VAN	Radio		●	●	●	●	●	
C2 VAN	CD player		●	●	●	●	●	
C2 VAN	Parking aid		●	●	●	●	●	
C2 VAN	Air conditioning		●	●	●	●	●	
C2 VAN	Navigation		●	●	●	●		
C2 VAN	Alarm		●	●	●	●	●	
C2_VAN	Switch module under the steering wheel		●	●	●	●		
C2 VAN	Rain sensor/ Brightness		●	●	●	●		
C2 VAN	Airbag		●	●	●	●		
C2 VAN	Display or Telematics		●	●	●	●	●	
C2 VAN	Display or Telematics		●	●	●	●	●	
C2 VAN	Display or Telematics		●	●	●	●	●	
C2 VAN	Display or Telematics		●	●	●	●	●	
C2 VAN	Gearbox ECU		●	●	●	●	●	
C2 VAN	Electric power steering ECU		●	●	●	●		
C2 VAN	Injection	HFX MM48P	●	●	●	●	●	7001
C2 VAN	Injection	NFU BOSCH ME744	●	●	●	●	●	
C2 VAN	Injection	NFS BOSCH ME744	●	●	●	●	●	
C2 VAN	Injection	KFV SAGEM S2000PM1		●	●		●	
C2 VAN	Injection	KFV SAGEM S2000PM1		●	●		●	
C2 VAN	Injection	KFV SAGEM S2000PM2		●	●			
C2 VAN	Anti-lock brake system		●	●	●	●	●	6001
C2 VAN	Anti-lock brake system		●	●	●	●	●	05001 06001
C2 VAN	Injection	8HZ BOSCH EDC16C34 DV4TD	●	●	●	●	●	
C2 VAN	Injection	8HX BOSCH EDC16C34 DV4TD	●	●	●	●	●	
C2 VAN	Injection	8HX SIEMENS SID802	●	●	●	●	●	
C2 VAN	Injection	8HX SIEMENS SID804		●	●		●	
C2 VAN	Injection	8HX SIEMENS SID804		●	●		●	
C2 VAN	Injection	8HZ SIEMENS SID804		●	●		●	
C2 VAN	Injection	8HZ SIEMENS SID804		●	●		●	
C3	BSI		●	●	●	●	●	3005
C3	Instrument panel		●	●	●	●	●	
C3	Radio		●	●	●	●	●	
C3	CD player		●	●	●	●	●	
C3	Parking aid		●	●	●	●	●	
C3	Air conditioning		●	●	●	●	●	
C3	Navigation		●	●	●	●		
C3	Alarm			●	●		●	
C3	Switch module under the steering wheel			●	●			
C3	Rain sensor/ Brightness			●	●			
C3	Driving school mode		●			●	●	
C3	Airbag		●	●	●	●		
C3	Multifunction display		●	●	●	●	●	
C3	Multifunction display		●	●	●	●	●	
C3	Multifunction display		●	●	●	●	●	
C3	Multifunction display		●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C3	Telematic		●	●	●	●		
C3	Diesel additive function		●	●	●	●	●	4008
C3	Injection	HFX MM48P	●	●	●	●	●	7001
C3	Injection	KFU MM6LP	●	●	●	●	●	
C3	Injection	KFU MM6LP	●	●	●	●	●	
C3	Injection	NFU BOSCH ME744	●	●	●	●	●	
C3	Injection	N6A BOSCH ME744	●	●	●	●	●	
C3	Injection	KFV BOSCH ME744	●	●	●	●	●	
C3	Injection	KFV SAGEM S2000PM1		●	●		●	
C3	Injection	KFV SAGEM S2000PM1	●	●	●	●	●	
C3	Injection	KFV SAGEM S2000PM2		●	●			
C3	Injection	NFU BOSCH ME749	●	●	●	●	●	
C3	Injection	N6A BOSCH ME749	●	●	●	●	●	
C3	Injection	NFS BOSCH ME749	●	●	●	●	●	
C3	Injection	NFR BOSCH ME749	●	●	●	●	●	
C3	Injection	KFV BOSCH ME749	●	●	●	●	●	
C3	Injection	9HZ (FAP) BOSCH EDC16C34 DV6TED4	●	●	●	●	●	
C3	Injection	9HX BOSCH EDC16C34 DV6ATED4	●	●	●	●	●	
C3	Gas injection			●	●		●	
C3	Gas injection			●	●		●	
C3	Anti-lock brake system		●			●	●	6001
C3	Anti-lock brake system		●	●	●	●	●	6001
C3	Anti-lock brake system		●	●	●	●	●	05001 06001
C3	Gearbox ECU		●			●	●	7001
C3	Gearbox ECU		●			●	●	7001
C3	Gearbox ECU		●			●	●	7001
C3	Gearbox ECU		●	●	●	●	●	
C3	Electric power steering ECU		●	●	●	●		
C3	ECU Reversible "Stop-Start" alternator		●	●	●	●	●	
C3	Injection	8HX SIEMENS SID802	●	●	●	●	●	
C3	Injection	8HX SIEMENS SID804		●	●		●	
C3	Injection	8HX SIEMENS SID804		●	●		●	
C3	Injection	8HZ SIEMENS SID804		●	●		●	
C3	Injection	8HZ SIEMENS SID804		●	●		●	
C3	Injection	8HY DELPHI C6	●	●	●	●	●	
C3	Injection	8HY DELPHI C6	●	●	●	●	●	
C3 A51	Parking aid	AAS	●	●	●	●	○	20457, 20527,
C3 A51	ABS or ESP ECU	ABSMK70 1	●	●	●	●	●	20039, 20527,
C3 A51	ABS or ESP ECU	ESPMK60 0	●	●	●	●	●	20608, 20527,
C3 A51	ABS or ESP ECU	ABSMK100	●	●	●	●	●	20042, 20042, 20632, 20820, 20527,
C3 A51	ABS or ESP ECU	ESPMK100	●	●	●	●	●	20044, 20656, 20044, 20052, 20820, 20527,
C3 A51	Multiplexed additive pump	PADDG0	●	●	●	●	●	20011, 20586, 20590, 20527,
C3 A51	Air bag	SAC_AUTOLIV	●	●	●	●	○	20249, 20481, 20744, 20762, 20192, 20249, 20481, 20744, 20762, 20406, 20822, 20527,
C3 A51	Driver's door module	PDPC	●	●	●	●	●	
C3 A51	Alarm	ALARME	●	●	●	●	●	20125, 20115, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C3 A51	Engine ECU	J34P	●	●	●	●	●	20370, 20381, 20424, 20437, 20059, 20147, 20261, 20527,
C3 A51	Engine ECU	HDI_SID807	●	●	●	●	●	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
C3 A51	Engine ECU	EDC17C10_BR2	●	●	●	●	●	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
C3 A51	Engine ECU	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
C3 A51	Engine ECU	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
C3 A51	Engine ECU	V46	●	●	●	●	●	20806, 20070, 20251, 20262, 20260, 20659, 20681, 20685, 20149, 20578, 20580, 20527,
C3 A51	Engine ECU	VD46	●	●	●	●	●	20349, 20299, 20444, 20190, 20544, 20157, 20576, 20593, 20653, 20654, 20658, 20661, 20680, 20685, 20711, 20578, 20580, 20594, 20613, 20715, 20527,
C3 A51	Engine ECU	EDC17C60	●	●	●	●	●	20144, 20484, 20256, 20257, 20258, 20259, 20829, 20690, 20624, 20625, 20716, 20606, 20619, 20670, 20683, 20753, 20198, 20288, 20444, 20805, 20093, 20514, 20513, 20505, 20548, 20552, 20554, 20122, 20527,
C3 A51	Multifunction display	EMF A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
C3 A51	Multifunction display	EMF C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
C3 A51	Rain sensor	PLUIE_LUMINOSITE	●	●	●	○	○	20527,
C3 A51	Seat belts not fastened LED unit	TNB	●	○	○	○	●	
C3 A51	Telematics	RADIONAV_RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
C3 A51	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
C3 A51	Battery charge status unit	BECEB	●	●	●	●	○	20527,
C3 A51	Battery charge status unit	BECEB_GEN2	●	●	●	●	○	20527,
C3 A51	High frequency receiver	RHF	●	●	●	●	○	
C3 A51	Central voltage retention device	DMTC	●	○	○	○	○	
C3 A51	Central voltage retention device	DMTR	●	●	●	○	○	20527,
C3 Ai51	Built-in Systems Interface (BSI)	BSI	▲	▲	▲	▲	▲	20228, 20411, 20844, 20155, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,

Vehicle	System	ECU Name	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C3 Ai51	Electric power steering	DAE A515	▲	▲	▲	▲	▲	20527,
C3 Ai51	Injection/ignition	ME749	▲	▲	▲	▲	▲	20856, 20743, 20631, 20721, 20527,
C3 Ai51	Injection/ignition	ME749 EC5	▲	▲	▲	▲	▲	20226, 20460, 20717, 20527,
C3 Ai51	Injection/ignition	V344	▲	▲	▲	▲	▲	20858, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20527,
C3 Ai51	Injection/ignition	V345	▲	▲	▲	▲	▲	20858, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20527,
C3 Ai51	ABS/traction control	ABSMK70 1	▲	▲	▲	▲	▲	20039, 20527,
C3 Ai51	ABS/traction control	ESPMK60 0	▲	▲	▲	▲	▲	20055, 20039, 20527,
C3 Ai51	Gearbox	BVA AL4	▲	▲	▲	▲	▲	20333, 20004, 20448, 20527,
C3 Ai51	Trailer relay unit	BSR	▲	▲	▲	▲	▲	
C3 Ai51	Telematics	RADIONAV RNEG ECO	▲	▲	▲	▲	▲	20847, 20095, 20119, 20123, 20136, 20527,
C3 Ai51	Services module	BLVV	▲	▲	▲	▲	▲	20176, 20527,
C3 Ai51	Instrument panel	COMBINE	▲	▲	▲	▲	▲	20527,
C3 Ai51	Radio	RDE	▲	▲	▲	▲	▲	20129, 20139, 20334, 20337, 20844, 20030, 20519, 20129, 20139, 20334, 20337, 20844, 20030, 20519, 20527,
C3 Ai51	Anti-theft alarm	ALARME LIN	▲	▲	▲	▲	▲	20527,
C3 Ai51	Driver and passenger airbags	SAC_AUTOLIV	▲	▲	▲	▲	○	20249, 20481, 20744, 20762, 20192, 20249, 20481, 20744, 20762, 20406, 20822, 20527,
C3 Ai51	Air conditioning	CLIM REGULEE	▲	▲	▲	▲	▲	20183, 20527,
C3 Ai51	Parking aid	AAS	▲	▲	▲	▲	○	20457, 20527,
C3 Ai51	Switch module under the steering wheel (Top of column)	HDC	▲	▲	▲	▲	▲	20527,
C3 Ai51	Rain and brightness sensor (CDPL)	PLUIE_LUMINOSITE	▲	▲	▲	○	○	20527, 20720,
C3 Ai52	Electric power steering		●	●	●	●	●	
C3 AIRCROSS	Auto gearbox	BVA AL4	●	●	●	●	●	7001
C3 AIRCROSS	Injection	ME749	●	●	●	●	●	7003
C3 Aircross (Ai58)	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20844, 20155, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
C3 Aircross (Ai58)	Electric power steering	DAE A515	●	●	●	●	●	20527,
C3 Aircross (Ai58)	Injection/ignition	ME749	●	●	●	●	●	20856, 20743, 20631, 20721, 20527,
C3 Aircross (Ai58)	Injection/ignition	ME749 EC5	●	●	●	●	●	20226, 20460, 20717, 20527,
C3 Aircross (Ai58)	Injection/ignition	V344	●	●	●	●	●	20858, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20527,
C3 Aircross (Ai58)	Injection/ignition	V345	●	●	●	●	●	20858, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20527,
C3 Aircross (Ai58)	ABS/traction control	ABSMK70 1	●	●	●	●	●	20039, 20527,
C3 Aircross (Ai58)	ABS/traction control	ESPMK60 0	●	●	●	●	●	20055, 20039, 20527,
C3 Aircross (Ai58)	Gearbox	BVA AL4	●	●	●	●	●	20333, 20004, 20448, 20527,

Vehicle	System	ECU Name	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C3 Aircross (Ai58)	Trailer relay unit	BSR	●	●	●	●	●	
C3 Aircross (Ai58)	Telematics	RADIONAV RNEG ECO	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20527,
C3 Aircross (Ai58)	Services module	BLVV	●	●	●	●	●	20176, 20527,
C3 Aircross (Ai58)	Instrument panel	COMBINE	●	●	●	●	●	20527,
C3 Aircross (Ai58)	Radio	RDE	●	●	●	●	●	20129, 20139, 20334, 20337, 20844, 20030, 20519, 20129, 20139, 20334, 20337, 20844, 20030, 20519, 20527,
C3 Aircross (Ai58)	Anti-theft alarm	ALARME LIN	●	●	●	●	●	20527,
C3 Aircross (Ai58)	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	●	○	20249, 20481, 20744, 20762, 20192, 20249, 20481, 20744, 20762, 20406, 20822, 20527,
C3 Aircross (Ai58)	Air conditioning	CLIM REGULEE	●	●	●	●	●	20183, 20527,
C3 Aircross (Ai58)	Parking aid	AAS	●	●	●	●	○	20457, 20527,
C3 Aircross (Ai58)	Switch module under the steering wheel (Top of column)	HDC	●	●	●	●	●	20527,
C3 Aircross (Ai58)	Rain and brightness sensor (CDPL)	PLUIE_LUMINOSITE	●	●	●	○	○	20527, 20720,
C3 PICASSO	BSI		●	●	●	●	●	3005
C3 PICASSO	Seat belt reminder LED		●				●	
C3 PICASSO	Instrument panel		●	●	●	●		
C3 PICASSO	Radio		●	●	●	●	●	
C3 PICASSO	Parking aid		●	●	●	●		
C3 PICASSO	Air conditioning		●	●	●	●	●	
C3 PICASSO	Alarm		●	●	●	●	●	
C3 PICASSO	Switch module under the steering wheel		●	●	●	●	●	
C3 PICASSO	Rain sensor/ Brightness		●	●	●			
C3 PICASSO	Airbag		●	●	●	●		
C3 PICASSO	Multifunction screen(EMF)		●	●	●	●		
C3 PICASSO	Multifunction screen(EMF)		●	●	●	●		
C3 PICASSO	Telematic		●	●	●	●		
C3 PICASSO	Multiplexed diesel additive pump		●	●	●	●	●	
C3 PICASSO	Engine relay unit		●	●	●	●	●	
C3 PICASSO	Trailer relay unit		●	●	●	●	●	
C3 PICASSO	Power steering		●	●	●	●		
C3 PICASSO	Hands Free Kit		●	●	●	●	●	
C3 PICASSO	Driver's door control panel		●	●	●	●		
C3 PICASSO	ABS	ESP MK60		●	●		●	5001
C3 PICASSO	ABS	ABS MK 70.2	●	●	●	●	●	
C3 PICASSO	ABS	ABSMK100	●	●	●	●	●	
C3 PICASSO	ABS	ESPMK100	●	●	●	●	●	
C3 PICASSO	Injection	5FW MEV17.4	●	●	●	●	●	7002
C3 PICASSO	Injection	8FS MEV17.4	●	●	●	●	●	7002
C3 PICASSO	Injection	9HZ (FAP) BOSCH EDC16C34 DV6TED4-110CV	●	●	●	●	●	
C3 PICASSO	Injection	9HX BOSCH EDC16C34 DV6ATED4- 90CV	●	●	●	●	●	
C3 PICASSO	Injection	HDI SID807 BR2	●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C3 PICASSO (A58)	Engine ECU	EDC16C3	●	●	●	●	●	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20468, 20296, 20719, 20226, 20241, 20344, 20470, 20483, 20246, 20635, 20527,
C3 PICASSO (A58)	Engine ECU	EDC17C10	●	●	●	●	●	20088, 20089, 20343, 20509, 20063, 20062, 20065, 20064, 20068, 20226, 20296, 20284, 20374, 20461, 20470, 20564, 20589, 20710, 20527,
C3 PICASSO (A58)	Engine ECU	HDI_SID807	●	●	●	●	●	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
C3 PICASSO (A58)	Engine ECU	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
C3 PICASSO (A58)	Engine ECU	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
C3 PICASSO (A58)	Engine ECU	EDC17C10_BR2	●	●	●	●	●	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
C3 PICASSO (A58)	Engine ECU	VD46	●	●	●	●	●	20349, 20157, 20576, 20593, 20653, 20654, 20658, 20661, 20680, 20685, 20711, 20578, 20580, 20594, 20613, 20715, 20527,
C3 PICASSO (A58)	Multifunction display	EMF A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
C3 PICASSO (A58)	Multifunction display	EMF C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
C3 PICASSO (A58)	Rain sensor	PLUIE LUMINOSITE	●	●	●	○	○	20527,
C3 PICASSO (A58)	Seat belts not fastened LED unit	TNB	▲	○	○	○	▲	
C3 PICASSO (A58)	Telematics	RADIONAV_RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
C3 PICASSO (A58)	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
C3 PICASSO (A58)	Battery charge status unit	BECEB	▲	▲	▲	▲	○	20527,
C3 PICASSO (A58)	Battery charge status unit	BECEB GEN2	●	●	●	●	○	20527,
C3 PICASSO (A58)	High frequency receiver	RHF	●	●	●	●	○	
C3 PICASSO (A58)	Central voltage retention device	DMTC	▲	○	○	○	○	
C3 PICASSO (Ai58)	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20844, 20155, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
C3 PICASSO (Ai58)	Electric power steering	DAE A515	●	●	●	●	●	20527,
C3 PICASSO (Ai58)	Injection/ignition	ME749	●	●	●	●	●	20856, 20743, 20631, 20721, 20527,
C3 PICASSO (Ai58)	Injection/ignition	ME749_EC5	●	●	●	●	●	20226, 20460, 20717, 20527,
C3 PICASSO (Ai58)	Injection/ignition	V344	●	●	●	●	●	20858, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C3 PICASSO (Ai58)	Injection/ignition	V345	●	●	●	●	●	20858, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20527,
C3 PICASSO (Ai58)	ABS/traction control	ABSMK70 1	●	●	●	●	●	20039, 20527,
C3 PICASSO (Ai58)	ABS/traction control	ESPMK60 0	●	●	●	●	●	20055, 20039, 20527,
C3 PICASSO (Ai58)	Gearbox	BVA AL4	●	●	●	●	●	20333, 20004, 20448, 20527,
C3 PICASSO (Ai58)	Trailer relay unit	BSR	●	●	●	●	●	
C3 PICASSO (Ai58)	Telematics	RADIONAV RNEG ECO	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20527,
C3 PICASSO (Ai58)	Services module	BLVV	●	●	●	●	●	20176, 20527,
C3 PICASSO (Ai58)	Instrument panel	COMBINE	●	●	●	●	●	20527,
C3 PICASSO (Ai58)	Radio	RDE	●	●	●	●	●	20129, 20139, 20334, 20337, 20844, 20030, 20519, 20129, 20139, 20334, 20337, 20844, 20030, 20519, 20527,
C3 PICASSO (Ai58)	Anti-theft alarm	ALARME LIN	●	●	●	●	●	20527,
C3 PICASSO (Ai58)	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	●	○	20249, 20481, 20744, 20762, 20192, 20249, 20481, 20744, 20762, 20406, 20822, 20527,
C3 PICASSO (Ai58)	Air conditioning	CLIM REGULEE	●	●	●	●	●	20183, 20527,
C3 PICASSO (Ai58)	Parking aid	AAS	●	●	●	●	○	20457, 20527,
C3 PICASSO (Ai58)	Switch module under the steering wheel (Top of column)	HDC	●	●	●	●	●	20527,
C3 PICASSO (Ai58)	Rain and brightness sensor (CDPL)	PLUIE_LUMINOSITE	●	●	●	○	○	20527, 20720,
C3 PLURIEL CAN	BSI		●	●	●	●	●	3005
C3 PLURIEL CAN	Instrument panel		●	●	●	●	●	
C3 PLURIEL CAN	Radio		●	●	●	●	●	
C3 PLURIEL CAN	CD player		●	●	●	●	●	
C3 PLURIEL CAN	Parking aid		●	●	●	●	●	
C3 PLURIEL CAN	Air conditioning		●	●	●	●	●	
C3 PLURIEL CAN	Alarm		●	●	●	●	●	
C3 PLURIEL_CAN	Switch module under the steering wheel		●	●	●	●	●	
C3 PLURIEL CAN	Rain sensor/ Brightness		●	●	●			
C3 PLURIEL CAN	Sun roof		●	●	●	●		
C3 PLURIEL CAN	Airbag		●	●	●	●		
C3 PLURIEL CAN	Multifunction screen		●	●	●	●		
C3 PLURIEL CAN	Multifunction screen		●	●	●	●	●	
C3 PLURIEL CAN	Telematic		●	●	●	●	●	
C3 PLURIEL CAN	Telematic		●	●	●	●	●	
C3 PLURIEL CAN	Telematic		●	●	●	●		
C3 PLURIEL CAN	High frequency receiver		●	●	●	●		
C3 PLURIEL CAN	Trailer relay unit		●	●	●	●	●	
C3 PLURIEL CAN	Engine relay unit		●	●	●	●	●	
C3 PLURIEL CAN	Gearbox ECU		●	●	●	●	●	
C3 PLURIEL CAN	Electric power steering ECU		●	●	●	●		
C3 PLURIEL CAN	Hands Free Kit		●	●	●	●	●	
C3 PLURIEL CAN	Injection	TU1A J34P	●	●	●	●	●	7003
C3 PLURIEL CAN	Injection	TU3A J34P	●	●	●	●	●	7003
C3 PLURIEL CAN	Injection	NFS BOSCH ME745	●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C3 PLURIEL CAN	Injection	NFU BOSCH ME745	●	●	●	●	●	
C3 PLURIEL CAN	Injection	N6A BOSCH ME745	●	●	●	●	●	
C3 PLURIEL CAN	Injection	NFR BOSCH ME745	●	●	●	●	●	
C3 PLURIEL CAN	Injection	8HZ BOSCH EDC16C34 DV4TD	●	●	●	●	●	
C3 PLURIEL CAN	Injection	8HZ SIEMENS SID806	●	●	●	●	●	
C3 PLURIEL CAN	Anti-lock brake system		●	●	●	●	●	
C3 PLURIEL CAN	Anti-lock brake system		●	●	●	●	●	
C3 PLURIEL CAN	Anti-lock brake system		●	●	●	●	●	5002
C3 PLURIEL CAN	Anti-lock brake system		●	●	●	●	●	5001
C3 PLURIEL VAN	BSI		●	●	●	●	●	3005
C3 PLURIEL VAN	Instrument panel		●	●	●	●	●	
C3 PLURIEL VAN	Radio		●	●	●	●	●	
C3 PLURIEL VAN	CD player		●	●	●	●	●	
C3 PLURIEL VAN	Parking aid		●	●	●	●	●	
C3 PLURIEL VAN	Air conditioning		●	●	●	●	●	
C3 PLURIEL VAN	Navigation		●	●	●	●	●	
C3 PLURIEL VAN	Alarm		●	●	●	●	●	
C3 PLURIEL VAN	Switch module under the steering wheel		●	●	●	●	●	
C3 PLURIEL VAN	Rain sensor/ Brightness			●	●			
C3 PLURIEL VAN	Sun roof		●			●	●	
C3 PLURIEL VAN	Driving school mode		●			●	●	
C3 PLURIEL VAN	Airbag		●	●	●	●	●	
C3 PLURIEL VAN	Display or Telematics		●	●	●	●	●	
C3 PLURIEL VAN	Display or Telematics		●	●	●	●	●	
C3 PLURIEL VAN	Display or Telematics		●	●	●	●	●	
C3 PLURIEL VAN	Display or Telematics		●	●	●	●	●	
C3 PLURIEL VAN	Gearbox ECU		●	●	●	●	●	
C3 PLURIEL VAN	Electric power steering ECU		●	●	●	●	●	
C3 PLURIEL VAN	Injection	NFU BOSCH ME744	●	●	●	●	●	
C3 PLURIEL VAN	Injection	KFV SAGEM S2000PM1		●	●		●	
C3 PLURIEL VAN	Injection	KFV SAGEM S2000PM1		●	●		●	
C3 PLURIEL VAN	Injection	KFV SAGEM S2000PM2		●	●		●	
C3 PLURIEL VAN	Injection	8HZ BOSCH EDC16C34 DV4TD	●	●	●	●	●	
C3 PLURIEL VAN	Injection	8HX SIEMENS SID802	●	●	●	●	●	
C3 PLURIEL VAN	Injection	8HX SIEMENS SID804	●	●	●	●	●	
C3 PLURIEL VAN	Injection	8HX SIEMENS SID804		●	●		●	
C3 PLURIEL VAN	Injection	8HZ SIEMENS SID804	●	●	●	●	●	
C3 PLURIEL VAN	Injection	8HZ SIEMENS SID804		●	●		●	
C3 PLURIEL VAN	Anti-lock brake system		●	●	●	●	●	
C3 PLURIEL VAN	Anti-lock brake system		●	●	●	●	●	5001
C3 R	BSI		●	●	●	●	●	3005
C3 R	Instrument panel		●	●	●	●	●	
C3 R	Radio		●	●	●	●	●	
C3 R	CD player		●	●	●	●	●	
C3 R	Parking aid		●	●	●	●	●	
C3 R	Air conditioning		●	●	●	●	●	
C3 R	Alarm		●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C3 R	Switch module under the steering wheel		●	●	●	●	●	
C3 R	Rain sensor/ Brightness		●	●	●			
C3 R	Airbag		●	●	●	●		
C3 R	Driving school mode		●	●	●		●	
C3 R	Multifunction screen		●	●	●	●		
C3 R	Multifunction screen		●	●	●	●	●	
C3 R	Telematic		●	●	●	●	●	
C3 R	Telematic		●	●	●	●	●	
C3 R	Telematic		●	●	●	●		
C3 R	High frequency receiver		●	●	●	●		
C3 R	Gas injection			●	●		●	
C3 R	Gas injection			●	●		●	
C3 R	Multiplexed diesel additive pump		●	●	●	●	●	
C3 R	Trailer relay unit		●	●	●	●	●	
C3 R	Engine relay unit		●	●	●	●	●	
C3 R	Gearbox ECU		●	●	●	●	●	
C3 R	Gearbox ECU		●	●	●	●	●	
C3 R	Electric power steering ECU		●	●	●	●		
C3 R	Hands Free Kit		●	●	●	●	●	
C3 R	ECU Reversible "Stop-Start" alternator		●	●	●	●	●	
C3 R	Injection	TU1A J34P	●	●	●	●	●	7001
C3 R	Injection	TU3A J34P	●	●	●	●	●	7001
C3 R	Injection	KFU MM6LPC	●	●	●	●	●	7003
C3 R	Injection	NFS BOSCH ME745	●	●	●	●	●	
C3 R	Injection	NFU BOSCH ME745	●	●	●	●	●	
C3 R	Injection	N6A BOSCH ME745	●	●	●	●	●	
C3 R	Injection	NFR BOSCH ME745	●	●	●	●	●	
C3 R	Injection	KFV SAGEM S2000PM2		●	●			
C3 R	Injection	8HZ BOSCH EDC16C34 DV4TD	●	●	●	●	●	
C3 R	Injection	9HZ (FAP) BOSCH EDC16C34 DV6TED4	●	●	●	●	●	
C3 R	Injection	9HX BOSCH EDC16C34 DV6ATED4	●	●	●	●	●	
C3 R	Injection	8HZ SIEMENS SID806	●	●	●	●	●	
C3 R	Anti-lock brake system		●	●	●	●	●	
C3 R	Anti-lock brake system		●	●	●	●	●	
C3 R	Anti-lock brake system		●	●	●	●	●	5001
C3 R	Anti-lock brake system		●	●	●	●	●	
C4	Parking aid	AAS	●	●	●	●	○	20457, 20527,
C4	ABS/traction control	ABS8 BOSCH	●	●	●	●	●	20039, 20527,
C4	ABS/traction control	ESP8 BOSCH	●	●	●	●	○	20408, 20039, 20527,
C4	ABS/traction control	ABS81	●	●	●	●	○	20039, 20527,
C4	ABS/traction control	ESP81	●	●	●	●	●	20104, 20408, 20039, 20169, 20523, 20527,
C4	Diesel additive	ADDG03	●	●	●	●	○	20215, 20221, 20220, 20013, 20469, 20583, 20091, 20585, 20482, 20730, 20527,
C4	Multifunction display	EMF A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
C4	Multifunction display	EMF C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C4	Power steering electric pump unit	GEP	●	●	●	●	○	20206, 20214, 20206, 20214, 20219, 20276, 20800, 20801, 20208, 20219, 20276, 20817, 20206, 20216, 20217, 20223, 20263, 20264, 20273, 20276, 20278, 20279, 20253, 20800, 20801, 20527,
C4	Under inflation detection	DSG	●	●	●	●	○	20168, 20459, 20737, 20530, 20267, 20536, 20303, 20304, 20538, 20543, 20368, 20857, 20826, 20527,
C4	Driving school module	MAE	●	●	●	○	●	20527,
C4	ECU at the top of the steering column	VCCF	●	●	●	●	●	
C4	Injection/ignition	DCM35_BR2	●	●	●	●	●	20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
C4	Injection/ignition	HDI_SID803	●	●	●	●	●	20117, 20215, 20221, 20220, 20547, 20546, 20855, 20305, 20245, 20499, 20286, 20469, 20577, 20638, 20626, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20527,
C4	Injection/ignition	MM6LP	●	●	●	●	●	20843, 20112, 20226, 20437, 20059, 20692, 20527,
C4	Injection/ignition	MM6LPB	●	●	●	●	●	20843, 20112, 20005, 20159, 20226, 20437, 20059, 20527,
C4	Injection/ignition	ME745	●	●	●	●	●	20399, 20631, 20527,
C4	Injection/ignition	EDC16C3	●	●	●	●	●	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20296, 20719, 20226, 20241, 20344, 20380, 20470, 20483, 20710, 20246, 20635, 20527,
C4	Injection/ignition	HDI_SID803A	●	●	●	●	●	20117, 20215, 20221, 20220, 20547, 20546, 20855, 20305, 20245, 20499, 20286, 20469, 20577, 20638, 20626, 20464, 20281, 20281, 20464, 20281, 20281, 20527,
C4	Injection/ignition	MED17_4_EURO4	●	●	●	●	●	20559, 20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
C4	Injection/ignition	DCM34	●	●	●	●	●	20508, 20818, 20239, 20291, 20187, 20328, 20242, 20819, 20188, 20020, 20226, 20626, 20285, 20694, 20240, 20283, 20588, 20629, 20672, 20710, 20573, 20579, 20694, 20527,
C4	Injection/ignition	MEV17_4_EURO4	●	●	●	●	●	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
C4	Injection/ignition	MEV17_4_EURO5	●	●	●	●	●	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
C4	Injection/ignition	ME749	●	●	●	●	●	20856, 20463, 20399, 20631, 20527,
C4	Injection/ignition	EDC15C2	●	●	●	●	●	20527,
C4	Injection/ignition	MM6KP	●	●	●	●	●	20859, 20372, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C4	Injection/ignition	DCM35	●	●	●	●	●	20088, 20089, 20343, 20509, 20020, 20067, 20062, 20226, 20240, 20588, 20629, 20672, 20710, 20285, 20573, 20579, 20692, 20694, 20527,
C4	Injection/ignition	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
C4	Injection/ignition	MED17_4_2	●	●	●	●	●	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
C4	Injection/ignition	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
C4	Injection/ignition	HDI_SID807	●	●	●	●	●	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
C4	Injection/ignition	MED17_4_EURO5	●	●	●	●	●	20559, 20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
C4	Injection/ignition	MM6LPC	●	●	●	●	●	20226, 20437, 20059, 20527,
C4	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
C4	Hands-free kit (Telephone)	BOITIER NOMADE	●	●	●	●	●	20135, 20135, 20527,
C4	Diesel additive adding pump	PADDGO	●	●	●	●	●	20011, 20586, 20590, 20527,
C4	Diesel additive adding pump	PADDGO_E5	●	●	●	●	●	20282, 20163, 20323, 20584, 20163, 20323, 20686, 20163, 20323, 20687, 20163, 20323, 20527,
C4	Driver's door electronics	EDPC	●	●	●	●	●	20814, 20814,
C4	Passenger door electronics	EDPP	●	●	●	●	●	20814, 20814,
C4	High frequency receiver	RHF	●	●	●	●	○	
C4	Lane departure warning system	AFIL	●	●	●	●	○	20455, 20268, 20749, 20750, 20527,
C4	Telematics	RADIONAV_RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
C4	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20128, 20134, 20847, 20095, 20123, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20006, 20114, 20121, 20133, 20128, 20134, 20847, 20095, 20123, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20527, 20006, 20114, 20121, 20133, 20128, 20134, 20847, 20095, 20123, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20037, 20769, 20128, 20134, 20847, 20095, 20123, 20847, 20095, 20123, 20127, 20137, 20127, 20137,
C4	Telematics	RADIONAV RNEG ECO	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20527,
C4	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
C4	Battery charge status unit	BECEB	●	●	●	●	○	20527,
C4	Battery charge status unit	BECEB GEN2	●	●	●	●	○	20527,
C4	Windscreen wiper	MOTEV	●	●	●	○	○	20527,
C4	Pneumatic suspension	SUSPENSTON	●	●	●	●	○	20182, 20479, 20226, 20046, 20179, 20527,
C4	Light pack unit	BPL	●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C4	Automatic gearbox electric control	COMELBVA	●	●	●	●	●	20440, 20861, 20440, 20861, 20440, 20861, 20440, 20861, 20478, 20490, 20478, 20490, 20478, 20490, 20440, 20861, 20440, 20861, 20440, 20861,
C4	Electric secondary brake	FSE	●	●	●	●	●	20049, 20247, 20518, 20049, 20247, 20518, 20527,
C4	Services module	BTA	●	●	●	●	●	20847, 20142, 20527,
C4	Services module	BLVV	●	●	●	●	●	20176, 20527,
C4 (B7)	Instrument panel	COMBINE UDS	▲	▲	▲	▲	▲	20527,
C4 (B7)	Display	EMF_A UDS	▲	▲	▲	▲	▲	20527,
C4 (B7)	Display	EMF_C UDS	▲	▲	▲	○	▲	20477, 20151, 20527,
C4 (B7)	Trailer relay unit	BSG_2010 RQ	▲	▲	▲	▲	▲	20527,
C4 (B7)	Driver's seat memorizing unit	BDMC	▲	▲	▲	▲	▲	20146, 20745, 20746, 20527, 20146, 20745, 20746,
C4 (B7)	Steering wheel with integral controls (VCI)	VCI	▲	▲	▲	▲	▲	20527,
C4 (B7)	Parking aid	AAS UDS	▲	▲	▲	▲	○	20558, 20457, 20527,
C4 (B7)	audio amplifier	AMPLI_AUDIO	▲	▲	▲	○	▲	20527,
C4 (B7)	Telematics	MRN	▲	▲	▲	▲	▲	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20527,
C4 (B7)	Telematics	RADIONAV_RNEGC	▲	▲	▲	▲	▲	20847, 20095, 20119, 20123, 20136, 20137, 20527,
C4 (B7)	Telematics	RNEG2010	▲	▲	▲	▲	▲	20847, 20119, 20123, 20136, 20141, 20140, 20527,
C4 (B7)	Matrix screen integral to the instrument panel	MATT_C_2010	▲	▲	▲	○	▲	
C4 (B7)	Matrix screen integral to the instrument panel	MATT_M_2010	▲	▲	▲	○	▲	
C4 (B7)	Matrix screen integral to the instrument panel	MATT_P_2010	▲	▲	▲	○	▲	20527,
C4 (B7)	Driver's door module	PDPC	▲	▲	▲	▲	▲	
C4 (B7)	Switch module under the steering wheel (Top of column)	HDC	▲	▲	▲	▲	▲	20527,
C4 (B7)	Switch module under the steering wheel (Top of column)	COM2008P	▲	▲	▲	▲	▲	20527,
C4 (B7)	Lane departure warning system	AFIL	▲	▲	▲	▲	○	20455, 20268, 20749, 20750, 20527,
C4 (B7)	gearbox	BVA_AL4	▲	▲	▲	▲	▲	20333, 20463, 20004, 20448, 20527,
C4 (B7)	gearbox	BVA_AM6_AT6_EURO5	▲	▲	▲	▲	▲	20502, 20634, 20600, 20605, 20527,

Vehicle	System	ECU Name	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C4 (B7)	Engine ECU	HDI_SID807_BR2	▲	▲	▲	▲	▲	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
C4 (B7)	Engine ECU	MEV17_4_2	▲	▲	▲	▲	▲	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
C4 (B7)	Engine ECU	MED17_4_2	▲	▲	▲	▲	▲	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
C4 (B7)	Engine ECU	ME745	▲	▲	▲	▲	▲	20743, 20631, 20721, 20527,
C4 (B7)	Engine ECU	MEVD17_4_2	▲	▲	▲	▲	▲	20070, 20563, 20291, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20827, 20061, 20527,
C4 (B7)	Engine ECU	ME745_EC5	▲	▲	▲	▲	▲	20460, 20717, 20527,
C4 (B7)	Engine ECU	V46_21	▲	▲	▲	▲	▲	20029, 20003, 20070, 20255, 20386, 20387, 20527,
C4 (B7)	Engine ECU	V46_32	▲	▲	▲	▲	▲	20806, 20029, 20003, 20070, 20255, 20386, 20387, 20768, 20527,
C4 (B7)	Engine ECU	MM6KP	▲	▲	▲	▲	▲	20463, 20859, 20372, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
C4 (B7)	Engine ECU	VD46	▲	▲	▲	▲	▲	20349, 20299, 20444, 20190, 20544, 20157, 20576, 20593, 20653, 20654, 20658, 20661, 20680, 20685, 20711, 20578, 20580, 20594, 20613, 20715, 20527,
C4 (B7)	Headlamp height adjuster / Directional headlamp	LADCT	▲	▲	▲	▲	▲	20527,
C4 (B7)	Engine relay unit	BSM_2010	▲	▲	▲	▲	▲	20327, 20780, 20252, 20401, 20327, 20780, 20522, 20401, 20527,
C4 (B7)	Service module	BTA	▲	▲	▲	▲	▲	20847, 20142, 20527,
C4 (B7)	Service module	BLVV	▲	▲	▲	▲	▲	20176, 20527,
C4 (B7)	Service module	BTA_CN	▲	▲	▲	▲	▲	20765, 20527,
C4 (B7)	Multiplexed additive pump	PADDGO_E5	▲	▲	▲	▲	▲	20145, 20282, 20235, 20323, 20584, 20235, 20323, 20686, 20235, 20323, 20687, 20235, 20323, 20527,
C4 (B7)	ABS/traction control	ABS81	▲	▲	▲	▲	○	20039, 20527,
C4 (B7)	ABS/traction control	ESP81	▲	▲	▲	▲	▲	20408, 20039, 20169, 20523, 20527,
C4 (B7)	Battery charge status unit	BECEB_GEN2	▲	▲	▲	▲	○	20527,
C4 (B7)	Driving school module	MAE	▲	▲	▲	○	▲	20527,
C4 (B7)	Supply protection and management unit	BPGA2010	▲	▲	▲	▲	○	20527,
C4 (B7)	Central voltage retention device	DMTC	▲	○	○	○	○	
C4 (B7)	Central voltage retention device	DMTR	▲	▲	▲	○	○	20527,
C4 Aircross	Parking aid	AAS_MMC	●	●	●	●	○	20527,
C4 Aircross	Driver and passenger airbags	SAC_TRW	●	●	●	●	●	20302, 20481, 20744, 20762, 20527,
C4 Aircross	Driver's door module	PDPC	●	●	●	●	○	20527,
C4 Aircross	Rain and brightness sensor	CDPL	●	●	●	●	○	20362, 20527,

Vehicle	System	ECU Name	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C4 Aircross	Anti-theft alarm	ALARME MMC	●	●	●	●	●	20527,
C4 Aircross	Power steering	EPS	●	●	●	●	○	20527,
C4 Aircross	Instrument panel	COMBINE	●	●	●	●	●	20412, 20275, 20274, 20392, 20527,
C4 Aircross	Starting authorisation ECU	OSS	●	●	●	●	●	20527, 20720,
C4 Aircross	Radio or radiotelephone (radio part)	AUTORADIO_3	●	●	●	●	●	20527,
C4 Aircross	Injection/ignition	MIVEC	●	●	●	●	●	20577, 20649, 20841, 20842, 20655, 20682, 20685, 20527,
C4 Aircross	Injection/ignition	CMM_4A92	●	●	●	●	●	20577, 20595, 20649, 20841, 20842, 20655, 20682, 20685, 20527,
C4 Aircross	Injection/ignition	HDI_4N13	●	●	●	●	●	20143, 20112, 20143, 20112, 20293, 20449, 20469, 20571, 20595, 20629, 20841, 20293, 20842, 20293, 20655, 20527,
C4 Aircross	Injection/ignition	HDI_SID807_J3J4	●	●	●	●	●	20088, 20089, 20342, 20062, 20065, 20064, 20066, 20226, 20636, 20588, 20596, 20621, 20661, 20710, 20573, 20591, 20692, 20694, 20709, 20527,
C4 Aircross	Rear final drive piloted clutch	TRANSMISSION	●	●	●	●	●	20527,
C4 Aircross	Headlamp height adjuster / Directional headlamp	CORPRO	●	●	●	●	●	20050, 20527,
C4 Aircross	Coded anti-start / Hands free starting access electronic module.	WCM	●	●	●	●	○	20145, 20192, 20084, 20494, 20515, 20321, 20322, 20431, 20084, 20494, 20332, 20674, 20676, 20677, 20321, 20322, 20431, 20527,
C4 Aircross	Coded anti-start / Hands free starting access electronic module.	KOS	●	●	●	●	●	20084, 20494, 20084, 20494, 20084, 20494, 20495, 20511, 20324, 20431, 20527,
C4 Aircross	ECU-Stop and start	STT MMC	●	●	●	●	○	20527,
C4 Aircross	Steering wheel angle sensor	CAV	●	●	●	○	○	20771, 20527,
C4 Aircross	heating/ventilation	CLIM REGULEE	●	●	●	●	●	20527,
C4 Aircross	gearbox	BV_CVT	●	●	●	●	○	20527,
C4 Aircross	Built-in Systems Interface (BSI)	ETACS_SUV	○	●	●	●	●	20403, 20407, 20848, 20452, 20835, 20486, 20485, 20610, 20845, 20527,
C4 Aircross	Navigation	NAVIGATION	●	●	●	○	○	20527,
C4 CACTUS	Built-in Systems Interface	BSI2010	▲	▲	▲	▲	▲	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20495, 20549, 20731, 20301, 20489, 20047, 20086, 20154, 20228, 20411, 20844, 20489, 20527,
C4 CACTUS	Engine ECU	EDC17C10_BR2	▲	▲	▲	▲	▲	20088, 20089, 20089, 20254, 20343, 20806, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
C4 CACTUS	Engine ECU	V46	▲	▲	▲	▲	▲	20806, 20070, 20251, 20262, 20260, 20659, 20681, 20685, 20149, 20578, 20580, 20527,
C4 CACTUS	Engine ECU	VD46	▲	▲	▲	▲	▲	20349, 20299, 20444, 20190, 20544, 20157, 20576, 20593, 20653, 20654, 20658, 20661, 20680, 20685, 20711, 20578, 20580, 20594, 20613, 20715, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C4 L (B7)	Anti-theft alarm	ALARME	▲	▲	▲	▲	▲	20125, 20115, 20118, 20025, 20125, 20115, 20118, 20125, 20115, 20118, 20527,
C4 L (B7)	Anti-theft alarm	ALARME LIN	▲	▲	▲	▲	▲	20527,
C4 L (B7)	Under inflation detection	DSG	▲	▲	▲	▲	○	20168, 20459, 20737, 20530, 20267, 20536, 20303, 20304, 20538, 20543, 20368, 20857, 20826, 20527,
C4 L (B7)	Under inflation detection	DSG UDS	▲	▲	▲	▲	○	20536, 20857, 20527,
C4 L (B7)	Air conditioning ECU	CLIM REGULEE UDS	▲	▲	▲	▲	▲	20491, 20527,
C4 L (B7)	Rain and brightness sensor	PLUIE LUMINOSITE UDS	▲	▲	▲	▲	○	20797, 20527, 20797, 20527,
C4 L (B7)	Radio	RD5	▲	▲	▲	▲	▲	20844, 20030, 20519, 20527,
C4 L (B7)	Radio	RD45	▲	▲	▲	▲	▲	20844, 20030, 20519, 20527, 20844, 20030, 20519,
C4 L (B7)	Built-in Systems Interface	BSI2010	▲	▲	▲	▲	▲	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20495, 20549, 20731, 20301, 20489, 20047, 20086, 20154, 20228, 20411, 20844, 20489, 20527,
C4 L (B7)	Airbag	RBG UDS	▲	▲	▲	▲	○	20189, 20406, 20822, 20527,
C4 L (B7)	Air bag	RBG UDS	●	●	●	●	○	20189, 20406, 20822, 20527,
C4 L (B7)	Multiplexed control panel	FMUX	▲	▲	▲	▲	▲	
C4 L (B7)	Monitoring of the blind spot	SAM	▲	▲	▲	▲	▲	20527,
C4 L (B7)	Engine ECU	DCM35_BR2	▲	▲	▲	▲	▲	20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
C4 L (B7)	Engine ECU	EDC17C10_BR2	▲	▲	▲	▲	▲	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
C4 L (B7)	Engine ECU	HDI_SID807_BR2	▲	▲	▲	▲	▲	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
C4 L (B7)	Engine ECU	MEV17_4_2	▲	▲	▲	▲	▲	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
C4 L (B7)	Engine ECU	MED17_4_2	▲	▲	▲	▲	▲	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
C4 L (B7)	Engine ECU	ME745	▲	▲	▲	▲	▲	20743, 20631, 20721, 20527,
C4 L (B7)	Engine ECU	MEVD17_4_2	▲	▲	▲	▲	▲	20070, 20563, 20291, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20827, 20061, 20527,
C4 L (B7)	Engine ECU	ME745_EC5	▲	▲	▲	▲	▲	20460, 20717, 20527,
C4 L (B7)	Engine ECU	V46_21	▲	▲	▲	▲	▲	20029, 20003, 20070, 20255, 20386, 20387, 20527,
C4 L (B7)	Engine ECU	V46_32	▲	▲	▲	▲	▲	20806, 20029, 20003, 20070, 20255, 20386, 20387, 20768, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C4 L (B7)	Engine ECU	MM6KP	▲	▲	▲	▲	▲	20463, 20859, 20372, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
C4 L (B7)	Engine ECU	VD46	▲	▲	▲	▲	▲	20349, 20299, 20444, 20190, 20544, 20157, 20576, 20593, 20653, 20654, 20658, 20661, 20680, 20685, 20711, 20578, 20580, 20594, 20613, 20715, 20527,
C4 L (B7)	Headlamp height adjuster / Directional headlamp	LADCT	▲	▲	▲	▲	▲	20527,
C4 L (B7)	Engine relay unit	BSM_2010	▲	▲	▲	▲	▲	20327, 20780, 20252, 20401, 20327, 20780, 20252, 20401, 20527,
C4 L (B7)	Service module	BTA	▲	▲	▲	▲	▲	20847, 20142, 20527,
C4 L (B7)	Service module	BLVV	▲	▲	▲	▲	▲	20176, 20527,
C4 L (B7)	Service module	BTA CN	▲	▲	▲	▲	▲	20765, 20527,
C4 L (B7)	ABS/traction control	ABS81	▲	▲	▲	▲	○	20039, 20527,
C4 L (B7)	ABS/traction control	ESP81	▲	▲	▲	▲	▲	20408, 20039, 20169, 20523, 20527,
C4 L (B7)	Battery charge status unit	BECEB GEN2	▲	▲	▲	▲	○	20527,
C4 L (B7)	Supply protection and management unit	BPGA2010	▲	▲	▲	▲	○	20527,
C4 L (B7)	Hands free starting access electronic module.	BML	▲	▲	▲	▲	▲	20076, 20077, 20078, 20079, 20080, 20081, 20082, 20083, 20358, 20527,
C4 L (B7)	Central voltage retention device	DMTC	▲	○	○	○	○	
C4 L (B7)	Central voltage retention device	DMTR	▲	▲	▲	○	○	20527,
C4 L (B7)	Electric steering lock	AVE	▲	▲	▲	▲	▲	20527, 20767,
C4 L (B7)	Electronic key reader	LCE	●	●	●	●	○	20527,
C4 PICASSO	BSI		●	●	●	●	●	3005
C4 PICASSO	Instrument panel		●	●	●	●	●	
C4 PICASSO	Radio		●	●	●	●	●	
C4 PICASSO	CD player		●	●	●	●	●	
C4 PICASSO	Parking aid		●	●	●	●	●	
C4 PICASSO	Air conditioning		●	●	●	●	●	
C4 PICASSO	Lane departure warning system		●	●	●	●	●	
C4 PICASSO	Steering wheel with fixed central controls		●	●	●	●	●	
C4 PICASSO	Alarm		●	●	●	●	●	
C4 PICASSO	Windscreen wiper		●	●	●	●	●	
C4 PICASSO	Additive pump		●	●	●	●	●	
C4 PICASSO	Additive pump		●	●	●	●	●	
C4 PICASSO	Driver's door module		●	●	●	●	●	
C4 PICASSO	Passenger's door module		●	●	●	●	●	
C4 PICASSO	Hi-Fi amplifier		●	●	●	●	●	
C4 PICASSO	Rain sensor/ Brightness		●	●	●	●	●	
C4 PICASSO	Driver's seat memorising unit		●	●	●	●	●	
C4 PICASSO	Airbag		●	●	●	●	●	
C4 PICASSO	Telematic		●	●	●	●	●	
C4 PICASSO	Telematic		●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C4 PICASSO	Telematic		●	●	●	●		
C4 PICASSO	Telematic		●	●	●	●		
C4 PICASSO	High frequency receiver		●	●	●	●		
C4 PICASSO	Gearbox ECU		●	●	●	●	●	
C4 PICASSO	Gearbox ECU		●	●	●	●	●	
C4 PICASSO	Gearbox ECU		●	●	●	●	●	
C4 PICASSO	Gearbox ECU		●	●	●	●	●	
C4 PICASSO	Automatic gearbox electric control		●	●	●	●	●	
C4 PICASSO	Pneumatic suspension		●	●	●	●	●	
C4 PICASSO	Power steering		●	●	●	●	●	
C4 PICASSO	Directional headlamps		●	●	●	●	●	
C4 PICASSO	Trailer relay unit			●	●	●	●	
C4 PICASSO	Engine relay unit			●	●		●	
C4 PICASSO	Deflation detection		●	●	●	●		02003 02007 02008 02009 02010 02012
C4 PICASSO	Electric secondary brake		●	●	●	●	●	01001 01005 01006
C4 PICASSO	Hands Free Kit		●	●	●	●	●	
C4 PICASSO	Battery charge status unit		●	●	●	●		
C4 PICASSO	Ambient interior lighting unit		●	●	●	●		
C4 PICASSO	ABS/ Electronic stability program	ESP8.1_BOSCH	●	●	●	●	●	01002 01003 01004 01008 05007
C4 PICASSO	ABS/ Electronic stability program	ABS8_BOSCH	●	●	●	●	●	
C4 PICASSO	ABS/ Electronic stability program	ESP8_BOSCH	●	●	●	●	●	
C4 PICASSO	ABS/ Electronic stability program	ABS81	●	●	●	●	●	
C4 PICASSO	Injection/ Ignition	5FT MED17.4	●	●	●	●	●	7002
C4 PICASSO	Injection/ Ignition	5FX MED17.4	●	●	●	●	●	7002
C4 PICASSO	Injection/ Ignition	MEV17.4	●	●	●	●	●	7002
C4 PICASSO	Injection/ Ignition	MEV174	●	●	●	●	●	7002
C4 PICASSO	Injection/ Ignition	MED174	●	●	●	●	●	7002
C4 PICASSO	Injection/ Ignition	MEV17 4 2	●	●	●	●	●	7002
C4 PICASSO	Injection/ Ignition	MED17 4 2	●	●	●	●	●	7002
C4 PICASSO	Injection/ Ignition	RFJ MM6LPB	●	●	●	●	●	
C4 PICASSO	Injection/ Ignition	6FY MM6LPB	●	●	●	●	●	
C4 PICASSO	Injection/ Ignition	EDC15C2	●	●	●	●	●	
C4 PICASSO	Injection/ Ignition	ME745	●	●	●	●	●	
C4 PICASSO	Injection/ Ignition	ME749	●	●	●	●	●	
C4 PICASSO	Injection/ Ignition	MM6KP	●	●	●	●	●	
C4 PICASSO	Injection/ Ignition	9HZ (FAP) BOSCH EDC16C34 DV6TED4	●	●	●	●	●	
C4 PICASSO	Injection/ Ignition	RHR SIEMENS SID803A		●	●		●	04008 04010
C4 PICASSO	Injection/ Ignition	RHJ SIEMENS SID803A		●	●		●	04008 04010
C4 PICASSO	Injection/ Ignition	RHE DCM3.5	●	●	●	●	●	
C4 PICASSO	Injection/ Ignition	RHH DCM3.5	●	●	●	●	●	
C4 PICASSO	Injection/ Ignition	RHD DCM3.5	●	●	●	●	●	
C4 PICASSO	Injection/ Ignition	DCM35 BR2	●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C4 PICASSO (B78)	Switch module under the steering wheel (Top of column)	COM2008P	●	●	●	●	●	20527,
C4 PICASSO (B78)	Steering wheel with integral controls (VCI)	VCI	●	●	●	●	●	20527,
C4 PICASSO (B78)	Headlamp height adjuster / Directional headlamp	LADCT	●	●	●	●	●	20527,
C4 PICASSO (B78)	Multifunction camera or multifunction video camera	CVM	●	●	●	●	●	20829, 20439, 20851, 20527,
C4 PICASSO (B78)	Anti-theft alarm	MUS	●	●	●	●	●	20024, 20024, 20527,
C4 PICASSO (B78)	Siren	SIR	●	●	●	●	●	20131, 20131, 20527,
C4 PICASSO (B78)	Left hand front wiper motor.	MOTEV_UDS	●	●	●	●	○	20550, 20527,
C4 PICASSO (B78)	Right hand front wiper motor.	MOTED_UDS	●	●	●	●	○	20550, 20527,
C4 PICASSO (B78)	Control panel	CIROCCO	●	●	●	●	●	20527,
C4 PICASSO (B78)	Control panel	COMBINE_UDS	●	●	●	●	●	20527,
C4 PICASSO (B78)	Telematics unit SMEG_PLUS	SMEG_PLUS	●	●	●	●	●	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20843, 20527,
C4 PICASSO (B78)	Vehicle Distance Assistance	ARTIV_UDS	▲	▲	▲	▲	▲	20027, 20527,
C4 PICASSO (B78)	Air conditioning	BCC	●	●	●	●	●	20527,
C4 PICASSO (B78)	Driver's seat memorizing unit	BDMC	●	●	●	●	●	20146, 20745, 20746, 20527, 20146, 20745, 20746,
C4 PICASSO (B78)	Rain and brightness sensor	PLUIE LUMINOSITE_UDS	●	●	●	●	○	20797, 20527, 20797, 20527,
C4 PICASSO (B78)	Air bag	RBG_UDS	●	●	●	●	○	20189, 20406, 20822, 20527,
C4 PICASSO (B78)	RH reversible seat belt reel	ECR_D	●	●	●	●	●	20145, 20192, 20527,
C4 PICASSO (B78)	LH reversible seat belt reel	ECR_G	▲	▲	▲	▲	▲	20145, 20192, 20527,
C4 PICASSO (B78)	Battery charge status unit	BECB_GEN2	●	●	●	●	○	20527,
C4 PICASSO (B78)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	●	●	●	●	●	20055, 20290, 20408, 20608, 20642, 20643, 20702, 20703, 20039, 20169, 20177, 20523, 20527,
C4 PICASSO (B78)	Multiplexed control panel	FMUX	●	●	●	●	●	20527, 20527,
C4 PICASSO (B78)	Parking aid	AAS_UDS	●	●	●	●	●	20558, 20807, 20457, 20527,
C4 PICASSO (B78)	Electronic key reader	LCE	●	●	●	●	○	20527,
C4 PICASSO (B78)	Electric steering lock	AVE	●	●	●	●	●	20527, 20498,
C4 PICASSO (B78)	Signalling fuse box	BSG_S	●	●	●	●	●	20527,
C4 PICASSO (B78)	Door control pad	PDPC_UDS	●	●	●	●	●	20527,
C4 PICASSO (B78)	Supply protection and management unit	BPGA2010	●	●	●	●	○	20527,
C4 PICASSO (B78)	Automatic gearbox electric control	COMELEC2	●	●	●	●	●	20415, 20478, 20490, 20527, 20557, 20602, 20603, 20668,
C4 PICASSO (B78)	Hands free starting access electronic module.	BML	●	●	●	●	●	20075, 20076, 20077, 20078, 20079, 20080, 20081, 20082, 20083, 20358, 20527,
C4 PICASSO (B78)	Independent telematic unit (BTA)	BTA	▲	▲	▲	▲	▲	20847, 20142, 20527,
C4 PICASSO (B78)	Electric power steering	DAE_BVH2	●	●	●	●	○	20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C4 PICASSO (B78)	Central voltage retention device	DMTC	●	○	○	○	○	
C4 PICASSO (B78)	Motorised Boot ECU	VERINS MOTORISES	●	●	●	●	●	20527,
C4 PICASSO (B78)	Diesel additive function	PADDGO INERGY	●	●	●	●	●	20060, 20527,
C4 PICASSO (B78)	Panoramic vision assistance ECU	AVP	●	●	●	●	●	20527,
C4 PICASSO (B78)	Additional heating	CHAUFF ADD	●	●	●	●	●	20048, 20527, 20107,
C4 SEDAN	BSI		●	●	●	●	●	3005
C4 SEDAN	Instrument panel		●	●	●	●	●	
C4 SEDAN	Radio		●	●	●	●	●	
C4 SEDAN	CD player		●	●	●	●	●	
C4 SEDAN	Parking aid		●	●	●	●	●	
C4 SEDAN	Air conditioning		●	●	●	●	●	
C4 SEDAN	Switch module under the steering wheel		●	●	●	●	●	
C4 SEDAN	Alarm		●	●	●	●	●	
C4 SEDAN	Driver's seat memorising unit		●	●	●	●	●	
C4 SEDAN	Driver's door module		●	●	●	●	●	
C4 SEDAN	Passenger's door module		●	●	●	●	●	
C4 SEDAN	Unit Rev counter		●	●	●	●	●	
C4 SEDAN	Rain sensor/ Brightness		●	●	●			
C4 SEDAN	Airbag		●	●	●	●		
C4 SEDAN	Multifunction screen	Multifunction screen A	●	●	●	●	●	
C4 SEDAN	Multifunction screen	Multifunction screen C	●	●	●	●	●	
C4 SEDAN	Telematic	Telematics (RT3)	●	●	●	●	●	
C4 SEDAN	Telematic	Telematic (RT4)	●	●	●	●	●	
C4 SEDAN	Telematic	Telematic (RT5)	●	●	●	●	●	
C4 SEDAN	Trailer relay unit			●	●	●	●	
C4 SEDAN	Engine relay unit			●	●		●	
C4 SEDAN	Multiplexed diesel additive pump		●	●	●	●	●	
C4 SEDAN	Power steering		●	●	●	●	●	
C4 SEDAN	Directional headlamps		●	●	●	●	●	
C4 SEDAN	Hands Free Kit		●	●	●	●	●	
C4 SEDAN	Injection	RFJ MM6KP Bio Flex (EW10A FF)	●	●	●	●	●	
C4 SEDAN	Injection	RFJ MM6KP (EW10A FF)	●	●	●	●	●	7001
C4 SEDAN	Injection	RFJ MM6LPB	●	●	●	●	●	
C4 SEDAN	Injection	NFU BOSCH ME749	●	●	●	●	●	
C4 SEDAN	Injection	N6A BOSCH ME749	●	●	●	●	●	
C4 SEDAN	Injection	NFS BOSCH ME745	●	●	●	●	●	
C4 SEDAN	Auto gearbox	BVA AL4 AT8	●	●	●	●	●	7001
C4 SEDAN	Auto gearbox	BVA AM6 AT6 EURO5	●	●	●	●	●	
C4 SEDAN	Auto gearbox	BVA AM6	●	●	●	●	●	
C4 SEDAN	Auto gearbox	CFC300P	●	●	●	●	●	
C4 SEDAN	ABS	ESP8.1 BOSCH	●	●	●	●	●	5007
C4 SEDAN	ABS	ESP8 BOSCH	●	●	●		●	5002
C4 SEDAN	Injection	NFU BOSCH ME745	●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C4 SEDAN	Injection	N6A BOSCH ME745	●	●	●	●	●	
C4 SEDAN	Injection	NFR BOSCH ME745	●	●	●	●	●	
C4 SEDAN	Injection	EDC16C3	●	●	●	●	●	
C4 SEDAN	Injection	MED17 4 EURO4	●	●	●	●	●	
C4 SEDAN	Injection	MEV17 4 EURO4	●	●	●	●	●	
C4 SEDAN	Injection	RHM BOSCH EDC15C2 DW10A	●	●	●	●	●	
C4 SEDAN	Injection	RHM BOSCH EDC15C2 DW10A	●	●	●	●	●	
C4 SEDAN	Injection	RHS BOSCH EDC15C2 DW10A	●	●	●	●	●	
C4 SEDAN	Injection	RHS BOSCH EDC15C2 DW10A	●	●	●	●	●	
C4 SEDAN	Injection	RHT BOSCH EDC15C2 DW10A	●	●	●	●	●	
C4 SEDAN	Injection	RHT BOSCH EDC15C2 DW10A	●	●	●	●	●	
C4 SEDAN	Injection	RHW BOSCH EDC15C2 DW10A	●	●	●	●	●	
C4 SEDAN	Injection	RHW BOSCH EDC15C2 DW10A	●	●	●	●	●	
C4 SEDAN	Injection	RHZ BOSCH EDC15C2 DW10A	●	●	●	●	●	
C4 SEDAN	Injection	RHZ BOSCH EDC15C2 DW10A	●	●	●	●	●	
C4 SEDAN	Injection	9HZ (FAP) BOSCH EDC16C34 DV6TED4-110CV	●	●	●	●	●	
C4 SEDAN	Injection	9HX BOSCH EDC16C34 DV6ATED4- 90CV	●	●	●	●	●	
C4 SEDAN	Injection	HDI SID803A	●	●	●	●	●	
C4 SEDAN	Injection	DCM3. 4	●	●	●	●	●	
C4 SEDAN	Injection	DCM3. 5	●	●	●	●	●	
C4 SEDAN	Injection	HDI SID803	●	●	●	●	●	
C4 SEDAN	ABS	ABS8. 1 BOSCH	●	●	●	●	●	
C4 SEDAN	ABS	ABS8 BOSCH	●	●	●	●	●	
C4 SEDAN	Electric secondary brake	FSE	●	●	●	●	●	
C4 SEDAN	Automatic gearbox electric control	COMELBVA	●	●	●	●	●	
C4 SEDAN	Pneumatic suspension	SUSPENSION	●	●	●	●	●	
C4 SEDAN	Under inflation detection	DSG	●	●	●	●	○	
C5	BSI		●	●	●	●	●	03007 03008 03009
C5	BSI		●	●	●	●	●	03007 03008 03009
C5	Navigation		●	●	●	●		
C5	Navigation		●			●		
C5	Instrument panel		●	●	●	●	●	
C5	Air conditioning		●	●	●	●	●	
C5	Radio post-equipment		●	●	●	●	●	
C5	Car-phone		●	●	●	●	●	
C5	Car-phone		●	●	●	●	●	
C5	CD player		●	●	●	●	●	
C5	Parking aid		●	●	●	●	●	
C5	Sun roof		●	●	●	●	●	
C5	Alarm		●	●	●	●	●	
C5	Switch module at the steering wheel			●	●			
C5	Driver's door module		●			●		
C5	Passenger's door module		●			●		
C5	Airbag		●	●	●			

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C5	Display or Autopc or Telematics		●	●	●	●	●	
C5	Display or Autopc or Telematics		●	●	●	●	●	
C5	Display or Autopc or Telematics		●	●	●	●	●	
C5	Display or Autopc or Telematics		●	●	●	●	●	
C5	Display or Autopc or Telematics		●	●	●	●	●	
C5	Display or Autopc or Telematics		●	●	●	●	●	
C5	Diesel additive function		●	●	●	●	●	4008
C5	Diesel additive function		●	●	●	●	●	4008
C5	Injection	2.0L RFN MM48P	●	●	●	●	●	7001
C5	Injection	RFN MM6LP	●	●	●	●	●	7001
C5	Suspension		●	●	●	●	●	
C5	Suspension			●	●		●	
C5	Auto gearbox		●			●	●	7001
C5	Auto gearbox		●	●	●	●	●	7001
C5	Auto gearbox		●	●	●	●	●	7001
C5	Auto gearbox		●	●	●	●	●	7001
C5	additional heating		●	●	●	●	●	
C5	Right-hand headlamp		●	●	●		●	
C5	Left-hand headlamp		●	●	●		●	
C5	Injection	RFN MM6LP	●	●	●	●	●	
C5	Injection	3.0L XFX BOSCH ME746	●	●	●	●	●	
C5	Injection	1.8L 6FZ SAGEM S2000P	●			●	●	
C5	Injection	1.8L 6FZ SAGEM S2000P	●			●	●	
C5	Injection	6FZ SAGEM S2000PM1		●	●		●	
C5	Injection	6FZ SAGEM S2000PM1		●	●		●	
C5	Anti-lock brake system		●			●	●	
C5	Anti-lock brake system		●	●	●	●	●	
C5	Injection	2.0L RLZ SIEMENS Sirius81	●	●	●	●	●	
C5	Injection	2.2 L 4HX BOSCH EDC15C2	●	●	●	●	●	4007
C5	Injection	2.2 L 4HX BOSCH EDC15C2	●	●	●	●	●	4007
C5	Injection	2.0 L RHY BOSCH EDC15C2	●	●	●	●	●	4007
C5	Injection	2.0 L RHY BOSCH EDC15C2	●	●	●	●	●	4007
C5	Injection	2.0 L RHZ BOSCH EDC15C2	●	●	●	●	●	4007
C5	Injection	2.0 L RHZ BOSCH EDC15C2	●	●	●	●	●	4007
C5	Injection	2.0 L RHS BOSCH EDC15C2	●	●	●	●	●	4007
C5	Injection	2.0 L RHS BOSCH EDC15C2	●	●	●	●	●	4007
C5	Injection	RHY SIEMENS SID801	●	●	●	●	●	
C5	Injection	RHY SIEMENS SID801		●	●		●	
C5 (X7)	Parking aid	AAS	●	●	●	●	○	20457, 20527,
C5 (X7)	ABS/traction control	ESP81	●	●	●	●	●	20408, 20039, 20105, 20523, 20527,
C5 (X7)	Multifunction display	EMF A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
C5 (X7)	Multifunction display	EMF C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C5 (X7)	Power steering electric pump unit	GEP	●	●	●	●	○	20527,
C5 (X7)	Under inflation detection	DSG	●	●	●	●	○	20168, 20267, 20536, 20303, 20304, 20538, 20543, 20857, 20826, 20527,
C5 (X7)	Under inflation detection	DSG UDS	●	●	●	●	○	20536, 20857, 20527,
C5 (X7)	Windscreen wiper	MOTEV	●	●	●	○	○	20527,
C5 (X7)	Electric secondary brake	FSE	●	●	●	●	●	20049, 20247, 20518, 20049, 20247, 20518, 20527,
C5 (X7)	ECU at the top of the steering column	VCCF	●	●	●	●	●	
C5 (X7)	Injection/ignition	DCM35_BR2	●	●	●	●	●	20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
C5 (X7)	Injection/ignition	ME747	●	●	●	●	●	20005, 20381, 20437, 20147, 20309, 20527,
C5 (X7)	Injection/ignition	SID201	○	●	●	●	●	20138, 20809, 20485, 20226, 20246, 20696, 20527,
C5 (X7)	Injection/ignition	EDC16CP39	●	●	●	●	●	20382, 20156, 20367, 20446, 20353, 20355, 20346, 20226, 20238, 20240, 20283, 20380, 20588, 20694, 20714, 20527,
C5 (X7)	Injection/ignition	MM6KP	●	●	●	●	●	20463, 20859, 20372, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
C5 (X7)	Injection/ignition	DCM34	●	●	●	●	●	20508, 20818, 20239, 20291, 20187, 20328, 20242, 20819, 20188, 20020, 20226, 20626, 20285, 20694, 20240, 20283, 20588, 20629, 20672, 20710, 20573, 20579, 20694, 20527,
C5 (X7)	Injection/ignition	DCM34_P	●	●	●	●	●	20281, 20509, 20419, 20020, 20064, 20070, 20226, 20240, 20286, 20588, 20627, 20650, 20663, 20672, 20695, 20710, 20573, 20579, 20618, 20694,
C5 (X7)	Injection/ignition	DCM35	●	●	●	●	●	20088, 20089, 20343, 20509, 20020, 20067, 20062, 20226, 20240, 20588, 20629, 20672, 20710, 20285, 20573, 20579, 20692, 20694, 20527,
C5 (X7)	Injection/ignition	EDC16C3	●	●	●	●	●	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20468, 20296, 20719, 20226, 20241, 20344, 20470, 20483, 20246, 20635, 20527,
C5 (X7)	Injection/ignition	EDC17CP11	●	●	●	●	●	20295, 20243, 20244, 20348, 20360, 20062, 20226, 20626, 20285, 20694, 20626, 20285, 20694, 20283, 20380, 20588, 20692, 20694, 20527,
C5 (X7)	Injection/ignition	MED17_4_EURO5	●	●	●	●	●	20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
C5 (X7)	Injection/ignition	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
C5 (X7)	Injection/ignition	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C5 (X7)	Injection/ignition	HDI_SID807	●	●	●	●	●	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
C5 (X7)	Injection/ignition	MED17_4_2	●	●	●	●	●	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
C5 (X7)	Injection/ignition	EDC17CP42	●	●	●	●	●	20088, 20089, 20117, 20295, 20245, 20348, 20360, 20062, 20065, 20070, 20374, 20461, 20469, 20637, 20620, 20621, 20626, 20651, 20657, 20660, 20661, 20662, 20679, 20711, 20285, 20579, 20597, 20527,
C5 (X7)	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
C5 (X7)	Hands-free kit (Telephone)	BOITIER NOMADE	●	●	●	●	●	20135, 20135, 20527,
C5 (X7)	Service module	MD SERV	●	●	●	●	●	20124, 20124, 20527,
C5 (X7)	Service module	BTA	●	●	●	●	●	20847, 20142, 20527,
C5 (X7)	Service module	BTA CN	●	●	●	●	●	20765, 20527,
C5 (X7)	Driver's door module	PDPC	●	●	●	●	●	
C5 (X7)	Lane departure warning system	AFIL	●	●	●	●	○	20455, 20268, 20749, 20750, 20527,
C5 (X7)	Telematics	RADIONAV_RNEGC	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
C5 (X7)	Telematics	RADIONAV_RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
C5 (X7)	Telematics	RADIONAV_NG4	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20527,
C5 (X7)	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20128, 20847, 20095, 20123, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20006, 20114, 20121, 20133, 20128, 20134, 20847, 20095, 20123, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20527,
C5 (X7)	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
C5 (X7)	Telematics	MRN	●	●	●	●	●	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20527,
C5 (X7)	Seat belts not fastened LED unit	TNB	●	○	○	○	●	
C5 (X7)	Motorised Boot ECU	COFFRE MOTORISE	●	●	●	●	●	20266, 20501, 20527,
C5 (X7)	CSS	CSS	●	●	●	●	●	20496, 20527,
C5 (X7)	High frequency receiver	RHF	●	●	●	●	○	
C5 (X7)	Central voltage retention device	DMTC	●	○	○	○	○	
C5 (X7)	Central voltage retention device	DMTR	●	●	●	○	○	20527,
C5 (X7)	Active damper electronic unit	BEBA	●	●	●	●	●	20371, 20391, 20524, 20527,
C5 (X73C)	Anti-lock brake system		●	●	●	●	●	01002 01004 01008 05007 07005
C5 (X73C)	Anti-theft alarm	ALARME	●	●	●	●	●	08082 08083 08081
C5 (X73C)	Air conditioning		●	●	●	●	●	7005
C5 (X73C)	Airbag		●	●	●	●	●	08075 08076 08077 08078 08079 08080
C5 (X73C)	Directional headlamps	PROJECTEURS	●	●	●	●	●	07005 08214

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C5 (X73C)	Hi-Fi amplifier	Audio amplifier	●	●	●		●	7005
C5 (X73C)	Instrument panel	COMBINE	●	●	●	●		08253 08254
C5 (X73C)	Electric secondary brake	FSE						01005 01006
C5 (X73C)	Radio		●	●	●	●	●	08265 08266 08267 08268 08269
C5 (X73C)	Deflation detection		●	●	●	●		02003 02008 02009 02010 02012
C5 (X73C)	Multifunction screen	ECRAN C	●	●	●	●	●	08254 08263 08083
C5 (X73C)	Gearbox ECU		●	●	●	●	●	08084 08085 08086 07001
C5 (X73C)	Gearbox ECU		●	●	●	●	●	08087 08088 08089 08090 08091 07005 08092 08093 08094
C5 (X73C)	Gearbox ECU		●	●	●	●	●	08088 08091 08089 08090 08087 07005 08094 08093
C5 (X73C)	Services module	MD SERV	●	●	●	●	●	08270 08271 08272
C5 (X73C)	Suspension			●	●		●	08273 08274 07005
C5 (X73C)	Suspension System Control ECU	CSS		●	●		●	8275
C5 (X73C)	Injection	MM6KP	●	●	●	●	●	07001 07005 08068 07058 08027 08053 08050 08051 08052 08069
C5 (X73C)	Injection	HDI_SID807	●	●	●	●	●	07005 04006 07007 07014 07015 07016 07017 07083 07084 07085 07086 08023 07090 07087 07053 07006 07056 07091 07050 04012 04002 07089 04009
C5 (X73C)	Injection	ME747	●	●	●	●	●	07005 07018 08027 08028 08029 07004 08050 08051 08052
C5 R	Anti-lock brake system	ESP MK60		●	●		●	5001
C5 R	Diesel additive function		●	●	●	●	●	4008
C5 R	Injection	RFJ MM6LPB		●	●		●	7001
C5 R	Injection	6FY MM6LPB		●	●		●	7001
C5 R	Injection	XFU BOSCH ME747	●	●	●	●	●	
C5 R	Injection	XFV BOSCH ME747	●	●	●	●	●	
C5 R	Injection	6FZ SAGEM S2000PM2		●	●		●	
C5 R	Injection	4HP BOSCH EDC16CP39 DW12BTED4	●	●	●	●	●	
C5 R	Injection	4HR BOSCH EDC16CP39 DW12BTED4	●	●	●	●	●	
C5 R	Injection	4HS BOSCH EDC16CP39 DW12BTED4	●	●	●	●	●	
C5 R	Injection	4HT BOSCH EDC16CP39 DW12BTED4	●	●	●	●	●	
C5 R	Injection	2.2 L 4HX BOSCH EDC15C2	●	●	●	●	●	
C5 R	Injection	2.2 L 4HX BOSCH EDC15C2	●	●	●	●	●	
C5 R	Injection	9HY BOSCH EDC16C34 DV6TED4	●	●	●	●	●	
C5 R	Injection	9HZ (FAP) BOSCH EDC16C34 DV6ATED4	●	●	●	●	●	
C5 R	Injection	RHR SIEMENS SID803A		●	●		●	04008 04010
C5 R	Injection	RHL SIEMENS SID803A		●	●		●	04008 04010
C5 R	Injection	RHR SIEMENS SID803		●	●		●	04001 04008 04010
C5 R	Injection	RHL SIEMENS SID803		●	●		●	04001 04008 04010
C5 R	BSI			●	●	●	●	3005
C5 R	Instrument panel			●	●		●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C5 R	Radio		●	●	●	●	●	
C5 R	CD player		●	●	●	●	●	
C5 R	Parking aid		●	●	●	●	●	
C5 R	Air conditioning		●	●	●	●	●	
C5 R	Lane departure warning system		●	●	●	●	●	
C5 R	Alarm		●	●	●	●	●	
C5 R	Switch module under the steering wheel		●	●	●	●	●	
C5 R	Driver's door module		●	●	●	●	●	
C5 R	Passenger's door module		●	●	●	●	●	
C5 R	Rain sensor/ Brightness		●	●	●			
C5 R	Sun roof	TO WEBASTO		●	●		●	7001
C5 R	Airbag		●	●	●	●		
C5 R	Multifunction screen		●	●	●	●	●	
C5 R	Multifunction screen		●	●	●	●	●	
C5 R	Telematic		●	●	●	●	●	
C5 R	Telematic		●	●	●	●	●	
C5 R	Telematic		●	●	●	●	●	
C5 R	Trailer relay unit			●	●	●	●	
C5 R	Engine relay unit			●	●		●	
C5 R	Suspension			●	●		●	
C5 R	Gearbox ECU		●	●	●	●	●	7001
C5 R	Gearbox ECU		●	●	●	●	●	7001
C5 R	Gearbox ECU		●	●	●	●	●	7001
C5 R	additional heating		●	●	●	●	●	
C5 R	Power steering		●	●	●	●	●	
C5 R	Directional headlamps		●	●	●		●	
C5 R	Deflation detection		●	●	●	●	●	02003 02008 02009 02010 02012
C5 R	Hands Free Kit		●	●	●	●	●	
C6	Parking aid	AAS	▲	▲	▲	▲	○	20457, 20527,
C6	ABS/traction control	ESP EBC 440 CAN	▲	▲	▲	▲	▲	20055, 20039, 20527,
C6	ABS/traction control	ESP EBC 440 K	▲	▲	▲	▲	▲	20055, 20039, 20527,
C6	ABS/traction control	ESP81	●	●	●	●	●	20408, 20039, 20527,
C6	Multifunction display	EMF A	▲	▲	▲	▲	▲	20137, 20151, 20137, 20151, 20527,
C6	Multifunction display	EMF C	▲	▲	▲	▲	▲	20137, 20151, 20137, 20151, 20527,
C6	Driver and passenger airbags	SAC_AUTOLIV	▲	▲	▲	▲	○	20249, 20481, 20744, 20762, 20192, 20249, 20481, 20744, 20762, 20249, 20481, 20744, 20762, 20192, 20249, 20481, 20744, 20762, 20406, 20822, 20527,
C6	Anti-theft alarm	ALARME	▲	▲	▲	▲	▲	20125, 20115, 20125, 20115, 20115, 20527,
C6	Radio or radiotelephone (radio part)	AUTORADIO	▲	▲	▲	▲	▲	20186, 20331, 20527,
C6	Driver's seat memorizing unit	BDMC	▲	▲	▲	▲	▲	20146, 20745, 20746, 20770, 20527,
C6	Passenger seat memorisation unit	BDMP	▲	▲	▲	▲	▲	20146, 20325, 20410, 20745, 20746, 20770, 20527,
C6	Battery charge status unit	BECEB	▲	▲	▲	▲	○	20527,
C6	Battery charge status unit	BECEB_GEN2	●	●	●	●	○	20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C6	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20844, 20155, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
C6	Engine relay unit	BSM	●	●	●	●	●	20527,
C6	Trailer relay unit	BSR	▲	▲	▲	▲	▲	
C6	gearbox	BVA AM6 AT6 EURO5	▲	▲	▲	▲	▲	20502, 20634, 20600, 20605, 20527,
C6	gearbox	BVA_AM6	▲	▲	▲	▲	▲	20532, 20860, 20502, 20634, 20600, 20502, 20634, 20600, 20605, 20605, 20527,
C6	CD player	CHANGEUR CD	▲	▲	▲	○	▲	20186, 20331, 20527, 20178, 20390, 20527,
C6	Additional heating	CHAUFF ADD	▲	▲	▲	▲	▲	20048, 20527, 20107,
C6	heating/ventilation	CLIM REGULEE	▲	▲	▲	▲	▲	
C6	Instrument panel	COMBINE	●	●	●	●	●	20130, 20527,
C6	Headlamp height adjuster / Directional headlamp	PROJECTEURS	▲	▲	▲	▲	▲	20831, 20527,
C6	Rain and brightness sensor	PLUIE LUMINOSITE	●	●	●	○	○	
C6	Electronically managed suspension	SUSPENSION_ECOTECH	●	●	●	●	●	20182, 20836, 20527,
C6	Power steering electric pump unit	GEP	●	●	●	●	○	20527,
C6	Under inflation detection	DSG	●	●	●	●	○	20168, 20267, 20536, 20303, 20304, 20538, 20543, 20857, 20826, 20527,
C6	Windscreen wiper	MOTEV	●	●	●	○	●	20527,
C6	Electric secondary brake	FSE	●	●	●	●	●	20049, 20247, 20518, 20049, 20247, 20518, 20764, 20527,
C6	Switch module under the steering wheel (Top of column)	HDC	●	●	●	●	●	20269, 20271, 20272, 20527,
C6	Injection/ignition	ME747	●	●	●	●	●	20005, 20381, 20437, 20147, 20309,
C6	Injection/ignition	SID201	○	●	●	●	●	20138, 20809, 20485, 20226, 20246, 20696, 20527,
C6	Injection/ignition	EDC16CP39	●	●	●	●	●	20382, 20156, 20367, 20446, 20353, 20355, 20346, 20226, 20238, 20240, 20283, 20380, 20588, 20694, 20714, 20527,
C6	Injection/ignition	EDC17CP11	●	●	●	●	●	20295, 20243, 20244, 20348, 20360, 20062, 20226, 20626, 20285, 20694, 20626, 20285, 20694, 20283, 20380, 20588, 20692, 20694, 20527,
C6	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
C6	Hands-free kit (Telephone)	BOITIER NOMADE	●	●	●	●	●	20135, 20135, 20527,
C6	Driver's door electronics	EDPC	●	●	●	●	●	20814,
C6	Passenger door electronics	EDPP	●	●	●	●	●	20814,
C6	Lane departure warning system	AFIL	●	●	●	●	○	20455, 20268, 20749, 20750, 20527,
C6	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20128, 20847, 20095, 20123, 20127, 20137, 20006, 20114, 20121, 20133, 20128, 20847, 20095, 20123, 20128, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C6	Pedestrian impact detection unit	DETECT_CHOC_PIETON	●	●	●	●	○	20527,
C6	Rear seat memorising unit	BDM AR	●	●	●	●	●	20363, 20364, 20365, 20728, 20527,
C6	Boot wiring housing	BSC	●	●	●	●	●	20527,
C6	CDSP (Dynamic Headlamp Height Adjustment)	CDSPD	●	●	●	●	○	
C6	CDSP (Dynamic Headlamp Height Adjustment)	CDSPG	●	●	●	●	○	
C6	Moving panel deflector	DEFL PAN MOBIL	●	●	●	●	●	20527,
C6	Driver's seat panel	PLAT SIEGE GAUCHE	●	●	●	●	●	20527,
C6	Passenger's seat panel	PLAT SIEGE DROITE	●	●	●	●	●	20527,
C6	Rear air conditioning table	TAB CLIM AR	●	●	●	●	●	20193, 20527,
C6	High Head Vision	VTH	●	●	●	●	●	20527,
C6	Right headlamp beam corrector	PROJECTEURD	●	●	●	●	●	20527,
C6	Left headlamp beam level corrector	PROJECTEURG	●	●	●	●	●	20527,
C6	CSS	CSS	●	●	●	●	●	20287, 20496, 20510, 20527,
C6	High frequency receiver	RHF	▲	▲	▲	▲	○	
C8 CAN	Parking aid	AAS	●	●	●	●	○	20457, 20527,
C8 CAN	ABS/traction control	ESP8 BOSCH	●	●	●	●	○	20408, 20039, 20527,
C8 CAN	ABS/traction control	ESP81	●	●	●	●	●	20408, 20039, 20527,
C8 CAN	Diesel additive	ADDG03	●	●	●	●	●	20215, 20221, 20220, 20013, 20091, 20585, 20482, 20730, 20583, 20091, 20585, 20482, 20730, 20527,
C8 CAN	Multifunction display	EMF A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
C8 CAN	Multifunction display	EMF C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
C8 CAN	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	●	○	20249, 20396, 20481, 20744, 20192, 20249, 20396, 20481, 20744, 20192, 20249, 20396, 20481, 20744, 20406, 20822, 20527,
C8 CAN	Anti-theft alarm	ALARME	●	●	●	●	●	20125, 20115, 20125, 20115, 20115, 20527,
C8 CAN	Radio or radiotelephone (radio part)	AUTORADIO	●	●	●	●	●	20527, 20186, 20331,
C8 CAN	Radio or radiotelephone (radio part)	RD45	●	●	●	●	●	20844, 20030, 20519, 20527, 20844, 20030, 20519,
C8 CAN	Driver's seat memorizing unit	BDMC	●	●	●	●	●	20146, 20745, 20746, 20527,
C8 CAN	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20558, 20228, 20411, 20844, 20155, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
C8 CAN	Engine relay unit	BSM	●	●	●	●	●	20527,
C8 CAN	Trailer relay unit	BSR	●	●	●	●	●	
C8 CAN	gearbox	BVA AM6 AT6 EURO5	●	●	●	●	●	20502, 20634, 20600, 20605, 20527,
C8 CAN	gearbox	BVA_AM6	●	●	●	●	●	20532, 20860, 20502, 20634, 20600, 20502, 20634, 20600, 20605, 20605, 20527,
C8 CAN	gearbox	BVA AL4	●	●	●	●	●	20333, 20004, 20448, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C8 CAN	CD player	CHANGEUR_CD	●	●	●	○	●	20110, 20527, 20178, 20390, 20527,
C8 CAN	Additional heating	CHAUFF_ADD	●	●	●	●	●	20048, 20527, 20107,
C8 CAN	heating/ventilation	CLIM_REGULEE	●	●	●	●	●	20527,
C8 CAN	Instrument panel	COMBINE	●	●	●	●	●	
C8 CAN	Rain and brightness sensor	PLUIE_LUMINOSITE	●	●	●	○	○	
C8 CAN	Power steering electric pump unit	GEP	●	●	●	●	○	
C8 CAN	Under inflation detection	DSG	●	●	●	●	○	20168, 20267, 20536, 20303, 20304, 20538, 20543, 20857, 20826, 20527,
C8 CAN	Switch module under the steering wheel (Top of column)	HDC	●	●	●	●	●	20002, 20270, 20527,
C8 CAN	Injection/ignition	EDC15C2	●	●	●	●	●	20373, 20535, 20487, 20527,
C8 CAN	Injection/ignition	MM6LPB	●	●	●	●	●	20843, 20112, 20005, 20159, 20226, 20437, 20059, 20527,
C8 CAN	Injection/ignition	HDI_SID803A	●	●	●	●	●	20117, 20215, 20221, 20220, 20547, 20546, 20855, 20305, 20245, 20499, 20286, 20469, 20577, 20638, 20626, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20527,
C8 CAN	Injection/ignition	EDC16CP39	●	●	●	●	●	20382, 20156, 20367, 20446, 20353, 20355, 20346, 20226, 20238, 20240, 20283, 20380, 20588, 20694, 20714, 20527,
C8 CAN	Injection/ignition	DCM35	●	●	●	●	●	20088, 20089, 20343, 20509, 20020, 20067, 20062, 20226, 20240, 20588, 20629, 20672, 20710, 20285, 20573, 20579, 20692, 20694, 20527,
C8 CAN	Injection/ignition	DCM35_BR2	●	●	●	●	●	20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
C8 CAN	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
C8 CAN	Hands-free kit (Telephone)	BOITIER_NOMADE	●	●	●	●	●	20135, 20135, 20527,
C8 CAN	Driver's door electronics	EDPC	●	●	●	●	●	20203, 20814, 20527,
C8 CAN	Passenger door electronics	EDPP	●	●	●	●	●	20203, 20814, 20527, 20203,
C8 CAN	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20128, 20847, 20095, 20123, 20127, 20137, 20006, 20114, 20121, 20133, 20128, 20847, 20095, 20123, 20128, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20527, 20006, 20114, 20121, 20133, 20128, 20847, 20095, 20123, 20128, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394,
C8 CAN	Telematics	RADIONAV_RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
C8 CAN	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
C8 CAN	Odometer Warning Lights unit	BTO	●	●	●	●	●	20109, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C8 CAN	Right headlamp beam corrector	PROJECTEURD	●	●	●	●	●	20527,
C8 CAN	Left headlamp beam level corrector	PROJECTEURG	●	●	●	●	●	20527,
C8 CAN	Telematic receiver control	CRT	●	○	○	●	○	
C8 CAN	Sliding side door modules (left-hand or only)	PLCM	●	●	●	●	●	20527,
C8 CAN	Front sunroof	TO INALFA	●	●	●	●	●	20527,
C8 CAN	Rear sunroof	TO INALFA	●	●	●	●	●	20527,
C8 CAN	Middle sunroof	TO INALFA	●	●	●	●	●	20527,
C8 VAN	Anti-lock brake system	ESP BOSCH5.7	●			●	●	5003
C8 VAN	Anti-lock brake system	ESP8 BOSCH	●			●	●	5003
C8 VAN	Anti-lock brake system	ESP8.1	●			●	●	5007
C8 VAN	Diesel additive function		●	●	●	●	●	4008
C8 VAN	Diesel additive function		●	●	●	●	●	4008
C8 VAN	Injection	2.0L RFN MM48P	●	●	●	●	●	7001
C8 VAN	Injection	3FZ MM4MP2	●	●	●	●	●	7001
C8 VAN	Injection	RFN MM4MP2	●	●	●	●	●	7001
C8 VAN	Injection	RFN MM6LP	●	●	●	●	●	
C8 VAN	Injection	RFN MM6LP	●	●	●	●	●	
C8 VAN	Injection	3FZ MM6LP	●	●	●	●	●	
C8 VAN	Injection	3FZ MM6LP	●	●	●	●	●	
C8 VAN	Injection	3.0L XFW BOSCH ME746	●	●	●	●	●	
C8 VAN	Injection	2.2 L 4HW BOSCH EDC15C2	●	●	●	●	●	4007
C8 VAN	Injection	2.2 L 4HW BOSCH EDC15C2	●	●	●	●	●	4007
C8 VAN	Injection	2.0 L RHT BOSCH EDC15C2	●	●	●	●	●	4007
C8 VAN	Injection	2.0 L RHT BOSCH EDC15C2	●	●	●	●	●	4007
C8 VAN	Injection	2.0 L RHW BOSCH EDC15C2	●	●	●	●	●	4007
C8 VAN	Injection	2.0 L RHW BOSCH EDC15C2	●	●	●	●	●	4007
C8 VAN	Injection	2.0 L RHZ BOSCH EDC15C2	●	●	●	●	●	4007
C8 VAN	Injection	2.0 L RHZ BOSCH EDC15C2	●	●	●	●	●	4007
C8 VAN	Injection	2.0 L RHM BOSCH EDC15C2	●	●	●	●	●	4007
C8 VAN	BSI		●	●	●	●	●	3005
C8 VAN	Instrument panel		●	●	●	●	●	
C8_VAN	Radio or telematic receiver command		●	●	●	●	●	
C8_VAN	Radio or telematic receiver command		●			●		
C8 VAN	CD player		●	●	●	●	●	
C8 VAN	Parking aid		●	●	●	●	●	
C8 VAN	Air conditioning		●	●	●		●	
C8 VAN	LEDs and odometer ECU		●	●	●	●	●	
C8 VAN	Memory unit		●			●	●	
C8 VAN	Rear sunroof		●			●	●	
C8 VAN	Front sunroof		●			●	●	
C8 VAN	Middle sunroof		●			●	●	
C8 VAN	Alarm			●	●		●	
C8_VAN	Switch module at the steering wheel			●	●			

Vehicle	System	ECU Name	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C8 VAN	Sliding side doors module		●			●	●	
C8 VAN	Injection	2.0 L RHM BOSCH EDC15C2	●	●	●	●	●	4007
C8 VAN	Airbag		●	●	●	●		
C8 VAN	Display or Telematics		●	●	●	●	●	
C8 VAN	Display or Telematics		●	●	●	●	●	
C8 VAN	Auto gearbox		●			●	●	7001
C8 VAN	Auto gearbox		●			●	●	7001
C8 VAN	Auto gearbox		●			●	●	7001
C8 VAN	Auto gearbox		●			●	●	7001
C8 VAN	Auto gearbox		●			●	●	7001
C8 VAN	additional heating		●	●	●	●	●	
C8 VAN	Right-hand headlamp		●	●	●	●	●	
C8 VAN	Left-hand headlamp		●	●	●	●	●	
C-CROSSER	Parking aid	AAS MMC	●	●	●	●	○	20527,
C-CROSSER	ABS/traction control	ABS	●	●	●	●	●	20409, 20418, 20815, 20527,
C-CROSSER	ABS/traction control	ESP	●	●	●	●	●	20772, 20504, 20771, 20527,
C-CROSSER	Locking and immobiliser control module	WCM	●	●	●	●	○	20145, 20192, 20084, 20494, 20515, 20500, 20084, 20494, 20332, 20674, 20675, 20677, 20500, 20527,
C-CROSSER	Navigation	NAVIGATION	●	●	●	○	○	20527,
C-CROSSER	Driver and passenger airbags	SAC_TRW	●	●	●	●	●	20527,
C-CROSSER	Radio or radiotelephone (radio part)	AUTORADIO_3	●	●	●	●	●	20527,
C-CROSSER	Built-in Systems Interface (BSI)	ETACS_SUV	○	●	●	●	●	20403, 20407, 20848, 20452, 20835, 20486, 20610, 20845, 20527,
C-CROSSER	gearbox	BV CVT	●	●	●	●	○	20527,
C-CROSSER	gearbox	BOITE GETRAG	●	●	●	●	○	20415, 20351, 20359, 20615, 20527,
C-CROSSER	Steering wheel angle sensor	CAV	●	●	●	○	○	20771, 20527,
C-CROSSER	heating/ventilation	CLIM REGULEE	●	●	●	●	●	20527,
C-CROSSER	Instrument panel	COMBINE	●	●	●	●	●	20412, 20275, 20274, 20392, 20527,
C-CROSSER	Injection/ignition	EDC16CP39	●	●	●	●	●	20296, 20507, 20012, 20379, 20354, 20347, 20068, 20226, 20238, 20240, 20380, 20470, 20517, 20718, 20692, 20527,
C-CROSSER	Injection/ignition	MIVEC	●	●	●	●	●	20577, 20640, 20842, 20655, 20682, 20685, 20527,
C-CROSSER	Injection/ignition	EDC16CP39_E5	●	●	●	●	●	20296, 20507, 20012, 20379, 20354, 20347, 20068, 20226, 20238, 20240, 20380, 20470, 20517, 20718, 20692, 20527,
C-CROSSER	Hands-free kit (Telephone)	KML	●	●	●	●	●	20527,
C-CROSSER	Rear RH door switch panel	PDPARD	●	●	●	●	○	20527,
C-CROSSER	Rear LH door switch panel	PDPARG	●	●	●	●	○	20527,
C-CROSSER	Driver's door module	PDPC	●	●	●	●	○	20527,
C-CROSSER	Passenger door module	PDPP	●	●	●	●	○	20527,
C-CROSSER	Sun roof	TO WEBASTO	●	●	●	●	○	20527,
C-CROSSER	Rear final drive piloted clutch	TRANSMISSION	●	●	●	●	●	20527,
C-CROSSER	Rain and brightness sensor	CDPL	●	●	●	●	○	20362, 20527,

Vehicle	System	ECU Name	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C-CROSSER	Headlamp height adjuster / Directional headlamp	CORPRO	●	●	●	●	●	20050,
C-ELYSEE	Built-in Systems Interface (BSI)	BSI2010	●	●	●	●	●	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20495, 20549, 20731, 20301, 20489, 20047, 20086, 20154, 20228, 20411, 20844, 20489, 20527,
C-ELYSEE	ABS or ESP ECU	ABSMK100	●	●	●	●	●	20042, 20042, 20632, 20820, 20527,
C-ELYSEE	ABS or ESP ECU	ESPMK100	●	●	●	●	●	20044, 20656, 20044, 20052, 20820, 20527,
C-ELYSEE	Multifunction screen	EMF A UDS	●	●	●	●	●	20527,
C-ELYSEE	Multifunction screen	EMF C UDS	●	●	●	○	●	20477, 20151, 20527,
C-ELYSEE	Switch module at the steering wheel	HDC	●	●	●	●	●	20527,
C-ELYSEE	Gearbox	BVA AL4	●	●	●	●	●	20333, 20004, 20448, 20527,
C-ELYSEE	Gearbox	MAPS_UDS	●	●	●	●	●	20099, 20313, 20357, 20751, 20757, 20758, 20667, 20664, 20665, 20698, 20697, 20613, 20614, 20727, 20527,
C-ELYSEE	Engine ECU	V46_21	●	●	●	●	●	20029, 20003, 20070, 20255, 20386, 20387, 20825, 20527,
C-ELYSEE	Engine ECU	EDC17C10_BR2	●	●	●	●	●	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
C-ELYSEE	Engine ECU	V46	●	●	●	●	●	20070, 20251, 20262, 20260, 20659, 20681, 20685, 20149, 20580, 20527,
C-ELYSEE	Engine ECU	ME745_EC5	●	●	●	●	●	20460, 20717, 20527,
C-ELYSEE	Airbag	RBG UDS	●	●	●	●	○	20189, 20406, 20822, 20527,
C-ELYSEE	Electric power steering	DAE	●	●	●	●	○	20527,
C-ELYSEE	Electric power steering	DAE A515	●	●	●	●	●	20527,
C-ELYSEE	Radio	RDE	●	●	●	●	●	20129, 20139, 20334, 20337, 20844, 20030, 20519, 20129, 20139, 20334, 20337, 20844, 20030, 20519, 20527,
C-ELYSEE	Radio	RD45	●	●	●	●	●	20844, 20030, 20519, 20527, 20844, 20030, 20519,
C-ELYSEE	Parking assistance	AAS UDS	●	●	●	●	○	20457, 20527,
C-ELYSEE	Siren	SIR	●	●	●	●	●	20131, 20131, 20527,
C-ELYSEE	Instrument panel	COMBINE UDS	●	●	●	●	●	20145, 20192, 20527,
C-ELYSEE	Trailer relay unit	BSG 2010 RQ	●	●	●	●	●	20527,
C-ELYSEE	Multiplexed additive pump	PADDGO	●	●	●	●	●	20011, 20586, 20590, 20527,
C-ELYSEE	Electronic key reader	LCE	●	●	●	●	○	20527,
C-ELYSEE	Electric steering lock	AVE	●	●	●	●	●	20527, 20767,
C-ELYSEE	Hands free starting access electronic module.	BML	●	●	●	●	●	20075, 20076, 20077, 20078, 20079, 20080, 20081, 20082, 20083, 20358, 20527,
C-ELYSEE	Multiplexed control panel	FMUX	●	●	●	●	●	20527, 20527, 20527,
C-ELYSEE	Telematics	MRN	●	●	●	●	●	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20527,
C-ELYSEE 4/C-ELYSEE 5	ABS		●	●	●	●	●	
C-ELYSEE 4/C-ELYSEE 5	Gearbox ECU		●			●	●	7001

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C-ELYSEE 4/C-ELYSEE 5	Airbag			●	●	●		
C-ELYSEE 4/C-ELYSEE 5	Transponder		●			●		
C-ELYSEE 4/C-ELYSEE 5	Central locking control unit		●	●	●	●		
C-ELYSEE 4/C-ELYSEE 5	Injection		●	●	●	●	●	
C-ELYSEE 4/C-ELYSEE 5	Injection			●	●		●	7003
C-Elysee (M43)	BSI	BSI2010	●	●	●			
C-Elysee (M43)	ABS or ESP ECU	ABSMK100	●	●	●	●	●	07005 08300 08301
C-Elysee (M43)	ABS or ESP ECU	ESPMK100	●	●	●	●	●	07005 08302 08303 08300 08301
C-Elysee (M43)	Multifunction screen	EMF A UDS	●	●	●		●	8254
C-Elysee (M43)	Multifunction screen	EMF C UDS	●	●	●		●	08254 08083 08263
C-Elysee (M43)	Switch module at the steering wheel	HDC	●	●	●	●	●	
C-Elysee (M43)	Gearbox ECU	BVA AL4	●	●	●	●	●	07004 08084 08085 07005 08086
C-Elysee (M43)	Gearbox ECU	MAPS_UDS	●	●	●	●	●	08325 08326 08327 08328 08329 08330 08331 08332 08333 08335 08336 08337 08338 08339
C-Elysee (M43)	Engine ECU	V46_21	●	●	●	●	●	08348 08027 08349 07057 08050 08051 08058 08350 08068
C-Elysee (M43)	Engine ECU	EDC17C10_BR2	●	●	●	●	●	08315 07050 07087 07090 07057 07096 08316 07093 07094 07095 08317 07083 07084 07085 07086 07082 07091 07056 08318 08319 08320 08321 08322 07007 07014 07015 07016 07017 07089 08323 08324 04009 07005
C-Elysee (M43)	Engine ECU	ME745 EC5	●	●	●	●	●	08027 07004 08050 08051 08052 08340
C-Elysee (M43)	Engine ECU	V46	●	●	●	●	●	07004 08343 08344 08345 07057 08346
C-Elysee (M43)	Airbag	RBG UDS	●	●	●	●		08079 08080
C-Elysee (M43)	Electric Power steering	DAE	●	●	●	●		
C-Elysee (M43)	Radio	AUTORADIO	●	●	●	●	●	08267 08251 08304 08266 08265 08305 08306
C-Elysee (M43)	Radio	RD45	●	●	●	●	●	08267 08266 08265
C-Elysee (M43)	Hands free starting access electronic module	BML	●	●	●	●	●	08307 08308 08309 08310 08311 08312 08313 08314
C-Elysee (M43)	Parking assistance	AAS UDS	●	●	●	●	●	
C-Elysee (M43)	Siren	SIR	●	●	●	●	●	8342
C-Elysee (M43)	Instrument panel	COMBINE UDS	●	●	●	●	●	
C-Elysee (M43)	Trailer relay unit	BSG 2010 RQ	●	●	●	●	●	
C-Elysee (M43)	Multiplexed additive pump	PADDGO	●	●	●	●	●	07005 08341
C-QUATRE 4	BSI		●	●	●	●	●	3005
C-QUATRE 4	Instrument panel		●	●	●	●	●	
C-QUATRE 4	Radio		●	●	●	●	●	
C-QUATRE 4	CD player		●	●	●	●	●	
C-QUATRE 4	Parking aid		●	●	●	●	●	
C-QUATRE 4	Air conditioning		●	●	●	●	●	
C-QUATRE 4	Alarm		●	●	●	●	●	
C-QUATRE 4	Steering wheel with fixed central controls		●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C-QUATRE 4	Airbag		●	●	●	●		
C-QUATRE 4	Multifunction screen		●	●	●	●		
C-QUATRE 4	Gearbox ECU		●	●	●	●	●	
C-QUATRE 4	Trailer relay unit			●	●	●	●	
C-QUATRE 4	Engine relay unit			●	●	●	●	
C-QUATRE 4	Power steering			●	●			
C-QUATRE 4	Hands Free Kit		●	●	●	●	●	
C-QUATRE 4	Driver's door module		●	●	●	●	●	
C-QUATRE 4	Passenger's door module		●	●	●	●	●	
C-QUATRE 4	Telematic		●	●	●	●	●	
C-QUATRE 4	Telematic		●	●	●	●	●	
C-QUATRE 4	ABS		●	●	●	●	●	5007
C-QUATRE 4	ABS		●	●	●	●	●	
C-QUATRE 4	Injection		●	●	●	●	●	
C-QUATRE 4	Injection		●	●	●	●	●	
C-QUATRE 4	Injection		●	●	●	●	●	7001
C-QUATRE 5	BSI		●	●	●	●	●	3005
C-QUATRE 5	Instrument panel		●	●	●	●	●	
C-QUATRE 5	Radio		●	●	●	●	●	
C-QUATRE 5	CD player		●	●	●	●	●	
C-QUATRE 5	Parking aid		●	●	●	●	●	
C-QUATRE 5	Air conditioning		●	●	●	●	●	
C-QUATRE 5	Alarm		●	●	●	●	●	
C-QUATRE 5	Steering wheel with fixed central controls		●	●	●	●	●	
C-QUATRE 5	Rain sensor/ Brightness		●	●	●			
C-QUATRE 5	Airbag		●	●	●	●		
C-QUATRE 5	Multifunction screen		●	●	●	●	●	
C-QUATRE 5	Gearbox ECU		●	●	●	●	●	
C-QUATRE 5	Trailer relay unit			●	●	●	●	
C-QUATRE 5	Engine relay unit			●	●		●	
C-QUATRE 5	Power steering			●	●			
C-QUATRE 5	Hands Free Kit		●	●	●	●	●	
C-QUATRE 5	Driver's door module		●	●	●	●	●	
C-QUATRE 5	Passenger's door module		●	●	●	●	●	
C-QUATRE 5	Telematic		●	●	●	●	●	
C-QUATRE 5	Telematic		●	●	●	●	●	
C-QUATRE 5	ABS		●	●	●	●	●	5007
C-QUATRE 5	ABS		●	●	●	●	●	
C-QUATRE 5	Injection		●	●	●	●	●	
C-QUATRE 5	Injection		●	●	●	●	●	
C-TRIOMPHE	BSI		●	●	●	●	●	3005
C-TRIOMPHE	Instrument panel		●	●	●	●	●	
C-TRIOMPHE	Radio		●	●	●	●	●	
C-TRIOMPHE	CD player		●	●	●	●	●	
C-TRIOMPHE	Parking aid		●	●	●	●	●	
C-TRIOMPHE	Air conditioning		●	●	●	●	●	
C-TRIOMPHE	Alarm		●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C-TRIOMPHE	Steering wheel with fixed central controls		●	●	●	●	●	
C-TRIOMPHE	Rain sensor/ Brightness		●	●	●			
C-TRIOMPHE	Airbag		●	●	●	●		
C-TRIOMPHE	Multifunction screen		●	●	●	●	●	
C-TRIOMPHE	Gearbox ECU		●	●	●	●	●	
C-TRIOMPHE	Trailer relay unit			●	●	●	●	
C-TRIOMPHE	Engine relay unit			●	●		●	
C-TRIOMPHE	Power steering			●	●			
C-TRIOMPHE	Directional headlamps		●	●	●	●	●	
C-TRIOMPHE	Hands Free Kit		●	●	●	●	●	
C-TRIOMPHE	Driver's door module		●	●	●	●	●	
C-TRIOMPHE	Passenger's door module		●	●	●	●	●	
C-TRIOMPHE	Telematic		●	●	●	●	●	
C-TRIOMPHE	Telematic		●	●	●	●	●	
C-TRIOMPHE	ABS		●	●	●	●	●	5007
C-TRIOMPHE	ABS		●	●	●	●	●	5002
C-TRIOMPHE	ABS		●	●	●	●	●	
C-TRIOMPHE	ABS			●	●	●	●	
C-TRIOMPHE	Injection	RFJ MM6LPB	●	●	●	●	●	
C-ZERO	Built-in Systems Interface	ETACS	●	●	●	●	●	20471, 20780, 20402, 20515, 20500, 20674, 20675, 20500, 20610, 20527,
C-ZERO	Electric machine management ECU	MCU	●	●	●	●	●	20226, 20527,
C-ZERO	Traction battery ECU	BMU	●	●	●	●	●	20777, 20778, 20779, 20773, 20775, 20776, 20527, 20812, 20813,
C-ZERO	Onboard charger of the traction battery	OBC	○	●	●	○	○	
C-ZERO	Electric vehicle management ECU	EV_ECU	●	●	●	○	●	20173, 20527,
C-ZERO	Traction battery cells management ECU	CMU_01	●	○	○	●	○	
C-ZERO	Traction battery cells management ECU	CMU_02	●	○	○	●	○	
C-ZERO	Traction battery cells management ECU	CMU_03	●	○	○	●	○	
C-ZERO	Traction battery cells management ECU	CMU_04	●	○	○	●	○	
C-ZERO	Traction battery cells management ECU	CMU_05	●	○	○	●	○	
C-ZERO	Traction battery cells management ECU	CMU_06	●	○	○	●	○	
C-ZERO	Traction battery cells management ECU	CMU_07	●	○	○	●	○	
C-ZERO	Traction battery cells management ECU	CMU_08	●	○	○	●	○	
C-ZERO	Traction battery cells management ECU	CMU_09	●	○	○	●	○	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
C-ZERO	Traction battery cells management ECU	CMU_10	●	○	○	●	○	
C-ZERO	Traction battery cells management ECU	CMU_11	●	○	○	●	○	
C-ZERO	Traction battery cells management ECU	CMU_12	●	○	○	●	○	
C-ZERO	ESP	ASC	●	●	●	●	●	20527,
C-ZERO	Power steering	EPS	●	●	●	●	○	20527,
C-ZERO	Steering wheel angle sensor	SAS	●	●	●	●	○	20055, 20529, 20527,
C-ZERO	Airbag	SRS	●	●	●	●	●	20527,
C-ZERO	Airbag	ORC	●	●	●	●	●	20527,
C-ZERO	Gateway wiring housing	BSP	●	●	●	●	○	20847, 20087, 20466, 20847, 20527,
C-ZERO	Independent telematic unit (BTA)	BTA	●	●	●	●	●	20847, 20142, 20527,
C-ZERO	Instrument panel	METER	●	●	●	●	●	20086, 20031, 20443, 20412, 20527,
C-ZERO	Radio	RDE	●	●	●	●	●	20139, 20334, 20335, 20336, 20337, 20030, 20519, 20527,
C-ZERO	Air conditioning	HVAC	●	●	●	●	●	20527,
C-ZERO	Air conditioning compressor and passenger compartment heating control module	COMP_HTR	●	●	●	○	●	20527,
C-ZERO	Onboard charger of the traction battery	OBC_DCDC	●	●	●	●	○	20527,
C-ZERO	Direct voltage (DC/DC) transformer	DCDC	●	●	●	●	○	20527,
DS 5LS	Built-in Systems Interface	BSI2010	●	●	●	●	●	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20495, 20549, 20731, 20301, 20489, 20047, 20086, 20154, 20228, 20411, 20844, 20489, 20527,
DS 5LS	Engine ECU	MED17_4_2	●	●	●	●	●	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
DS 5LS	Engine ECU	MEVD17_4_2	▲	▲	▲	▲	▲	20070, 20563, 20291, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20827, 20061, 20527,
DS 5LS	Engine ECU	V46_32	▲	▲	▲	▲	▲	20806, 20029, 20003, 20070, 20255, 20386, 20387, 20768, 20527,
DS 5LS	Engine ECU	MED17_4_4	▲	▲	▲	▲	▲	20349, 20299, 20444, 20157, 20576, 20593, 20653, 20654, 20661, 20680, 20685, 20711, 20854, 20578, 20594, 20613, 20715, 20527,
DS 5LS	ABS/traction control	ESP81	▲	▲	▲	▲	▲	20408, 20039, 20169, 20523, 20527,
DS 5LS	Power steering electric pump unit	GEP	▲	▲	▲	▲	○	20527,
DS 5LS	Voltage retaining device	DMTR	▲	▲	▲	○	○	20527,
DS 5LS	Battery charge status unit	BECEB_GEN2	▲	▲	▲	▲	○	20527,
DS 5LS	Hands free starting access electronic module.	BML	▲	▲	▲	▲	▲	20075, 20076, 20077, 20078, 20079, 20080, 20081, 20082, 20083, 20358, 20527,
DS 5LS	Supply protection and management unit	BPGA2010	▲	▲	▲	▲	○	20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
DS 5LS	Telematics	MRN	▲	▲	▲	▲	▲	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20527,
DS 5LS	gearbox	BVA AM6 AT6 EURO5	▲	▲	▲	▲	▲	20502, 20634, 20600, 20605, 20527,
DS 5LS	Electric secondary brake	FSE	●	●	●	●	●	20049, 20247, 20518, 20049, 20247, 20518, 20527,
DS 5LS	Radio	RD45	●	●	●	●	●	20844, 20030, 20519, 20844, 20030, 20519, 20527,
DS 5LS	Under inflation detection	DSG UDS	●	●	●	●	○	20536, 20857, 20527,
DS 5LS	Independent telematic unit (BTA CHINE)	BTA_CN	●	●	●	●	●	20765, 20527,
DS 5LS	Multiplexed control panel	FMUX	●	●	●	●	●	20527,
DS 5LS	Electric steering lock	AVE	▲	▲	▲	▲	▲	20527, 20498,
DS 5LS	Electronic key reader	LCE	▲	▲	▲	▲	○	20527,
DS 5LS	audio amplifier	AMPLI AUDIO	▲	▲	▲	○	▲	20527,
DS 5LS	Display	EMF A UDS	●	●	●	●	●	20527,
DS 5LS	Display	EMF C UDS	●	●	●	○	●	20477, 20151, 20527,
DS 5LS	Matrix screen integral to the instrument panel	MATT_C_2010	●	●	●	○	●	20527,
DS 5LS	Matrix screen integral to the instrument panel	MATT_M_2010	▲	▲	▲	○	▲	20527,
DS 5LS	Parking aid	AAS UDS	▲	▲	▲	▲	▲	20558, 20807, 20457, 20527,
DS 5LS	Switch module under the steering wheel (Top of column)	COM2008P	▲	▲	▲	▲	▲	20527,
DS 5LS	Steering wheel with integral controls (VCI)	VCI	●	●	●	●	●	20281,
DS 5LS	Air bag	RBG UDS	●	●	●	●	○	20189, 20189, 20406, 20822, 20527,
DS 5LS	Anti-theft alarm	ALARME	▲	▲	▲	▲	▲	20527,
DS 5LS	Air conditioning ECU	CLIM REGULEE UDS	▲	▲	▲	▲	▲	20491, 20527,
DS 5LS	Headlamp height adjuster / Directional headlamp	LADCT	●	●	●	●	●	20527,
DS 5LS	Rain and brightness sensor	PLUIE LUMINOSITE UDS	▲	▲	▲	▲	○	20797, 20527, 20797, 20527,
DS 5LS	Instrument panel	COMBINE UDS	▲	▲	▲	▲	▲	20527,
DS 5LS	Engine relay unit	BSM_2010	▲	▲	▲	▲	▲	20327, 20780, 20252, 20401, 20327, 20780, 20252, 20401, 20527,
DS 6WR	Engine ECU	MED17_4_2	●	●	●	●	●	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
DS 6WR	Engine ECU	MEVD17_4_2	●	●	●	●	●	20070, 20563, 20291, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20827, 20061, 20527,
DS 6WR	Engine ECU	V46_32	●	●	●	●	●	20806, 20029, 20003, 20070, 20255, 20386, 20387, 20768, 20527,
DS 6WR	Engine ECU	MED17_4_4	●	●	●	●	●	20349, 20299, 20444, 20157, 20576, 20593, 20653, 20654, 20661, 20680, 20685, 20711, 20854, 20578, 20594, 20613, 20715, 20527,
DS 6WR	ABS/traction control	ESP81	●	●	●	●	●	20408, 20039, 20169, 20523, 20527,
DS 6WR	Power steering electric pump unit	GEP	●	●	●	●	○	20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
DS 6WR	Voltage retaining device	DMTR	●	●	●	○	○	20527,
DS 6WR	Battery charge status unit	BECB_GEN2	●	●	●	●	○	20527,
DS 6WR	Hands free starting access electronic module.	BML	●	●	●	●	●	20075, 20076, 20077, 20078, 20079, 20080, 20081, 20082, 20083, 20358, 20527,
DS 6WR	Supply protection and management unit	BPGA2010	●	●	●	●	○	20527,
DS 6WR	Telematics	MRN	●	●	●	●	●	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20527,
DS 6WR	Multiplexed control panel	FMUX	●	●	●	●	●	20527,
DS 6WR	Electric steering lock	AVE	●	●	●	●	●	20527, 20498,
DS 6WR	Electronic key reader	LCE	●	●	●	●	○	20527,
DS 6WR	Matrix screen integral to the instrument panel	MATT_C_2010	●	●	●	○	●	20527,
DS 6WR	Matrix screen integral to the instrument panel	MATT_M_2010	●	●	●	○	●	20527,
DS 6WR	Parking aid	AAS_UDS	●	●	●	●	●	20558, 20807, 20457, 20527,
DS 6WR	Air bag	RBG_UDS	●	●	●	●	○	20189, 20189, 20406, 20822, 20527,
DS 6WR	Anti-theft alarm	ALARME	●	●	●	●	●	20527,
DS 6WR	Headlamp height adjuster / Directional headlamp	LADCT	●	●	●	●	●	20527,
DS 6WR	Rain and brightness sensor	PLUIE_LUMINOSITE_UDS	●	●	●	●	○	20797, 20527, 20797, 20527,
DS 6WR	Instrument panel	COMBINE_UDS	●	●	●	●	●	20527,
DS 6WR	Signalling fuse box	BSG_S	●	●	●	●	●	20527,
DS3	Parking aid	AAS	▲	▲	▲	▲	○	20457, 20527,
DS3	ABS or ESP ECU	ABSMK70_1	●	●	●	●	●	20039, 20052, 20527,
DS3	ABS or ESP ECU	ESPMK60_0	●	●	●	●	●	20608, 20527,
DS3	ABS or ESP ECU	ESPMK100	●	●	●	●	●	20044, 20656, 20044, 20052, 20820, 20527,
DS3	Multiplexed additive pump	PADDGO	●	●	●	●	●	20011, 20586, 20590, 20527,
DS3	Multiplexed additive pump	PADDGO_TI_E6	●	●	●	●	●	20236, 20236, 20236, 20236, 20527,
DS3	Air bag	SAC_AUTOLIV	●	●	●	●	○	20249, 20481, 20744, 20762, 20192, 20249, 20481, 20744, 20762, 20406, 20822, 20527,
DS3	Alarm	ALARME	●	●	●	●	●	20125, 20115, 20115, 20527,
DS3	Radio	AUTORADIO	●	●	●	●	●	20527, 20186, 20331,
DS3	Radio	RD45	●	●	●	●	●	20844, 20030, 20519, 20527, 20844, 20030, 20519,
DS3	Hands-free kit (Telephone)	BOITIER_NOMADE	●	●	●	●	●	20135, 20135, 20527,
DS3	Service module	BTA	●	●	●	●	●	20847, 20142, 20527,
DS3	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20844, 20155, 20516, 20763, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20549, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
DS3	Trailer relay unit	BSR	●	●	●	●	●	
DS3	Engine relay unit	BSM	●	●	●	●	●	20527,
DS3	gearbox	BVA_AL4	●	●	●	●	●	20333, 20004, 20448, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
DS3	Engine ECU	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
DS3	Engine ECU	V46	●	●	●	●	●	20806, 20070, 20251, 20262, 20260, 20659, 20681, 20685, 20149, 20578, 20580, 20527,
DS3	Engine ECU	EDC17C60	●	●	●	●	●	20144, 20484, 20256, 20257, 20258, 20259, 20829, 20690, 20624, 20625, 20716, 20606, 20619, 20670, 20683, 20753, 20198, 20288, 20444, 20805, 20093, 20514, 20513, 20505, 20548, 20552, 20554, 20122, 20527,
DS3	Engine ECU	VD46	●	●	●	●	●	20349, 20299, 20444, 20190, 20544, 20157, 20576, 20593, 20653, 20654, 20658, 20661, 20680, 20685, 20711, 20578, 20580, 20594, 20613, 20715, 20527,
DS3	Multifunction display	EMF A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
DS3	Multifunction display	EMF C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
DS3	Rain sensor	PLUIE LUMINOSITE	●	●	●	○	○	20527,
DS3	Seat belts not fastened LED unit	TNB	●	○	○	○	●	
DS3	Telematics	RADIONAV_RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
DS3	Telematics	RADIONAV_RNEGC	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
DS3	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
DS3	Battery charge status unit	BECB	●	●	●	●	○	20527,
DS3	Battery charge status unit	BECB GEN2	●	●	●	●	○	20527,
DS3	High frequency receiver	RHF	●	●	●	●	○	
DS3	Central voltage retention device	DMTC	●	○	○	○	○	
DS3	Central voltage retention device	DMTR	●	●	●	○	○	20527,
DS3	Vehicle Distance Assistance	LIDAR	●	●	●	●	●	20783, 20798, 20799, 20527,
DS4	Instrument panel	COMBINE UDS	●	●	●	●	●	20527,
DS4	Display	EMF A UDS	●	●	●	●	●	20527,
DS4	Display	EMF C UDS	●	●	●	○	●	20477, 20151, 20527,
DS4	Trailer relay unit	BSG 2010 RQ	▲	▲	▲	▲	▲	20527,
DS4	Driver's seat memorizing unit	BDMC	▲	▲	▲	▲	▲	20146, 20745, 20746, 20527, 20146, 20745, 20746,
DS4	Steering wheel with integral controls (VCI)	VCI	●	●	●	●	●	20527,
DS4	Parking aid	AAS UDS	●	●	●	●	○	20558, 20457, 20527,
DS4	audio amplifier	AMPLI AUDIO	▲	▲	▲	○	▲	20527,
DS4	Telematics	MRN	●	●	●	●	●	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20527,

Vehicle	System	ECU Name	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
DS4	Radio	RD45	●	●	●	●	●	20844, 20030, 20519, 20527, 20844, 20030, 20519,
DS4	Built-in Systems Interface	BSI2010	●	●	●	●	●	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20495, 20549, 20731, 20301, 20489, 20047, 20086, 20154, 20228, 20411, 20844, 20489, 20527,
DS4	Air bag	RBG UDS	●	●	●	●	○	20189, 20406, 20822, 20527,
DS4	Seat belts not fastened LED unit	TNB_2010	▲	○	○	○	▲	
DS4	Multiplexed control panel	FMUX	●	●	●	●	●	
DS4	Monitoring of the blind spot	SAM	●	●	●	●	●	20527,
DS4	Engine ECU	DCM35_BR2	●	●	●	●	●	20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
DS4	Engine ECU	EDC17C10_BR2	●	●	●	●	●	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
DS4	Engine ECU	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
DS4	Engine ECU	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
DS4	Engine ECU	MED17_4_2	●	●	●	●	●	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
DS4	Engine ECU	ME745	●	●	●	●	●	20743, 20631, 20721, 20527,
DS4	Engine ECU	MEVD17_4_2	●	●	●	●	●	20070, 20563, 20291, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20827, 20061, 20527,
DS4	Engine ECU	ME745 EC5	●	●	●	●	●	20460, 20717, 20527,
DS4	Engine ECU	V46_21	●	●	●	●	●	20029, 20003, 20070, 20255, 20386, 20387, 20527,
DS4	Engine ECU	V46_32	●	●	●	●	●	20806, 20029, 20003, 20070, 20255, 20386, 20387, 20768, 20527,
DS4	Engine ECU	MM6KP	●	●	●	●	●	20463, 20859, 20372, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
DS4	Engine ECU	VD46	●	●	●	●	●	20349, 20299, 20444, 20190, 20544, 20157, 20576, 20593, 20653, 20654, 20658, 20661, 20680, 20685, 20711, 20578, 20580, 20594, 20613, 20715, 20527,
DS4	Headlamp height adjuster / Directional headlamp	LADCT	●	●	●	●	●	20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
DS4	Engine relay unit	BSM_2010	●	●	●	●	●	20327, 20780, 20252, 20401, 20327, 20780, 20252, 20401, 20527,
DS4	Service module	BTA	●	●	●	●	●	20847, 20142, 20527,
DS4	Service module	BLVV	●	●	●	●	●	20176, 20527,
DS4	Service module	BTA_CN	●	●	●	●	●	20765, 20527,
DS4	Multiplexed additive pump	PADDGO_E5	▲	▲	▲	▲	▲	20145, 20282, 20235, 20323, 20584, 20235, 20323, 20686, 20235, 20323, 20687, 20235, 20323, 20527,
DS4	ABS/traction control	ABS81	●	●	●	●	○	20039, 20527,
DS4	ABS/traction control	ESP81	●	●	●	●	●	20408, 20039, 20169, 20523, 20527,
DS4	Battery charge status unit	BECB_GEN2	●	●	●	●	○	20527,
DS4	Driving school module	MAE	▲	▲	▲	○	▲	20527,
DS4	Supply protection and management unit	BPGA2010	●	●	●	●	○	20527,
DS4	Central voltage retention device	DMTC	●	○	○	○	○	
DS4	Central voltage retention device	DMTR	●	●	●	○	○	20527,
DS4/C4 (B7)	ABS/traction control	ABS81	●	●	●	●	●	5001
DS4/C4 (B7)	ABS/traction control	81 ESP	●	●	●	●	●	01003 01008 05001
DS4/C4 (B7)	Instrument panel		●	●	●	●	●	
DS4/C4 (B7)	Display	EMF_A_UDS	●	●	●	●	●	
DS4/C4 (B7)	Display	EMF_C_UDS	●	●	●	●	○	
DS4/C4 (B7)	Trailer relay unit		●	●	●	●	●	
DS4/C4 (B7)	Driver's seat memorizing unit		●	●	●	●	●	
DS4/C4 (B7)	Steering wheel with integral controls (VCI)		●	●	●	●	●	
DS4/C4 (B7)	Parking aid		●	●	●	●	○	
DS4/C4 (B7)	audio amplifier		●	●	●	○	●	
DS4/C4 (B7)	Telematics	RADIONAV_RNEGC	●	●	●	●	●	
DS4/C4 (B7)	Telematics	RNEG2010	●	●	●	●	●	
DS4/C4 (B7)	Matrix screen integral to the instrument panel	MATT_C_2010	●	●	●	○	●	
DS4/C4 (B7)	Matrix screen integral to the instrument panel	MATT_M_2010	●	●	●	○	●	
DS4/C4 (B7)	Driver's door module		●	●	●	●	●	
DS4/C4 (B7)	Switch module under the steering wheel	HDC	●	●	●	●	●	
DS4/C4 (B7)	Switch module under the steering wheel	COM2008P	●	●	●	●	●	
DS4/C4 (B7)	Lane departure warning system		●	●	●	●	●	
DS4/C4 (B7)	gearbox	BVA_AL4	●	●	●	●	●	7004
DS4/C4 (B7)	gearbox	BVA_AM6_AT6_EURO5	●	●	●	●	●	
DS4/C4 (B7)	gearbox	CFC300P	●	●	●	●	●	
DS4/C4 (B7)	Electric secondary brake		●	●	●	●	●	01001 01005 01006

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
DS4/C4 (B7)	Power steering electric pump unit		●	●	●	●	●	
DS4/C4 (B7)	Anti-theft alarm		●	●	●	●	●	
DS4/C4 (B7)	Under inflation detection		●	●	●	●	●	02001 02002 02003 02004 02009 02011 02012
DS4/C4 (B7)	Air conditioning ECU		●	●	●	●	●	
DS4/C4 (B7)	Rain sensor		●	●	●	●	○	
DS4/C4 (B7)	Radio		●	●	●	●	●	
DS4/C4 (B7)	Air-bag		●	●	●	●	○	
DS4/C4 (B7)	Seat belts not fastened LED unit		●	○	○	○	●	
DS4/C4 (B7)	Multiplexed control panel		●	●	●	●	●	
DS4/C4 (B7)	Monitoring of the blind spot		●	●	●	●	●	
DS4/C4 (B7)	Engine ECU	DCM35_BR2	●	●	●	●	●	04002 04005 04011 04012
DS4/C4 (B7)	Engine ECU	EDC17C10_BR2	●	●	●	●	●	4006
DS4/C4 (B7)	Engine ECU	HDI.SID807_BR2	●	●	●	●	●	04006 04012
DS4/C4 (B7)	Engine ECU	MEV17. 4. 2	●	●	●	●	●	7004
DS4/C4 (B7)	Engine ECU	MED17. 4. 2	●	●	●	●	●	7004
DS4/C4 (B7)	Engine ECU	ME745	●	●	●	●	●	
DS4/C4 (B7)	Engine ECU	MEVD17. 4. 2	●	●	●	●	●	7004
DS4/C4 (B7)	Discharge bulbs vertical and horizontal adjustment		●	●	●	●	●	
DS4/C4 (B7)	Engine relay unit		●	●	●	●	●	
DS4/C4 (B7)	Independent telematic unit (BTA)		●	●	●	●	●	
DS4/C4 (B7)	Multiplexed additive adding pump		●	●	●	●	●	
DS4/C4 (B7)	Battery charge status unit		●	●	●	●	○	
DS4/C4 (B7)	Driving school module		●	●	●	○	●	
DS4/C4 (B7)	Supply protection and management unit		●	●	●	●	○	
DS4/C4 (B7)	Voltage retaining device		●	○	○	○	○	
DS5	Built-in Systems Interface (BSI)	BSI2010	▲	▲	▲	▲	▲	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20488, 20495, 20549, 20731, 20301, 20489, 20047, 20086, 20154, 20228, 20411, 20844, 20489, 20323, 20426, 20429, 20527,
DS5	Engine ECU	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20788, 20285, 20573, 20692, 20694, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
DS5	Power steering electric pump unit	GEP	▲	▲	▲	▲	○	20527,
DS5	Electric steering lock	AVE	▲	▲	▲	▲	▲	20527, 20498,
DS5	Multiplexed additive pump	PADDGO_E5	▲	▲	▲	▲	▲	20282, 20164, 20165, 20323, 20584, 20165, 20323, 20686, 20163, 20323, 20687, 20163, 20323, 20527,
DS5	Multiplexed additive pump	PADDGO_TI_E6	▲	▲	▲	▲	▲	20166, 20236, 20166, 20236, 20166, 20236, 20166, 20236, 20166, 20236, 20166, 20236, 20527,
DS5	Service module	BTA	▲	▲	▲	▲	▲	20847, 20142, 20527,
DS5	Service module	BLVV	▲	▲	▲	▲	▲	20176, 20527,
DS5	Service module	BTA_CN	▲	▲	▲	▲	▲	20765, 20527,
DS5	Supply protection and management unit	BPGA2010	▲	▲	▲	▲	○	20527,
DS5	Battery charge status unit	BECB_GEN2	●	●	●	●	○	20527,
DS5	Telematic navigator	CRT_UDS	▲	○	○	▲	▲	
DS5	Electric secondary brake	FSE	▲	▲	▲	▲	▲	20049, 20247, 20518, 20049, 20247, 20518, 20527,
DS5	Trailer relay unit	BSG_2010_RQ	▲	▲	▲	▲	▲	20527,
DS5	Electronic key reader	LCE	▲	▲	▲	▲	○	
DS5	Seat belts not fastened LED unit	TNB_2010	▲	○	○	○	▲	
DS5	Seat belts not fastened LED unit (TNB)	TNB_2010	●	○	○	○	●	
DS5	Instrument panel	COMBINE_UDS	▲	▲	▲	▲	▲	
DS5	Display	EMF_A_UDS	▲	▲	▲	○	▲	20527,
DS5	Display	EMF_C_UDS	▲	▲	▲	○	▲	20477, 20151, 20527,
DS5	Matrix screen integral to the instrument panel	MATT_C_2010	▲	▲	▲	○	▲	20527,
DS5	Matrix screen integral to the instrument panel	MATT_M_2010	●	●	●	○	●	20527,
DS5	Anti-theft alarm	ALARME	▲	▲	▲	▲	▲	20125, 20115, 20118, 20115, 20118, 20527, 20125, 20115, 20118, 20125, 20115, 20118, 20023, 20115, 20118, 20527,
DS5	Vibrators control ECU	BPV	▲	▲	▲	▲	▲	20527,
DS5	Switch module under the steering wheel (Top of column)	COM2008P	▲	▲	▲	▲	▲	20527,
DS5	Hands free starting access electronic module.	BML	▲	▲	▲	▲	▲	20075, 20076, 20077, 20078, 20079, 20080, 20081, 20082, 20083, 20358, 20527,
DS5	Rain and brightness sensor	PLUIE_LUMINOSITE_UDS	▲	▲	▲	▲	○	20797, 20527, 20797, 20527,
DS5	Under-inflation detection (DSG)	DSG	●	●	●	●	○	20168, 20459, 20737, 20530, 20267, 20536, 20303, 20304, 20538, 20543, 20368, 20857, 20826, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
DS5	Under inflation detection	DSG	●	●	●	●	○	20168, 20459, 20737, 20530, 20267, 20536, 20303, 20304, 20538, 20543, 20368, 20857, 20826, 20527,
DS5	Under-inflation detection (DSG)	DSG_UDS	▲	▲	▲	▲	○	20536, 20857, 20527,
DS5	Under inflation detection	DSG_UDS	●	●	●	●	○	20536, 20857, 20527,
DS5	Parking aid	AAS_UDS	▲	▲	▲	▲	○	20457, 20527,
DS5	Driver's seat memorizing unit	BDMC	▲	▲	▲	▲	▲	20146, 20745, 20746, 20527, 20146, 20745, 20746,
DS5	Central voltage retention device	DMTC	▲	○	○	○	○	
DS5	Central voltage retention device	DMTR	●	●	●	○	○	20527,
DS5	High Head Vision	VTH_UDS	●	●	●	●	○	20326, 20192, 20145, 20326, 20192, 20527,
DS5	Multifunction camera or multifunction video camera	CVM	▲	▲	▲	▲	▲	20829, 20439, 20851, 20527,
DS5	Air conditioning	CLIM_REGULEE_UDS	▲	▲	▲	▲	▲	20491, 20527,
DS5	audio amplifier	AMPLI_AUDIO	▲	▲	▲	○	▲	20527,
DS5	Headlamp height adjuster / Directional headlamp	LADCT	●	●	●	●	●	20527,
DS5	Air bag	RBG_UDS	▲	▲	▲	▲	○	20189, 20406, 20822, 20527,
DS5	Engine relay unit	BSM_2010	▲	▲	▲	▲	▲	20327, 20780, 20252, 20401, 20327, 20780, 20252, 20401, 20527,
DS5	Telematics	RNEG2010	▲	▲	▲	▲	▲	20847, 20119, 20123, 20136, 20141, 20140, 20527,
DS5	Telematics	RADIONAV_RNEGC	▲	▲	▲	▲	▲	20847, 20095, 20119, 20123, 20136, 20137, 20527,
DS5	Telematics	MRN	▲	▲	▲	▲	▲	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20527,
DS5	Radio	RD5	▲	▲	▲	▲	▲	20844, 20030, 20519, 20844, 20030, 20519, 20527,
DS5	Radio	RD45	▲	▲	▲	▲	▲	20844, 20030, 20519, 20527, 20844, 20030, 20519,
DS5	Steering wheel with integral controls (VCI)	VCI	▲	▲	▲	▲	▲	20281,
DS5	Multiplexed control panel	FMUX	▲	▲	▲	▲	▲	20527,
DS5	Clock	HORL	●	●	●	●	●	20527,
DS5	Windscreen wiper	ESSUIV_UDS	▲	▲	▲	▲	○	20527,
DS5	Windscreen wiper (Left-hand side)	MOTEV_UDS	●	●	●	●	○	20527,
DS5	Windscreen wiper (Right-hand side)	MOTED_UDS	●	●	●	●	○	20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
DS5 Hybrid4	Built-in Systems Interface (BSI)	BSI2010	●	●	●	●	●	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20488, 20495, 20549, 20731, 20301, 20489, 20047, 20086, 20154, 20228, 20411, 20844, 20489, 20323, 20426, 20429, 20527,
DS5 Hybrid4	Engine ECU	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20788, 20285, 20573, 20692, 20694, 20527,
DS5 Hybrid4	Engine ECU	DCM35_HY	●	●	●	●	●	20088, 20089, 20090, 20281, 20295, 20509, 20343, 20020, 20062, 20065, 20064, 20070, 20226, 20240, 20286, 20636, 20588, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
DS5 Hybrid4	Engine ECU	DCM35_BR2	●	●	●	●	●	20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
DS5 Hybrid4	Engine ECU	MED17_4_2	●	●	●	●	●	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
DS5 Hybrid4	Engine ECU	MEVD17_4_2	●	●	●	●	●	20070, 20563, 20291, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20827, 20061, 20527,
DS5 Hybrid4	Engine ECU	DCM62	●	●	●	●	●	20144, 20829, 20838, 20256, 20257, 20258, 20259, 20699, 20639, 20690, 20624, 20706, 20606, 20611, 20619, 20623, 20622, 20670, 20683, 20753, 20198, 20288, 20299, 20444, 20092, 20093, 20514, 20513, 20505, 20548, 20554, 20122, 20185, 20527,
DS5 Hybrid4	Engine ECU	EDC17C60	●	●	●	●	●	20144, 20484, 20256, 20257, 20258, 20259, 20829, 20690, 20624, 20625, 20716, 20606, 20619, 20670, 20683, 20753, 20198, 20288, 20444, 20805, 20093, 20514, 20513, 20505, 20548, 20552, 20554, 20122, 20527,
DS5 Hybrid4	Automatic gearbox or controlled manual gearbox	CFC300P_HY	●	●	●	●	●	20150, 20315, 20366, 20045, 20181, 20398, 20480, 20493, 20071, 20200, 20248, 20312, 20556, 20723, 20568, 20616, 20648, 20667, 20664, 20673, 20693, 20727, 20527,
DS5 Hybrid4	Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_EURO5	●	●	●	●	●	20502, 20634, 20600, 20605, 20527,
DS5 Hybrid4	Automatic gearbox or controlled manual gearbox	BVA_AM6_AT6_UDS	●	●	●	●	●	20034, 20599, 20601, 20572, 20604, 20072, 20311, 20467, 20502,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
DS5 Hybrid4	Vibrators control ECU	BPV	●	●	●	●	●	20527,
DS5 Hybrid4	Switch module under the steering wheel (Top of column)	COM2008P	●	●	●	●	●	20527,
DS5 Hybrid4	Hands free starting access electronic module.	BML	●	●	●	●	●	20075, 20076, 20077, 20078, 20079, 20080, 20081, 20082, 20083, 20358, 20527,
DS5 Hybrid4	Rain and brightness sensor	PLUIE_LUMINOSITE_UDS	●	●	●	●	○	20797, 20527, 20797, 20527,
DS5 Hybrid4	Hybrid mode selector	MCM	▲	▲	▲	▲	○	20281,
DS5 Hybrid4	Traction battery ECU	TBMU	▲	▲	▲	▲	▲	20522, 20527,
DS5 Hybrid4	Hybrid control ECU 1	HCU1	▲	▲	▲	▲	▲	20298, 20280, 20724, 20641, 20704, 20582, 20527,
DS5 Hybrid4	Hybrid control ECU 2	HCU2	▲	▲	▲	▲	○	20527,
DS5 Hybrid4	Under-inflation detection (DSG)	DSG	●	●	●	●	○	20168, 20459, 20737, 20530, 20267, 20536, 20303, 20304, 20538, 20543, 20368, 20857, 20826, 20527,
DS5 Hybrid4	Under-inflation detection (DSG)	DSG_UDS	●	●	●	●	○	20536, 20857, 20527,
DS5 Hybrid4	Parking aid	AAS_UDS	●	●	●	●	○	20457, 20527,
DS5 Hybrid4	Driver's seat memorizing unit	BDMC	●	●	●	●	●	20146, 20745, 20746, 20527, 20146, 20745, 20746,
DS5 Hybrid4	High Head Vision	VTH_UDS	●	●	●	●	○	20326, 20192, 20145, 20326, 20192, 20527,
DS5 Hybrid4	Multifunction camera or multifunction video camera	CVM	●	●	●	●	●	20829, 20439, 20851, 20527,
DS5 Hybrid4	Air conditioning	CLIM_REGULEE_UDS	●	●	●	●	●	20491, 20527,
DS5 Hybrid4	audio amplifier	AMPLI_AUDIO	●	●	●	○	●	20527,
DS5 Hybrid4	Headlamp height adjuster / Directional headlamp	LADCT	●	●	●	●	●	20527,
DS5 Hybrid4	Air bag	RBG_UDS	●	●	●	●	○	20189, 20406, 20822, 20527,
DS5 Hybrid4	Engine relay unit	BSM_2010	●	●	●	●	●	20327, 20780, 20252, 20401, 20327, 20780, 20252, 20401, 20527,
DS5 Hybrid4	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
DS5 Hybrid4	Telematics	RADIONAV_RNEGC	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
DS5 Hybrid4	Telematics	MRN	●	●	●	●	●	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20527,
DS5 Hybrid4	Radio	RD5	●	●	●	●	●	20844, 20030, 20519, 20844, 20030, 20519, 20527,
DS5 Hybrid4	Radio	RD45	●	●	●	●	●	20844, 20030, 20519, 20527, 20844, 20030, 20519,
DS5 Hybrid4	Steering wheel with integral controls (VCI)	VCI	●	●	●	●	●	20281,
DS5 Hybrid4	Multiplexed control panel	FMUX	●	●	●	●	●	20527,
DS5 Hybrid4	Clock	HORL	●	●	●	●	●	20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
DS5 Hybrid4	Windscreen wiper	ESSUIV_UDS	●	●	●	●	○	20527,
ELYSEE	Transponder		●			●		
ELYSEE	Gearbox ECU		●			●		
ELYSEE	Gearbox ECU		●			●	●	7001
ELYSEE	Gearbox ECU		●			●	●	7001
ELYSEE	Gearbox ECU		●			●	●	7001
ELYSEE	Airbag		●					
ELYSEE	Airbag			●	●	●		
ELYSEE	Anti-lock brake system		●			●	●	
ELYSEE	Injection		●	●	●	●	●	
EVASION	Injection	2.1 L P8C LUCAS EPIC	●			●	●	
FUKANG/FUKANG 988	Gearbox ECU		●			●		
FUKANG/FUKANG 988	Gearbox ECU		●			●	●	7001
FUKANG/FUKANG 988	Gearbox ECU		●			●	●	7001
FUKANG/FUKANG 988	Gearbox ECU		●			●	●	7001
FUKANG/FUKANG 988	Transponder		●			●		
FUKANG/FUKANG 988	Injection		●	●	●	●	●	
FUKANG/FUKANG 988	Anti-lock brake system		●			●	●	
FUKANG/FUKANG 988	Anti-lock brake system		●	●	●	●	●	
JUMPER	Injection	2.0 L RFN MM48P	●	●	●	●	●	7001
JUMPER 3	Parking aid	AAS	●	●	●	●	○	20810, 20527,
JUMPER 3	ABS/traction control	ABS80	●	●	●	●	●	20041, 20527,
JUMPER 3	ABS/traction control	ESP80	●	●	●	●	●	20039, 20527,
JUMPER 3	ABS/traction control	ASR80	●	●	●	●	●	20043, 20527,
JUMPER 3	Driver and passenger airbags	SAC_TRW	●	●	●	●	●	20028, 20527,
JUMPER 3	Driver and passenger airbags	SDM	●	●	●	●	●	20028, 20527,
JUMPER 3	Built-in Systems Interface (BSI) (TBTbody computer)	NBC	●	●	●	●	●	20318, 20839, 20227, 20528, 20232, 20229, 20230, 20231, 20515, 20500, 20500, 20609, 20195, 20292, 20527,
JUMPER 3	Additional heating	CHAUFF_ADD	●	●	●	●	●	20527,
JUMPER 3	heating/ventilation	CLIM_REGULEE	●	●	●	●	●	20397, 20026, 20527,
JUMPER 3	Instrument panel	COMBINE	●	●	●	●	●	20026, 20755, 20527,
JUMPER 3	Power steering	SSCU	●	●	●	●	○	
JUMPER 3	Tachograph	CHRONOTACHYGRAPHE	●	●	●	●	●	20126, 20132, 20126, 20132, 20527,
JUMPER 3	Injection/ignition	PUMA	●	●	●	●	●	20534, 20533, 20555, 20015, 20069, 20158, 20329, 20569, 20570, 20447, 20512, 20527,
JUMPER 3	Injection/ignition	EDC16C39	●	●	●	●	●	20853, 20533, 20555, 20014, 20447, 20461, 20469, 20521, 20612, 20629, 20662, 20375, 20376, 20652, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
JUMPER 3	Injection/ignition	EDC17CP52	●	●	●	●	●	20853, 20531, 20533, 20555, 20297, 20375, 20376, 20447, 20461, 20521, 20629, 20700, 20712, 20591, 20853, 20527,
JUMPER 3	Electronically managed suspension	SUSPENSION	●	●	●	●	●	20226, 20046, 20180, 20289, 20527,
JUMPER 3	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20026, 20527,
JUMPER 3 Euro 5	Built-in Systems Interface	BCM	▲	▲	▲	▲	▲	20022, 20194, 20196, 20197, 20476, 20022, 20194, 20196, 20197, 20476, 20435, 20434, 20489, 20489, 20609, 20195, 20527,
JUMPER 3 Euro 5	Trailer relay unit	TTM	▲	▲	▲	▲	▲	20527,
JUMPER 3 Euro 5	ABS/traction control	ABS90_F	▲	▲	▲	▲	▲	20633, 20527,
JUMPER 3 Euro 5	ABS/traction control	ESP90_F	▲	▲	▲	▲	▲	20053, 20175, 20055, 20633, 20527,
JUMPER 3 Euro 5	Engine ECU	EDC17CP52_UDS	▲	▲	▲	▲	▲	20553, 20852, 20293, 20447, 20461, 20521, 20638, 20617, 20629, 20662, 20713, 20652, 20694, 20527,
JUMPER 3 Euro 5	Engine ECU	SID208	▲	▲	▲	▲	▲	20553, 20852, 20458, 20294, 20295, 20447, 20521, 20564, 20638, 20592, 20628, 20629, 20662, 20671, 20684, 20688, 20711, 20652, 20694, 20527,
JUMPER 3 Euro 5	Telematics unit	CTM	▲	▲	▲	▲	▲	
JUMPER 3 Euro 5	TBTRadionavigation LTM	LTM	▲	▲	▲	▲	▲	20736, 20781,
JUMPER 3 Euro 5	Instrument panel	IPC	▲	▲	▲	▲	▲	20414, 20754, 20862, 20413, 20026, 20414, 20834,
JUMPER 3 Euro 5	Air conditioning	ACM	▲	▲	▲	▲	▲	20033,
JUMPER 3 Euro 5	Air bag	SDM	▲	▲	▲	▲	▲	20028, 20527,
JUMPER 3 Euro 5	Power steering	SSCU	▲	▲	▲	▲	○	20558,
JUMPER 3 Euro 5	Additional heating	CHAUFF_ADD	▲	▲	▲	▲	▲	20527,
JUMPER 3 Euro 5	Tachograph	CHRONOTACHYGRAPHE	▲	▲	▲	▲	▲	20126, 20132, 20126, 20132, 20527,
JUMPER 3 Euro 5	Parking aid	AAS	▲	▲	▲	▲	○	20192, 20192, 20527,
JUMPER 3 Euro 5	Electronically managed suspension	SUSPENSION	▲	▲	▲	▲	▲	20226, 20339, 20046, 20180, 20289, 20527,
JUMPER 3 Euro 5	Under inflation detection	TPMS	▲	▲	▲	▲	○	
JUMPER 3 Euro 5	Radio	RRM	▲	▲	▲	▲	▲	
JUMPER 3 Euro 5	Lane departure warning system	HALF	▲	▲	▲	▲	○	20527,
JUMPER 3 Minibus	Parking aid	AAS	●	●	●	●	○	20810, 20837, 20810, 20837, 20527,
JUMPER 3 Minibus	ABS/traction control	ABS80	●	●	●	●	●	20765, 20527,
JUMPER 3 Minibus	ABS/traction control	ESP80	●	●	●	●	●	20039, 20527,
JUMPER 3 Minibus	ABS/traction control	ASR80	●	●	●	●	●	20043, 20527,
JUMPER 3 Minibus	Driver and passenger airbags	SAC_TRW	●	●	●	●	●	20028, 20527,
JUMPER 3 Minibus	Driver and passenger airbags	SDM	●	●	●	●	●	20028, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
JUMPER 3 Minibus	Built-in Systems Interface (BSI)	NBC	●	●	●	●	●	20318, 20839, 20227, 20281, 20232, 20229, 20230, 20231, 20515, 20500, 20500, 20609, 20195, 20292, 20527,
JUMPER 3 Minibus	Additional heating	CHAUFF_ADD	●	●	●	●	●	20527,
JUMPER 3 Minibus	heating/ventilation	CLIM_REGULEE	●	●	●	●	●	20397, 20026, 20527,
JUMPER 3 Minibus	Instrument panel	COMBINE	●	●	●	●	●	20755, 20527,
JUMPER 3 Minibus	Power steering	SSCU	●	●	●	●	○	
JUMPER 3 Minibus	Tachograph	CHRONOTACHYGRAPHE	●	●	●	●	●	20126, 20132, 20126, 20132, 20527,
JUMPER 3 Minibus	Injection/ignition	PUMA	●	●	●	●	●	20534, 20533, 20555, 20015, 20069, 20158, 20329, 20569, 20570, 20447, 20512, 20527,
JUMPER 3 Minibus	Injection/ignition	EDC16C39	●	●	●	●	●	20853, 20533, 20555, 20014, 20447, 20461, 20469, 20521, 20612, 20629, 20662, 20375, 20376, 20652, 20527,
JUMPER 3 Minibus	Injection/ignition	EDC17CP52	●	●	●	●	●	20853, 20531, 20533, 20555, 20297, 20375, 20376, 20447, 20461, 20521, 20629, 20700, 20712, 20591, 20853, 20527,
JUMPER 3 Minibus	Electronically managed suspension	SUSPENSION	●	●	●	●	●	20226, 20046, 20180, 20289, 20527,
JUMPER 3 Minibus	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20026, 20527,
JUMPY	Auto gearbox		●			●	●	7001
JUMPY	Auto gearbox		●			●	●	7001
JUMPY	Auto gearbox		●			●	●	7001
JUMPY	additional heating		●	●	●	●	●	
JUMPY	Injection	2.0 L RFN MM48P	●	●	●	●	●	7001
JUMPY	Injection	2.0 L RHW BOSCH EDC15C2	●	●	●	●	●	
JUMPY	Injection	2.0 L RHW BOSCH EDC15C2	●	●	●	●	●	
JUMPY	Injection	2.0 L RHZ BOSCH EDC15C2	●	●	●	●	●	
JUMPY	Injection	2.0 L RHZ BOSCH EDC15C2	●	●	●	●	●	
JUMPY	Injection	2.0 L RHX BOSCH EDC15C2	●	●	●	●	●	
JUMPY	Injection	2.0 L RHX BOSCH EDC15C2	●	●	●	●	●	
JUMPY	Injection	1.9 L WJY LUCAS DCN2	●	●	●	●	●	
JUMPY 2	Auto gearbox		●			●	●	7001
JUMPY 2	Auto gearbox		●			●	●	7001
JUMPY 2	Auto gearbox		●			●	●	7001
JUMPY 2	additional heating		●	●	●	●	●	
JUMPY 2	Airbag		●	●	●			
JUMPY 2	Injection	2.0 L RFN MM48P	●	●	●	●	●	7001
JUMPY 2	Injection	2.0 L RHW BOSCH EDC15C2	●	●	●	●	●	
JUMPY 2	Injection	2.0 L RHZ BOSCH EDC15C2	●	●	●	●	●	
JUMPY 2	Injection	2.0 L RHX BOSCH EDC15C2	●	●	●	●	●	
JUMPY 2	Injection	1.9 L WJY LUCAS DCN2	●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
JUMPY 2	Anti-lock brake system		●			●	●	
JUMPY 3	Parking aid	AAS	●	●	●	●	○	20457, 20527,
JUMPY 3	ABS/traction control	ABS81	●	●	●	●	●	20039, 20527,
JUMPY 3	ABS/traction control	ESP81	●	●	●	●	●	20408, 20039, 20527,
JUMPY 3	ABS/traction control	ABS8_BOSCH	●	●	●	●	●	20039, 20527,
JUMPY 3	ABS/traction control	ESP8_BOSCH	●	●	●	●	○	20408, 20039, 20527,
JUMPY 3	Multifunction display	EMF_A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
JUMPY 3	Multifunction display	EMF_C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
JUMPY 3	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	●	○	20249, 20396, 20481, 20744, 20192, 20249, 20396, 20481, 20744, 20406, 20822, 20527,
JUMPY 3	Anti-theft alarm	ALARME	●	●	●	●	●	20125, 20115, 20125, 20115, 20115, 20527,
JUMPY 3	Radio or radiotelephone (radio part)	AUTORADIO	●	●	●	●	●	20527, 20186, 20331,
JUMPY 3	Radio or radiotelephone (radio part)	RD45	●	●	●	●	●	20844, 20030, 20519, 20527, 20844, 20030, 20519,
JUMPY 3	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20844, 20155, 20516, 20763, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
JUMPY 3	Engine relay unit	BSM	●	●	●	●	●	20527,
JUMPY 3	Trailer relay unit	BSR	●	●	●	●	●	
JUMPY 3	CD player	CHANGEUR_CD	●	●	●	○	●	20110, 20527, 20178, 20390, 20527,
JUMPY 3	Additional heating	CHAUFF_ADD	●	●	●	●	●	20048, 20527, 20107,
JUMPY 3	heating/ventilation	CLIM_REGULEE	●	●	●	●	●	20016, 20019, 20033, 20202, 20474, 20527,
JUMPY 3	Instrument panel	COMBINE	●	●	●	●	●	20130, 20527,
JUMPY 3	Rain and brightness sensor	PLUIE_LUMINOSITE	●	●	●	○	○	
JUMPY 3	Power steering electric pump unit	GEP	●	●	●	●	○	
JUMPY 3	Switch module under the steering wheel (Top of column)	HDC	●	●	●	●	●	20002, 20270, 20527,
JUMPY 3	Injection/ignition	DCM35_BR2	●	●	●	●	●	20852, 20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
JUMPY 3	Injection/ignition	EDC16C3	●	●	●	●	●	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20468, 20296, 20719, 20226, 20241, 20246, 20527,

Vehicle	System	ECU Name	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
JUMPY 3	Injection/ignition	HDI_SID803A	●	●	●	●	●	20117, 20215, 20221, 20220, 20547, 20546, 20855, 20305, 20245, 20499, 20286, 20469, 20577, 20638, 20626, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20527,
JUMPY 3	Injection/ignition	MM6KP	●	●	●	●	●	20005, 20159, 20437, 20689, 20059, 20618, 20527,
JUMPY 3	Injection/ignition	DCM35	●	●	●	●	●	20088, 20089, 20343, 20509, 20020, 20067, 20062, 20226, 20240, 20588, 20629, 20672, 20710, 20285, 20573, 20579, 20692, 20694, 20527,
JUMPY 3	Injection/ignition	EDC17C10_BR2	●	●	●	●	●	20456, 20456, 20088, 20089, 20456, 20456, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
JUMPY 3	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
JUMPY 3	Hands-free kit (Telephone)	BOITIER_NOMADE	●	●	●	●	●	20135, 20135, 20527,
JUMPY 3	Pneumatic suspension	SUSPENSION	●	●	●	●	●	20182, 20479, 20226, 20046, 20179, 20527,
JUMPY 3	Rear air conditioning table	TAB_CLIM_AR	●	●	●	●	●	20033, 20432, 20527,
JUMPY 3	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20128, 20847, 20095, 20123, 20127, 20137, 20006, 20114, 20121, 20133, 20128, 20847, 20095, 20123, 20128, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20527,
JUMPY 3	Telematics	RADIONAV_RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
JUMPY 3	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
JUMPY 3	Bodywork conversion unit	BTC	●	●	●	●	●	
JUMPY 3	Deflation detection (DSG)	DSG	●	●	●	●	○	20168, 20459, 20737, 20530, 20267, 20536, 20303, 20304, 20538, 20543, 20368, 20857, 20826, 20527,
JUMPY 3	Deflation detection (DSG)	DSG_UDS	●	●	●	●	○	20536, 20857, 20527,
JUMPY 3	gearbox	BVA_AM6_AT6_EURO5	●	●	●	●	●	20502, 20634, 20600, 20605, 20527,
JUMPY 3	High frequency receiver	RHF	●	●	●	●	○	
JUMPY 3	Anti-slip mode selector	ASR	●	●	●	●	○	
JUMPY 3	Battery charge status unit	BECEB_GEN2	●	●	●	●	○	20527,
NEMO	Parking aid	AAS	●	●	●	●	○	20192, 20192, 20527,
NEMO	ABS/traction control	ABS81	●	●	●	●	●	20527,
NEMO	ABS/traction control	ESP81	●	●	●	●	●	20055, 20408, 20527,
NEMO	ABS/traction control	ESP90_F	●	●	●	●	●	20053, 20175, 20055, 20633, 20527,
NEMO	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	●	●	20028, 20734, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
NEMO	Built-in Systems Interface (BSI)	BCM	●	●	●	●	●	20319, 20476, 20830, 20319, 20476, 20830, 20435, 20434, 20734, 20489, 20609, 20527,
NEMO	gearbox	BVMP_MTA	●	●	●	●	●	20553, 20040, 20199, 20350, 20491, 20398, 20725, 20566, 20575, 20581, 20644, 20667, 20664, 20691, 20613, 20527,
NEMO	gearbox	BVMP	●	●	●	●	●	20102, 20106, 20317, 20314, 20099, 20313, 20357, 20752, 20099, 20313, 20357, 20752, 20102, 20106, 20317, 20314, 20102, 20106, 20317, 20314, 20099, 20313, 20357, 20752, 20102, 20106, 20317, 20314, 20099, 20313, 20357, 20752, 20102, 20106, 20317, 20314, 20102, 20106, 20317, 20314, 20099, 20313, 20357, 20752, 20102, 20106, 20317, 20314, 20099, 20313, 20357, 20752, 20102, 20106, 20317, 20314, 20760, 20761, 20527,
NEMO	Instrument panel	COMBINE	●	●	●	●	●	20413, 20414, 20862, 20413, 20026, 20414, 20834, 20527,
NEMO	Injection/ignition	EDC16C34	●	●	●	●	●	20553, 20226, 20574, 20660, 20527,
NEMO	Injection/ignition	V34P	●	●	●	●	●	20526, 20341, 20058, 20381, 20424, 20437, 20824, 20261, 20527,
NEMO	Injection/ignition	V342	●	●	●	●	●	20526, 20341, 20381, 20424, 20437, 20824, 20059, 20261, 20527,
NEMO	Injection/ignition	HDI_8DF2	○	●	●	●	●	20551, 20852, 20293, 20450, 20461, 20521, 20574, 20638, 20629, 20722, 20726, 20591, 20652, 20527,
NEMO	Injection/ignition	HDI_8DF3	○	●	●	●	●	20551, 20852, 20293, 20450, 20461, 20469, 20521, 20574, 20638, 20592, 20593, 20617, 20629, 20662, 20733, 20722, 20726, 20652, 20527,
NEMO	Telematics unit	CTM	●	●	●	●	●	
SAXO	Electrical vehicle		●				●	
SAXO	additional heating		●	●	●	●	●	
SAXO	Transponder		●			●		
SAXO	Injection	1.0 L CDY/CDZ BOSCH MA3.1	●			●		
SAXO	Injection	1.1 L HDY/HDZ BOSCH MA3.1	●			●		
SAXO	Injection	1.1 L HFX BOSCH M7.4.4	●	●	●	●	●	
SAXO	Injection	1.4 L KFW SAGEM S2000	●			●	●	7001
SAXO	Injection	1.4 L KFW SAGEM S2000	●			●	●	
SAXO	Injection	1.4 L KFX MMIAP	●			●		
SAXO	Injection	1.4 L KFX BOSCH MP7.3	●			●	●	
SAXO	Injection	1.6 L NFX MM48P	●	●	●	●	●	7001
SAXO	Injection	1.6 L NFT BOSCH M7.4.4	●	●	●	●	●	7001
SAXO	Injection	1.6 L NFX MMIAP	●			●		
SAXO	Injection	1.6 L NFZ BOSCH MP7.2	●			●	●	
SAXO	Injection	1.5L VJX/VJU BOSCH AS4-VP20	●			●	●	
SAXO	Anti-lock brake system		●			●		

Vehicle	System	ECU Name	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
XANTIA 2	Injection	1.8 L LFX MMIAP				●		
XANTIA 2	Injection	1.8 L LFY SAGEM SL96	●			●	●	
XANTIA 2	Injection	1.8 L LFY BOSCH MP7.3	●			●	●	
XANTIA 2	Injection	3.0 L XFZ BOSCH MP7.0	●			●	●	
XANTIA 2	Injection	2.1 L P8C LUCAS EPIC	●			●	●	
XANTIA 2	Injection	2.0 L RHZ BOSCH EDC15C2	●			●	●	
XANTIA 2	Injection	2.0 L RHZ BOSCH EDC15C2	●			●	●	
XANTIA 2	Injection	2.0 L RHZ BOSCH EDC15C2	●	●	●	●	●	
XANTIA 2	Injection	2.0 L RHY BOSCH EDC15C2	●			●	●	
XANTIA 2	Injection	2.0 L RHY BOSCH EDC15C2	●			●	●	
XANTIA 2	Injection	2.0 L RHY BOSCH EDC15C2	●	●	●	●	●	
XANTIA 2	additional heating		●	●	●	●	●	
XANTIA 2	Right hand side airbag		●				●	
XANTIA 2	Left hand side airbag		●				●	
XANTIA 2	Auto gearbox		●			●		
XANTIA 2	Auto gearbox		●			●		7001
XM/XM MULTIPLEXEE	Injection		●			●	●	
XSARA	Injection	1.4 L KFX MMIAP	●			●		
XSARA	Injection	1.4 L KFX BOSCH MP7.3	●			●	●	
XSARA	Injection	1.4L KFX SAGEM SL96	●			●	●	
XSARA	Injection	1.6 L NFZ BOSCH MP7.2	●			●	●	
XSARA	Injection	1.8 L LFX MMIAP	●			●		
XSARA	Injection	1.8L LFY SAGEM SL96	●			●	●	
XSARA	Injection	2.0 L RFS MMIAP	●			●		
XSARA	Injection	2.0 L RHY BOSCH EDC15C2	●			●	●	
XSARA	Injection	2.0 L RHY BOSCH EDC15C2	●	●	●	●	●	
XSARA	Injection	1.4 L KFX BOSCH MP7.3	●			●	●	
XSARA	Injection	1.4L KFX SAGEM SL96	●			●	●	
XSARA	Injection	1.6 L NFZ BOSCH MP7.2	●			●	●	
XSARA	Injection	1.8 L LFX MMIAP	●			●		
XSARA	Injection	1.8L LFY SAGEM SL96	●			●	●	
XSARA	Injection	2.0 L RFS MMIAP	●			●		
XSARA	Injection	2.0 L RHY BOSCH EDC15C2	●			●	●	
XSARA	additional heating		●	●	●	●	●	
XSARA	Anti-lock brake system		●			●	●	
XSARA	Airbag		●					
XSARA	Airbag		●					
XSARA	Left hand side airbag		●				●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
XSARA	Right hand side airbag		●				●	
XSARA	BSI		●			●	●	
XSARA	Radio post-equipment		●			●	●	
XSARA	CD player		●			●	●	
XSARA	Instrument panel		●				●	
XSARA	additional heating		●	●	●	●	●	
XSARA	Anti-lock brake system		●			●	●	
XSARA	Anti-lock brake system		●			●	●	
XSARA	Airbag		●					
XSARA	Left hand side airbag		●				●	
XSARA	Right hand side airbag		●				●	
XSARA	Auto gearbox		●			●		7001
XSARA	Anti-lock brake system		●			●	●	
XSARA 2	BSI		●			●	●	
XSARA 2	Navigation		●	●	●	●		
XSARA 2	Instrument panel		●			●	●	
XSARA 2	Air conditioning		●	●	●	●	●	
XSARA 2	Radio post-equipment		●	●	●	●	●	
XSARA 2	CD player		●			●	●	
XSARA 2	Parking aid		●			●	●	
XSARA 2	Top of column			●	●			
XSARA 2	Alarm			●	●		●	
XSARA 2	Driving school mode		●			●	●	
XSARA 2	Display or Autopc		●	●	●	●	●	
XSARA 2	Display or Autopc		●	●	●	●	●	
XSARA 2	Display or Autopc		●	●	●	●	●	
XSARA 2	Display or Autopc		●	●	●		●	
XSARA 2	Auto gearbox		●			●	●	7001
XSARA 2	Airbag		●	●	●			
XSARA 2	BSI		●			●	●	03007 03008 03009
XSARA 2	Navigation		●	●	●	●		
XSARA 2	Instrument panel		●			●	●	
XSARA 2	Air conditioning		●	●	●	●	●	
XSARA 2	Radio post-equipment		●	●	●	●	●	
XSARA 2	Car-phone		●	●	●	●	●	
XSARA 2	CD player		●			●	●	
XSARA 2	Parking aid		●			●	●	
XSARA 2	Switch module at the steering wheel			●	●			

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
XSARA 2	Alarm			●	●		●	
XSARA 2	Driving school mode		●			●	●	
XSARA 2	Rain sensor/ Brightness			●	●			
XSARA 2	Airbag		●	●	●			
XSARA 2	Injection	2.0L RFN MM48P	●	●	●	●	●	7001
XSARA 2	Injection	2.0L RFS MM48P	●	●	●	●	●	7001
XSARA 2	Injection	RFN MM4MP2	●	●	●	●	●	7001
XSARA 2	Injection	1.6L NFU BOSCH ME744	●	●	●	●	●	
XSARA 2	Injection	1.4L KFW SAGEM S2000P	●			●	●	
XSARA 2	Injection	2.0 L RHY BOSCH EDC15C2	●	●	●	●	●	
XSARA 2	Injection	2.0 L RHZ BOSCH EDC15C2	●	●	●	●	●	
XSARA 2	Injection	1.9L WJY LUCAS DCN2	●	●	●	●	●	
XSARA 2	Injection	RHY SIEMENS SID801	●	●	●	●	●	
XSARA 2	Injection	8HZ BOSCH EDC16C3 (DV4)		●	●			
XSARA 2	Injection	RFN MM6LP	●	●	●	●	●	
XSARA 2	Anti-lock brake system		●			●	●	
XSARA 2	Anti-lock brake system	ESP_BOSCH5.7	●			●	●	5003
XSARA PICASSO	Injection	1.6L NFZ BOSCH MP7.2	●			●	●	
XSARA PICASSO	Injection	1.6L NFV BOSCH M744	●	●	●	●	●	
XSARA PICASSO	Injection	2.0L RFM MM48P	●	●	●	●	●	7001
XSARA PICASSO	Injection	1.8L 6FZ SAGEM S2000P	●			●	●	
XSARA PICASSO	Injection	6FZ SAGEM S2000PM1		●	●		●	
XSARA PICASSO	Injection	6FZ SAGEM S2000PM2		●	●			
XSARA PICASSO	Injection	NFS BOSCH ME745	●	●	●	●	●	
XSARA PICASSO	BSI ECU		●			●		
XSARA PICASSO	Navigation		●	●	●	●		
XSARA PICASSO	Multifunction display		●	●	●	●	●	
XSARA PICASSO	Multifunction display		●	●	●	●	●	
XSARA PICASSO	Air conditioning		●	●	●	●	●	
XSARA PICASSO	Radio post-equipment		●	●	●	●	●	
XSARA PICASSO	CD player		●	●	●	●	●	
XSARA PICASSO	Instrument panel		●	●	●	●	●	
XSARA PICASSO	Injection	NFU BOSCH ME745	●	●	●	●	●	
XSARA PICASSO	Injection	N6A BOSCH ME745	●	●	●	●	●	
XSARA PICASSO	Injection	NFR BOSCH ME745	●	●	●	●	●	
XSARA PICASSO	Injection	2.0 L BOSCH EDC15C2	●	●	●	●	●	
XSARA PICASSO	Diesel additive function		●	●	●	●	●	4008
XSARA PICASSO	Additional heating		●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
XSARA PICASSO	Airbag		●					
XSARA PICASSO	Left hand side airbag		●				●	
XSARA PICASSO	Right hand side airbag		●				●	
XSARA PICASSO	Anti-lock brake system		●			●	●	5003
XSARA PICASSO	Anti-lock brake system		●	●	●	●	●	5003
XSARA PICASSO CHINE	BSI		●	●	●	●	●	3005
XSARA PICASSO CHINE	Navigation			●	●			
XSARA PICASSO CHINE	Air conditioning		●	●	●	●	●	
XSARA PICASSO CHINE	Instrument panel		●	●	●	●	●	
XSARA PICASSO CHINE	Radio post-equipment		●	●	●	●	●	
XSARA PICASSO CHINE	CD player		●	●	●	●	●	
XSARA PICASSO CHINE	Parking aid		●	●	●	●	●	
XSARA PICASSO CHINE	Alarm			●	●		●	
XSARA PICASSO CHINE	Switch module at the steering wheel			●	●			
XSARA PICASSO CHINE	Rain sensor/ Brightness			●	●			
XSARA PICASSO CHINE	Airbag		●	●	●			
XSARA PICASSO CHINE	Multifunction display		●	●	●	●	●	
XSARA PICASSO CHINE	Multifunction display		●	●	●	●	●	
XSARA PICASSO CHINE	Telematic		●	●	●	●		
XSARA PICASSO CHINE	Auto gearbox		●			●	●	7001
XSARA PICASSO CHINE	additional heating		●	●	●	●	●	
XSARA PICASSO CHINE	Diesel additive function		●	●	●	●	●	4008
XSARA PICASSO CHINE	Injection	RFN MM6LP	●	●	●	●	●	
XSARA PICASSO CHINE	Injection	6FZ SAGEM S2000PM1		●	●		●	
XSARA PICASSO CHINE	Injection	6FZ SAGEM S2000PM1		●	●		●	
XSARA PICASSO CHINE	Injection	6FZ SAGEM S2000PM2		●	●			
XSARA PICASSO CHINE	Injection	1.6L NFV BOSCH M744	●	●	●	●	●	
XSARA PICASSO CHINE	Injection	NFS BOSCH ME745	●	●	●	●	●	
XSARA PICASSO CHINE	Injection	NFU BOSCH ME745	●	●	●	●	●	
XSARA PICASSO CHINE	Injection	N6A BOSCH ME745	●	●	●	●	●	
XSARA PICASSO CHINE	Injection	NFR BOSCH ME745	●	●	●	●	●	
XSARA PICASSO CHINE	Injection	NFS BOSCH ME749	●	●	●	●	●	
XSARA PICASSO CHINE	Injection	NFU BOSCH ME749	●	●	●	●	●	
XSARA PICASSO CHINE	Anti-lock brake system		●	●	●	●	●	
XSARA PICASSO CHINE	Anti-lock brake system			●	●		●	
XSARA PICASSO CHINE	Anti-lock brake system		●			●	●	
XSARA PICASSO CHINE	Injection	N6A BOSCH ME749	●	●	●	●	●	
XSARA PICASSO CHINE	Injection	2.0 L BOSCH EDC15C2	●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
XSARA PICASSO CHINE	Injection	9HY BOSCH EDC16C3 DV6TED4	●	●	●	●	●	
XSARA PICASSO CHINE	Injection	9HZ (FAP) BOSCH EDC16C34 DV6TED4	●	●	●	●	●	
XSARA PICASSO CHINE	Anti-lock brake system		●	●	●	●	●	5007
XSARA PICASSO CHINE	Anti-lock brake system		●	●	●	●	●	5003
XSARA PICASSO CHINE	Anti-lock brake system			●	●		●	5003
ZX	Engine	1.1 L HDY/HDZ BOSCH MA3.1	●			●		
ZX	Engine	1.4 L KFX MMIAP	●			●		
ZX	Engine	1.4 L KFX MMIAP	●			●		
ZX	Engine	1.6 L BFZ SAGEM CCM4GJ	●			●		
ZX	Engine	2.0 L RFS MMIAP	●			●		
ZX	Engine	2.0 L RFS MMIAP	●			●		
ZX	Driving assistance		●			●		
ZX	Auto gearbox		●	●	●	●	●	7001

Special_Function

Index	Specil Function Name	Index	Specil Function Name
01001	Cable tensioning	01002	Clutch pedal position sensor calibration
01003	Deactivation of the automatic application of the electric parking brake function	01004	Longitudinal acceleration sensor calibration
01005	Electric parking brake calibration	01006	Put in fitting / removal position
01007	Part removal / refitting	01008	Reactivation of automatic application of the electric parking brake
01009	Slope sensor calibration	02001	Deactivation / Activation of the tyre under-inflation detection function
02002	Erasing of the secondary wheels	02003	Wheel transmitter module management
02004	Initialisation of a single wheel transmitter module	02005	Valve search faulty
02006	Initialisation of the wheel transmitter modules	02007	Program additional wheel set
02008	Program wheel transmitter modules of main wheel set	02009	Read wheel transmitter module identifiers
02010	Tyre pressure detector activation / deactivation	02011	Valve programming check
02012	Write wheel transmitter module identifiers by references	03001	EU10
03002	EU11	03003	Maintenance limit
03004	Option INT	03005	Reset maintenance indicator
03006	Reset maintenance information	03007	Reset maintenance mileage
03008	Reset maintenance mileage + maintenance number	03009	Reset maintenance number done
04001	Configuration of the amount of additive in the particle filter	04002	Filling of the diesel additive adding reservoir
04003	Filling of the diesel additive tank	04004	Forced particle filter regeneration
04005	Forced regeneration of the particle filter, vehicle stationary	04006	Forced regeneration, vehicle stationary
04007	Particle filter regeneration	04008	Particle filter replacement
04009	Programming of the total quantity of additive injected into the particulate emission filter	04010	Repair to the diesel additive system
04011	Replacement of the diesel additive reservoir, of the pump or of the pipes	04012	Replacement of the particle emission filter
04013	Replacement or filling of the diesel additive tank	05001	Calibration of the steering wheel angle sensor
05002	Calibration of the steering wheel angle sensor : C2, C3, C3 pluriel, New Look C5 with ESP MK60	05003	Calibration/decalibration of the steering wheel angle sensor
05004	Definition of the steering wheel with fixed central controls configurable control menu	05005	Reading of the calibration status of the steering wheel angle
05006	Steering wheel angle calibration	05007	Steering wheel angle sensor calibration
05008	Steering wheel angle sensor programming	06001	Bleeding
07001	Initialisation of auto-adaptation	07002	Initialisation of the autoadaptive values
07003	Initialise auto-adaptives	07004	Initialising the autoadaptives
07005	Manual configuration	07006	Air Flow Sensor Replacement
07007	Classification of the 4 injectors	07008	Differential pressure sensor
07009	Egr electrovalve	07010	Electric EGR valve replacement
07011	Filling of the additive reservoir	07012	Flowmeter
07013	High pressure pump	07014	Injector 1 classification
07015	Injector 2 classification	07016	Injector 3 classification
07017	Injector 4 classification	07018	Pairing
07019	Replacement Of 4 Injectors	07020	Replacement of injector 1
07021	Replacement of injector 2	07022	Replacement of injector 3
07023	Replacement of injector 4	07050	Replacement of the additive reservoir, of the pump or of the pipes
07051	Replacement of the differential pressure sensor	07052	Replacement Of The High Pressure Pump Or The Flow Regulation Valve
07053	Replacement Of The Turbo	07054	Turbo
07055	Forced regeneration, vehicle moving	07056	Change of engine block without the flowmeter
07057	Checking the immobiliser code in the engine management ecu	07058	Replacement of the cooling fan
07059	Replacement of the diesel high pressure rail	07060	Replacement of the engine block and cylinder head with the flowmeter
07080	Replacement of the fuel flow regulator	07081	Replacement of the particle emission filter differential pressure sensor
07082	Initialisation of the 4 diesel injectors	07083	Initialisation of diesel injector 1
07084	Initialisation of diesel injector 2	07085	Initialisation of diesel injector 3
07086	Initialisation of diesel injector 4	07087	Change of air mixer

Index	Specil Function Name	Index	Specil Function Name
07088	Change of ras (turbo air cooler) by-pass	07089	Replacement of the oxygen sensor
07090	Change of EGR valve	07091	Change of engine block with the flowmeter
07092	Replacement of the ancillaries drive belt	07093	Replacement of the cylinder head
07094	Replacement of the EGR exchanger	07095	Replacement of the exhaust manifold
07096	Replacement Of The Particle Filter	08000	EGR mixer butterfly replacement
08001	Replacement of the egr doser butterfly and replacement of the egr doser by-pass butterfly	08002	Priming of the additive system if replacing parts (additive reservoir, pump or pipes)
08003	Initialisation of the additive level when filling or replacing the additive reservoir	08004	Injector characterisation IMA 4 pts
08005	Injector characterisation IMA 5 pts	08006	Initialisation of the air flow sensor
08007	Initialisation of the EGR butterfly	08008	Initialisation of the EGR valve
08009	Initialisation of the engine ECU	08010	Initialisation of the turbocharger 2 turbine valve (VT2)
08011	O2 sensor initialisation	08012	Replacement of the turbocharger turbine valve 2
08013	Replacement of the exhaust gas recycling valve	08014	Replacement Of The Impeller Block
08015	Replacement Of The Cylinder Block Bearing	08016	Replacement of the EGR exchanger by-pass
08017	Replacement Of The Flowmeter	08018	Replacement Of The Engine Block Without The Flowmeter
08019	Replacement Of The Exchanger Of The Exhaust Gas Recycling Solenoid	08020	Egr Valve Programming
08021	Initialisation Of The Air Mixer	08022	Initialisation Of The Oxygen Sensor
08023	Change of high pressure pump with its fuel flow regulator	08024	Replacement of the power accumulator or of the voltage retaining device
08025	Replacement of the reversible alternator	08026	Temporary reactivation of the stop and start function (for a maximum distance of 10 km)
08027	Accelerator pedal sensor	08028	Control unit
08029	Fuel pump	08050	Injectors
08051	Motorised throttle unit	08052	Oxygen sensors
08053	Canister discharge electrovalve	08054	Catalytic converter
08055	Check the timing adjustment	08056	Fuel pressure regulation electrovalve
08057	Fuel HP pump	08058	Inlet camshaft dephaser
08059	Inlet camshaft dephasing electrovalve	08060	Inlet pressure sensor
08061	Rail pressure sensor	08062	Upstream and downstream oxygen sensors
08063	Camshaft phase sensor	08064	Timing
08065	Inlet and exhaust camshaft dephaser	08066	Variable valve lift motor
08067	Variable valve lift system position sensor	08068	Cylinder reference sensor
08069	Write VIN	08070	Configuration of the quantity of additive present in the particle emission filter
08071	Top up diesel additive tank	08072	Initialising of the active damper
08073	Interrogation of the status of the active damper function	08074	Reactivation of the function
08075	Satellites	08076	Front airbags
08077	Pre-tensioners	08078	Side air bags
08079	Locking	08080	Unlocking
08081	Configuration of the detection peak	08082	Thatcham mode configuration
08083	Vehicle configuration	08084	Identification of the configuration
08085	Accelerator pedal initialisation	08086	Oil wear counter
08087	Reading of the oil wear counter	08088	Programming of the neutral position
08089	Replacement of the automatic gearbox and its ECU	08090	Replacement of the automatic gearbox oil
08091	Replacement of the automatic gearbox without its	08092	Semi-automatic configuration
08093	Writing to oil wear counter	08094	Replacement of the ECU without the automatic
08095	Depressurisation of the hydraulic circuit	08096	Pressurise the hydraulic circuit
08097	Bleeding of the hydraulic circuit	08098	Gearbox programming
08099	Removal/refitting or replacement of the gearbox ecu	08200	Replacement of the hydraulic clutch bearing
08201	Check of the gearbox control actuator oil level	08202	Draining of the gearbox control actuator oil
08203	Removal/refitting or replacement of a gearbox control actuator position sensor	08204	Removal/refitting or replacement of the electropump assembly
08205	Removal/refitting or replacement of the gearbox control actuator	08206	Removal/refitting or replacement of a solenoid valve or of the pressure sensor
08207	Removal/refitting or replacement of the control actuator reservoir or of the accumulator	08208	Removal/refitting or replacement of the electropump assembly electric motor
08209	Removal/refitting or replacement of the clutch cover or of the clutch disc	08210	Removal/refitting or replacement of the gearbox
08211	Replacement of the gear lever	08212	Replacement of the paddles at the steering wheel
08213	Read / write counters	08214	Vehicle height sensor programming
08250	Audio parameter configuration	08251	Configuration of the Hands Free Kit

Index	Specil Function Name	Index	Specil Function Name
08252	Configuration of the audio parameters	08253	Configuration of the instrument panel
08254	Customer configuration	08255	Orientation of infrared sensors
08256	Erasing sensor addresses	08257	Sensor programming
08258	Sensor programming check	08259	Erasing of the customisable position programmed by the motorised tailgate
08260	Erasing of the motorised tailgate programming	08261	Programming of the motorised tailgate customisable position
08262	Reinitialisation of the motor's thermal protection	08263	Personalisation menu configuration
08264	Overall check of the sensors	08265	Antenna configuration
08266	Radio configuration	08267	VIN code
08268	Different configuration for the 16 levels	08269	Identical configuration for the 16 levels
08270	Configuration of vehicle options	08271	VIN configuration
08272	Configuration of client services	08273	Vehicle reference height adjustment
08274	Depressurise	08275	Programming of the heights
08300	Tyre above specification	08301	Bleeding of the hydraulic block ABS MK100
08302	Calibration of the gyrometer/accelerometre sensor	08303	Replacement of the ECU ABS
08304	Configuration of the screen	08305	Illumination table/button lighting level
08306	Illumination table/screen lighting level	08307	Check of the detection of a hands-free remote control by the front left door handle aerial
08308	Check of the detection of a hands-free remote control by the front right door handle aerial	08309	Check of the detection of a hands-free remote control by the boot external aerial
08310	Check of the detection of a hands-free remote control inside the vehicle (dashboard)	08311	Check of the detection of a hands-free remote control inside the vehicle (central armrest)
08312	Check of the detection of a hands-free remote control inside the vehicle's boot	08313	Check of the detection of a hands-free remote control located outside the vehicle
08314	Check of the detection of a hands-free remote control inside the vehicle (inside front and boot)	08315	Filling of the additive reservoir or pouch
08316	High Pressure Pump Replacement	08317	Replacement of the turbo
08318	Change To The Air Flowmeter	08319	Injector 1 replacement
08320	Injector 2 replacement	08321	Injector 3 replacement
08322	Injector 4 replacement	08323	Replacement Of 4 Injectors
08324	Programming Of The Quantity Of Additive Remaining In The Reservoir	08325	Setting of the gearbox actuator to the removal position
08326	Setting of the gearbox actuator to the fitting position	08327	Sequence of programming operations
08328	Clutch actuators programming operations	08329	Gearbox actuator programming operations
08330	Initilisation of the gearbox actuator	08331	Replacement of the piloted manual gearbox and of the piloted manual gearbox actuators
08332	Replacement of the gearbox	08333	Replacement of the gearbox actuator
08334	Replacement of the gear lever	08335	Replacement of the clutch
08336	Replacement of the clutch actuator	08337	Counters
08338	Repalcing the gearbox ECU	08339	Replacement of the piloted manual gearbox and of the piloted manual gearbox ECU
08340	Replacement of the vacuum pump	08341	Replacement of the additive tank
08342	Configuration of the intrusion alarm siren	08343	Replacement of the motorised butterfly housing
08344	Replacement of the acclerator pedal	08345	Replacement of injectors
08346	Engine speed sensor programming procedure	08347	Learninig pairing
08348	All the engine management ECU programmed auto-adaptive values	08349	Vacuum pump
08350	Inlet camshaft dephaser solenoid valve		
20022	alarm	20608	Replacement of the brake pads.
20327	heating/ventilation	20611	Replacement of the camshaft
20738	rewriting of the unlocking code	20612	Replacement of the catalytic converter
20818	turbo	20616	Replacement of the clutch mechanism or disc
20774	-Step 2 : replacement of parts	20617	Replacement of the clutch proportional sensor
20000	607 with CAN architecture	20615	Replacement of the clutches
20001	607 with VAN architecture	20619	Replacement of the cylinder block
20002	81 ESP	20620	Replacement of the cylinder block bearing
20003	Accelerator pedal	20621	Replacement of the cylinder head
20004	Accelerator pedal initialisation	20623	Replacement of the cylinder head with the air flow sensor
20005	Accelerator pedal sensor	20622	Replacement of the cylinder head without the air flow sensor
20007	Activation of Stop and Start(new vehicle)	20624	Replacement of the deNOx catalytic converter

Index	Specil Function Name	Index	Specil Function Name
20006	Activation of emergency and assistance services	20625	Replacement of the deNOx system reservoir, gauge-pump module or pipes
20008	Activation of the electric vacuum pump diagnostics strategy	20626	Replacement of the diesel additive reservoir, of the pump or of the pipes
20009	Activation of the simulation of the Distance Alert function	20627	Replacement of the diesel high pressure rail
20010	Activation of the speed limiter buzzer	20628	Replacement of the diesel injection at exhaust dosing pump
20011	Additive assembly replacement (bag tank + pump)	20629	Replacement of the differential pressure sensor
20012	Additive circuit pipe and pump replacement	20630	Replacement of the drive train interface ECU
20013	Additive tank top up or replacement (low additive level LED illuminated)	20641	Replacement of the electric drive machine or of the reversible alternator (learning)
20014	After-sales particulate emission filter repair operation	20642	Replacement of the electric parking brake (FSE) left-hand actuator
20015	Air conditioning or cruise control replacement	20643	Replacement of the electric parking brake (FSE) right-hand actuator
20017	Air distribution motor, driver's side	20644	Replacement of the electric pump
20018	Air distribution motor, passenger's side	20645	Replacement of the electric steering lock(Left hand drive)
20020	Air flow sensor replacement	20646	Replacement of the electric steering lock(Right hand drive)
20021	Air inlet and recycling motor	20647	Replacement of the electric vacuum pump
20024	Alarm configuration	20648	Replacement of the electropump assembly electric motor
20025	Alarm with anti-lift module	20649	Replacement of the engine block
20028	Alignment of the ECU configuration with the configuration entered in the BSI	20650	Replacement of the engine block and cylinder head with the flowmeter
20027	Alignment of the distance alert radar	20651	Replacement of the engine block without the flowmeter
20029	All the engine management ECU programmed auto-adaptive values	20653	Replacement of the engine flywheel
20031	Arduous maintenance schedule	20654	Replacement of the engine management ECU
20032	Autocalibration of the torque sensor	20655	Replacement of the engine management ECU and of the immobiliser and locking management module
20034	Automatic gearbox and automatic gearbox ECU replacement	20657	Replacement of the exchanger of the exhaust gas recycling solenoid valve
20035	Automatic headlamp dip function test	20658	Replacement of the exhaust camshaft dephaser
20036	Automatic setting of all of the reduction motors	20659	Replacement of the exhaust camshaft dephasing solenoid valve
20038	BDMC China version	20660	Replacement of the exhaust gas recycling valve
20040	Bleeding of the clutch	20661	Replacement of the exhaust manifold
20047	Built-in Systems Interface (BSI) replacement	20662	Replacement of the flowmeter
20048	CO2 adjustment	20663	Replacement of the fuel flow regulator
20050	CALIBRATION	20667	Replacement of the gear lever
20107	CO2 reading.	20668	Replacement of the gear selection actuator
20146	CONTROL FUNCTION	20664	Replacement of the gearbox
20049	Cable tensioning	20665	Replacement of the gearbox actuator
20053	Calibration of the longitudinal and lateral acceleration sensor	20666	Replacement of the gearbox differential housing
20054	Calibration of the nominal value of the accelerometer	20669	Replacement of the hands-free (Entry and start) unit
20055	Calibration of the steering wheel angle sensor.	20670	Replacement of the high pressure pump
20056	Calibration of the yaw speed sensor	20671	Replacement of the high pressure pump or of the fuel flow regulator
20051	Calibration/decalsibration of the steering wheel angle sensor	20672	Replacement of the high pressure pump or the flow regulation valve
20057	Camshaft phase sensor	20673	Replacement of the hydraulic clutch bearing
20058	Canister discharge electrovalve	20674	Replacement of the ignition switch supplied with new keys
20060	Capacity of the additive bag tank	20675	Replacement of the ignition switch supplied with new keys with replacement of the electric traction supervision and built-in systems interface ECUs

Index	Specil Function Name	Index	Specil Function Name
20063	Change of EGR valve	20676	Replacement of the ignition switch supplied with new keys with replacement of the engine and immobiliser ECUs
20067	Change of RAS (turbo air cooler) by-pass	20678	Replacement of the immobiliser ECU
20062	Change of air mixer	20677	Replacement of the immobiliser control module and locking
20065	Change of engine block with the flowmeter	20679	Replacement of the impeller block
20064	Change of engine block without the flowmeter	20680	Replacement of the inlet camshaft dephaser
20066	Change of high pressure pump with its fuel flow regulator	20681	Replacement of the inlet camshaft dephasing solenoid valve
20068	Change to the air flowmeter	20682	Replacement of the knock sensor
20069	Changing the engine ECU	20683	Replacement of the low pressure fuel pump, of the fuel filter or of the pipes
20072	Check of the automatic gearbox oil pressure	20684	Replacement of the low pressure pump
20073	Check of the coded engine immobiliser code in the BSI	20685	Replacement of the motorised butterfly housing
20074	Check of the coded engine immobiliser code in the built-in systems interface	20686	Replacement of the multiplexed additive adding pump
20075	Check of the detection of a hands-free remote control by the boot external aerial	20687	Replacement of the multiplexed additive adding pump / additive reservoir pair
20076	Check of the detection of a hands-free remote control by the front left door handle aerial	20688	Replacement of the neutral sensor
20077	Check of the detection of a hands-free remote control by the front right door handle aerial	20689	Replacement of the non BioFlex engine management ECU
20078	Check of the detection of a hands-free remote control inside the vehicle (central armrest)	20691	Replacement of the oil pressure accumulator
20079	Check of the detection of a hands-free remote control inside the vehicle (dashboard)	20693	Replacement of the paddles at the steering wheel
20080	Check of the detection of a hands-free remote control inside the vehicle (inside front and boot)	20695	Replacement of the particle emission filter differential pressure sensor
20081	Check of the detection of a hands-free remote control inside the vehicle's boot	20698	Replacement of the piloted manual gearbox and of the piloted manual gearbox ECU
20082	Check of the detection of a hands-free remote control located outside the vehicle	20697	Replacement of the piloted manual gearbox and of the piloted manual gearbox actuators
20083	Check of the pairing of the hands-free remote controls to the hands-free unit	20699	Replacement of the power accumulator or of the voltage retaining device
20084	Check of the programming of the wheel transmitter modules	20700	Replacement of the precatalyser
20085	Check the timing adjustment	20701	Replacement of the proportional brake switch
20070	Checking the immobiliser code in the engine management ECU	20702	Replacement of the rear left motorised brake caliper
20071	Checking the oil level of the gearbox control actuator	20703	Replacement of the rear right motorised brake caliper
20086	Choice of maintenance schedule	20704	Replacement of the reduction gear
20087	Circumference of the wheels	20705	Replacement of the reduction gear park finger
20091	Cleaning or replacement of the particle filter	20706	Replacement of the reservoir, of the gauge - pump module, of the deNOx system pipes or of the urea injector
20092	Cleaning the EGR exchanger bypass	20707	Replacement of the reversible alternator
20093	Cleaning the EGR valve	20710	Replacement of the turbo
20094	Clearing of a hands-free identifier	20711	Replacement of the turbocharger
20096	Clearing the keys	20712	Replacement of the turbocharger or of the turbocharger position sensor
20097	Clearing the nominal value of the accelerometer	20713	Replacement of the turbocharger position sensor
20098	Clutch actuator	20716	Replacement of the urea injector
20100	Clutch and gearbox actuator programming	20717	Replacement of the vacuum pump
20102	Clutch cycle counter	20718	Replacement or filling of the diesel additive tank
20104	Clutch pedal position sensor calibration	20721	Replacements of the throttle housing, of the accelerator pedal sensor, of the injectors, of the oxygen sensors
20106	Clutch sensor	20728	Reset the limits of the rear RH and LH seats
20110	Configuration of CD player	20731	Reset to zero of the counter for the number of restarts

Index	Specil Function Name	Index	Specil Function Name
20111	Configuration of display modes	20732	Reset to zero of the counter for the number of restarts (Stop and start and hybrid)
20114	Configuration of other services	20733	Reset to zero of the data from the particle filter
20128	Configuration of the DVD player geographical zone	20734	Restore supply after impact
20134	Configuration of the MENU button on the steering wheel with fixed central controls	20735	Retrieval of the security code
20143	Configuration of the VIN code	20736	Return to the factory configuration
20117	Configuration of the amount of additive in the particle filter	20741	Roof closing control
20122	Configuration of the characterisation of diesel injector 1	20742	Roof opening control
20125	Configuration of the detection peak	20743	Routine
20129	Configuration of the hands-free kit	20745	SEAT BACK FUNCTION
20131	Configuration of the intrusion alarm siren	20746	SEAT FUNCTION
20139	Configuration of the screen	20747	SEAT TYPE
20141	Configuration of the telematic unit logo	20748	SEMI-AUTOMATIC CONFIGURATION
20145	Configuration with displaying of the parameters	20770	STEERING COLUMN FUNCTION
20144	Configuration-Vehicle configuration	20777	STEP *: Conditions to be met prior to maintenance
20150	Counters	20778	STEP *: Measurement of the traction battery state of health
20154	Customer personalisation	20779	STEP *: Preparation to measure the traction battery state of health
20157	Cylinder head replacement	20749	Sensor programming
20158	Cylinder head replacement or fuel injector learning	20750	Sensor programming check
20159	Cylinder reference sensor	20756	Setting of the clutch actuator to the removal/refitting position
20163	DCM3.5	20763	Signalling - Exterior lighting - Interior lighting
20164	DCM3.5 BR2	20764	Slope sensor calibration
20165	DCM3.5 HY	20765	Spare part
20162	DCM34_P	20766	Speed limiter that can be set
20166	DCM6.2	20767	Start again
20167	DCN2	20768	Starter
20213	DV6 TED4 (9HX/9HY/9HZ/9HV)	20772	Steering wheel angle sensor programming
20206	DV6ATED4 (9HX)	20773	Step 1 : Discharging and charging of the traction battery
20208	DV6ATED4 (9HX) ou DV6TED4 (9HY ou 9HZ ou 9HV)	20775	Step 2 : TBTracabilite de la maintenance
20207	DV6ATED4 (9HX/9HY/9HZ/9HV)	20776	Step 2 : Traceability of the maintenance
20209	DV6ATED4, DV6TED4 (9HX/9HY/9HZ/9HV)	20780	Supply
20210	DV6AUTED4 - 90CV	20781	Switching off of the audio-navigation ECU
20211	DV6BTED4 - 75 CV	20797	TBT Proc閘ure d'initialisation automatique du capteur de pluie et de luminosit?
20212	DV6BUTED4 - 75CV	20782	TBTActionneur de bo類 de vitesses
20214	DV6TED4 (9HY or 9HZ)	20783	TBTApprentissage du radar d'aide au freinage automatique en cas de risque de collision (en
20215	DV6TED4 (9HZ) / DW12TED4(4HX) / DW10B 4HP20 (RHR) automatic gear box / DT17 (UHZ)	20784	TBTBut閑 d'embrayage
20216	DV6TED4 or 9HZ or 9HV (9HY)	20785	TBTCalibrage du capteur de couple de direction assist閑
20218	DW10 ATED (RHS/RHZ)	20786	TBTCapteur de passage de vitesse
20219	DW10ATED (RHZ)	20787	TBTCapteur de s閑ction
20217	DW10ATED4 (RHS) (RHZ)	20788	TBTChangement d閑it m閑re seul
20222	DW10B TED4 (RHR)	20790	TBTCoffre (ext閑ieur)
20221	DW10BTED4 (RHJ / RHR) Manual gearbox	20789	TBTCoffre arri閑e (int閑ieur)
20223	DW10BTED4 (RHR) except 6 gear automatic gearbox	20791	TBTEW10A
20224	DW10BTED4 (RHR) sauf Bo類 de Vitesse Automatique 6 rapports	20792	TBTFourchette d'embrayage
20220	DW10BTED4 AM6 (RHR-RHL) automatic gear box	20793	TBTLa transmission
20225	DW10TD (RHY)	20794	TBTM閑anisme d'embrayage
20168	Deactivation / Activation of the tyre under-inflation detection function	20795	TBTPorte arri閑e (ext閑ieur)

Index	Specil Function Name	Index	Specil Function Name
20169	Deactivation of the automatic application of the electric parking brake function	20796	TBTPorte arriere (interieur)
20170	Deactivation of the dynamic stability control and traction control systems	20798	TBTRemplacement du calculateur de freinage automatique en cas de risque de collision (en
20171	Deactivation of the electric vacuum pump diagnostics strategy	20799	TBTRemplacement du pare-brise
20172	Deactivation of the speed limiter buzzer	20800	TBTU5JP4 (NFU ou N6A) avec Boite de Vitesse Automatique
20173	Deactivation of the vehicle speed governor	20801	TBTU5JP4 (NFU ou N6A) avec Boite de Vitesse Manuelle
20175	Decalibration of the longitudinal and lateral acceleration sensor	20802	TBTVilebrequin
20176	Declaration SIM card	20803	TBTVolant moteur
20177	Defragmenting of the ESP ECU memory	20817	TU5JP4 (NFU or N6A)
20182	Depressurise	20816	TU5JP4 (NFU/N6A)
20183	Detection of the reduction geared motor stops	20805	Temporary reactivation of the Stop and Start function
20184	Diesel additive ECU	20806	Temporary reactivation of the Stop and Start function (for a maximum distance of 10 km)
20185	Diesel injectors programming procedure	20807	Test of the blind spot monitoring function
20190	Disconnection of the ancillaries battery	20808	Timing
20194	Do you want to finish the configuration procedure?	20809	Top up diesel additive tank
20195	Do you want to start again?	20812	Traction battery ECU replacement procedure
20196	Do you want to start configuring this ECU again?	20811	Traction battery cells management ECU (CMU) replacement procedure
20198	Draining and filling of the urea solution reservoir	20813	Traction battery replacement procedure
20199	Draining of the hydraulic pressure accumulator	20815	Transverse acceleration sensor programming
20200	Draining the oil from the gearbox control actuator	20819	Turbo programming information
20226	ECU replacement	20821	Unit configuration
20232	ECUs with permanent faults	20823	Upstream and downstream oxygen sensors
20227	ECUs operating mode	20824	Upstream or downstream oxygen sensor
20228	ECUs present	20844	VIN code
20229	ECUs triggered and communicating	20846	VIN code (Vehicle Identification Number)
20230	ECUs with communication faults	20845	VIN code (vehicle identification)
20231	ECUs with faults in their memory	20847	VIN configuration
20233	EDC15C2	20827	Variable valve lift motor
20234	EDC17C10	20828	Variable valve lift system position sensor
20235	EDC17C10_BR2	20840	Vehicle Speed limitation
20236	EDC17C60	20829	Vehicle configuration
20237	EDC17CP42	20830	Vehicle definition-Equipment
20238	EGR butterfly replacement	20831	Vehicle height sensor programming
20239	EGR electrovalve	20835	Vehicle options
20240	EGR electrovalve replacement	20836	Vehicle reference height adjustment
20241	EGR mixer butterfly replacement	20838	Vehicle servicing profile
20242	EGR programming information	20841	Vehicle with hands-free starting
20243	EGR valve * learning (Close to the bumper)	20843	View and print all configuration parameters
20244	EGR valve * learning (passenger compartment side	20848	Visibility
20245	EGR valve programming	20850	Washing and wiping
20263	EP6 (5FW)	20851	Windscreen replacement procedure
20264	EP6 DT (5FX)	20854	Work on the timing belt
20269	ESP8.1	20856	Write VIN
20270	ESP8_BOSCH	20855	Write counters.
20271	ESP_EBC_440_CAN	20857	Write wheel transmitter module identifiers by references
20272	ESP_EBC_440_K	20858	Writing of the alcohol content
20273	ET3 (KFU)	20859	Writing of the ethanol content
20275	EU 11	20861	Yes
20274	EU10	20016	air distribution motor

Index	Specil Function Name	Index	Specil Function Name
20277	EW10A (RFJ/RFH)	20019	air entry and recycling motor
20276	EW10A or RFH (RFJ)	20023	alarm : China version
20278	EW10J4 or RFR (RFN)	20026	alignment of the configuration of the ECUs with the configuration configured in the BSI
20279	EW10J4S (RFK)	20030	antenna configuration
20247	Electric parking brake calibration	20033	automatic addressing and Programming of all of the engines
20248	Electric pump unit replacement	20037	battery replacement
20249	Emergency call	20039	bleeding
20250	Emergency voice number for emergency calls	20042	bleeding of the hydraulic block ABS MK100
20251	Engine	20043	bleeding of the hydraulic block ASR8.0
20253	Engine DW10BTED4 with 6-speed automatic gearbox (RHR)	20044	bleeding of the hydraulic block ESP MK100
20255	Engine management ECU	20041	bleeding of the hydraulic block abs8.0.
20256	Engine oil change interval (normal servicing)	20045	bleeding of the hydraulic circuit
20257	Engine oil change interval (normal servicing) outside Europe	20046	body height sensor replacement
20258	Engine oil change intervals (arduous servicing) Europe	20052	calibration of the gyrometer/accelerometer sensor
20259	Engine oil change intervals (arduous servicing) outside Europe	20059	canister purge electrovalve
20262	Engine speed sensor target	20061	catalytic converter
20265	Erase Juke-Box files	20088	classification of injector 1
20266	Erasing of the motorised tailgate programming	20090	classification of the injectors
20268	Erasing sensor addresses	20089	classification of the 4 injectors
20280	Exit from "Factory" mode	20095	clearing of personal data
20281	Fault reading	20099	clutch actuator programming operations
20282	Fill additive tank	20101	clutch counters
20283	Filling of the additive reservoir	20103	clutch cycles counters
20284	Filling of the additive reservoir or pouch	20105	clutch pedal sensor calibration
20286	Filling of the diesel additive tank	20109	configuration * Indicator Light Unit
20287	Filling of the integrated hydraulic unit with LDS (Steering and Suspension Fluid)	20108	configuration by the technical assistance platform (secure)
20288	Filling of the urea reservoir	20112	configuration of ECU
20290	First activation of the electric parking brake	20115	configuration of Thatcham mode
20291	Flowmeter	20113	configuration of options
20292	Follow the procedure for replacing the built-in systems interface ?	20135	configuration of the Nomad unit
20294	Forced regeneration of the particle filter, vehicle moving	20116	configuration of the air conditioning
20295	Forced regeneration of the particle filter, vehicle stationary	20118	configuration of the anti-lift function
20296	Forced regeneration, vehicle moving	20119	configuration of the audio functions
20297	Forced regeneration, vehicle stationary	20120	configuration of the audio parameters
20298	Forced starting by starter mode	20121	configuration of the automatic service numbers
20299	Forcing of stopping	20123	configuration of the customer options
20302	Front airbags	20124	configuration of the customer services
20303	Front left hand wheel	20126	configuration of the display
20304	Front right hand wheel	20127	configuration of the display options
20306	Fuel HP pump	20130	configuration of the instrument panel
20308	Fuel pressure regulation electrovalve	20132	configuration of the language
20310	Fuel sender / pump module	20133	configuration of the manual service number
20311	Full realignment of the programmed values	20136	configuration of the other functions
20316	Gear lever and steering wheel gear shift control counters	20137	configuration of the personalisation menu
20317	Gear lever counter	20138	configuration of the quantity of additive present in the particle emission filter
20312	Gearbox actuator position sensor replacement	20140	configuration of the telematic unit
20314	Gearbox counters	20142	configuration of the vehicle options

Index	Specil Function Name	Index	Specil Function Name
20315	Gearbox programming	20147	control unit
20319	General information on configuration-Summary of ECUs present on the multiplex networks	20148	control unit MMT
20321	HDI_4N13	20149	control unit replacement
20322	HDI_SID807	20151	customer configuration
20323	HDI_SID807_BR2	20152	customer language configuration
20324	HDI_SID807_J3J4	20153	customer options
20320	Hands-free identifiers recording procedure	20155	customisation customer
20325	Head restraint functions	20156	cylinder compression tests
20326	Head-up Display ECU configuration	20160	data communication ECU
20329	High Pressure pump or flow regulation valve	20161	data communication ECU * code *
20330	High pressure pump replacement	20174	deadlocking
20392	INT option	20178	deinstallation of the CD changer
20332	Identification	20179	depressurisation
20333	Identification of the configuration	20180	depressurisation of the air reservoir
20334	Illumination table / Button lighting level	20181	depressurisation of the hydraulic circuit
20335	Illumination table / Lighting level of the buttons in night mode	20186	different configuration for the 16 levels
20336	Illumination table / Lighting level of the screen in night mode	20187	differential pressure sensor
20337	Illumination table / Screen lighting level	20188	differential pressure sensor programming
20338	Immediate activation of the radar	20189	direction of the vehicle
20339	Inhibit	20191	display and printing of all the configuration parameters
20340	Initialisation	20192	display and printing of all the parameters
20342	Initialisation of diesel injector 1	20193	distribution motor
20343	Initialisation of the 4 diesel injectors	20197	do you wish to continue the configuration of the other ECUs?
20344	Initialisation of the additive level when filling or replacing the additive reservoir	20201	driver information
20345	Initialisation of the air conditioning presence information	20202	driver's mixing motor
20348	Initialisation of the air mixer	20203	driver's side: Second phase of diagnostics of the Folding/Unfolding function
20349	Initialisation of the autoadaptive values	20204	driving assistance
20350	Initialisation of the clutch	20205	driving comfort
20351	Initialisation of the clutches	20246	electric EGR valve replacement
20356	Initialisation of the engine ECU	20254	engine ECU configuration
20358	Initialisation of the hands-free control unit (Coded immobiliser code and hands-free remote	20252	engine compartment
20359	Initialisation of the hydraulic block	20260	engine speed sensor
20360	Initialisation of the oxygen sensor	20261	engine speed sensor or engine speed sensor target
20361	Initialisation of the radar	20267	erasing of the secondary wheels
20363	Initialisation of the rear LH and RH seat limits	20285	filling of the diesel additive adding reservoir
20364	Initialisation of the rear LH seat limits	20289	filling the air reservoir
20365	Initialisation of the rear RH seat limits	20293	forced regeneration of the particle emission filter
20366	Initialisation of the transmissibility value	20300	forcing of the customer mode
20367	Initialisation of the turbocharger 2 turbine valve (VT2)	20301	forcing of the fuel gauging data
20370	Initialise auto-adaptives	20305	fuel additive level zero reset
20371	Initialising of the active damper	20307	fuel information
20374	Injector 1 replacement	20309	fuel pump
20375	Injector 1 replacement (timing side)	20313	gearbox actuator programming operations
20376	Injector 4 replacement (flywheel side)	20318	general configuration information ? Assessment of the ECUs present on the multiplexed networks
20379	Injector classification	20328	high pressure pump
20380	Injector replacement	20331	identical configuration for the 16 levels
20381	Injectors	20341	initialisation of auto-adaptation

Index	Specil Function Name	Index	Specil Function Name
20382	Injectors classification	20352	initialisation of the ECU supply
20383	Inlet and exhaust camshaft dephaser	20353	initialisation of the EGR butterfly
20384	Inlet and exhaust camshaft dephasing electrovalve	20354	initialisation of the EGR solenoid valve
20385	Inlet and exhaust camshaft phase sensor	20355	initialisation of the EGR valve
20386	Inlet camshaft dephaser	20346	initialisation of the air flow sensor
20387	Inlet camshaft dephaser solenoid valve	20347	initialisation of the air flow sensor following replacement of the engine ECU
20388	Inlet camshaft dephasing electrovalve	20357	initialisation of the gearbox actuator
20389	Inlet pressure sensor	20362	initialisation of the rain and brightness sensor
20391	Interrogation of the status of the active damper function	20368	initialisation of the wheel transmitter modules
20393	J34P	20369	initialisation of the wheel transmitter modules *1
20394	Juke-Box configuration	20372	initialising the autoadaptives
20395	Key programming	20373	injection ECU
20410	LUMBAR SUPPORT FUNCTION	20377	injector characterisation IMA 4 pts
20396	Lateral airbags	20378	injector characterisation IMA 5 pts
20397	Learning	20390	installation of the CD changer
20403	Lighting - Signalling	20399	learning /pairing
20405	Location of the CD player	20398	learning of the gearbox gate
20407	Locking / Unlocking	20400	left hand drive
20408	Longitudinal acceleration sensor calibration	20401	lighting and signalling
20409	Longitudinal acceleration sensor programming	20404	lighting table
20421	ME745	20402	lighting-signaling
20422	ME749	20406	locking
20426	MED17_4_2	20414	maintenance limit
20428	MEV17_4_2	20416	manual configuration of service numbers
20429	MEVD17_4_2	20417	manual configuration of the voice mail
20431	MIVEC	20420	matching of the engine ECU
20433	MM6KP	20425	mechanical parts of the transmission
20411	Maintenance	20430	miscellaneous
20412	Maintenance indicator reset	20432	mixing motor
20413	Maintenance indicators	20436	motorised throttle housing
20415	Manual configuration	20441	no component available
20418	Master cylinder pressure sensor programming	20442	normal locking
20419	Matching	20445	number to call the voice mail
20423	Mechanical components relating to engine combustion	20448	oil wear counter
20424	Mechanical parts linked with the engine combustion (cylinder head, valve, ...)	20451	on the driver' s side
20427	Mercosur	20452	opening
20435	Mode Park	20453	openings and access
20434	Mode customer	20455	orientation of the infra-red sensors
20437	Motorised throttle unit	20459	over specification tyre fit
20438	Motorised throttle valve programming	20457	overall check of the sensors
20439	Multifunction video camera replacement procedure	20458	overhaul
20440	NO	20463	pack repair
20443	Normal maintenance schedule	20464	pairing
20444	Normal operation	20472	passenger compartment (front)
20446	O2 sensor initialisation	20473	passenger compartment (rear)
20447	Oil parameter reinitialisation	20474	passenger' s mixing motor
20450	Oil wear counter zero reset	20475	passenger' s side
20449	Oil wear counters reset	20481	pre-tensioners
20454	Ordinary SMS centre number	20480	pressurise the hydraulic circuit
20456	Other speed	20482	priming of the additive adding circuit
20460	Oxygen sensor	20486	programming by default
20461	Oxygen sensor replacement	20489	programming of keys

Index	Specil Function Name	Index	Specil Function Name
20462	Oxygen sensors	20492	programming of the built-in systems interface (Engine immobiliser code and keys)
20465	Pairing of the ESP ECU and engine management ECU	20493	programming of the clutch biting point
20466	Parc shunt configuration status	20496	programming of the heights
20467	Partial realignment of the programmed values	20500	programming of the keys and remote controls
20468	Particle filter regeneration	20504	programming of the sensors
20469	Particle filter replacement	20505	programming of the stops of the turbocharger
20470	Particulate filter replacement	20506	programming of the sunroof
20471	Passenger compartment	20508	programming of the total quantity of additive
20476	Passive safety	20509	programming of the total quantity of additive injected into the particulate emission filter
20477	Personalisation menu configuration	20510	programming of the type of headlamp
20478	Positioning of the gear selection actuator in neutral	20519	radio configuration
20479	Pressurisation	20524	reactivation of the function * damper
20483	Priming of the additive system if replacing parts (additive reservoir, pump or pipes)	20535	read the component tachometers
20484	Profile of the adaptive servicing system	20527	reading and clearing of faults
20485	Program and match	20528	reading of the BSI faults
20515	Program remote controls	20530	reading of the change of fit parameters
20487	Programming / matching	20531	reading of the injector codes (IMA)
20488	Programming of electronic keys	20532	reading of the oil wear counter
20490	Programming of positions P, R, N, D	20533	reading of the recognition
20491	Programming of the actuators	20539	rear LH
20494	Programming of the first or second set of wheel transmitter modules	20540	rear LH mixer motor
20495	Programming of the hands-free remote controls	20541	rear RH
20497	Programming of the high frequency remote controls	20542	rear RH mixer motor
20498	Programming of the immobiliser code for the electric steering lock	20547	recovery of the ECU data
20499	Programming of the injectors	20555	reinitialisation of the recognition
20501	Programming of the motorised tailgate	20558	repair
20502	Programming of the neutral position	20722	replace the flywheel
20503	Programming of the quantity of additive remaining in the reservoir	20726	replace the sensor *
20507	Programming of the total additive quantity	20560	replacement control unit MED17.4.2
20511	Programming of the vehicle chassis number (VIN) in the hands-free unit	20563	replacement control unit MEVD17.4.2
20512	Programming parameters	20559	replacement control unit MED17.4
20514	Programming the EGR valve stops	20561	replacement control unit MEV17.4
20513	Programming the air mixer stops	20562	replacement control unit MEV17.4.2
20516	Protection - Accesses - Mechanical assistance	20572	replacement of hydraulic block
20517	Pump or pipe replacement	20573	replacement of injector 1
20518	Put in fitting / removal position	20578	replacement of starter motor
20546	RECORDING THE COUNTERS	20579	replacement of the 4 injectors
20520	Rail pressure sensor	20609	replacement of the BSI
20521	Rail pressure sensor replacement	20610	replacement of the Built-In Systems Interface (BSI)
20553	Re-initialisation of the configuration	20632	replacement of the ECU ABS
20522	Reactivation	20633	replacement of the ECU ABS / ESP
20523	Reactivation of automatic application of the electric parking brake	20634	replacement of the ECU without the automatic gearbox
20525	Reactivation of the traction battery ECU following a crash	20635	replacement of the EGR doser butterfly and replacement of the EGR doser by-pass butterfly
20537	Read / Write counters	20696	replacement of the Particle Emission Filter (PEF)
20526	Read configuration	20580	replacement of the accelerator pedal
20536	Read wheel transmitter module identifiers	20582	replacement of the accessories drive belt
20529	Reading of the calibration status of the steering wheel angle	20583	replacement of the additive adding ECU

Index	Specil Function Name	Index	Specil Function Name
20534	Reading the mileage at the last programming	20591	replacement of the air flow sensor
20538	Rear left hand wheel	20594	replacement of the ancillaries battery
20543	Rear right hand wheel	20597	replacement of the ancillaries drive belt
20544	Reconnection of the ancillaries battery	20600	replacement of the automatic gearbox and its ECU
20545	Recording of the electric steering lock communication code in the hands-free (Entry and start) unit	20604	replacement of the automatic gearbox oil
20548	Regeneration of the deNOx catalytic converter	20605	replacement of the automatic gearbox without its
20549	Rehabilitation of the distance alert radar following the detection of an impact (if fitted as	20613	replacement of the clutch
20550	Reinitialisation	20614	replacement of the clutch actuator
20551	Reinitialisation configuration *	20618	replacement of the cooling fan
20552	Reinitialisation following replacement of the urea injector	20652	replacement of the engine ECU
20554	Reinitialisation of the deNOx system faults	20692	replacement of the oxygen sensor
20556	Removal/refitting or replacement of the reservoir of the control actuator or the accumulator	20694	replacement of the particle emission filter
20557	Removing - refitting the gear selection actuator	20709	replacement of the timing belt
20723	Replace the gearbox actuator.	20714	replacement of the turbocharger turbine valve 2
20724	Replace the hybrid management ECU	20715	replacement of the turbocharging pressure regulation valve
20725	Replace the hydraulic block	20719	replacement particle emission filter
20574	Replacement of injectors	20720	replacement parts
20564	Replacement of 4 injectors	20727	replacing the gearbox ECU
20568	Replacement of a solenoid valve (clutch, selection, engagement) or of the pressure sensor	20729	resetting of the paddles at the steering wheel counter
20565	Replacement of all of the hands-free identifiers	20730	resetting to zero of the total quantity of additive injected from the reservoir (2nd counter)
20566	Replacement of an actuator	20737	return to the original fit
20567	Replacement of an old hands-free identifier with a new hands-free identifier	20739	right hand drive
20569	Replacement of cylinder 1 injector (timing side)	20740	roll-over hoops
20570	Replacement of cylinder 4 injector (flywheel side)	20744	satellites
20571	Replacement of diesel high pressure pump	20751	sequence of programming operations
20575	Replacement of one of the actuator position sensors	20752	sequence of programming operations (gearbox and clutch actuators)
20576	Replacement of one or more petrol injectors	20753	service action
20577	Replacement of one or several injectors	20754	service indicator
20607	Replacement of the BioFlex engine management ECU	20755	service information reset
20631	Replacement of the ECU.	20757	setting of the gearbox actuator to the fitting position
20636	Replacement of the EGR exchanger	20758	setting of the gearbox actuator to the removal position
20637	Replacement of the EGR exchanger bypass	20759	setting the service distance to zero
20638	Replacement of the EGR valve	20760	setting to the gearbox actuator fitting position
20639	Replacement of the EGR valve or of the EGR exchange bypass	20761	setting to the gearbox actuator removal position
20640	Replacement of the EGR valve stepper motor	20762	side air bags
20656	Replacement of the ESP ECU	20769	status of the backup battery
20690	Replacement of the NOx sensor	20771	steering wheel angle calibration
20708	Replacement of the Stop and Start ECU	20804	telematics screen
20581	Replacement of the accelerometer-gyrometer sensor	20810	towbar
20585	Replacement of the additive ECU	20814	transition from Factory mode to Customer mode
20584	Replacement of the additive adding pump pipes -> Diesel reservoir or replacement of the pump gauge module	20820	tyre above specification
20586	Replacement of the additive pump	20822	unlocking
20587	Replacement of the additive pump or cerine	20825	vacuum pump
20589	Replacement of the additive reservoir or additive pouch, of the pump or of the pipes	20826	valve programming check

Index	Specil Function Name	Index	Specil Function Name
20588	Replacement of the additive reservoir, of the pump or of the pipes	20832	vehicle in Cabriolet position
20590	Replacement of the additive tank	20833	vehicle in coupú position
20592	Replacement of the air mixer	20834	vehicle mileage
20593	Replacement of the alternator	20837	vehicle serial number (VIN)
20595	Replacement of the ancillaries battery current sensor	20839	vehicle specification - Equipment
20596	Replacement of the ancillaries battery or of the ancillaries battery current sensor	20842	vehicle with mechanical key
20598	Replacement of the ancillary drive belt	20849	warnings
20599	Replacement of the automatic gearbox	20852	without limitation
20601	Replacement of the automatic gearbox ECU	20853	without speed limiter
20602	Replacement of the automatic gearbox electric control ECU	20860	writing to oil wear counter
20603	Replacement of the automatic gearbox electric control ECU and the gear selection actuator	20862	zeroing of the service indicator
20606	Replacement of the battery		