

MaxiSys_Daihatsu_V1.32 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
- This function is not supported. ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
YRV	'00/08 (H12/08) - '00/12 (H12/12)	A/B	●	●	○	○	○	
YRV	'00/08 (H12/08) - '00/12 (H12/12)	A/T	●	●	○	●	●	
YRV	'00/08 (H12/08) - '00/12 (H12/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
YRV	'00/08 (H12/08) - '00/12 (H12/12)	DVS	●	●	○	●	●	Check Mode; Signal Check
YRV	'00/08 (H12/08) - '00/12 (H12/12)	EFI	●	●	○	●	●	
YRV	'00/08 (H12/08) - '00/12 (H12/12)	KFS	●	●	○	○	○	
YRV	'00/12 (H12/12) -	A/B	●	●	○	○	○	
YRV	'00/12 (H12/12) -	A/T	●	●	○	●	●	
YRV	'00/12 (H12/12) -	ABS	●	●	○	●	●	Check Mode; Signal Check
YRV	'00/12 (H12/12) -	DVS	●	●	○	●	●	Check Mode; Signal Check
YRV	'00/12 (H12/12) -	EFI	●	●	○	●	●	
YRV	'00/12 (H12/12) -	KFS	●	●	○	●	●	
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	A/B	●	●	○	○	○	
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	ABS	●	●	○	●	●	
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	EFI	●	●	○	●	●	
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	KFS	●	●	○	●	●	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	A/B	●	●	○	○	○	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	A/T	●	●	○	●	●	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	ABS	●	●	○	●	●	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	EFI	●	●	○	●	●	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	KFS	●	●	○	●	●	
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	A/B	●	●	○	○	○	
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	A/T	●	●	○	●	●	
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	ABS	●	●	○	●	●	Check Mode; Signal Check
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	EFI	●	●	○	●	●	
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	KFS	●	●	○	●	●	
Atrai Wagon	'05/05 (H17/05) - '07/08 (H19/08)	A/B	●	●	○	○	○	Check Mode
Atrai Wagon	'05/05 (H17/05) - '07/08 (H19/08)	ABS	●	●	○	●	●	Check Mode; Signal Check
Atrai Wagon	'05/05 (H17/05) - '07/08 (H19/08)	EFI	●	●	○	●	●	
Atrai Wagon	'07/08 (H19/08) - '10/08 (H22/08)	A/B	●	●	○	○	○	Check Mode
Atrai Wagon	'07/08 (H19/08) - '10/08 (H22/08)	ABS	●	●	○	●	●	Check Mode; Signal Check

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Atrai Wagon	'07/08 (H19/08)–'10/08 (H22/08)	EFI	●	●	○	●	●	
Atrai 7 / Hijet Gran Cargo	'00/07 (H12/07)–'01/06 (H13/06)	A/B	●	●	○	○	○	
Atrai 7 / Hijet Gran Cargo	'00/07 (H12/07)–'01/06 (H13/06)	A/T	●	●	○	●	●	
Atrai 7 / Hijet Gran Cargo	'00/07 (H12/07)–'01/06 (H13/06)	ABS	●	●	○	●	●	Check Mode; Signal Check
Atrai 7 / Hijet Gran Cargo	'00/07 (H12/07)–'01/06 (H13/06)	EFI	●	●	○	●	●	
Atrai 7 / Hijet Gran Cargo	'00/07 (H12/07)–'01/06 (H13/06)	KFS	●	●	○	○	○	
Atrai 7 / Hijet Gran Cargo	'01/06 (H13/06)–	A/B	●	●	○	○	○	
Atrai 7 / Hijet Gran Cargo	'01/06 (H13/06)–	A/T	●	●	○	●	●	
Atrai 7 / Hijet Gran Cargo	'01/06 (H13/06)–	ABS	●	●	○	●	●	Check Mode; Signal Check
Atrai 7 / Hijet Gran Cargo	'01/06 (H13/06)–	EFI	●	●	○	●	●	
Atrai 7 / Hijet Gran Cargo	'01/06 (H13/06)–	KFS	●	●	○	●	●	
Artis	'00/03 (H12/03)–'01/09 (H13/09)	A/B	●	●	○	○	○	
Artis	'00/03 (H12/03)–'01/09 (H13/09)	ABS	●	●	○	●	●	Check Mode; Signal Check
Artis	'00/03 (H12/03)–'01/09 (H13/09)	EFI&A/T	●	●	○	●	●	Check Mode; Signal Check
Artis	'01/09 (H13/09)–'06/01 (H18/01)	A/B	●	●	○	○	○	
Artis	'01/09 (H13/09)–'06/01 (H18/01)	ABS	●	●	○	●	●	Check Mode; Signal Check
Artis	'01/09 (H13/09)–'06/01 (H18/01)	EFI&A/T	●	●	○	●	●	Check Mode; Signal Check
Artis	'06/01 (H18/01)–'09/01 (H21/01)	EFI&A/T	●	●	○	●	●	Check Mode; Signal Check
Artis	'09/01 (H21/01)–	EFI&A/T	●	●	○	●	●	Check Mode; Signal Check
Esse	'05/12 (H17/12)–'10/04 (H22/04)	A/B	●	●	○	○	○	Check Mode
Esse	'05/12 (H17/12)–'10/04 (H22/04)	ABS	●	●	○	●	●	Check Mode; Signal Check
Esse	'05/12 (H17/12)–'10/04 (H22/04)	EFI	●	●	○	●	●	
Esse	'10/04 (H22/04)–	A/B	●	●	○	○	○	Check Mode
Esse	'10/04 (H22/04)–	ABS	●	●	○	●	●	Check Mode; Signal Check
Esse	'10/04 (H22/04)–	EFI	●	●	○	●	●	
Optimistic	'00/10 (H12/10)–'01/06 (H13/06)	A/B	●	●	○	○	○	
Optimistic	'00/10 (H12/10)–'01/06 (H13/06)	A/T	●	●	○	●	●	
Optimistic	'00/10 (H12/10)–'01/06 (H13/06)	ABS	●	●	○	●	●	
Optimistic	'00/10 (H12/10)–'01/06 (H13/06)	CVT	●	●	○	●	○	
Optimistic	'00/10 (H12/10)–'01/06 (H13/06)	DVS	●	●	○	●	●	
Optimistic	'00/10 (H12/10)–'01/06 (H13/06)	EFI	●	●	○	●	●	
Optimistic	'01/06 (H13/06)–'02/08 (H14/08)	A/B	●	●	○	○	○	
Optimistic	'01/06 (H13/06)–'02/08 (H14/08)	A/T	●	●	○	●	●	
Optimistic	'01/06 (H13/06)–'02/08 (H14/08)	ABS	●	●	○	●	●	
Optimistic	'01/06 (H13/06)–'02/08 (H14/08)	CVT	●	●	○	●	○	
Optimistic	'01/06 (H13/06)–'02/08 (H14/08)	DVS	●	●	○	●	●	
Optimistic	'01/06 (H13/06)–'02/08 (H14/08)	EFI	●	●	○	●	●	
Coup	'06/05 (H18/05)–'10/07 (H22/07)	A/B	●	●	○	○	○	Check Mode

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Coup	'06/05 (H18/05) - '10/07 (H22/07)	A/T	●	●	○	●	●	
Coup	'06/05 (H18/05) - '10/07 (H22/07)	ABS	●	●	○	●	●	Check Mode; Signal Check
Coup	'06/05 (H18/05) - '10/07 (H22/07)	EFI	●	●	○	●	●	
Coup	'06/05 (H18/05) - '10/07 (H22/07)	EPS	●	●	○	●	○	Check Mode; Signal Check
Coup	'06/05 (H18/05) - '10/07 (H22/07)	KFS	●	●	○	●	●	
Coup	'06/05 (H18/05) - '10/07 (H22/07)	VSC	●	●	○	●	●	Check Mode; Signal Check
Coup	'10/07 (H22/07) -	A/B	●	●	○	○	○	Check Mode
Coup	'10/07 (H22/07) -	A/T	●	●	○	●	●	
Coup	'10/07 (H22/07) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Coup	'10/07 (H22/07) -	EFI	●	●	○	●	●	
Coup	'10/07 (H22/07) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Coup	'10/07 (H22/07) -	KFS	●	●	○	●	●	
Coup	'10/07 (H22/07) -	VSC	●	●	○	●	●	Check Mode; Signal Check
Copen	'02/06 (H14/06) - '10/08 (H22/08)	A/B	●	●	○	○	○	
Copen	'02/06 (H14/06) - '10/08 (H22/08)	A/T	●	●	○	●	●	
Copen	'02/06 (H14/06) - '10/08 (H22/08)	ABS	●	●	○	●	●	Check Mode; Signal Check
Copen	'02/06 (H14/06) - '10/08 (H22/08)	EFI	●	●	○	●	●	
Copen	'02/06 (H14/06) - '10/08 (H22/08)	IMB	●	●	○	○	○	
Copen	'02/06 (H14/06) - '10/08 (H22/08)	Roof	●	●	○	●	●	
Copen	'10/08 (H22/08) -	A/B	●	●	○	○	○	
Copen	'10/08 (H22/08) -	A/T	●	●	○	●	●	
Copen	'10/08 (H22/08) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Copen	'10/08 (H22/08) -	EFI	●	●	○	●	●	
Copen	'10/08 (H22/08) -	IMB	●	●	○	○	○	
Copen	'10/08 (H22/08) -	Roof	●	●	○	●	●	
Storia	'00/05 (H12/05) - '00/12 (H12/12)	A/B	●	●	○	○	○	
Storia	'00/05 (H12/05) - '00/12 (H12/12)	A/T	●	●	○	●	●	
Storia	'00/05 (H12/05) - '00/12 (H12/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Storia	'00/05 (H12/05) - '00/12 (H12/12)	DVS	●	●	○	●	●	Check Mode; Signal Check
Storia	'00/05 (H12/05) - '00/12 (H12/12)	EFI	●	●	○	●	●	
Storia	'00/05 (H12/05) - '00/12 (H12/12)	KFS	●	●	○	○	○	
Storia	'00/12 (H12/12) - '02/01 (H14/01)	A/B	●	●	○	○	○	
Storia	'00/12 (H12/12) - '02/01 (H14/01)	A/T	●	●	○	●	●	
Storia	'00/12 (H12/12) - '02/01 (H14/01)	ABS	●	●	○	●	●	Check Mode; Signal Check
Storia	'00/12 (H12/12) - '02/01 (H14/01)	DVS	●	●	○	●	●	Check Mode; Signal Check
Storia	'00/12 (H12/12) - '02/01 (H14/01)	EFI	●	●	○	●	●	
Storia	'00/12 (H12/12) - '02/01 (H14/01)	KFS	●	●	○	●	●	
Storia	'02/01 (H14/01) - '02/08 (H14/08)	A/B	●	●	○	○	○	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Storia	'02/01 (H14/01) - '02/08 (H14/08)	A/T	●	●	○	●	●	
Storia	'02/01 (H14/01) - '02/08 (H14/08)	ABS	●	●	○	●	●	Check Mode; Signal Check
Storia	'02/01 (H14/01) - '02/08 (H14/08)	DVS	●	●	○	●	●	Check Mode; Signal Check
Storia	'02/01 (H14/01) - '02/08 (H14/08)	EFI	●	●	○	●	●	
Storia	'02/01 (H14/01) - '02/08 (H14/08)	KFS	●	●	○	●	●	
Storia	'02/08 (H14/08) -	A/B	●	●	○	○	○	
Storia	'02/08 (H14/08) -	A/T	●	●	○	●	●	
Storia	'02/08 (H14/08) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Storia	'02/08 (H14/08) -	DVS	●	●	○	●	●	Check Mode; Signal Check
Storia	'02/08 (H14/08) -	EFI	●	●	○	●	●	
Storia	'02/08 (H14/08) -	KFS	●	●	○	●	●	
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	A/B	●	●	○	○	○	Check Mode
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	ABS	●	●	○	●	●	Check Mode; Signal Check
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	ACC	●	●	○	○	○	
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	CVT	●	●	○	●	●	
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	EFI	●	●	○	●	●	
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	EPS	●	●	○	●	○	Check Mode; Signal Check
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	ITC	●	●	○	●	●	
Sonica	'06/06 (H18/06) - '09/04 (H21/04)	KFS	●	●	○	●	●	
Tanto	'03/11 (H15/11) - '05/06 (H17/06)	A/B	●	●	○	○	○	Check Mode
Tanto	'03/11 (H15/11) - '05/06 (H17/06)	A/T	●	●	○	●	●	
Tanto	'03/11 (H15/11) - '05/06 (H17/06)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto	'03/11 (H15/11) - '05/06 (H17/06)	EFI	●	●	○	●	●	
Tanto	'03/11 (H15/11) - '05/06 (H17/06)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	A/B	●	●	○	○	○	Check Mode
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	A/T	●	●	○	●	●	
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	EFI	●	●	○	●	●	
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'05/06 (H17/06) - '07/12 (H19/12)	KFS	●	●	○	●	●	
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	A/B	●	●	○	○	○	Check Mode
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	CVT	●	●	○	●	●	
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	EFI	●	●	○	●	●	
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	ITC	●	●	○	●	●	
Tanto	'07/12 (H19/12) - '09/12 (H21/12)	KFS	●	●	○	●	●	
Tanto	'09/12 (H21/12) - '10/10 (H22/10)	A/B	●	●	○	○	○	Check Mode

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Tanto	'09/12 (H21/12) -' 10/10 (H22/10)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto	'09/12 (H21/12) -' 10/10 (H22/10)	CVT	●	●	○	●	●	
Tanto	'09/12 (H21/12) -' 10/10 (H22/10)	EFI	●	●	○	●	●	
Tanto	'09/12 (H21/12) -' 10/10 (H22/10)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'09/12 (H21/12) -' 10/10 (H22/10)	ITC	●	●	○	●	●	
Tanto	'09/12 (H21/12) -' 10/10 (H22/10)	KFS	●	●	○	●	●	
Tanto	'10/10 (H22/10) -' 11/06 (H23/06)	A/B	●	●	○	○	○	Check Mode
Tanto	'10/10 (H22/10) -' 11/06 (H23/06)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto	'10/10 (H22/10) -' 11/06 (H23/06)	CVT	●	●	○	●	●	
Tanto	'10/10 (H22/10) -' 11/06 (H23/06)	EFI	●	●	○	●	●	
Tanto	'10/10 (H22/10) -' 11/06 (H23/06)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'10/10 (H22/10) -' 11/06 (H23/06)	ITC	●	●	○	●	●	
Tanto	'10/10 (H22/10) -' 11/06 (H23/06)	KFS	●	●	○	●	●	
Tanto	'11/06 (H23/06) -' 11/12 (H23/12)	A/B	●	●	○	○	○	Check Mode
Tanto	'11/06 (H23/06) -' 11/12 (H23/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto	'11/06 (H23/06) -' 11/12 (H23/12)	CVT	●	●	○	●	●	
Tanto	'11/06 (H23/06) -' 11/12 (H23/12)	EFI	●	●	○	●	●	
Tanto	'11/06 (H23/06) -' 11/12 (H23/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'11/06 (H23/06) -' 11/12 (H23/12)	ITC	●	●	○	●	●	
Tanto	'11/06 (H23/06) -' 11/12 (H23/12)	KFS	●	●	○	●	●	
Tanto	'11/12 (H23/12) -' 12/05 (H24/05)	A/B	●	●	○	○	○	Check Mode
Tanto	'11/12 (H23/12) -' 12/05 (H24/05)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto	'11/12 (H23/12) -' 12/05 (H24/05)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Tanto	'11/12 (H23/12) -' 12/05 (H24/05)	CVT	●	●	○	●	●	
Tanto	'11/12 (H23/12) -' 12/05 (H24/05)	eco IDLE	●	●	○	●	●	
Tanto	'11/12 (H23/12) -' 12/05 (H24/05)	EFI	●	●	○	●	●	
Tanto	'11/12 (H23/12) -' 12/05 (H24/05)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'11/12 (H23/12) -' 12/05 (H24/05)	ITC	●	●	○	●	●	
Tanto	'11/12 (H23/12) -' 12/05 (H24/05)	KFS	●	●	○	●	●	
Tanto	'12/05 (H24/05) -	A/B	●	●	○	○	○	Check Mode
Tanto	'12/05 (H24/05) -	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Tanto	'12/05 (H24/05) -	CVT	●	●	○	●	●	
Tanto	'12/05 (H24/05) -	eco IDLE	●	●	○	●	●	
Tanto	'12/05 (H24/05) -	EFI	●	●	○	●	●	
Tanto	'12/05 (H24/05) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'12/05 (H24/05) -	ITC	●	●	○	●	●	
Tanto	'12/05 (H24/05) -	KFS	●	●	○	●	●	
Tanto Exe	'09/12 (H21/12) -' 11/07 (H23/07)	A/B	●	●	○	○	○	Check Mode

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Tanto Exe	'09/12 (H21/12) -' 11/07 (H23/07)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto Exe	'09/12 (H21/12) -' 11/07 (H23/07)	CVT	●	●	○	●	●	
Tanto Exe	'09/12 (H21/12) -' 11/07 (H23/07)	EFI	●	●	○	●	●	
Tanto Exe	'09/12 (H21/12) -' 11/07 (H23/07)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto Exe	'09/12 (H21/12) -' 11/07 (H23/07)	ITC	●	●	○	●	●	
Tanto Exe	'09/12 (H21/12) -' 11/07 (H23/07)	KFS	●	●	○	●	●	
Tanto Exe	'11/06 (H23/06) -' 11/12 (H23/12)	A/B	●	●	○	○	○	Check Mode
Tanto Exe	'11/06 (H23/06) -' 11/12 (H23/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto Exe	'11/06 (H23/06) -' 11/12 (H23/12)	CVT	●	●	○	●	●	
Tanto Exe	'11/06 (H23/06) -' 11/12 (H23/12)	EFI	●	●	○	●	●	
Tanto Exe	'11/06 (H23/06) -' 11/12 (H23/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto Exe	'11/06 (H23/06) -' 11/12 (H23/12)	ITC	●	●	○	●	●	
Tanto Exe	'11/06 (H23/06) -' 11/12 (H23/12)	KFS	●	●	○	●	●	
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	A/B	●	●	○	○	○	Check Mode
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	CVT	●	●	○	●	●	
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	eco IDLE	●	●	○	●	●	
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	EFI	●	●	○	●	●	
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	ITC	●	●	○	●	●	
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	KFS	●	●	○	●	●	
Tanto Exe	'12/05 (H24/05) -	A/B	●	●	○	○	○	Check Mode
Tanto Exe	'12/05 (H24/05) -	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Tanto Exe	'12/05 (H24/05) -	CVT	●	●	○	●	●	
Tanto Exe	'12/05 (H24/05) -	eco IDLE	●	●	○	●	●	
Tanto Exe	'12/05 (H24/05) -	EFI	●	●	○	●	●	
Tanto Exe	'12/05 (H24/05) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto Exe	'12/05 (H24/05) -	ITC	●	●	○	●	●	
Tanto Exe	'12/05 (H24/05) -	KFS	●	●	○	●	●	
Terios	'00/05 (H12/05) -' 05/12 (H17/12)	A/B	●	●	○	○	○	
Terios	'00/05 (H12/05) -' 05/12 (H17/12)	A/T	●	●	○	●	●	
Terios	'00/05 (H12/05) -' 05/12 (H17/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Terios	'00/05 (H12/05) -' 05/12 (H17/12)	EFI	●	●	○	●	●	
Terios	'00/05 (H12/05) -' 05/12 (H17/12)	EPS	●	●	○	●	○	Check Mode
Terios Kid	'10/07 (H22/07) -	A/B	●	●	○	○	○	
Terios Kid	'10/07 (H22/07) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Terios Kid	'10/07 (H22/07) -	EFI	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Terios Kid	' 10/07 (H22/07)–	EPS	●	●	○	●	○	Check Mode
Terios Kid	' 10/07 (H22/07)–	KFS	●	●	○	●	●	
Terios Kid / Rukia	' 00/11 (H12/11)–' 01/11 (H13/11)	A/B	●	●	○	○	○	
Terios Kid / Rukia	' 00/11 (H12/11)–' 01/11 (H13/11)	ABS	●	●	○	●	●	Check Mode; Signal Check
Terios Kid / Rukia	' 00/11 (H12/11)–' 01/11 (H13/11)	EFI	●	●	○	●	●	
Terios Kid / Rukia	' 00/11 (H12/11)–' 01/11 (H13/11)	KFS	●	●	○	●	●	
Terios Kid / Rukia	' 01/11 (H13/11)–' 10/07 (H22/07)	A/B	●	●	○	○	○	
Terios Kid / Rukia	' 01/11 (H13/11)–' 10/07 (H22/07)	ABS	●	●	○	●	●	Check Mode; Signal Check
Terios Kid / Rukia	' 01/11 (H13/11)–' 10/07 (H22/07)	EFI	●	●	○	●	●	
Terios Kid / Rukia	' 01/11 (H13/11)–' 10/07 (H22/07)	EPS	●	●	○	●	○	Check Mode
Terios Kid / Rukia	' 01/11 (H13/11)–' 10/07 (H22/07)	KFS	●	●	○	●	●	
Naked	' 00/10 (H12/10)–' 01/06 (H13/06)	A/B	●	●	○	○	○	
Naked	' 00/10 (H12/10)–' 01/06 (H13/06)	A/T	●	●	○	●	●	
Naked	' 00/10 (H12/10)–' 01/06 (H13/06)	ABS	●	●	○	●	●	
Naked	' 00/10 (H12/10)–' 01/06 (H13/06)	DVS	●	●	○	●	●	
Naked	' 00/10 (H12/10)–' 01/06 (H13/06)	EFI	●	●	○	●	●	
Naked	' 00/10 (H12/10)–' 01/06 (H13/06)	KFS	●	●	○	●	●	
Naked	' 01/06 (H13/06)–' 02/12 (H14/12)	A/B	●	●	○	○	○	
Naked	' 01/06 (H13/06)–' 02/12 (H14/12)	A/T	●	●	○	●	●	
Naked	' 01/06 (H13/06)–' 02/12 (H14/12)	ABS	●	●	○	●	●	
Naked	' 01/06 (H13/06)–' 02/12 (H14/12)	DVS	●	●	○	●	●	
Naked	' 01/06 (H13/06)–' 02/12 (H14/12)	EFI	●	●	○	●	●	
Naked	' 01/06 (H13/06)–' 02/12 (H14/12)	KFS	●	●	○	●	●	
Naked	' 02/12 (H14/12)–' 04/04 (H16/04)	A/B	●	●	○	○	○	
Naked	' 02/12 (H14/12)–' 04/04 (H16/04)	A/T	●	●	○	●	●	
Naked	' 02/12 (H14/12)–' 04/04 (H16/04)	ABS	●	●	○	●	●	Check Mode; Signal Check
Naked	' 02/12 (H14/12)–' 04/04 (H16/04)	DVS	●	●	○	●	●	
Naked	' 02/12 (H14/12)–' 04/04 (H16/04)	EFI	●	●	○	●	●	
Naked	' 02/12 (H14/12)–' 04/04 (H16/04)	KFS	●	●	○	●	●	
Hijet / Atrai	' 01/01 (H13/01)–' 01/05 (H13/05)	A/B	●	●	○	○	○	
Hijet / Atrai	' 01/01 (H13/01)–' 01/05 (H13/05)	ABS	●	●	○	●	●	
Hijet / Atrai	' 01/01 (H13/01)–' 01/05 (H13/05)	EFI	●	●	○	●	●	
Hijet / Atrai	' 01/01 (H13/01)–' 01/05 (H13/05)	EPS	●	●	○	●	○	
Hijet / Atrai	' 01/01 (H13/01)–' 01/05 (H13/05)	KFS	●	●	○	●	●	
Hijet / Atrai	' 01/05 (H13/05)–' 01/09 (H13/09)	A/B	●	●	○	○	○	
Hijet / Atrai	' 01/05 (H13/05)–' 01/09 (H13/09)	ABS	●	●	○	●	●	
Hijet / Atrai	' 01/05 (H13/05)–' 01/09 (H13/09)	EFI	●	●	○	●	●	
Hijet / Atrai	' 01/05 (H13/05)–' 01/09 (H13/09)	EPS	●	●	○	●	○	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Hijet / Atrai	'01/05 (H13/05) -' 01/09 (H13/09)	KFS	●	●	○	●	●	
Hijet / Atrai	'01/09 (H13/09) -' 01/10 (H13/10)	A/B	●	●	○	○	○	
Hijet / Atrai	'01/09 (H13/09) -' 01/10 (H13/10)	ABS	●	●	○	●	●	
Hijet / Atrai	'01/09 (H13/09) -' 01/10 (H13/10)	EFI	●	●	○	●	●	
Hijet / Atrai	'01/09 (H13/09) -' 01/10 (H13/10)	EPS	●	●	○	●	○	
Hijet / Atrai	'01/09 (H13/09) -' 01/10 (H13/10)	KFS	●	●	○	●	●	
Hijet / Atrai	'01/10 (H13/10) -' 02/01 (H14/01)	A/B	●	●	○	○	○	
Hijet / Atrai	'01/10 (H13/10) -' 02/01 (H14/01)	ABS	●	●	○	●	●	
Hijet / Atrai	'01/10 (H13/10) -' 02/01 (H14/01)	EFI	●	●	○	●	●	
Hijet / Atrai	'01/10 (H13/10) -' 02/01 (H14/01)	EPS	●	●	○	●	○	Check Mode
Hijet / Atrai	'01/10 (H13/10) -' 02/01 (H14/01)	KFS	●	●	○	●	●	
Hijet / Atrai	'02/01 (H14/01) -' 04/12 (H16/12)	A/B	●	●	○	○	○	
Hijet / Atrai	'02/01 (H14/01) -' 04/12 (H16/12)	A/T	●	●	○	●	●	
Hijet / Atrai	'02/01 (H14/01) -' 04/12 (H16/12)	ABS	●	●	○	●	●	
Hijet / Atrai	'02/01 (H14/01) -' 04/12 (H16/12)	EFI	●	●	○	●	●	
Hijet / Atrai	'02/01 (H14/01) -' 04/12 (H16/12)	EPS	●	●	○	●	○	Check Mode
Hijet / Atrai	'02/01 (H14/01) -' 04/12 (H16/12)	KFS	●	●	○	●	●	
Hijet / Atrai	'04/12 (H16/12) -' 10/08 (H22/08)	A/B	●	●	○	○	○	Check Mode
Hijet / Atrai	'04/12 (H16/12) -' 10/08 (H22/08)	A/T	●	●	○	●	●	
Hijet / Atrai	'04/12 (H16/12) -' 10/08 (H22/08)	ABS	●	●	○	●	●	
Hijet / Atrai	'04/12 (H16/12) -' 10/08 (H22/08)	ABS	●	●	○	●	●	Check Mode; Signal Check
Hijet / Atrai	'04/12 (H16/12) -' 10/08 (H22/08)	EFI	●	●	○	●	●	
Hijet / Atrai	'04/12 (H16/12) -' 10/08 (H22/08)	EPS	●	●	○	●	○	Check Mode
Hijet / Atrai	'04/12 (H16/12) -' 10/08 (H22/08)	EPS	●	●	○	●	○	Check Mode; Signal Check
Hijet / Atrai	'10/08 (H22/08) -' 11/11 (H23/11)	A/B	●	●	○	○	○	Check Mode
Hijet / Atrai	'10/08 (H22/08) -' 11/11 (H23/11)	ABS	●	●	○	●	●	
Hijet / Atrai	'10/08 (H22/08) -' 11/11 (H23/11)	ABS	●	●	○	●	●	Check Mode; Signal Check
Hijet / Atrai	'10/08 (H22/08) -' 11/11 (H23/11)	EFI	●	●	○	●	●	
Hijet / Atrai	'10/08 (H22/08) -' 11/11 (H23/11)	EPS	●	●	○	●	○	Check Mode
Hijet / Atrai	'11/11 (H23/11) -	A/B	●	●	○	○	○	Check Mode
Hijet / Atrai	'11/11 (H23/11) -	ABS	●	●	○	●	●	
Hijet / Atrai	'11/11 (H23/11) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Hijet / Atrai	'11/11 (H23/11) -	EFI	●	●	○	●	●	
Hijet / Atrai	'11/11 (H23/11) -	EPS	●	●	○	●	○	Check Mode
Vigo	'06/01 (H18/01) -' 10/07 (H22/07)	A/B	●	●	○	○	○	Check Mode
Vigo	'06/01 (H18/01) -' 10/07 (H22/07)	A/T	●	●	○	●	●	
Vigo	'06/01 (H18/01) -' 10/07 (H22/07)	ABS	●	●	○	●	●	Check Mode; Signal Check
Vigo	'06/01 (H18/01) -' 10/07 (H22/07)	EFI	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Vigo	'06/01 (H18/01)–'10/07 (H22/07)	EPS	●	●	○	●	○	Check Mode; Signal Check
Vigo	'06/01 (H18/01)–'10/07 (H22/07)	KFS	●	●	○	●	●	
Vigo	'06/01 (H18/01)–'10/07 (H22/07)	VSC	●	●	○	●	●	Check Mode; Signal Check
Vigo	'10/07 (H22/07)–	A/B	●	●	○	○	○	Check Mode
Vigo	'10/07 (H22/07)–	A/T	●	●	○	●	●	
Vigo	'10/07 (H22/07)–	ABS	●	●	○	●	●	Check Mode; Signal Check
Vigo	'10/07 (H22/07)–	EFI	●	●	○	●	●	
Vigo	'10/07 (H22/07)–	EPS	●	●	○	●	○	Check Mode; Signal Check
Vigo	'10/07 (H22/07)–	KFS	●	●	○	●	●	
Vigo	'10/07 (H22/07)–	VSC	●	●	○	●	●	Check Mode; Signal Check
Boone	'04/05 (H16/05)–'05/11 (H17/11)	A/B	●	●	○	○	○	Check Mode
Boone	'04/05 (H16/05)–'05/11 (H17/11)	A/T	●	●	○	●	●	
Boone	'04/05 (H16/05)–'05/11 (H17/11)	ABS	●	●	○	●	●	Check Mode; Signal Check
Boone	'04/05 (H16/05)–'05/11 (H17/11)	EFI	●	●	○	●	●	
Boone	'04/05 (H16/05)–'05/11 (H17/11)	EPS	●	●	○	●	○	Check Mode; Signal Check
Boone	'04/05 (H16/05)–'05/11 (H17/11)	KFS	●	●	○	●	●	
Boone	'05/11 (H17/11)–'10/02 (H22/02)	A/B	●	●	○	○	○	Check Mode
Boone	'05/11 (H17/11)–'10/02 (H22/02)	A/T	●	●	○	●	●	
Boone	'05/11 (H17/11)–'10/02 (H22/02)	ABS	●	●	○	●	●	Check Mode; Signal Check
Boone	'05/11 (H17/11)–'10/02 (H22/02)	EFI	●	●	○	●	●	
Boone	'05/11 (H17/11)–'10/02 (H22/02)	EPS	●	●	○	●	○	Check Mode; Signal Check
Boone	'05/11 (H17/11)–'10/02 (H22/02)	KFS	●	●	○	●	●	
Boone	'10/02 (H22/02)–'11/05 (H23/05)	A/B	●	●	○	○	○	Check Mode
Boone	'10/02 (H22/02)–'11/05 (H23/05)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Boone	'10/02 (H22/02)–'11/05 (H23/05)	CVT	●	●	○	●	●	
Boone	'10/02 (H22/02)–'11/05 (H23/05)	EFI	●	●	○	●	●	
Boone	'10/02 (H22/02)–'11/05 (H23/05)	EPS	●	●	○	●	○	Check Mode; Signal Check
Boone	'10/02 (H22/02)–'11/05 (H23/05)	ITC	●	●	○	●	●	
Boone	'10/02 (H22/02)–'11/05 (H23/05)	KFS	●	●	○	●	●	
Boone	'10/02 (H22/02)–'11/05 (H23/05)	Tachometer	●	●	○	●	●	
Boone	'11/05 (H23/05)–'12/06 (H24/06)	A/B	●	●	○	○	○	Check Mode
Boone	'11/05 (H23/05)–'12/06 (H24/06)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Boone	'11/05 (H23/05)–'12/06 (H24/06)	CVT	●	●	○	●	●	
Boone	'11/05 (H23/05)–'12/06 (H24/06)	EFI	●	●	○	●	●	
Boone	'11/05 (H23/05)–'12/06 (H24/06)	EPS	●	●	○	●	○	Check Mode; Signal Check
Boone	'11/05 (H23/05)–'12/06 (H24/06)	ITC	●	●	○	●	●	
Boone	'11/05 (H23/05)–'12/06 (H24/06)	KFS	●	●	○	●	●	
Boone	'11/05 (H23/05)–'12/06 (H24/06)	Tachometer	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Boone	'12/06 (H24/06) -	A/B	●	●	○	○	○	Check Mode
Boone	'12/06 (H24/06) -	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Boone	'12/06 (H24/06) -	CVT	●	●	○	●	●	
Boone	'12/06 (H24/06) -	eco IDLE	●	●	○	●	●	
Boone	'12/06 (H24/06) -	EFI	●	●	○	●	●	
Boone	'12/06 (H24/06) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Boone	'12/06 (H24/06) -	ITC	●	●	○	●	●	
Boone	'12/06 (H24/06) -	KFS	●	●	○	●	●	
Boone	'12/06 (H24/06) -	Tachometer	●	●	○	●	●	
Boone Luminous	'08/12 (H20/12) -	A/B	●	●	○	○	○	Check Mode
Boone Luminous	'08/12 (H20/12) -	A/T	●	●	○	●	●	
Boone Luminous	'08/12 (H20/12) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Boone Luminous	'08/12 (H20/12) -	EFI	●	●	○	●	●	
Boone Luminous	'08/12 (H20/12) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Boone Luminous	'08/12 (H20/12) -	ITC	●	●	○	●	●	
Boone Luminous	'08/12 (H20/12) -	KFS	●	●	○	●	●	
Boone Luminous	'08/12 (H20/12) -	VSC	●	●	○	●	●	Check Mode; Signal Check
Max	'01/10 (H13/10) -	4WD	●	●	○	●	○	
Max	'01/10 (H13/10) -	A/B	●	●	○	○	○	
Max	'01/10 (H13/10) -	A/T	●	●	○	●	●	
Max	'01/10 (H13/10) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Max	'01/10 (H13/10) -	CVT	●	●	○	●	○	
Max	'01/10 (H13/10) -	DVS	●	●	○	●	●	Check Mode; Signal Check
Max	'01/10 (H13/10) -	EFI	●	●	○	●	●	
Max	'01/10 (H13/10) -	KFS	●	●	○	●	●	
Mira	'00/10 (H12/10) -'01/06 (H13/06)	A/B	●	●	○	○	○	
Mira	'00/10 (H12/10) -'01/06 (H13/06)	A/T	●	●	○	●	●	
Mira	'00/10 (H12/10) -'01/06 (H13/06)	ABS	●	●	○	●	●	
Mira	'00/10 (H12/10) -'01/06 (H13/06)	CVT	●	●	○	●	○	
Mira	'00/10 (H12/10) -'01/06 (H13/06)	DVS	●	●	○	●	●	
Mira	'00/10 (H12/10) -'01/06 (H13/06)	EFI	●	●	○	●	●	
Mira	'00/10 (H12/10) -'01/06 (H13/06)	EPS	●	●	○	○	○	Check Mode; Signal Check
Mira	'01/06 (H13/06) -'02/12 (H14/12)	A/B	●	●	○	○	○	
Mira	'01/06 (H13/06) -'02/12 (H14/12)	A/T	●	●	○	●	●	
Mira	'01/06 (H13/06) -'02/12 (H14/12)	ABS	●	●	○	●	●	
Mira	'01/06 (H13/06) -'02/12 (H14/12)	CVT	●	●	○	●	○	
Mira	'01/06 (H13/06) -'02/12 (H14/12)	DVS	●	●	○	●	●	
Mira	'01/06 (H13/06) -'02/12 (H14/12)	EFI	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Mira	'01/06 (H13/06) - '02/12 (H14/12)	EPS	●	●	○	○	○	Check Mode; Signal Check
Mira	'02/12 (H14/12) - '04/12 (H16/12)	A/B	●	●	○	○	○	Check Mode
Mira	'02/12 (H14/12) - '04/12 (H16/12)	A/T	●	●	○	●	●	
Mira	'02/12 (H14/12) - '04/12 (H16/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira	'02/12 (H14/12) - '04/12 (H16/12)	CVT	●	●	○	●	○	
Mira	'02/12 (H14/12) - '04/12 (H16/12)	DVS	●	●	○	●	●	Check Mode; Signal Check
Mira	'02/12 (H14/12) - '04/12 (H16/12)	EFI	●	●	○	●	●	
Mira	'02/12 (H14/12) - '04/12 (H16/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira	'02/12 (H14/12) - '04/12 (H16/12)	KFS	●	●	○	●	●	
Mira	'04/12 (H16/12) - '06/12 (H18/12)	A/B	●	●	○	○	○	Check Mode
Mira	'04/12 (H16/12) - '06/12 (H18/12)	A/T	●	●	○	●	●	
Mira	'04/12 (H16/12) - '06/12 (H18/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira	'04/12 (H16/12) - '06/12 (H18/12)	CVT	●	●	○	●	○	
Mira	'04/12 (H16/12) - '06/12 (H18/12)	DVS	●	●	○	●	●	Check Mode; Signal Check
Mira	'04/12 (H16/12) - '06/12 (H18/12)	EFI	●	●	○	●	●	
Mira	'04/12 (H16/12) - '06/12 (H18/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira	'04/12 (H16/12) - '06/12 (H18/12)	KFS	●	●	○	●	●	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	A/B	●	●	○	○	○	Check Mode
Mira	'06/12 (H18/12) - '08/12 (H20/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira	'06/12 (H18/12) - '08/12 (H20/12)	ACC	●	●	○	○	○	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	CVT	●	●	○	●	●	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	EFI	●	●	○	●	●	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira	'06/12 (H18/12) - '08/12 (H20/12)	ERS	●	●	○	●	●	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	ITC	●	●	○	●	●	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	KFS	●	●	○	●	●	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	Power	●	●	○	●	●	
Mira	'06/12 (H18/12) - '08/12 (H20/12)	VSC	●	●	○	●	●	Check Mode; Signal Check
Mira	'08/12 (H20/12) - '10/04 (H22/04)	A/B	●	●	○	○	○	Check Mode
Mira	'08/12 (H20/12) - '10/04 (H22/04)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira	'08/12 (H20/12) - '10/04 (H22/04)	ACC	●	●	○	○	○	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	CVT	●	●	○	●	●	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	EFI	●	●	○	●	●	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira	'08/12 (H20/12) - '10/04 (H22/04)	ERS	●	●	○	●	●	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	ITC	●	●	○	●	●	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	KFS	●	●	○	●	●	
Mira	'08/12 (H20/12) - '10/04 (H22/04)	Power	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Mira	'08/12 (H20/12) -' 10/04 (H22/04)	VSC	●	●	○	●	●	Check Mode; Signal Check
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	A/B	●	●	○	○	○	Check Mode
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	CVT	●	●	○	●	●	
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	EFI	●	●	○	●	●	
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	ERS	●	●	○	●	●	
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	ITC	●	●	○	●	●	
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	KFS	●	●	○	●	●	
Mira	'11/07 (H23/07) -	A/B	●	●	○	○	○	Check Mode
Mira	'11/07 (H23/07) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira	'11/07 (H23/07) -	CVT	●	●	○	●	●	
Mira	'11/07 (H23/07) -	EFI	●	●	○	●	●	
Mira	'11/07 (H23/07) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira	'11/07 (H23/07) -	ITC	●	●	○	●	●	
Mira	'11/07 (H23/07) -	KFS	●	●	○	●	●	
Mira Ys	'11/09 (H23/09) -	A/B	●	●	○	○	○	Check Mode
Mira Ys	'11/09 (H23/09) -	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Mira Ys	'11/09 (H23/09) -	CVT	●	●	○	●	●	
Mira Ys	'11/09 (H23/09) -	eco IDLE	●	●	○	●	●	
Mira Ys	'11/09 (H23/09) -	EFI	●	●	○	●	●	
Mira Ys	'11/09 (H23/09) -	EPS	●	●	○	●	○	Check Mode
Mira Ys	'11/09 (H23/09) -	ITC	●	●	○	●	●	
Mira Ys	'11/09 (H23/09) -	KFS	●	●	○	●	●	
Mira Ys	'11/09 (H23/09) -	Tachometer	●	●	○	●	●	
Mira Cocoa	'09/08 (H21/08) -' 11/06 (H23/06)	A/B	●	●	○	○	○	Check Mode
Mira Cocoa	'09/08 (H21/08) -' 11/06 (H23/06)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira Cocoa	'09/08 (H21/08) -' 11/06 (H23/06)	CVT	●	●	○	●	●	
Mira Cocoa	'09/08 (H21/08) -' 11/06 (H23/06)	EFI	●	●	○	●	●	
Mira Cocoa	'09/08 (H21/08) -' 11/06 (H23/06)	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira Cocoa	'09/08 (H21/08) -' 11/06 (H23/06)	ITC	●	●	○	●	●	
Mira Cocoa	'09/08 (H21/08) -' 11/06 (H23/06)	KFS	●	●	○	●	●	
Mira Cocoa	'11/06 (H23/06) -' 12/04 (H24/04)	A/B	●	●	○	○	○	Check Mode
Mira Cocoa	'11/06 (H23/06) -' 12/04 (H24/04)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira Cocoa	'11/06 (H23/06) -' 12/04 (H24/04)	CVT	●	●	○	●	●	
Mira Cocoa	'11/06 (H23/06) -' 12/04 (H24/04)	EFI	●	●	○	●	●	
Mira Cocoa	'11/06 (H23/06) -' 12/04 (H24/04)	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira Cocoa	'11/06 (H23/06) -' 12/04 (H24/04)	ITC	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Mira Cocoa	' 11/06 (H23/06) -' 12/04 (H24/04)	KFS	●	●	○	●	●	
Mira Cocoa	' 12/04 (H24/04) -	A/B	●	●	○	○	○	Check Mode
Mira Cocoa	' 12/04 (H24/04) -	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Mira Cocoa	' 12/04 (H24/04) -	CVT	●	●	○	●	●	
Mira Cocoa	' 12/04 (H24/04) -	eco IDLE	●	●	○	●	●	
Mira Cocoa	' 12/04 (H24/04) -	EFI	●	●	○	●	●	
Mira Cocoa	' 12/04 (H24/04) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira Cocoa	' 12/04 (H24/04) -	ITC	●	●	○	●	●	
Mira Cocoa	' 12/04 (H24/04) -	KFS	●	●	○	●	●	
Mira Gino	' 02/08 (H14/08) -' 04/12 (H16/12)	A/B	●	●	○	○	○	
Mira Gino	' 02/08 (H14/08) -' 04/12 (H16/12)	A/T	●	●	○	●	●	
Mira Gino	' 02/08 (H14/08) -' 04/12 (H16/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira Gino	' 02/08 (H14/08) -' 04/12 (H16/12)	EFI	●	●	○	●	●	
Mira Gino	' 04/12 (H16/12) -' 08/12 (H20/12)	A/B	●	●	○	○	○	Check Mode
Mira Gino	' 04/12 (H16/12) -' 08/12 (H20/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira Gino	' 04/12 (H16/12) -' 08/12 (H20/12)	EFI	●	●	○	●	●	
Mira (CNG)	' 08/12 (H20/12) -	A/B	●	●	○	○	○	Check Mode
Mira (CNG)	' 08/12 (H20/12) -	EFI	●	●	○	●	●	
Mira (CNG)	' 08/12 (H20/12) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	' 00/10 (H12/10) -' 01/06 (H13/06)	A/B	●	●	○	○	○	
Move	' 00/10 (H12/10) -' 01/06 (H13/06)	A/T	●	●	○	●	●	
Move	' 00/10 (H12/10) -' 01/06 (H13/06)	ABS	●	●	○	●	●	
Move	' 00/10 (H12/10) -' 01/06 (H13/06)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move	' 00/10 (H12/10) -' 01/06 (H13/06)	CVT	●	●	○	●	○	
Move	' 00/10 (H12/10) -' 01/06 (H13/06)	DVS	●	●	○	●	●	
Move	' 00/10 (H12/10) -' 01/06 (H13/06)	EFI	●	●	○	●	●	
Move	' 00/10 (H12/10) -' 01/06 (H13/06)	KFS	●	●	○	●	●	
Move	' 01/06 (H13/06) -' 01/10 (H13/10)	A/B	●	●	○	○	○	
Move	' 01/06 (H13/06) -' 01/10 (H13/10)	A/T	●	●	○	●	●	
Move	' 01/06 (H13/06) -' 01/10 (H13/10)	ABS	●	●	○	●	●	
Move	' 01/06 (H13/06) -' 01/10 (H13/10)	CVT	●	●	○	●	○	
Move	' 01/06 (H13/06) -' 01/10 (H13/10)	DVS	●	●	○	●	●	
Move	' 01/06 (H13/06) -' 01/10 (H13/10)	EFI	●	●	○	●	●	
Move	' 01/06 (H13/06) -' 01/10 (H13/10)	KFS	●	●	○	●	●	
Move	' 01/10 (H13/10) -' 02/10 (H14/10)	A/B	●	●	○	○	○	
Move	' 01/10 (H13/10) -' 02/10 (H14/10)	A/T	●	●	○	●	●	
Move	' 01/10 (H13/10) -' 02/10 (H14/10)	ABS	●	●	○	●	●	
Move	' 01/10 (H13/10) -' 02/10 (H14/10)	ABS	●	●	○	●	●	Check Mode; Signal Check

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Move	' 01/10 (H13/10) -' 02/10 (H14/10)	CVT	●	●	○	●	○	
Move	' 01/10 (H13/10) -' 02/10 (H14/10)	DVS	●	●	○	●	●	
Move	' 01/10 (H13/10) -' 02/10 (H14/10)	EFI	●	●	○	●	●	
Move	' 01/10 (H13/10) -' 02/10 (H14/10)	KFS	●	●	○	●	●	
Move	' 02/10 (H14/10) -' 04/12 (H16/12)	A/B	●	●	○	○	○	Check Mode
Move	' 02/10 (H14/10) -' 04/12 (H16/12)	A/T	●	●	○	●	●	
Move	' 02/10 (H14/10) -' 04/12 (H16/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move	' 02/10 (H14/10) -' 04/12 (H16/12)	ACC	●	●	○	○	○	
Move	' 02/10 (H14/10) -' 04/12 (H16/12)	CVT	●	●	○	●	○	
Move	' 02/10 (H14/10) -' 04/12 (H16/12)	DVS	●	●	○	●	●	Check Mode; Signal Check
Move	' 02/10 (H14/10) -' 04/12 (H16/12)	EFI	●	●	○	●	●	
Move	' 02/10 (H14/10) -' 04/12 (H16/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	' 02/10 (H14/10) -' 04/12 (H16/12)	KFS	●	●	○	●	●	
Move	' 04/12 (H16/12) -' 06/10 (H18/10)	A/B	●	●	○	○	○	Check Mode
Move	' 04/12 (H16/12) -' 06/10 (H18/10)	A/T	●	●	○	●	●	
Move	' 04/12 (H16/12) -' 06/10 (H18/10)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move	' 04/12 (H16/12) -' 06/10 (H18/10)	ACC	●	●	○	○	○	
Move	' 04/12 (H16/12) -' 06/10 (H18/10)	CVT	●	●	○	●	○	
Move	' 04/12 (H16/12) -' 06/10 (H18/10)	DVS	●	●	○	●	●	Check Mode; Signal Check
Move	' 04/12 (H16/12) -' 06/10 (H18/10)	EFI	●	●	○	●	●	
Move	' 04/12 (H16/12) -' 06/10 (H18/10)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	' 04/12 (H16/12) -' 06/10 (H18/10)	KFS	●	●	○	●	●	
Move	' 06/10 (H18/10) -' 08/12 (H20/12)	A/B	●	●	○	○	○	Check Mode
Move	' 06/10 (H18/10) -' 08/12 (H20/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move	' 06/10 (H18/10) -' 08/12 (H20/12)	ACC	●	●	○	○	○	
Move	' 06/10 (H18/10) -' 08/12 (H20/12)	CVT	●	●	○	●	●	
Move	' 06/10 (H18/10) -' 08/12 (H20/12)	EFI	●	●	○	●	●	
Move	' 06/10 (H18/10) -' 08/12 (H20/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	' 06/10 (H18/10) -' 08/12 (H20/12)	IMG	●	●	○	●	○	
Move	' 06/10 (H18/10) -' 08/12 (H20/12)	ITC	●	●	○	●	●	
Move	' 06/10 (H18/10) -' 08/12 (H20/12)	KFS	●	●	○	●	●	
Move	' 06/10 (H18/10) -' 08/12 (H20/12)	Power	●	●	○	●	●	
Move	' 06/10 (H18/10) -' 08/12 (H20/12)	PSB-D	●	●	○	●	●	
Move	' 06/10 (H18/10) -' 08/12 (H20/12)	PSB-P	●	●	○	●	●	
Move	' 06/10 (H18/10) -' 08/12 (H20/12)	VSC	●	●	○	●	●	Check Mode; Signal Check
Move	' 08/12 (H20/12) -' 09/12 (H21/12)	A/B	●	●	○	○	○	Check Mode
Move	' 08/12 (H20/12) -' 09/12 (H21/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move	' 08/12 (H20/12) -' 09/12 (H21/12)	ACC	●	●	○	○	○	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Move	'08/12 (H20/12) -'09/12 (H21/12)	CVT	●	●	○	●	●	
Move	'08/12 (H20/12) -'09/12 (H21/12)	EFI	●	●	○	●	●	
Move	'08/12 (H20/12) -'09/12 (H21/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	'08/12 (H20/12) -'09/12 (H21/12)	IMG	●	●	○	●	○	
Move	'08/12 (H20/12) -'09/12 (H21/12)	ITC	●	●	○	●	●	
Move	'08/12 (H20/12) -'09/12 (H21/12)	KFS	●	●	○	●	●	
Move	'08/12 (H20/12) -'09/12 (H21/12)	Power	●	●	○	●	●	
Move	'08/12 (H20/12) -'09/12 (H21/12)	PSB-D	●	●	○	●	●	
Move	'08/12 (H20/12) -'09/12 (H21/12)	PSB-P	●	●	○	●	●	
Move	'08/12 (H20/12) -'09/12 (H21/12)	VSC	●	●	○	●	●	Check Mode; Signal Check
Move	'09/12 (H21/12) -'10/12 (H22/12)	A/B	●	●	○	○	○	Check Mode
Move	'09/12 (H21/12) -'10/12 (H22/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move	'09/12 (H21/12) -'10/12 (H22/12)	CVT	●	●	○	●	●	
Move	'09/12 (H21/12) -'10/12 (H22/12)	EFI	●	●	○	●	●	
Move	'09/12 (H21/12) -'10/12 (H22/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	'09/12 (H21/12) -'10/12 (H22/12)	ITC	●	●	○	●	●	
Move	'09/12 (H21/12) -'10/12 (H22/12)	KFS	●	●	○	●	●	
Move	'09/12 (H21/12) -'10/12 (H22/12)	Power	●	●	○	●	●	
Move	'10/12 (H22/12) -'11/08 (H23/08)	A/B	●	●	○	○	○	Check Mode
Move	'10/12 (H22/12) -'11/08 (H23/08)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move	'10/12 (H22/12) -'11/08 (H23/08)	CVT	●	●	○	●	●	
Move	'10/12 (H22/12) -'11/08 (H23/08)	DSS	●	●	○	●	○	
Move	'10/12 (H22/12) -'11/08 (H23/08)	eco IDLE	●	●	○	●	●	
Move	'10/12 (H22/12) -'11/08 (H23/08)	EFI	●	●	○	●	●	
Move	'10/12 (H22/12) -'11/08 (H23/08)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	'10/12 (H22/12) -'11/08 (H23/08)	ITC	●	●	○	●	●	
Move	'10/12 (H22/12) -'11/08 (H23/08)	KFS	●	●	○	●	●	
Move	'10/12 (H22/12) -'11/08 (H23/08)	PSB-D	●	●	○	●	●	
Move	'10/12 (H22/12) -'11/08 (H23/08)	PSB-P	●	●	○	●	●	
Move	'10/12 (H22/12) -'11/08 (H23/08)	Tachometer	●	●	○	●	●	
Move	'11/08 (H23/08) -'11/11 (H23/11)	A/B	●	●	○	○	○	Check Mode
Move	'11/08 (H23/08) -'11/11 (H23/11)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move	'11/08 (H23/08) -'11/11 (H23/11)	CVT	●	●	○	●	●	
Move	'11/08 (H23/08) -'11/11 (H23/11)	DSS	●	●	○	●	○	
Move	'11/08 (H23/08) -'11/11 (H23/11)	eco IDLE	●	●	○	●	●	
Move	'11/08 (H23/08) -'11/11 (H23/11)	EFI	●	●	○	●	●	
Move	'11/08 (H23/08) -'11/11 (H23/11)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	'11/08 (H23/08) -'11/11 (H23/11)	ITC	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Move	' 11/08 (H23/08) –' 11/11 (H23/11)	KFS	●	●	○	●	●	
Move	' 11/08 (H23/08) –' 11/11 (H23/11)	PSB-D	●	●	○	●	●	
Move	' 11/08 (H23/08) –' 11/11 (H23/11)	PSB-P	●	●	○	●	●	
Move	' 11/08 (H23/08) –' 11/11 (H23/11)	Tachometer	●	●	○	●	●	
Move	' 11/11 (H23/11) –' 12/05 (H24/05)	A/B	●	●	○	○	○	Check Mode
Move	' 11/11 (H23/11) –' 12/05 (H24/05)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move	' 11/11 (H23/11) –' 12/05 (H24/05)	CVT	●	●	○	●	●	
Move	' 11/11 (H23/11) –' 12/05 (H24/05)	DSS	●	●	○	●	○	
Move	' 11/11 (H23/11) –' 12/05 (H24/05)	eco IDLE	●	●	○	●	●	
Move	' 11/11 (H23/11) –' 12/05 (H24/05)	EFI	●	●	○	●	●	
Move	' 11/11 (H23/11) –' 12/05 (H24/05)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	' 11/11 (H23/11) –' 12/05 (H24/05)	ITC	●	●	○	●	●	
Move	' 11/11 (H23/11) –' 12/05 (H24/05)	KFS	●	●	○	●	●	
Move	' 11/11 (H23/11) –' 12/05 (H24/05)	PSB-D	●	●	○	●	●	
Move	' 11/11 (H23/11) –' 12/05 (H24/05)	PSB-P	●	●	○	●	●	
Move	' 11/11 (H23/11) –' 12/05 (H24/05)	Tachometer	●	●	○	●	●	
Move	' 12/05 (H24/05) –' 12/12 (H24/12)	A/B	●	●	○	○	○	Check Mode
Move	' 12/05 (H24/05) –' 12/12 (H24/12)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move	' 12/05 (H24/05) –' 12/12 (H24/12)	CVT	●	●	○	●	●	
Move	' 12/05 (H24/05) –' 12/12 (H24/12)	DSS	●	●	○	●	○	
Move	' 12/05 (H24/05) –' 12/12 (H24/12)	eco IDLE	●	●	○	●	●	
Move	' 12/05 (H24/05) –' 12/12 (H24/12)	EFI	●	●	○	●	●	
Move	' 12/05 (H24/05) –' 12/12 (H24/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	' 12/05 (H24/05) –' 12/12 (H24/12)	ITC	●	●	○	●	●	
Move	' 12/05 (H24/05) –' 12/12 (H24/12)	KFS	●	●	○	●	●	
Move	' 12/05 (H24/05) –' 12/12 (H24/12)	PSB-D	●	●	○	●	●	
Move	' 12/05 (H24/05) –' 12/12 (H24/12)	PSB-P	●	●	○	●	●	
Move	' 12/05 (H24/05) –' 12/12 (H24/12)	Tachometer	●	●	○	●	●	
Move	' 12/12 (H24/12) –	A/B	●	●	○	○	○	Check Mode
Move	' 12/12 (H24/12) –	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move	' 12/12 (H24/12) –	CVT	●	●	○	●	●	
Move	' 12/12 (H24/12) –	eco IDLE	●	●	○	●	●	
Move	' 12/12 (H24/12) –	EFI	●	●	○	●	●	
Move	' 12/12 (H24/12) –	EPS	●	●	○	●	○	Check Mode
Move	' 12/12 (H24/12) –	HL AutoLeveling	●	●	○	●	●	
Move	' 12/12 (H24/12) –	ITC	●	●	○	●	●	
Move	' 12/12 (H24/12) –	KFS	●	●	○	●	●	
Move	' 12/12 (H24/12) –	PCB	●	●	○	●	○	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Move	' 12/12 (H24/12) -	Tachometer	●	●	○	●	●	
Move Conte	' 08/08 (H20/08) -' 09/12 (H21/12)	A/B	●	●	○	○	○	Check Mode
Move Conte	' 08/08 (H20/08) -' 09/12 (H21/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move Conte	' 08/08 (H20/08) -' 09/12 (H21/12)	CVT	●	●	○	●	●	
Move Conte	' 08/08 (H20/08) -' 09/12 (H21/12)	EFI	●	●	○	●	●	
Move Conte	' 08/08 (H20/08) -' 09/12 (H21/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move Conte	' 08/08 (H20/08) -' 09/12 (H21/12)	ITC	●	●	○	●	●	
Move Conte	' 08/08 (H20/08) -' 09/12 (H21/12)	KFS	●	●	○	●	●	
Move Conte	' 09/12 (H21/12) -' 11/06 (H23/06)	A/B	●	●	○	○	○	Check Mode
Move Conte	' 09/12 (H21/12) -' 11/06 (H23/06)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move Conte	' 09/12 (H21/12) -' 11/06 (H23/06)	CVT	●	●	○	●	●	
Move Conte	' 09/12 (H21/12) -' 11/06 (H23/06)	EFI	●	●	○	●	●	
Move Conte	' 09/12 (H21/12) -' 11/06 (H23/06)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move Conte	' 09/12 (H21/12) -' 11/06 (H23/06)	ITC	●	●	○	●	●	
Move Conte	' 09/12 (H21/12) -' 11/06 (H23/06)	KFS	●	●	○	●	●	
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	A/B	●	●	○	○	○	Check Mode
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	CVT	●	●	○	●	●	
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	eco IDLE	●	●	○	●	●	
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	EFI	●	●	○	●	●	
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	ITC	●	●	○	●	●	
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	KFS	●	●	○	●	●	
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	A/B	●	●	○	○	○	Check Mode
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	CVT	●	●	○	●	●	
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	eco IDLE	●	●	○	●	●	
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	EFI	●	●	○	●	●	
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	ITC	●	●	○	●	●	
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	KFS	●	●	○	●	●	
Move Conte	' 12/05 (H24/05) -	A/B	●	●	○	○	○	Check Mode
Move Conte	' 12/05 (H24/05) -	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move Conte	' 12/05 (H24/05) -	CVT	●	●	○	●	●	
Move Conte	' 12/05 (H24/05) -	eco IDLE	●	●	○	●	●	
Move Conte	' 12/05 (H24/05) -	EFI	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Move Conte	' 12/05 (H24/05) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Move Conte	' 12/05 (H24/05) -	ITC	●	●	○	●	●	
Move Conte	' 12/05 (H24/05) -	KFS	●	●	○	●	●	
Move Latte	' 04/08 (H16/08) -' 08/12 (H20/12)	A/B	●	●	○	○	○	Check Mode
Move Latte	' 04/08 (H16/08) -' 08/12 (H20/12)	A/T	●	●	○	●	●	
Move Latte	' 04/08 (H16/08) -' 08/12 (H20/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move Latte	' 04/08 (H16/08) -' 08/12 (H20/12)	EFI	●	●	○	●	●	
Move Latte	' 04/08 (H16/08) -' 08/12 (H20/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move Latte	' 04/08 (H16/08) -' 08/12 (H20/12)	KFS	●	●	○	●	●	