

MaxiSys_Jaguar_V4.90 Function List

(Note:For reference only)

NOTES:

- This function is supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.
- This function is not supported.
- ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X100	2000			ABS	●	●	●
X100	2000			ECM	●	●	●
X100	2000			IPK	●	●	●
X100	2000			TCM	●	●	●
X100	2000			ACC	●	●	●
X100	2000			SBC	●	●	●
X100	2000			DSM	●	●	●
X100	2000			PSM	●	●	●
X100	2000			SLM	●	●	●
X100	2000			PDM	●	●	●
X100	2000			DDM	●	●	●
X100	2000			BPM	●	●	●
X100	2000			CCM	●	●	●
X100	2000			ADS	●	●	●
X100	2000			ACM	●	●	●
X100	2000			KTM	●	●	●
X100	2001			ABS	●	●	●
X100	2001			ECM	●	●	●
X100	2001			IPK	●	●	●
X100	2001			TCM	●	●	●
X100	2001			ACC	●	●	●
X100	2001			SBC	●	●	●
X100	2001			DSM	●	●	●
X100	2001			PSM	●	●	●
X100	2001			SLM	●	●	●
X100	2001			PDM	●	●	●
X100	2001			DDM	●	●	●
X100	2001			BPM	●	●	●
X100	2001			DHM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X100	2001			PHM	●	●	●
X100	2001			CCM	●	●	●
X100	2001			ARM	●	●	●
X100	2001			KTM	●	●	●
X100	2001			ADS	●	●	●
X100	1997			ABS	●	●	●
X100	1997			ECM	●	●	●
X100	1997			IPK	●	●	●
X100	1997			TCM	●	●	●
X100	1997			DSM	●	●	●
X100	1997			PSM	●	●	●
X100	1997			SLM	●	●	●
X100	1997			PDM	●	●	●
X100	1997			DDM	●	●	●
X100	1997			BPM	●	●	●
X100	1997			ACM	●	●	●
X100	1997			CCM	●	●	●
X100	1997			ADS	●	●	●
X100	1997			KTM	●	●	●
X100	1997_25			ABS	●	●	●
X100	1997_25			ECM	●	●	●
X100	1997_25			IPK	●	●	●
X100	1997_25			TCM	●	●	●
X100	1997_25			DSM	●	●	●
X100	1997_25			PSM	●	●	●
X100	1997_25			SLM	●	●	●
X100	1997_25			PDM	●	●	●
X100	1997_25			DDM	●	●	●
X100	1997_25			BPM	●	●	●
X100	1997_25			ACM	●	●	●
X100	1997_25			CCM	●	●	●
X100	1997_25			ADS	●	●	●
X100	1997_25			KTM	●	●	●
X100	1998			ABS	●	●	●
X100	1998			ECM	●	●	●
X100	1998			IPK	●	●	●
X100	1998			TCM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X100	1998			DSM	●	●	●
X100	1998			PSM	●	●	●
X100	1998			SLM	●	●	●
X100	1998			PDM	●	●	●
X100	1998			DDM	●	●	●
X100	1998			BPM	●	●	●
X100	1998			ACM	●	●	●
X100	1998			CCM	●	●	●
X100	1998			ADS	●	●	●
X100	1998			KTM	●	●	●
X100	1998_75			ABS	●	●	●
X100	1998_75			ECM	●	●	●
X100	1998_75			IPK	●	●	●
X100	1998_75			TCM	●	●	●
X100	1998_75			DSM	●	●	●
X100	1998_75			PSM	●	●	●
X100	1998_75			SLM	●	●	●
X100	1998_75			PDM	●	●	●
X100	1998_75			DDM	●	●	●
X100	1998_75			BPM	●	●	●
X100	1998_75			ACM	●	●	●
X100	1998_75			CCM	●	●	●
X100	1998_75			ADS	●	●	●
X100	1998_75			KTM	●	●	●
X100	1999			ABS	●	●	●
X100	1999			ECM	●	●	●
X100	1999			IPK	●	●	●
X100	1999			TCM	●	●	●
X100	1999			DSM	●	●	●
X100	1999			PSM	●	●	●
X100	1999			SLM	●	●	●
X100	1999			PDM	●	●	●
X100	1999			DDM	●	●	●
X100	1999			BPM	●	●	●
X100	1999			ACM	●	●	●
X100	1999			CCM	●	●	●
X100	1999			ADS	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X100	1999			KTM	●	●	●
X103	2003			ABS	●	●	●
X103	2003			ACC	●	●	●
X103	2003			ADHLS_L	●	●	●
X103	2003			ADHLS_R	●	●	●
X103	2003			ADRC	●	●	●
X103	2003			ARM	●	●	●
X103	2003			ATC	●	●	●
X103	2003			BPM	●	●	●
X103	2003			DDM	●	●	●
X103	2003			DHM	●	●	●
X103	2003			DSM	●	●	●
X103	2003			ECM	●	●	●
X103	2003			IP	●	●	●
X103	2003			PAM	●	●	●
X103	2003			PDM	●	●	●
X103	2003			PHM	●	●	●
X103	2003			PSM	●	●	●
X103	2003			SLM	●	●	●
X103	2003			TCM	●	●	●
X150	2006.5-2009	Normal aspirated V8		ABS	●	●	●
X150	2006.5-2009	Normal aspirated V8		CCM	●	●	●
X150	2006.5-2009	Normal aspirated V8		ADCM	●	●	●
X150	2006.5-2009	Normal aspirated V8		HCM	●	●	●
X150	2006.5-2009	Normal aspirated V8		PCM	●	●	●
X150	2006.5-2009	Normal aspirated V8		VIM	●	●	●
X150	2006.5-2009	Normal aspirated V8		PBM	●	●	●
X150	2006.5-2009	Normal aspirated V8		IPC	●	●	●
X150	2006.5-2009	Normal aspirated V8		ICS	●	●	●
X150	2006.5-2009	Normal aspirated V8		RCM	●	●	●
X150	2006.5-2009	Normal aspirated V8		TCM	●	●	●
X150	2006.5-2009	Normal aspirated V8		DDM	●	●	●
X150	2006.5-2009	Normal aspirated V8		DSM	●	●	●
X150	2006.5-2009	Normal aspirated V8		FLR	●	●	●
X150	2006.5-2009	Normal aspirated V8		FSJB	●	●	●
X150	2006.5-2009	Normal aspirated V8		FTCM	●	●	●
X150	2006.5-2009	Normal aspirated V8		ICM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X150	2006.5-2009	Normal aspirated V8		ICP	●	●	●
X150	2006.5-2009	Normal aspirated V8		KVM	●	●	●
X150	2006.5-2009	Normal aspirated V8		PAM	●	●	●
X150	2006.5-2009	Normal aspirated V8		PDM	●	●	●
X150	2006.5-2009	Normal aspirated V8		PSM	●	●	●
X150	2006.5-2009	Normal aspirated V8		HVAC	●	●	●
X150	2006.5-2009	Normal aspirated V8		RSJB	●	●	●
X150	2006.5-2009	Normal aspirated V8		TPM	●	●	●
X150	2006.5-2009	Normal aspirated V8		FCDIM	●	●	●
X150	2006.5-2009	Normal aspirated V8		ACM	●	●	●
X150	2006.5-2009	Normal aspirated V8		AAM	●	●	●
X150	2006.5-2009	Normal aspirated V8		NCM	●	●	●
X150	2006.5-2009	Normal aspirated V8		SRM	●	●	●
X150	2006.5-2009	Normal aspirated V8		BPM	●	●	●
X150	2006.5-2009	Supercharged V8		ABS	●	●	●
X150	2006.5-2009	Supercharged V8		CCM	●	●	●
X150	2006.5-2009	Supercharged V8		ADCM	●	●	●
X150	2006.5-2009	Supercharged V8		HCM	●	●	●
X150	2006.5-2009	Supercharged V8		PCM	●	●	●
X150	2006.5-2009	Supercharged V8		VIM	●	●	●
X150	2006.5-2009	Supercharged V8		PBM	●	●	●
X150	2006.5-2009	Supercharged V8		IPC	●	●	●
X150	2006.5-2009	Supercharged V8		ICS	●	●	●
X150	2006.5-2009	Supercharged V8		RCM	●	●	●
X150	2006.5-2009	Supercharged V8		TCM	●	●	●
X150	2006.5-2009	Supercharged V8		DDM	●	●	●
X150	2006.5-2009	Supercharged V8		DSM	●	●	●
X150	2006.5-2009	Supercharged V8		FSJB	●	●	●
X150	2006.5-2009	Supercharged V8		FTCM	●	●	●
X150	2006.5-2009	Supercharged V8		ICM	●	●	●
X150	2006.5-2009	Supercharged V8		ICP	●	●	●
X150	2006.5-2009	Supercharged V8		KVM	●	●	●
X150	2006.5-2009	Supercharged V8		PAM	●	●	●
X150	2006.5-2009	Supercharged V8		PDM	●	●	●
X150	2006.5-2009	Supercharged V8		PSM	●	●	●
X150	2006.5-2009	Supercharged V8		HVAC	●	●	●
X150	2006.5-2009	Supercharged V8		RSJB	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X150	2006. 5-2009	Supercharged V8		TPM	●	●	●
X150	2006. 5-2009	Supercharged V8		FCDIM	●	●	●
X150	2006. 5-2009	Supercharged V8		ACM	●	●	●
X150	2006. 5-2009	Supercharged V8		AAM	●	●	●
X150	2006. 5-2009	Supercharged V8		NCM	●	●	●
X150	2006. 5-2009	Supercharged V8		SRM	●	●	●
X150	2006. 5-2009	Supercharged V8		BPM	●	●	●
X150	2006. 5-2009	Supercharged V8		FLR	●	●	●
X150	2010	Normal aspirated V8		AAM	●	●	●
X150	2010	Normal aspirated V8		ABS	●	●	●
X150	2010	Normal aspirated V8		ACM	●	●	●
X150	2010	Normal aspirated V8		ADCM	●	●	●
X150	2010	Normal aspirated V8		APIM	●	●	●
X150	2010	Normal aspirated V8		BCM	●	●	●
X150	2010	Normal aspirated V8		CCM	●	●	●
X150	2010	Normal aspirated V8		DABM	●	●	●
X150	2010	Normal aspirated V8		DACMC	●	●	●
X150	2010	Normal aspirated V8		DCSM	●	●	●
X150	2010	Normal aspirated V8		DDM	●	●	●
X150	2010	Normal aspirated V8		DSM	●	●	●
X150	2010	Normal aspirated V8		FCDIM	●	●	●
X150	2010	Normal aspirated V8		FLR	●	●	●
X150	2010	Normal aspirated V8		FSJB	●	●	●
X150	2010	Normal aspirated V8		FTCM	●	●	●
X150	2010	Normal aspirated V8		GSM	●	●	●
X150	2010	Normal aspirated V8		HCM	●	●	●
X150	2010	Normal aspirated V8		HVAC	●	●	●
X150	2010	Normal aspirated V8		ICM	●	●	●
X150	2010	Normal aspirated V8		ICP	●	●	●
X150	2010	Normal aspirated V8		ICS	●	●	●
X150	2010	Normal aspirated V8		IPC	●	●	●
X150	2010	Normal aspirated V8		KVM	●	●	●
X150	2010	Normal aspirated V8		NCM	●	●	●
X150	2010	Normal aspirated V8		OCS	●	●	●
X150	2010	Normal aspirated V8		PAM	●	●	●
X150	2010	Normal aspirated V8		PBM	●	●	●
X150	2010	Normal aspirated V8		PCM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X150	2010	Normal aspirated V8		PDM	●	●	●
X150	2010	Normal aspirated V8		PSM	●	●	●
X150	2010	Normal aspirated V8		RCM	●	●	●
X150	2010	Normal aspirated V8		RDCM	●	●	●
X150	2010	Normal aspirated V8		RSJB	●	●	●
X150	2010	Normal aspirated V8		SRM	●	●	●
X150	2010	Normal aspirated V8		TCM	●	●	●
X150	2010	Normal aspirated V8		TEL	●	●	●
X150	2010	Normal aspirated V8		TPM	●	●	●
X150	2010	Normal aspirated V8		VIM	●	●	●
X150	2010	Supercharged V8		AAM	●	●	●
X150	2010	Supercharged V8		ABS	●	●	●
X150	2010	Supercharged V8		ACM	●	●	●
X150	2010	Supercharged V8		ADCM	●	●	●
X150	2010	Supercharged V8		APIM	●	●	●
X150	2010	Supercharged V8		BCM	●	●	●
X150	2010	Supercharged V8		CCM	●	●	●
X150	2010	Supercharged V8		DABM	●	●	●
X150	2010	Supercharged V8		DACMC	●	●	●
X150	2010	Supercharged V8		DCSM	●	●	●
X150	2010	Supercharged V8		DDM	●	●	●
X150	2010	Supercharged V8		DSM	●	●	●
X150	2010	Supercharged V8		FCDIM	●	●	●
X150	2010	Supercharged V8		FLR	●	●	●
X150	2010	Supercharged V8		FSJB	●	●	●
X150	2010	Supercharged V8		FTCM	●	●	●
X150	2010	Supercharged V8		GSM	●	●	●
X150	2010	Supercharged V8		HCM	●	●	●
X150	2010	Supercharged V8		HVAC	●	●	●
X150	2010	Supercharged V8		ICM	●	●	●
X150	2010	Supercharged V8		ICP	●	●	●
X150	2010	Supercharged V8		ICS	●	●	●
X150	2010	Supercharged V8		IPC	●	●	●
X150	2010	Supercharged V8		KVM	●	●	●
X150	2010	Supercharged V8		NCM	●	●	●
X150	2010	Supercharged V8		OCS	●	●	●
X150	2010	Supercharged V8		PAM	●	●	●

Vehicle Type	Model Year	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X150	2010	Supercharged V8		PBM	●	●	●
X150	2010	Supercharged V8		PCM	●	●	●
X150	2010	Supercharged V8		PDM	●	●	●
X150	2010	Supercharged V8		PSM	●	●	●
X150	2010	Supercharged V8		RCM	●	●	●
X150	2010	Supercharged V8		RDCM	●	●	●
X150	2010	Supercharged V8		RSJB	●	●	●
X150	2010	Supercharged V8		SRM	●	●	●
X150	2010	Supercharged V8		TCM	●	●	●
X150	2010	Supercharged V8		TEL	●	●	●
X150	2010	Supercharged V8		TPM	●	●	●
X150	2010	Supercharged V8		VIM	●	●	●
X152	2014	V8SC		ABS	●	●	●
X152	2014	V8SC		ATCM	●	●	●
X152	2014	V8SC		BCM	●	●	●
X152	2014	V8SC		CHCM	●	●	●
X152	2014	V8SC		FTCM	●	●	●
X152	2014	V8SC		FTCMB	●	●	●
X152	2014	V8SC		GSM	●	●	●
X152	2014	V8SC		GWM	●	●	●
X152	2014	V8SC		HCM	●	●	●
X152	2014	V8SC		IPC	●	●	●
X152	2014	V8SC		OCS	●	●	●
X152	2014	V8SC		PAM	●	●	●
X152	2014	V8SC		PBM	●	●	●
X152	2014	V8SC		PCM	●	●	●
X152	2014	V8SC		PCM	●	●	●
X152	2014	V8SC		RCM	●	●	●
X152	2014	V8SC		RDCM	●	●	●
X152	2014	V8SC		TCM	●	●	●
X152	2014	V8SC		VIM	●	●	●
X152	2014	V8SC		DDM	●	●	●
X152	2014	V8SC		DSM	●	●	●
X152	2014	V8SC		FCDIM	●	●	●
X152	2014	V8SC		FCIM	●	●	●
X152	2014	V8SC		HCMB	●	●	●
X152	2014	V8SC		HVAC	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X152	2014	V8SC		IPMB	●	●	●
X152	2014	V8SC		RFA	●	●	●
X152	2014	V8SC		PDM	●	●	●
X152	2014	V8SC		PSM	●	●	●
X152	2014	V8SC		SODL	●	●	●
X152	2014	V8SC		SODR	●	●	●
X152	2014	V8SC		AAM	●	●	●
X152	2014	V8SC		ACM	●	●	●
X152	2014	V8SC		DABM	●	●	●
X152	2014	V8SC		NCM	●	●	●
X152	2014	V8SC		SRM	●	●	●
X152	2014	V8SC		TVM	●	●	●
X152	2014	V6SC		ABS	●	●	●
X152	2014	V6SC		ATCM	●	●	●
X152	2014	V6SC		BCM	●	●	●
X152	2014	V6SC		CHCM	●	●	●
X152	2014	V6SC		FTCM	●	●	●
X152	2014	V6SC		FTCMB	●	●	●
X152	2014	V6SC		GSM	●	●	●
X152	2014	V6SC		GWM	●	●	●
X152	2014	V6SC		HCM	●	●	●
X152	2014	V6SC		IPC	●	●	●
X152	2014	V6SC		OCS	●	●	●
X152	2014	V6SC		PAM	●	●	●
X152	2014	V6SC		PBM	●	●	●
X152	2014	V6SC		PCM	●	●	●
X152	2014	V6SC		PCM	●	●	●
X152	2014	V6SC		RCM	●	●	●
X152	2014	V6SC		RDCM	●	●	●
X152	2014	V6SC		TCM	●	●	●
X152	2014	V6SC		VIM	●	●	●
X152	2014	V6SC		DDM	●	●	●
X152	2014	V6SC		DSM	●	●	●
X152	2014	V6SC		FCDIM	●	●	●
X152	2014	V6SC		FCIM	●	●	●
X152	2014	V6SC		HCMB	●	●	●
X152	2014	V6SC		HVAC	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X152	2014	V6SC		IPMB	●	●	●
X152	2014	V6SC		RFA	●	●	●
X152	2014	V6SC		PDM	●	●	●
X152	2014	V6SC		PSM	●	●	●
X152	2014	V6SC		SODL	●	●	●
X152	2014	V6SC		SODR	●	●	●
X152	2014	V6SC		AAM	●	●	●
X152	2014	V6SC		ACM	●	●	●
X152	2014	V6SC		DABM	●	●	●
X152	2014	V6SC		NCM	●	●	●
X152	2014	V6SC		SRM	●	●	●
X152	2014	V6SC		TVM	●	●	●
X152	2016			BCM	●	●	●
X152	2016			GSM	●	●	●
X152	2016			GWM	●	●	●
X152	2016			HCM	●	●	●
X152	2016			IPC	●	●	●
X152	2016	V6SC		PCM	●	●	●
X152	2016	V8SC		PCM	●	●	●
X152	2016			RDCM	●	●	●
X152	2016			TCCM	●	●	●
X152	2016			TCM	●	●	●
X152	2016			TCU	●	●	●
X152	2016			TPM	●	●	●
X152	2016			VIM	●	●	●
X152	2016			ABS	●	●	●
X152	2016			ATCM	●	●	●
X152	2016			CHCM	●	●	●
X152	2016			FTCM	●	●	●
X152	2016			FTCMB	●	●	●
X152	2016			IPMA	●	●	●
X152	2016			OCS	●	●	●
X152	2016			PAM	●	●	●
X152	2016			PBM	●	●	●
X152	2016			PSCM	●	●	●
X152	2016			RCM	●	●	●
X152	2016			SASM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X152	2016			DDM	●	●	●
X152	2016			DSM	●	●	●
X152	2016			RFA	●	●	●
X152	2016			PDM	●	●	●
X152	2016			PSM	●	●	●
X152	2016			RGTM	●	●	●
X152	2016			AHU	●	●	●
X152	2016			CAV	●	●	●
X152	2016			FCDIM	●	●	●
X152	2016			FCIM	●	●	●
X152	2016			HVAC	●	●	●
X152	2016			IPMB	●	●	●
X152	2016			NAV	●	●	●
X152	2016			SODL	●	●	●
X152	2016			SODR	●	●	●
X152	2016			AAM	●	●	●
X152	2016			ACM	●	●	●
X152	2016			DABM	●	●	●
X152	2016			NCM	●	●	●
X152	2016			SRM	●	●	●
X152	2016			TVM	●	●	●
X200	1999_25			PAM	●	●	●
X200	1999_25			RCM	●	●	●
X200	1999_25			ABS	●	●	●
X200	1999_25			ADS	●	●	●
X200	1999_25			CCM	●	●	●
X200	1999_25			CPM	●	●	●
X200	1999_25			DDM	●	●	●
X200	1999_25			DSM	●	●	●
X200	1999_25			GEM	●	●	●
X200	1999_25			ICE	●	●	●
X200	1999_25			IPK	●	●	●
X200	1999_25			MCC	●	●	●
X200	1999_25			NAV	●	●	●
X200	1999_25			PCM	●	●	●
X200	1999_25			REM	●	●	●
X200	1999_25			RES	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X200	1999_25			SCL	●	●	●
X200	1999_25			TCU	●	●	●
X200	1999_25			VAM	●	●	●
X200	2000			PAM	●	●	●
X200	2000			RCM	●	●	●
X200	2000			ABS	●	●	●
X200	2000			ADS	●	●	●
X200	2000			CCM	●	●	●
X200	2000			CPM	●	●	●
X200	2000			DDM	●	●	●
X200	2000			DSM	●	●	●
X200	2000			GEM	●	●	●
X200	2000			ICE	●	●	●
X200	2000			IPK	●	●	●
X200	2000			MCC	●	●	●
X200	2000			NAV	●	●	●
X200	2000			PCM	●	●	●
X200	2000			REM	●	●	●
X200	2000			RES	●	●	●
X200	2000			SCL	●	●	●
X200	2000			TCU	●	●	●
X200	2000			VAM	●	●	●
X200	2001			PAM	●	●	●
X200	2001			RCM	●	●	●
X200	2001			ABS	●	●	●
X200	2001			ADS	●	●	●
X200	2001			CCM	●	●	●
X200	2001			CPM	●	●	●
X200	2001			DDM	●	●	●
X200	2001			DSM	●	●	●
X200	2001			GEM	●	●	●
X200	2001			ICE	●	●	●
X200	2001			IPK	●	●	●
X200	2001			MCC	●	●	●
X200	2001			NAV	●	●	●
X200	2001			PCM	●	●	●
X200	2001			REM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X200	2001			RES	●	●	●
X200	2001			SCL	●	●	●
X200	2001			TCU	●	●	●
X200	2001			VAM	●	●	●
X202	2002.5			ABS	●	●	●
X202	2002.5			ACC	●	●	●
X202	2002.5			ADHLS	●	●	●
X202	2002.5			ADRC	●	●	●
X202	2002.5			AMP	●	●	●
X202	2002.5			ARM	●	●	●
X202	2002.5			ATC	●	●	●
X202	2002.5			CPM	●	●	●
X202	2002.5			DDM	●	●	●
X202	2002.5			DSM	●	●	●
X202	2002.5			ECM	●	●	●
X202	2002.5			EPB	●	●	●
X202	2002.5			FETM	●	●	●
X202	2002.5			GEM	●	●	●
X202	2002.5			IP	●	●	●
X202	2002.5			ISM	●	●	●
X202	2002.5			NAV	●	●	●
X202	2002.5			PAM	●	●	●
X202	2002.5			REM	●	●	●
X202	2002.5			SCLM	●	●	●
X202	2002.5			TCM	●	●	●
X202	2002.5			VACM	●	●	●
X204	2004	AJ61		ABS	●	●	●
X204	2004	AJ61		ACC	●	●	●
X204	2004	AJ61		ADHLS	●	●	●
X204	2004	AJ61		ADRC	●	●	●
X204	2004	AJ61		AMP	●	●	●
X204	2004	AJ61		ARM	●	●	●
X204	2004	AJ61		ATC	●	●	●
X204	2004	AJ61		CPM	●	●	●
X204	2004	AJ61		DDM	●	●	●
X204	2004	AJ61		DSM	●	●	●
X204	2004	AJ61		ECM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X204	2004	AJ61		FETM	●	●	●
X204	2004	AJ61		GEM	●	●	●
X204	2004	AJ61		IP	●	●	●
X204	2004	AJ61		ISM	●	●	●
X204	2004	AJ61		NAV	●	●	●
X204	2004	AJ61		PAM	●	●	●
X204	2004	AJ61		PBM	●	●	●
X204	2004	AJ61		REM	●	●	●
X204	2004	AJ61		SCLM	●	●	●
X204	2004	AJ61		TCM	●	●	●
X204	2004	AJ61		VACM	●	●	●
X204	2004	V6DIESEL		ABS	●	●	●
X204	2004	V6DIESEL		ACC	●	●	●
X204	2004	V6DIESEL		ADHLS	●	●	●
X204	2004	V6DIESEL		ADRC	●	●	●
X204	2004	V6DIESEL		AMP	●	●	●
X204	2004	V6DIESEL		ARM	●	●	●
X204	2004	V6DIESEL		ATC	●	●	●
X204	2004	V6DIESEL		CPM	●	●	●
X204	2004	V6DIESEL		DDM	●	●	●
X204	2004	V6DIESEL		DSM	●	●	●
X204	2004	V6DIESEL		FETM	●	●	●
X204	2004	V6DIESEL		GEM	●	●	●
X204	2004	V6DIESEL		IP	●	●	●
X204	2004	V6DIESEL		ISM	●	●	●
X204	2004	V6DIESEL		NAV	●	●	●
X204	2004	V6DIESEL		PAM	●	●	●
X204	2004	V6DIESEL		PBM	●	●	●
X204	2004	V6DIESEL		REM	●	●	●
X204	2004	V6DIESEL		SCLM	●	●	●
X204	2004	V6DIESEL		TCM	●	●	●
X204	2004	V6DIESEL		VACM	●	●	●
X204	2004	V6DIESEL		AHCM	●	●	●
X204	2004	V6DIESEL		PCM	●	●	●
X206	2006	V6DIESEL		AHCM	●	●	●
X206	2006	V6DIESEL		ABS	●	●	●
X206	2006	V6DIESEL		ACC	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X206	2006	V6DIESEL		ADHLS	●	●	●
X206	2006	V6DIESEL		ADRC	●	●	●
X206	2006	V6DIESEL		AMP	●	●	●
X206	2006	V6DIESEL		ARM	●	●	●
X206	2006	V6DIESEL		ATC	●	●	●
X206	2006	V6DIESEL		CPM	●	●	●
X206	2006	V6DIESEL		DDM	●	●	●
X206	2006	V6DIESEL		DSM	●	●	●
X206	2006	V6DIESEL		FETM	●	●	●
X206	2006	V6DIESEL		GEM	●	●	●
X206	2006	V6DIESEL		IP	●	●	●
X206	2006	V6DIESEL		ISM	●	●	●
X206	2006	V6DIESEL		NAV	●	●	●
X206	2006	V6DIESEL		PAM	●	●	●
X206	2006	V6DIESEL		PBM	●	●	●
X206	2006	V6DIESEL		PCM	●	●	●
X206	2006	V6DIESEL		REM	●	●	●
X206	2006	V6DIESEL		SCLM	●	●	●
X206	2006	V6DIESEL		TCM	●	●	●
X206	2006	V6DIESEL		TPM	●	●	●
X206	2006	V6DIESEL		VACM	●	●	●
X206	2006	V6NA		ABS	●	●	●
X206	2006	V6NA		ACC	●	●	●
X206	2006	V6NA		ADHLS	●	●	●
X206	2006	V6NA		ADRC	●	●	●
X206	2006	V6NA		AMP	●	●	●
X206	2006	V6NA		ARM	●	●	●
X206	2006	V6NA		ATC	●	●	●
X206	2006	V6NA		CPM	●	●	●
X206	2006	V6NA		DDM	●	●	●
X206	2006	V6NA		DSM	●	●	●
X206	2006	V6NA		FETM	●	●	●
X206	2006	V6NA		GEM	●	●	●
X206	2006	V6NA		IP	●	●	●
X206	2006	V6NA		ISM	●	●	●
X206	2006	V6NA		NAV	●	●	●
X206	2006	V6NA		PAM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X206	2006	V6NA		PBM	●	●	●
X206	2006	V6NA		PCM	●	●	●
X206	2006	V6NA		REM	●	●	●
X206	2006	V6NA		SCLM	●	●	●
X206	2006	V6NA		TCM	●	●	●
X206	2006	V6NA		TPM	●	●	●
X206	2006	V6NA		VACM	●	●	●
X206	2006	V8SC		ABS	●	●	●
X206	2006	V8SC		ACC	●	●	●
X206	2006	V8SC		ADHLS	●	●	●
X206	2006	V8SC		ADRC	●	●	●
X206	2006	V8SC		AMP	●	●	●
X206	2006	V8SC		ARM	●	●	●
X206	2006	V8SC		ATC	●	●	●
X206	2006	V8SC		CPM	●	●	●
X206	2006	V8SC		DDM	●	●	●
X206	2006	V8SC		DSM	●	●	●
X206	2006	V8SC		FETM	●	●	●
X206	2006	V8SC		GEM	●	●	●
X206	2006	V8SC		IP	●	●	●
X206	2006	V8SC		ISM	●	●	●
X206	2006	V8SC		NAV	●	●	●
X206	2006	V8SC		PAM	●	●	●
X206	2006	V8SC		PBM	●	●	●
X206	2006	V8SC		PCM	●	●	●
X206	2006	V8SC		REM	●	●	●
X206	2006	V8SC		SCLM	●	●	●
X206	2006	V8SC		TCM	●	●	●
X206	2006	V8SC		TPM	●	●	●
X206	2006	V8SC		VACM	●	●	●
X206	2006	V8NA		ABS	●	●	●
X206	2006	V8NA		ACC	●	●	●
X206	2006	V8NA		ADHLS	●	●	●
X206	2006	V8NA		ADRC	●	●	●
X206	2006	V8NA		AMP	●	●	●
X206	2006	V8NA		ARM	●	●	●
X206	2006	V8NA		ATC	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X206	2006	V8NA		CPM	●	●	●
X206	2006	V8NA		DDM	●	●	●
X206	2006	V8NA		DSM	●	●	●
X206	2006	V8NA		FETM	●	●	●
X206	2006	V8NA		GEM	●	●	●
X206	2006	V8NA		IP	●	●	●
X206	2006	V8NA		ISM	●	●	●
X206	2006	V8NA		NAV	●	●	●
X206	2006	V8NA		PAM	●	●	●
X206	2006	V8NA		PBM	●	●	●
X206	2006	V8NA		PCM	●	●	●
X206	2006	V8NA		REM	●	●	●
X206	2006	V8NA		SCLM	●	●	●
X206	2006	V8NA		TCM	●	●	●
X206	2006	V8NA		TPM	●	●	●
X206	2006	V8NA		VACM	●	●	●
X250	2013			ABS	●	●	●
X250	2013			CCM	●	●	●
X250	2013			CHCM	●	●	●
X250	2013			GSM	●	●	●
X250	2013			GWM	●	●	●
X250	2013			HCM	●	●	●
X250	2013			IPC	●	●	●
X250	2013			OCS	●	●	●
X250	2013			PBM	●	●	●
X250	2013			PCM	●	●	●
X250	2013			RCM	●	●	●
X250	2013			RDCM	●	●	●
X250	2013			SPMA	●	●	●
X250	2013			SPMB	●	●	●
X250	2013			SUMB	●	●	●
X250	2013			TCM	●	●	●
X250	2013			VIM	●	●	●
X250	2013			BCM	●	●	●
X250	2013			BCMB	●	●	●
X250	2013			CAV	●	●	●
X250	2013			DDM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X250	2013			DSM	●	●	●
X250	2013			FCDIM	●	●	●
X250	2013			FCIMB	●	●	●
X250	2013			HCMB	●	●	●
X250	2013			HVAC	●	●	●
X250	2013			PAM	●	●	●
X250	2013			PDM	●	●	●
X250	2013			PSM	●	●	●
X250	2013			RFA	●	●	●
X250	2013			RGTM	●	●	●
X250	2013			SCME	●	●	●
X250	2013			SODL	●	●	●
X250	2013			SODR	●	●	●
X250	2013			TPM	●	●	●
X250	2013			AAM	●	●	●
X250	2013			ACM	●	●	●
X250	2013			DABM	●	●	●
X250	2013			NCM	●	●	●
X250	2013			SRM	●	●	●
X250	2013			TVM	●	●	●
X250	2012			ABS	●	●	●
X250	2012			CCM	●	●	●
X250	2012			GSM	●	●	●
X250	2012			GWM	●	●	●
X250	2012			HCM	●	●	●
X250	2012			IPC	●	●	●
X250	2012			OCS	●	●	●
X250	2012			PBM	●	●	●
X250	2012			PCM	●	●	●
X250	2012			RCM	●	●	●
X250	2012			RDCM	●	●	●
X250	2012			SPMA	●	●	●
X250	2012			SPMB	●	●	●
X250	2012			SUMB	●	●	●
X250	2012			TCM	●	●	●
X250	2012			VIM	●	●	●
X250	2012			BCM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X250	2012			BCMB	●	●	●
X250	2012			DDM	●	●	●
X250	2012			DSM	●	●	●
X250	2012			FCDIM	●	●	●
X250	2012			FCIMB	●	●	●
X250	2012			Hcmb	●	●	●
X250	2012			Hvac	●	●	●
X250	2012			PAM	●	●	●
X250	2012			PDM	●	●	●
X250	2012			PSM	●	●	●
X250	2012			RFA	●	●	●
X250	2012			SCME	●	●	●
X250	2012			SODL	●	●	●
X250	2012			SODR	●	●	●
X250	2012			TPM	●	●	●
X250	2012			AAM	●	●	●
X250	2012			ACM	●	●	●
X250	2012			DABM	●	●	●
X250	2012			NCM	●	●	●
X250	2012			SRM	●	●	●
X250	2012			TVM	●	●	●
X250	2010–2011	V6DIESEL		AAM	●	●	●
X250	2010–2011	V6DIESEL		ABS	●	●	●
X250	2010–2011	V6DIESEL		ACM	●	●	●
X250	2010–2011	V6DIESEL		ADCM	●	●	●
X250	2010–2011	V6DIESEL		APIM	●	●	●
X250	2010–2011	V6DIESEL		CCM	●	●	●
X250	2010–2011	V6DIESEL		DABM	●	●	●
X250	2010–2011	V6DIESEL		DACMC	●	●	●
X250	2010–2011	V6DIESEL		DCSM	●	●	●
X250	2010–2011	V6DIESEL		DDM	●	●	●
X250	2010–2011	V6DIESEL		DSM	●	●	●
X250	2010–2011	V6DIESEL		FCDIM	●	●	●
X250	2010–2011	V6DIESEL		FLR	●	●	●
X250	2010–2011	V6DIESEL		FSJB	●	●	●
X250	2010–2011	V6DIESEL		GSM	●	●	●
X250	2010–2011	V6DIESEL		HCM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X250	2010-2011	V6DIESEL		HVAC	●	●	●
X250	2010-2011	V6DIESEL		ICM	●	●	●
X250	2010-2011	V6DIESEL		ICP	●	●	●
X250	2010-2011	V6DIESEL		ICS	●	●	●
X250	2010-2011	V6DIESEL		IPC	●	●	●
X250	2010-2011	V6DIESEL		KVM	●	●	●
X250	2010-2011	V6DIESEL		NCM	●	●	●
X250	2010-2011	V6DIESEL		OCS	●	●	●
X250	2010-2011	V6DIESEL		PAM	●	●	●
X250	2010-2011	V6DIESEL		PBM	●	●	●
X250	2010-2011	V6DIESEL		PCM	●	●	●
X250	2010-2011	V6DIESEL		PDM	●	●	●
X250	2010-2011	V6DIESEL		RCM	●	●	●
X250	2010-2011	V6DIESEL		RDCM	●	●	●
X250	2010-2011	V6DIESEL		RSJB	●	●	●
X250	2010-2011	V6DIESEL		SODL	●	●	●
X250	2010-2011	V6DIESEL		SODR	●	●	●
X250	2010-2011	V6DIESEL		SRM	●	●	●
X250	2010-2011	V6DIESEL		TCM	●	●	●
X250	2010-2011	V6DIESEL		TEL	●	●	●
X250	2010-2011	V6DIESEL		TPM	●	●	●
X250	2010-2011	V6DIESEL		TVM	●	●	●
X250	2010-2011	V6DIESEL		VIM	●	●	●
X250	2010-2011	Normal aspirated V6		AAM	●	●	●
X250	2010-2011	Normal aspirated V6		ABS	●	●	●
X250	2010-2011	Normal aspirated V6		ACM	●	●	●
X250	2010-2011	Normal aspirated V6		ADCM	●	●	●
X250	2010-2011	Normal aspirated V6		APIM	●	●	●
X250	2010-2011	Normal aspirated V6		CCM	●	●	●
X250	2010-2011	Normal aspirated V6		DABM	●	●	●
X250	2010-2011	Normal aspirated V6		DACMC	●	●	●
X250	2010-2011	Normal aspirated V6		DCSM	●	●	●
X250	2010-2011	Normal aspirated V6		DDM	●	●	●
X250	2010-2011	Normal aspirated V6		DSM	●	●	●
X250	2010-2011	Normal aspirated V6		FCDIM	●	●	●
X250	2010-2011	Normal aspirated V6		FLR	●	●	●
X250	2010-2011	Normal aspirated V6		FSJB	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X250	2010-2011	Normal aspirated V6		GSM	●	●	●
X250	2010-2011	Normal aspirated V6		HCM	●	●	●
X250	2010-2011	Normal aspirated V6		HVAC	●	●	●
X250	2010-2011	Normal aspirated V6		ICM	●	●	●
X250	2010-2011	Normal aspirated V6		ICP	●	●	●
X250	2010-2011	Normal aspirated V6		ICS	●	●	●
X250	2010-2011	Normal aspirated V6		IPC	●	●	●
X250	2010-2011	Normal aspirated V6		KVM	●	●	●
X250	2010-2011	Normal aspirated V6		NCM	●	●	●
X250	2010-2011	Normal aspirated V6		OCS	●	●	●
X250	2010-2011	Normal aspirated V6		PAM	●	●	●
X250	2010-2011	Normal aspirated V6		PBM	●	●	●
X250	2010-2011	Normal aspirated V6		PCM	●	●	●
X250	2010-2011	Normal aspirated V6		PDM	●	●	●
X250	2010-2011	Normal aspirated V6		RCM	●	●	●
X250	2010-2011	Normal aspirated V6		RDCM	●	●	●
X250	2010-2011	Normal aspirated V6		RSJB	●	●	●
X250	2010-2011	Normal aspirated V6		SODL	●	●	●
X250	2010-2011	Normal aspirated V6		SODR	●	●	●
X250	2010-2011	Normal aspirated V6		SRM	●	●	●
X250	2010-2011	Normal aspirated V6		TCM	●	●	●
X250	2010-2011	Normal aspirated V6		TEL	●	●	●
X250	2010-2011	Normal aspirated V6		TPM	●	●	●
X250	2010-2011	Normal aspirated V6		TVM	●	●	●
X250	2010-2011	Normal aspirated V6		VIM	●	●	●
X250	2010-2011	Supercharged V8		AAM	●	●	●
X250	2010-2011	Supercharged V8		ABS	●	●	●
X250	2010-2011	Supercharged V8		ACM	●	●	●
X250	2010-2011	Supercharged V8		ADCM	●	●	●
X250	2010-2011	Supercharged V8		APIM	●	●	●
X250	2010-2011	Supercharged V8		CCM	●	●	●
X250	2010-2011	Supercharged V8		DABM	●	●	●
X250	2010-2011	Supercharged V8		DACMC	●	●	●
X250	2010-2011	Supercharged V8		DCSM	●	●	●
X250	2010-2011	Supercharged V8		DDM	●	●	●
X250	2010-2011	Supercharged V8		DSM	●	●	●
X250	2010-2011	Supercharged V8		FCDIM	●	●	●

Vehicle Type	Model Year	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X250	2010–2011	Supercharged V8		FLR	●	●	●
X250	2010–2011	Supercharged V8		FSJB	●	●	●
X250	2010–2011	Supercharged V8		GSM	●	●	●
X250	2010–2011	Supercharged V8		HCM	●	●	●
X250	2010–2011	Supercharged V8		HVAC	●	●	●
X250	2010–2011	Supercharged V8		ICM	●	●	●
X250	2010–2011	Supercharged V8		ICP	●	●	●
X250	2010–2011	Supercharged V8		ICS	●	●	●
X250	2010–2011	Supercharged V8		IPC	●	●	●
X250	2010–2011	Supercharged V8		KVM	●	●	●
X250	2010–2011	Supercharged V8		NCM	●	●	●
X250	2010–2011	Supercharged V8		OCS	●	●	●
X250	2010–2011	Supercharged V8		PAM	●	●	●
X250	2010–2011	Supercharged V8		PBM	●	●	●
X250	2010–2011	Supercharged V8		PCM	●	●	●
X250	2010–2011	Supercharged V8		PDM	●	●	●
X250	2010–2011	Supercharged V8		RCM	●	●	●
X250	2010–2011	Supercharged V8		RDCM	●	●	●
X250	2010–2011	Supercharged V8		RSJB	●	●	●
X250	2010–2011	Supercharged V8		SODL	●	●	●
X250	2010–2011	Supercharged V8		SODR	●	●	●
X250	2010–2011	Supercharged V8		SRM	●	●	●
X250	2010–2011	Supercharged V8		TCM	●	●	●
X250	2010–2011	Supercharged V8		TEL	●	●	●
X250	2010–2011	Supercharged V8		TPM	●	●	●
X250	2010–2011	Supercharged V8		TVM	●	●	●
X250	2010–2011	Supercharged V8		VIM	●	●	●
X250	2010–2011	Normal aspirated V8	4.2L	AAM	●	●	●
X250	2010–2011	Normal aspirated V8	4.2L	ABS	●	●	●
X250	2010–2011	Normal aspirated V8	4.2L	ACM	●	●	●
X250	2010–2011	Normal aspirated V8	4.2L	ADCM	●	●	●
X250	2010–2011	Normal aspirated V8	4.2L	APIM	●	●	●
X250	2010–2011	Normal aspirated V8	4.2L	CCM	●	●	●
X250	2010–2011	Normal aspirated V8	4.2L	DABM	●	●	●
X250	2010–2011	Normal aspirated V8	4.2L	DACMC	●	●	●
X250	2010–2011	Normal aspirated V8	4.2L	DCSM	●	●	●
X250	2010–2011	Normal aspirated V8	4.2L	DDM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X250	2010-2011	Normal aspirated V8	4.2L	DSM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	FCDIM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	FLR	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	FSJB	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	GSM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	HCM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	HVAC	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	ICM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	ICP	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	ICS	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	IPC	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	KVM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	NCM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	OCS	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	PAM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	PBM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	PCM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	PDM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	RCM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	RDCM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	RSJB	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	SODL	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	SODR	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	SRM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	TCM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	TEL	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	TPM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	TVM	●	●	●
X250	2010-2011	Normal aspirated V8	4.2L	VIM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	AAM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	ABS	●	●	●
X250	2010-2011	Normal aspirated V8	5L	ACM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	ADCM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	APIM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	CCM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	DABM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	DACMC	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X250	2010-2011	Normal aspirated V8	5L	DCSM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	DDM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	DSM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	FCDIM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	FLR	●	●	●
X250	2010-2011	Normal aspirated V8	5L	FSJB	●	●	●
X250	2010-2011	Normal aspirated V8	5L	GSM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	HCM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	HVAC	●	●	●
X250	2010-2011	Normal aspirated V8	5L	ICM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	ICP	●	●	●
X250	2010-2011	Normal aspirated V8	5L	ICS	●	●	●
X250	2010-2011	Normal aspirated V8	5L	IPC	●	●	●
X250	2010-2011	Normal aspirated V8	5L	KVM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	NCM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	OCS	●	●	●
X250	2010-2011	Normal aspirated V8	5L	PAM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	PBM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	PCM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	PDM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	RCM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	RDCM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	RSJB	●	●	●
X250	2010-2011	Normal aspirated V8	5L	SODL	●	●	●
X250	2010-2011	Normal aspirated V8	5L	SODR	●	●	●
X250	2010-2011	Normal aspirated V8	5L	SRM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	TCM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	TEL	●	●	●
X250	2010-2011	Normal aspirated V8	5L	TPM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	TVM	●	●	●
X250	2010-2011	Normal aspirated V8	5L	VIM	●	●	●
X250	2008-2009	V6DIESEL		AAM	●	●	●
X250	2008-2009	V6DIESEL		ABS	●	●	●
X250	2008-2009	V6DIESEL		ACM	●	●	●
X250	2008-2009	V6DIESEL		ADCM	●	●	●
X250	2008-2009	V6DIESEL		APIM	●	●	●
X250	2008-2009	V6DIESEL		CCM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X250	2008-2009	V6DIESEL		DABM	●	●	●
X250	2008-2009	V6DIESEL		DCSM	●	●	●
X250	2008-2009	V6DIESEL		DDM	●	●	●
X250	2008-2009	V6DIESEL		DSM	●	●	●
X250	2008-2009	V6DIESEL		FCDIM	●	●	●
X250	2008-2009	V6DIESEL		FLR	●	●	●
X250	2008-2009	V6DIESEL		FSJB	●	●	●
X250	2008-2009	V6DIESEL		GSM	●	●	●
X250	2008-2009	V6DIESEL		HCM	●	●	●
X250	2008-2009	V6DIESEL		HVAC	●	●	●
X250	2008-2009	V6DIESEL		ICM	●	●	●
X250	2008-2009	V6DIESEL		ICP	●	●	●
X250	2008-2009	V6DIESEL		ICS	●	●	●
X250	2008-2009	V6DIESEL		IPC	●	●	●
X250	2008-2009	V6DIESEL		KVM	●	●	●
X250	2008-2009	V6DIESEL		NCM	●	●	●
X250	2008-2009	V6DIESEL		OCS	●	●	●
X250	2008-2009	V6DIESEL		PAM	●	●	●
X250	2008-2009	V6DIESEL		PBM	●	●	●
X250	2008-2009	V6DIESEL		PCM	●	●	●
X250	2008-2009	V6DIESEL		PDM	●	●	●
X250	2008-2009	V6DIESEL		RCM	●	●	●
X250	2008-2009	V6DIESEL		RSJB	●	●	●
X250	2008-2009	V6DIESEL		SODL	●	●	●
X250	2008-2009	V6DIESEL		SODR	●	●	●
X250	2008-2009	V6DIESEL		SRM	●	●	●
X250	2008-2009	V6DIESEL		TCM	●	●	●
X250	2008-2009	V6DIESEL		TEL	●	●	●
X250	2008-2009	V6DIESEL		TPM	●	●	●
X250	2008-2009	V6DIESEL		TVM	●	●	●
X250	2008-2009	V6DIESEL		VIM	●	●	●
X250	2008-2009	Normal aspirated V6		AAM	●	●	●
X250	2008-2009	Normal aspirated V6		ABS	●	●	●
X250	2008-2009	Normal aspirated V6		ACM	●	●	●
X250	2008-2009	Normal aspirated V6		ADCM	●	●	●
X250	2008-2009	Normal aspirated V6		APIM	●	●	●
X250	2008-2009	Normal aspirated V6		CCM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X250	2008-2009	Normal aspirated V6		DABM	●	●	●
X250	2008-2009	Normal aspirated V6		DCSM	●	●	●
X250	2008-2009	Normal aspirated V6		DDM	●	●	●
X250	2008-2009	Normal aspirated V6		DSM	●	●	●
X250	2008-2009	Normal aspirated V6		FCDIM	●	●	●
X250	2008-2009	Normal aspirated V6		FLR	●	●	●
X250	2008-2009	Normal aspirated V6		FSJB	●	●	●
X250	2008-2009	Normal aspirated V6		GSM	●	●	●
X250	2008-2009	Normal aspirated V6		HCM	●	●	●
X250	2008-2009	Normal aspirated V6		HVAC	●	●	●
X250	2008-2009	Normal aspirated V6		ICM	●	●	●
X250	2008-2009	Normal aspirated V6		ICP	●	●	●
X250	2008-2009	Normal aspirated V6		ICS	●	●	●
X250	2008-2009	Normal aspirated V6		IPC	●	●	●
X250	2008-2009	Normal aspirated V6		KVM	●	●	●
X250	2008-2009	Normal aspirated V6		NCM	●	●	●
X250	2008-2009	Normal aspirated V6		OCS	●	●	●
X250	2008-2009	Normal aspirated V6		PAM	●	●	●
X250	2008-2009	Normal aspirated V6		PBM	●	●	●
X250	2008-2009	Normal aspirated V6		PCM	●	●	●
X250	2008-2009	Normal aspirated V6		PDM	●	●	●
X250	2008-2009	Normal aspirated V6		RCM	●	●	●
X250	2008-2009	Normal aspirated V6		RSJB	●	●	●
X250	2008-2009	Normal aspirated V6		SODL	●	●	●
X250	2008-2009	Normal aspirated V6		SODR	●	●	●
X250	2008-2009	Normal aspirated V6		SRM	●	●	●
X250	2008-2009	Normal aspirated V6		TCM	●	●	●
X250	2008-2009	Normal aspirated V6		TEL	●	●	●
X250	2008-2009	Normal aspirated V6		TPM	●	●	●
X250	2008-2009	Normal aspirated V6		TVM	●	●	●
X250	2008-2009	Normal aspirated V6		VIM	●	●	●
X250	2008-2009	V8SC		AAM	●	●	●
X250	2008-2009	V8SC		ABS	●	●	●
X250	2008-2009	V8SC		ACM	●	●	●
X250	2008-2009	V8SC		ADCM	●	●	●
X250	2008-2009	V8SC		APIM	●	●	●
X250	2008-2009	V8SC		CCM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X250	2008-2009	V8SC		DABM	●	●	●
X250	2008-2009	V8SC		DCSM	●	●	●
X250	2008-2009	V8SC		DDM	●	●	●
X250	2008-2009	V8SC		DSM	●	●	●
X250	2008-2009	V8SC		FCDIM	●	●	●
X250	2008-2009	V8SC		FLR	●	●	●
X250	2008-2009	V8SC		FSJB	●	●	●
X250	2008-2009	V8SC		GSM	●	●	●
X250	2008-2009	V8SC		HCM	●	●	●
X250	2008-2009	V8SC		HVAC	●	●	●
X250	2008-2009	V8SC		ICM	●	●	●
X250	2008-2009	V8SC		ICP	●	●	●
X250	2008-2009	V8SC		ICS	●	●	●
X250	2008-2009	V8SC		IPC	●	●	●
X250	2008-2009	V8SC		KVM	●	●	●
X250	2008-2009	V8SC		NCM	●	●	●
X250	2008-2009	V8SC		OCS	●	●	●
X250	2008-2009	V8SC		PAM	●	●	●
X250	2008-2009	V8SC		PBM	●	●	●
X250	2008-2009	V8SC		PCM	●	●	●
X250	2008-2009	V8SC		PDM	●	●	●
X250	2008-2009	V8SC		RCM	●	●	●
X250	2008-2009	V8SC		RSJB	●	●	●
X250	2008-2009	V8SC		SODL	●	●	●
X250	2008-2009	V8SC		SODR	●	●	●
X250	2008-2009	V8SC		SRM	●	●	●
X250	2008-2009	V8SC		TCM	●	●	●
X250	2008-2009	V8SC		TEL	●	●	●
X250	2008-2009	V8SC		TPM	●	●	●
X250	2008-2009	V8SC		TVM	●	●	●
X250	2008-2009	V8SC		VIM	●	●	●
X250	2008-2009	V8NA		AAM	●	●	●
X250	2008-2009	V8NA		ABS	●	●	●
X250	2008-2009	V8NA		ACM	●	●	●
X250	2008-2009	V8NA		ADCM	●	●	●
X250	2008-2009	V8NA		APIM	●	●	●
X250	2008-2009	V8NA		CCM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X250	2008-2009	V8NA		DABM	●	●	●
X250	2008-2009	V8NA		DCSM	●	●	●
X250	2008-2009	V8NA		DDM	●	●	●
X250	2008-2009	V8NA		DSM	●	●	●
X250	2008-2009	V8NA		FCDIM	●	●	●
X250	2008-2009	V8NA		FLR	●	●	●
X250	2008-2009	V8NA		FSJB	●	●	●
X250	2008-2009	V8NA		GSM	●	●	●
X250	2008-2009	V8NA		HCM	●	●	●
X250	2008-2009	V8NA		HVAC	●	●	●
X250	2008-2009	V8NA		ICM	●	●	●
X250	2008-2009	V8NA		ICP	●	●	●
X250	2008-2009	V8NA		ICS	●	●	●
X250	2008-2009	V8NA		IPC	●	●	●
X250	2008-2009	V8NA		KVM	●	●	●
X250	2008-2009	V8NA		NCM	●	●	●
X250	2008-2009	V8NA		OCS	●	●	●
X250	2008-2009	V8NA		PAM	●	●	●
X250	2008-2009	V8NA		PBM	●	●	●
X250	2008-2009	V8NA		PCM	●	●	●
X250	2008-2009	V8NA		PDM	●	●	●
X250	2008-2009	V8NA		RCM	●	●	●
X250	2008-2009	V8NA		RSJB	●	●	●
X250	2008-2009	V8NA		SODL	●	●	●
X250	2008-2009	V8NA		SODR	●	●	●
X250	2008-2009	V8NA		SRM	●	●	●
X250	2008-2009	V8NA		TCM	●	●	●
X250	2008-2009	V8NA		TEL	●	●	●
X250	2008-2009	V8NA		TPM	●	●	●
X250	2008-2009	V8NA		TVM	●	●	●
X250	2008-2009	V8NA		VIM	●	●	●
X260	2016			ABS	●	●	●
X260	2016			BCM	●	●	●
X260	2016			CCM	●	●	●
X260	2016			GSM	●	●	●
X260	2016			GWM	●	●	●
X260	2016			IPC	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X260	2016			OCS	●	●	●
X260	2016	GTDI		PCM	●	●	●
X260	2016	V6SC		PCM	●	●	●
X260	2016	V6DIESEL		PCM	●	●	●
X260	2016	I4DIESEL		PCM	●	●	●
X260	2016			RCM	●	●	●
X260	2016			TCCM	●	●	●
X260	2016			TCM	●	●	●
X260	2016			TCU	●	●	●
X260	2016			TPM	●	●	●
X260	2016			VIM	●	●	●
X260	2016			AHU	●	●	●
X260	2016			AUCM	●	●	●
X260	2016			FCIM	●	●	●
X260	2016			HUD	●	●	●
X260	2016			HVAC	●	●	●
X260	2016			IMC	●	●	●
X260	2016			IPMA	●	●	●
X260	2016			IPMB	●	●	●
X260	2016			RHVAC	●	●	●
X260	2016			SODL	●	●	●
X260	2016			SODR	●	●	●
X260	2016			ATCM	●	●	●
X260	2016			CHCM	●	●	●
X260	2016			PAM	●	●	●
X260	2016			PSCM	●	●	●
X260	2016			SASM	●	●	●
X260	2016			DDM	●	●	●
X260	2016			DRDM	●	●	●
X260	2016			DSM	●	●	●
X260	2016			RFA	●	●	●
X260	2016			PDM	●	●	●
X260	2016			PRDM	●	●	●
X260	2016			PSM	●	●	●
X260	2016			RGTM	●	●	●
X260	2016			TBM	●	●	●
X260	2016			AAM	●	●	●

Vehicle Type	Model Year	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X260	2016			ISC	●	●	●
X300	2000			ABS	●	●	●
X300	2000			ECM	●	●	●
X300	2000			IPK	●	●	●
X300	2000			TCM	●	●	●
X300	2000			DSM	●	●	●
X300	2000			PSM	●	●	●
X300	2000			SLM	●	●	●
X300	2000			PRDM	●	●	●
X300	2000			PDM	●	●	●
X300	2000			DRDM	●	●	●
X300	2000			DDM	●	●	●
X300	2000			ACM	●	●	●
X300	2000			BPM	●	●	●
X300	2000			CCM	●	●	●
X300	2000			ADS	●	●	●
X300	2000			KTM	●	●	●
X300	1999			ABS	●	●	●
X300	1999			ECM	●	●	●
X300	1999			IPK	●	●	●
X300	1999			TCM	●	●	●
X300	1999			DSM	●	●	●
X300	1999			PSM	●	●	●
X300	1999			SLM	●	●	●
X300	1999			PRDM	●	●	●
X300	1999			PDM	●	●	●
X300	1999			DRDM	●	●	●
X300	1999			DDM	●	●	●
X300	1999			BPM	●	●	●
X300	1999			ACM	●	●	●
X300	1999			CCM	●	●	●
X300	1999			ADS	●	●	●
X300	1999			KTM	●	●	●
X300	1996			BPM	●	●	●
X300	1996			IPK	●	●	●
X300	1996			SEC	●	●	●
X300	1996			CCM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X300	1996			DSM	●	●	●
X300	1996			CMM	●	●	●
X300	1996			TCM	●	●	●
X300	1996			ECM	●	●	●
X300	1996			PSM	●	●	●
X300	1996			ABS	●	●	●
X300	1995			BPM	●	●	●
X300	1995			IPK	●	●	●
X300	1995			SEC	●	●	●
X300	1995			CCM	●	●	●
X300	1995			DSM	●	●	●
X300	1995			CMM	●	●	●
X300	1995			TCM	●	●	●
X300	1995			ECM	●	●	●
X300	1995			PSM	●	●	●
X300	1995			ABS	●	●	●
X300	1995_50			BPM	●	●	●
X300	1995_50			IPK	●	●	●
X300	1995_50			SEC	●	●	●
X300	1995_50			CCM	●	●	●
X300	1995_50			DSM	●	●	●
X300	1995_50			CMM	●	●	●
X300	1995_50			TCM	●	●	●
X300	1995_50			ECM	●	●	●
X300	1995_50			PSM	●	●	●
X300	1995_50			ABS	●	●	●
X300	1995_75			BPM	●	●	●
X300	1995_75			IPK	●	●	●
X300	1995_75			SEC	●	●	●
X300	1995_75			CCM	●	●	●
X300	1995_75			DSM	●	●	●
X300	1995_75			CMM	●	●	●
X300	1995_75			TCM	●	●	●
X300	1995_75			ECM	●	●	●
X300	1995_75			PSM	●	●	●
X300	1995_75			ABS	●	●	●
X300	1997			BPM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X300	1997			IPK	●	●	●
X300	1997			SEC	●	●	●
X300	1997			CCM	●	●	●
X300	1997			DSM	●	●	●
X300	1997			CMM	●	●	●
X300	1997			TCM	●	●	●
X300	1997			PSM	●	●	●
X300	1997			ECM	●	●	●
X300	1997			ABS	●	●	●
X300	1998			ABS	●	●	●
X300	1998			ECM	●	●	●
X300	1998			IPK	●	●	●
X300	1998			TCM	●	●	●
X300	1998			DSM	●	●	●
X300	1998			PSM	●	●	●
X300	1998			SLM	●	●	●
X300	1998			PRDM	●	●	●
X300	1998			PDM	●	●	●
X300	1998			DRDM	●	●	●
X300	1998			DDM	●	●	●
X300	1998			BPM	●	●	●
X300	1998			ACM	●	●	●
X300	1998			CCM	●	●	●
X300	1998			ADS	●	●	●
X300	1998			KTM	●	●	●
X300	1998_25			ABS	●	●	●
X300	1998_25			ECM	●	●	●
X300	1998_25			IPK	●	●	●
X300	1998_25			TCM	●	●	●
X300	1998_25			DSM	●	●	●
X300	1998_25			PSM	●	●	●
X300	1998_25			SLM	●	●	●
X300	1998_25			PRDM	●	●	●
X300	1998_25			PDM	●	●	●
X300	1998_25			DRDM	●	●	●
X300	1998_25			DDM	●	●	●
X300	1998_25			BPM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X300	1998_25			ACM	●	●	●
X300	1998_25			CCM	●	●	●
X300	1998_25			ADS	●	●	●
X300	1998_25			KTM	●	●	●
X300	2001			ABS	●	●	●
X300	2001			ECM	●	●	●
X300	2001			IPK	●	●	●
X300	2001			TCM	●	●	●
X300	2001			DSM	●	●	●
X300	2001			PSM	●	●	●
X300	2001			SLM	●	●	●
X300	2001			PRDM	●	●	●
X300	2001			PDM	●	●	●
X300	2001			DRDM	●	●	●
X300	2001			DDM	●	●	●
X300	2001			BPM	●	●	●
X300	2001			ACM	●	●	●
X300	2001			CCM	●	●	●
X300	2001			ADS	●	●	●
X300	2001			KTM	●	●	●
X300H	1996			BPM	●	●	●
X300H	1996			IPK	●	●	●
X300H	1996			SEC	●	●	●
X300H	1996			CCM	●	●	●
X300H	1996			DSM	●	●	●
X300H	1996			CMM	●	●	●
X300H	1996			TCM	●	●	●
X300H	1996			ECM	●	●	●
X300H	1996			PSM	●	●	●
X300H	1996			ABS	●	●	●
X350	2002. 5			ABS	●	●	●
X350	2002. 5			ACC	●	●	●
X350	2002. 5			ADHLS_L	●	●	●
X350	2002. 5			ADHLS_R	●	●	●
X350	2002. 5			AMP	●	●	●
X350	2002. 5			ARM	●	●	●
X350	2002. 5			ASU	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X350	2002.5			ATC	●	●	●
X350	2002.5			CPM	●	●	●
X350	2002.5			DDM	●	●	●
X350	2002.5			DSM	●	●	●
X350	2002.5			ECM	●	●	●
X350	2002.5			EPB	●	●	●
X350	2002.5			FETM	●	●	●
X350	2002.5			GEM	●	●	●
X350	2002.5			IP	●	●	●
X350	2002.5			ISM	●	●	●
X350	2002.5			NAV	●	●	●
X350	2002.5			PAM	●	●	●
X350	2002.5			RATC	●	●	●
X350	2002.5			REM	●	●	●
X350	2002.5			RETM	●	●	●
X350	2002.5			RSM	●	●	●
X350	2002.5			SCLM	●	●	●
X350	2002.5			TCM	●	●	●
X350	2002.5			VACM	●	●	●
X351	2013			ABS	●	●	●
X351	2013			BCM	●	●	●
X351	2013			CCM	●	●	●
X351	2013			CHCM	●	●	●
X351	2013			GSM	●	●	●
X351	2013			GWM	●	●	●
X351	2013			HCM	●	●	●
X351	2013			IPC	●	●	●
X351	2013			OCS	●	●	●
X351	2013			PBM	●	●	●
X351	2013			PCM	●	●	●
X351	2013			RCM	●	●	●
X351	2013			RDCM	●	●	●
X351	2013			RLM	●	●	●
X351	2013			SPMA	●	●	●
X351	2013			SPMB	●	●	●
X351	2013			SUMB	●	●	●
X351	2013			TCCM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X351	2013			TCM	●	●	●
X351	2013			VIM	●	●	●
X351	2013			CAV	●	●	●
X351	2013			DDM	●	●	●
X351	2013			DSM	●	●	●
X351	2013			FCDIM	●	●	●
X351	2013			FCIMB	●	●	●
X351	2013			HCMB	●	●	●
X351	2013			HVAC	●	●	●
X351	2013			PAM	●	●	●
X351	2013			PDM	●	●	●
X351	2013			PSM	●	●	●
X351	2013			RFA	●	●	●
X351	2013			RGTM	●	●	●
X351	2013			RHVAC	●	●	●
X351	2013			RLSM	●	●	●
X351	2013			RRSM	●	●	●
X351	2013			SCME	●	●	●
X351	2013			SCMF	●	●	●
X351	2013			SODL	●	●	●
X351	2013			SODR	●	●	●
X351	2013			AAM	●	●	●
X351	2013			ACM	●	●	●
X351	2013			DABM	●	●	●
X351	2013			NCM	●	●	●
X351	2013			REM	●	●	●
X351	2013			SRM	●	●	●
X351	2013			TVM	●	●	●
X351	2010–2012	V6DIESEL		AAM	●	●	●
X351	2010–2012	V6DIESEL		ABS	●	●	●
X351	2010–2012	V6DIESEL		ACM	●	●	●
X351	2010–2012	V6DIESEL		ADCM	●	●	●
X351	2010–2012	V6DIESEL		BCM	●	●	●
X351	2010–2012	V6DIESEL		CCM	●	●	●
X351	2010–2012	V6DIESEL		CHCM	●	●	●
X351	2010–2012	V6DIESEL		DABM	●	●	●
X351	2010–2012	V6DIESEL		DCSM	●	●	●

Vehicle Type	Model Year	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X351	2010–2012	V6DIESEL		DDM	●	●	●
X351	2010–2012	V6DIESEL		DSM	●	●	●
X351	2010–2012	V6DIESEL		FCDIM	●	●	●
X351	2010–2012	V6DIESEL		FCIMB	●	●	●
X351	2010–2012	V6DIESEL		GSM	●	●	●
X351	2010–2012	V6DIESEL		HCM	●	●	●
X351	2010–2012	V6DIESEL		HVAC	●	●	●
X351	2010–2012	V6DIESEL		IPC	●	●	●
X351	2010–2012	V6DIESEL		KVM	●	●	●
X351	2010–2012	V6DIESEL		OCS	●	●	●
X351	2010–2012	V6DIESEL		PAM	●	●	●
X351	2010–2012	V6DIESEL		PBM	●	●	●
X351	2010–2012	V6DIESEL		PCM	●	●	●
X351	2010–2012	V6DIESEL		PDM	●	●	●
X351	2010–2012	V6DIESEL		PSM	●	●	●
X351	2010–2012	V6DIESEL		RCM	●	●	●
X351	2010–2012	V6DIESEL		RDCM	●	●	●
X351	2010–2012	V6DIESEL		RDCSM	●	●	●
X351	2010–2012	V6DIESEL		REM	●	●	●
X351	2010–2012	V6DIESEL		RGTM	●	●	●
X351	2010–2012	V6DIESEL		RHVAC	●	●	●
X351	2010–2012	V6DIESEL		RLM	●	●	●
X351	2010–2012	V6DIESEL		SODL	●	●	●
X351	2010–2012	V6DIESEL		SODR	●	●	●
X351	2010–2012	V6DIESEL		SPMA	●	●	●
X351	2010–2012	V6DIESEL		SPMB	●	●	●
X351	2010–2012	V6DIESEL		SRM	●	●	●
X351	2010–2012	V6DIESEL		TCM	●	●	●
X351	2010–2012	V6DIESEL		TVM	●	●	●
X351	2010–2012	V6DIESEL		VIM	●	●	●
X351	2010–2012	V8NA		AAM	●	●	●
X351	2010–2012	V8NA		ABS	●	●	●
X351	2010–2012	V8NA		ACM	●	●	●
X351	2010–2012	V8NA		ADCM	●	●	●
X351	2010–2012	V8NA		BCM	●	●	●
X351	2010–2012	V8NA		CCM	●	●	●
X351	2010–2012	V8NA		CHCM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X351	2010–2012	V8NA		DABM	●	●	●
X351	2010–2012	V8NA		DCSM	●	●	●
X351	2010–2012	V8NA		DDM	●	●	●
X351	2010–2012	V8NA		DSM	●	●	●
X351	2010–2012	V8NA		FCDIM	●	●	●
X351	2010–2012	V8NA		FCIMB	●	●	●
X351	2010–2012	V8NA		GSM	●	●	●
X351	2010–2012	V8NA		HCMB	●	●	●
X351	2010–2012	V8NA		HCM	●	●	●
X351	2010–2012	V8NA		HVAC	●	●	●
X351	2010–2012	V8NA		IPC	●	●	●
X351	2010–2012	V8NA		KVM	●	●	●
X351	2010–2012	V8NA		OCS	●	●	●
X351	2010–2012	V8NA		PAM	●	●	●
X351	2010–2012	V8NA		PBM	●	●	●
X351	2010–2012	V8NA		PCM	●	●	●
X351	2010–2012	V8NA		PDM	●	●	●
X351	2010–2012	V8NA		PSM	●	●	●
X351	2010–2012	V8NA		RCM	●	●	●
X351	2010–2012	V8NA		RDCM	●	●	●
X351	2010–2012	V8NA		RDCSM	●	●	●
X351	2010–2012	V8NA		REM	●	●	●
X351	2010–2012	V8NA		RGTM	●	●	●
X351	2010–2012	V8NA		RHVAC	●	●	●
X351	2010–2012	V8NA		RLM	●	●	●
X351	2010–2012	V8NA		SODL	●	●	●
X351	2010–2012	V8NA		SODR	●	●	●
X351	2010–2012	V8NA		SPMA	●	●	●
X351	2010–2012	V8NA		SPMB	●	●	●
X351	2010–2012	V8NA		SRM	●	●	●
X351	2010–2012	V8NA		TCM	●	●	●
X351	2010–2012	V8NA		TVM	●	●	●
X351	2010–2012	V8NA		VIM	●	●	●
X351	2010–2012	V8SC		AAM	●	●	●
X351	2010–2012	V8SC		ABS	●	●	●
X351	2010–2012	V8SC		ACM	●	●	●
X351	2010–2012	V8SC		ADCM	●	●	●

Vehicle Type	Model Year	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X351	2010–2012	V8SC		BCM	●	●	●
X351	2010–2012	V8SC		CCM	●	●	●
X351	2010–2012	V8SC		CHCM	●	●	●
X351	2010–2012	V8SC		DABM	●	●	●
X351	2010–2012	V8SC		DCSM	●	●	●
X351	2010–2012	V8SC		DDM	●	●	●
X351	2010–2012	V8SC		DSM	●	●	●
X351	2010–2012	V8SC		FCDIM	●	●	●
X351	2010–2012	V8SC		FCIMB	●	●	●
X351	2010–2012	V8SC		GSM	●	●	●
X351	2010–2012	V8SC		HCMB	●	●	●
X351	2010–2012	V8SC		HCM	●	●	●
X351	2010–2012	V8SC		HVAC	●	●	●
X351	2010–2012	V8SC		IPC	●	●	●
X351	2010–2012	V8SC		KVM	●	●	●
X351	2010–2012	V8SC		OCS	●	●	●
X351	2010–2012	V8SC		PAM	●	●	●
X351	2010–2012	V8SC		PBM	●	●	●
X351	2010–2012	V8SC		PCM	●	●	●
X351	2010–2012	V8SC		PDM	●	●	●
X351	2010–2012	V8SC		PSM	●	●	●
X351	2010–2012	V8SC		RCM	●	●	●
X351	2010–2012	V8SC		RDCM	●	●	●
X351	2010–2012	V8SC		RDCSM	●	●	●
X351	2010–2012	V8SC		REM	●	●	●
X351	2010–2012	V8SC		RGTM	●	●	●
X351	2010–2012	V8SC		RHVAC	●	●	●
X351	2010–2012	V8SC		RLM	●	●	●
X351	2010–2012	V8SC		SODL	●	●	●
X351	2010–2012	V8SC		SODR	●	●	●
X351	2010–2012	V8SC		SPMA	●	●	●
X351	2010–2012	V8SC		SPMB	●	●	●
X351	2010–2012	V8SC		SRM	●	●	●
X351	2010–2012	V8SC		TCM	●	●	●
X351	2010–2012	V8SC		TVM	●	●	●
X351	2010–2012	V8SC		VIM	●	●	●
X351	2016			ABS	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X351	2016			BCM	●	●	●
X351	2016			CCM	●	●	●
X351	2016			GSM	●	●	●
X351	2016			GWM	●	●	●
X351	2016			HCM	●	●	●
X351	2016			OCS	●	●	●
X351	2016			PBM	●	●	●
X351	2016	V8SC		PCM	●	●	●
X351	2016	V6SC		PCM	●	●	●
X351	2016	GTDI		PCM	●	●	●
X351	2016	V6DIESEL		PCM	●	●	●
X351	2016			RCM	●	●	●
X351	2016			RDCM	●	●	●
X351	2016			TCCM	●	●	●
X351	2016			TCM	●	●	●
X351	2016			TCU	●	●	●
X351	2016			TPM	●	●	●
X351	2016			VIM	●	●	●
X351	2016			IMC	●	●	●
X351	2016			FCIM	●	●	●
X351	2016			HVAC	●	●	●
X351	2016			IPC	●	●	●
X351	2016			IPMB	●	●	●
X351	2016			RHVAC	●	●	●
X351	2016			SODL	●	●	●
X351	2016			SODR	●	●	●
X351	2016			CHCM	●	●	●
X351	2016			IPMA	●	●	●
X351	2016			PAM	●	●	●
X351	2016			PSCM	●	●	●
X351	2016			SASM	●	●	●
X351	2016			VDM	●	●	●
X351	2016			DDM	●	●	●
X351	2016			DSM	●	●	●
X351	2016			RFA	●	●	●
X351	2016			PDM	●	●	●
X351	2016			PSM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X351	2016			RGTM	●	●	●
X351	2016			RLSM	●	●	●
X351	2016			RRSM	●	●	●
X351	2016			AAM	●	●	●
X351	2016			ISC	●	●	●
X356	2006	V6DIESEL		AHCM	●	●	●
X356	2006	V6DIESEL		ABS	●	●	●
X356	2006	V6DIESEL		ACC	●	●	●
X356	2006	V6DIESEL		AMP	●	●	●
X356	2006	V6DIESEL		ARM	●	●	●
X356	2006	V6DIESEL		ASU	●	●	●
X356	2006	V6DIESEL		ATC	●	●	●
X356	2006	V6DIESEL		CPM	●	●	●
X356	2006	V6DIESEL		DDM	●	●	●
X356	2006	V6DIESEL		DSM	●	●	●
X356	2006	V6DIESEL		FETM	●	●	●
X356	2006	V6DIESEL		GEM	●	●	●
X356	2006	V6DIESEL		IP	●	●	●
X356	2006	V6DIESEL		ISM	●	●	●
X356	2006	V6DIESEL		NAV	●	●	●
X356	2006	V6DIESEL		PAM	●	●	●
X356	2006	V6DIESEL		PBM	●	●	●
X356	2006	V6DIESEL		PCM	●	●	●
X356	2006	V6DIESEL		RATC	●	●	●
X356	2006	V6DIESEL		REM	●	●	●
X356	2006	V6DIESEL		RETM	●	●	●
X356	2006	V6DIESEL		RSM	●	●	●
X356	2006	V6DIESEL		SCLM	●	●	●
X356	2006	V6DIESEL		TCM	●	●	●
X356	2006	V6DIESEL		TPM	●	●	●
X356	2006	V6DIESEL		VACM	●	●	●
X356	2006	V6NA		ABS	●	●	●
X356	2006	V6NA		ACC	●	●	●
X356	2006	V6NA		AMP	●	●	●
X356	2006	V6NA		ARM	●	●	●
X356	2006	V6NA		ASU	●	●	●
X356	2006	V6NA		ATC	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X356	2006	V6NA		CPM	●	●	●
X356	2006	V6NA		DDM	●	●	●
X356	2006	V6NA		DSM	●	●	●
X356	2006	V6NA		FETM	●	●	●
X356	2006	V6NA		GEM	●	●	●
X356	2006	V6NA		IP	●	●	●
X356	2006	V6NA		ISM	●	●	●
X356	2006	V6NA		NAV	●	●	●
X356	2006	V6NA		PAM	●	●	●
X356	2006	V6NA		PBM	●	●	●
X356	2006	V6NA		PCM	●	●	●
X356	2006	V6NA		RATC	●	●	●
X356	2006	V6NA		REM	●	●	●
X356	2006	V6NA		RETM	●	●	●
X356	2006	V6NA		RSM	●	●	●
X356	2006	V6NA		SCLM	●	●	●
X356	2006	V6NA		TCM	●	●	●
X356	2006	V6NA		TPM	●	●	●
X356	2006	V6NA		VACM	●	●	●
X356	2006	V8NA		ABS	●	●	●
X356	2006	V8NA		ACC	●	●	●
X356	2006	V8NA		AMP	●	●	●
X356	2006	V8NA		ARM	●	●	●
X356	2006	V8NA		ASU	●	●	●
X356	2006	V8NA		ATC	●	●	●
X356	2006	V8NA		CPM	●	●	●
X356	2006	V8NA		DDM	●	●	●
X356	2006	V8NA		DSM	●	●	●
X356	2006	V8NA		FETM	●	●	●
X356	2006	V8NA		GEM	●	●	●
X356	2006	V8NA		IP	●	●	●
X356	2006	V8NA		ISM	●	●	●
X356	2006	V8NA		NAV	●	●	●
X356	2006	V8NA		PAM	●	●	●
X356	2006	V8NA		PBM	●	●	●
X356	2006	V8NA		PCM	●	●	●
X356	2006	V8NA		RATC	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X356	2006	V8NA		REM	●	●	●
X356	2006	V8NA		RETM	●	●	●
X356	2006	V8NA		RSM	●	●	●
X356	2006	V8NA		SCLM	●	●	●
X356	2006	V8NA		TCM	●	●	●
X356	2006	V8NA		TPM	●	●	●
X356	2006	V8NA		VACM	●	●	●
X356	2006	V8SC		ABS	●	●	●
X356	2006	V8SC		ACC	●	●	●
X356	2006	V8SC		AMP	●	●	●
X356	2006	V8SC		ARM	●	●	●
X356	2006	V8SC		ASU	●	●	●
X356	2006	V8SC		ATC	●	●	●
X356	2006	V8SC		CPM	●	●	●
X356	2006	V8SC		DDM	●	●	●
X356	2006	V8SC		DSM	●	●	●
X356	2006	V8SC		FETM	●	●	●
X356	2006	V8SC		GEM	●	●	●
X356	2006	V8SC		IP	●	●	●
X356	2006	V8SC		ISM	●	●	●
X356	2006	V8SC		NAV	●	●	●
X356	2006	V8SC		PAM	●	●	●
X356	2006	V8SC		PBM	●	●	●
X356	2006	V8SC		PCM	●	●	●
X356	2006	V8SC		RATC	●	●	●
X356	2006	V8SC		REM	●	●	●
X356	2006	V8SC		RETM	●	●	●
X356	2006	V8SC		RSM	●	●	●
X356	2006	V8SC		SCLM	●	●	●
X356	2006	V8SC		TCM	●	●	●
X356	2006	V8SC		TPM	●	●	●
X356	2006	V8SC		VACM	●	●	●
X358	2008	V6DIESEL		AHCM	●	●	●
X358	2008	V6DIESEL		ABS	●	●	●
X358	2008	V6DIESEL		ACC	●	●	●
X358	2008	V6DIESEL		AMP	●	●	●
X358	2008	V6DIESEL		ARM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X358	2008	V6DIESEL		ASU	●	●	●
X358	2008	V6DIESEL		ATC	●	●	●
X358	2008	V6DIESEL		CPM	●	●	●
X358	2008	V6DIESEL		DABM	●	●	●
X358	2008	V6DIESEL		DACMC	●	●	●
X358	2008	V6DIESEL		DCSM	●	●	●
X358	2008	V6DIESEL		DDM	●	●	●
X358	2008	V6DIESEL		DSM	●	●	●
X358	2008	V6DIESEL		FETM	●	●	●
X358	2008	V6DIESEL		GEM	●	●	●
X358	2008	V6DIESEL		GWM	●	●	●
X358	2008	V6DIESEL		IP	●	●	●
X358	2008	V6DIESEL		ISM	●	●	●
X358	2008	V6DIESEL		NAV	●	●	●
X358	2008	V6DIESEL		PAM	●	●	●
X358	2008	V6DIESEL		PBM	●	●	●
X358	2008	V6DIESEL		PCM	●	●	●
X358	2008	V6DIESEL		RATC	●	●	●
X358	2008	V6DIESEL		REM	●	●	●
X358	2008	V6DIESEL		RETM	●	●	●
X358	2008	V6DIESEL		RSM	●	●	●
X358	2008	V6DIESEL		SCLM	●	●	●
X358	2008	V6DIESEL		SRM	●	●	●
X358	2008	V6DIESEL		TCM	●	●	●
X358	2008	V6DIESEL		TPM	●	●	●
X358	2008	V6DIESEL		VACM	●	●	●
X358	2008	V6NA		ABS	●	●	●
X358	2008	V6NA		ACC	●	●	●
X358	2008	V6NA		AMP	●	●	●
X358	2008	V6NA		ARM	●	●	●
X358	2008	V6NA		ASU	●	●	●
X358	2008	V6NA		ATC	●	●	●
X358	2008	V6NA		CPM	●	●	●
X358	2008	V6NA		DABM	●	●	●
X358	2008	V6NA		DACMC	●	●	●
X358	2008	V6NA		DCSM	●	●	●
X358	2008	V6NA		DDM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X358	2008	V6NA		DSM	●	●	●
X358	2008	V6NA		FETM	●	●	●
X358	2008	V6NA		GEM	●	●	●
X358	2008	V6NA		GWM	●	●	●
X358	2008	V6NA		IP	●	●	●
X358	2008	V6NA		ISM	●	●	●
X358	2008	V6NA		NAV	●	●	●
X358	2008	V6NA		PAM	●	●	●
X358	2008	V6NA		PBM	●	●	●
X358	2008	V6NA		PCM	●	●	●
X358	2008	V6NA		RATC	●	●	●
X358	2008	V6NA		REM	●	●	●
X358	2008	V6NA		RETM	●	●	●
X358	2008	V6NA		RSM	●	●	●
X358	2008	V6NA		SCLM	●	●	●
X358	2008	V6NA		SRM	●	●	●
X358	2008	V6NA		TCM	●	●	●
X358	2008	V6NA		TPM	●	●	●
X358	2008	V6NA		VACM	●	●	●
X358	2008	V8NA		ABS	●	●	●
X358	2008	V8NA		ACC	●	●	●
X358	2008	V8NA		AMP	●	●	●
X358	2008	V8NA		ARM	●	●	●
X358	2008	V8NA		ASU	●	●	●
X358	2008	V8NA		ATC	●	●	●
X358	2008	V8NA		CPM	●	●	●
X358	2008	V8NA		DABM	●	●	●
X358	2008	V8NA		DACMC	●	●	●
X358	2008	V8NA		DCSM	●	●	●
X358	2008	V8NA		DDM	●	●	●
X358	2008	V8NA		DSM	●	●	●
X358	2008	V8NA		FETM	●	●	●
X358	2008	V8NA		GEM	●	●	●
X358	2008	V8NA		GWM	●	●	●
X358	2008	V8NA		IP	●	●	●
X358	2008	V8NA		ISM	●	●	●
X358	2008	V8NA		NAV	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X358	2008	V8NA		PAM	●	●	●
X358	2008	V8NA		PBM	●	●	●
X358	2008	V8NA		PCM	●	●	●
X358	2008	V8NA		RATC	●	●	●
X358	2008	V8NA		REM	●	●	●
X358	2008	V8NA		RETM	●	●	●
X358	2008	V8NA		RSM	●	●	●
X358	2008	V8NA		SCLM	●	●	●
X358	2008	V8NA		SRM	●	●	●
X358	2008	V8NA		TCM	●	●	●
X358	2008	V8NA		TPM	●	●	●
X358	2008	V8NA		VACM	●	●	●
X358	2008	V8SC		ABS	●	●	●
X358	2008	V8SC		ACC	●	●	●
X358	2008	V8SC		AMP	●	●	●
X358	2008	V8SC		ARM	●	●	●
X358	2008	V8SC		ASU	●	●	●
X358	2008	V8SC		ATC	●	●	●
X358	2008	V8SC		CPM	●	●	●
X358	2008	V8SC		DABM	●	●	●
X358	2008	V8SC		DACMC	●	●	●
X358	2008	V8SC		DCSM	●	●	●
X358	2008	V8SC		DDM	●	●	●
X358	2008	V8SC		DSM	●	●	●
X358	2008	V8SC		FETM	●	●	●
X358	2008	V8SC		GEM	●	●	●
X358	2008	V8SC		GWM	●	●	●
X358	2008	V8SC		IP	●	●	●
X358	2008	V8SC		ISM	●	●	●
X358	2008	V8SC		NAV	●	●	●
X358	2008	V8SC		PAM	●	●	●
X358	2008	V8SC		PBM	●	●	●
X358	2008	V8SC		PCM	●	●	●
X358	2008	V8SC		RATC	●	●	●
X358	2008	V8SC		REM	●	●	●
X358	2008	V8SC		RETM	●	●	●
X358	2008	V8SC		RSM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X358	2008	V8SC		SCLM	●	●	●
X358	2008	V8SC		SRM	●	●	●
X358	2008	V8SC		TCM	●	●	●
X358	2008	V8SC		TPM	●	●	●
X358	2008	V8SC		VACM	●	●	●
X400	2001_50			ABS	●	●	●
X400	2001_50			ECM	●	●	●
X400	2001_50			IP	●	●	●
X400	2001_50			TCM	●	●	●
X400	2001_50			ATC	●	●	●
X400	2001_50			PAM	●	●	●
X400	2001_50			ISM	●	●	●
X400	2001_50			ARM	●	●	●
X400	2001_50			ADHLS	●	●	●
X400	2001_50			FETM	●	●	●
X400	2001_50			GEM	●	●	●
X400	2001_50			NAV	●	●	●
X400	2001_50			CPM	●	●	●
X400	2001_50			VACM	●	●	●
X404	2004	AJ61		ABS	●	●	●
X404	2004	AJ61		ADHLS	●	●	●
X404	2004	AJ61		AMP	●	●	●
X404	2004	AJ61		ARM	●	●	●
X404	2004	AJ61		ATC	●	●	●
X404	2004	AJ61		CPM	●	●	●
X404	2004	AJ61		DSM	●	●	●
X404	2004	AJ61		ECM	●	●	●
X404	2004	AJ61		FETM	●	●	●
X404	2004	AJ61		GEM	●	●	●
X404	2004	AJ61		IP	●	●	●
X404	2004	AJ61		ISM	●	●	●
X404	2004	AJ61		NAV	●	●	●
X404	2004	AJ61		PAM	●	●	●
X404	2004	AJ61		TCM	●	●	●
X404	2004	AJ61		TPM	●	●	●
X404	2004	AJ61		VACM	●	●	●
X404	2004	TDCi	2.2L	ABS	●	●	●

Vehicle Type	Model Year	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X404	2004	TDCi	2.2L	ADHLS	●	●	●
X404	2004	TDCi	2.2L	AMP	●	●	●
X404	2004	TDCi	2.2L	ARM	●	●	●
X404	2004	TDCi	2.2L	ATC	●	●	●
X404	2004	TDCi	2.2L	CPM	●	●	●
X404	2004	TDCi	2.2L	DSM	●	●	●
X404	2004	TDCi	2.2L	FETM	●	●	●
X404	2004	TDCi	2.2L	GEM	●	●	●
X404	2004	TDCi	2.2L	IP	●	●	●
X404	2004	TDCi	2.2L	ISM	●	●	●
X404	2004	TDCi	2.2L	NAV	●	●	●
X404	2004	TDCi	2.2L	PAM	●	●	●
X404	2004	TDCi	2.2L	TPM	●	●	●
X404	2004	TDCi	2.2L	VACM	●	●	●
X404	2004	TDCi	2.2L	ECM	●	●	●
X404	2004	TDCi	2.2L	FFH	●	●	●
X404	2004	TDCi	2.2L	GWM	●	●	●
X404	2004	TDCi	2.2L	TCM	●	●	●
X404	2004	TDCi	2L	ABS	●	●	●
X404	2004	TDCi	2L	ADHLS	●	●	●
X404	2004	TDCi	2L	AMP	●	●	●
X404	2004	TDCi	2L	ARM	●	●	●
X404	2004	TDCi	2L	ATC	●	●	●
X404	2004	TDCi	2L	CPM	●	●	●
X404	2004	TDCi	2L	DSM	●	●	●
X404	2004	TDCi	2L	FETM	●	●	●
X404	2004	TDCi	2L	GEM	●	●	●
X404	2004	TDCi	2L	IP	●	●	●
X404	2004	TDCi	2L	ISM	●	●	●
X404	2004	TDCi	2L	NAV	●	●	●
X404	2004	TDCi	2L	PAM	●	●	●
X404	2004	TDCi	2L	TPM	●	●	●
X404	2004	TDCi	2L	VACM	●	●	●
X404	2004	TDCi	2L	ECM	●	●	●
X404	2004	TDCi	2L	FFH	●	●	●
XJS	1996			CCM	●	●	●
XJS	1996			SEC	●	●	●

Vehicle Type	Model Year	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XJS	1996			DSM	●	●	●
XJS	1996			TCM	●	●	●
XJS	1996			ECM	●	●	●
XJS	1996			ABS	●	●	●
XJS	1994_75			CCM	●	●	●
XJS	1994_75			SEC	●	●	●
XJS	1994_75			DSM	●	●	●
XJS	1994_75			TCM	●	●	●
XJS	1994_75			ECM	●	●	●
XJS	1994_75			ABS	●	●	●
XJS	1995_25			CCM	●	●	●
XJS	1995_25			SEC	●	●	●
XJS	1995_25			DSM	●	●	●
XJS	1995_25			TCM	●	●	●
XJS	1995_25			ECM	●	●	●
XJS	1995_25			ABS	●	●	●
X760	2016			ABS	●	●	●
X760	2016			BCM	●	●	●
X760	2016			CCM	●	●	●
X760	2016			GSM	●	●	●
X760	2016			GWM	●	●	●
X760	2016			IPC	●	●	●
X760	2016			OCS	●	●	●
X760	2016	V6SC		PCM	●	●	●
X760	2016	GTDI		PCM	●	●	●
X760	2016	I4DIESEL		PCM	●	●	●
X760	2016			RCM	●	●	●
X760	2016			TCM	●	●	●
X760	2016			TCU	●	●	●
X760	2016			TPM	●	●	●
X760	2016			VIM	●	●	●
X760	2016			ATCM	●	●	●
X760	2016			CHCM	●	●	●
X760	2016			IPMA	●	●	●
X760	2016			PAM	●	●	●
X760	2016			PSCM	●	●	●
X760	2016			SASM	●	●	●

Vehicle Type	Model Year	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X760	2016			DDM	●	●	●
X760	2016			DRDM	●	●	●
X760	2016			DSM	●	●	●
X760	2016			RFA	●	●	●
X760	2016			PDM	●	●	●
X760	2016			PRDM	●	●	●
X760	2016			RGTM	●	●	●
X760	2016			TBM	●	●	●
X760	2016			AHU	●	●	●
X760	2016			AUCM	●	●	●
X760	2016			CAV	●	●	●
X760	2016			FCDIM	●	●	●
X760	2016			FCIM	●	●	●
X760	2016			HUD	●	●	●
X760	2016			HVAC	●	●	●
X760	2016			IPMB	●	●	●
X760	2016			NAV	●	●	●
X760	2016			SODL	●	●	●
X760	2016			SODR	●	●	●
X760	2016			AAM	●	●	●
X760	2016			ACM	●	●	●
X760	2016			DABM	●	●	●
X760	2016			NCM	●	●	●
X760	2016			SRM	●	●	●
X760	2016			TVM	●	●	●

Special Function

Vehicle Type	Model Year	Special Function Name
X150	2006.5~2009	Driver's door window glass
X150	2006.5~2009	Erase all existing keys.
X150	2006.5~2009	Headlamp and axle sensor calibration.
X150	2006.5~2009	Pre-delivery inspection
X150	2006.5~2009	Vehicle reset
X150	2006.5~2009	Powertrain control module adaption clear
X150	2006.5~2009	Transmission control module adaptation clear
X150	2006.5~2009	Idle speed test.
X150	2006.5~2009	Immobilization
X150	2006.5~2009	Key programming
X150	2006.5~2009	Lateral accelerometer calibration.
X150	2006.5~2009	Parking brake release to service position
X150	2006.5~2009	Passenger's door window glass
X150	2006.5~2009	Pressure sensor calibration.
X150	2006.5~2009	Seat cover replacement
X150	2006.5~2009	Steering column calibration
X150	2006.5~2009	Tire pressure monitor confirmation application.
X150	2006.5~2009	Tire pressure monitor receiver calibration.
X150	2006.5~2009	Tire pressure sensor replacement.
X150	2006.5~2009	Verify keys
X150	2006.5~2009	Yaw rate sensor calibration.
X150	2006.5~2009	Driver's seat calibration
X150	2006.5~2009	Passenger's seat calibration
X150	2006.5~2009	Speed control alignment
X150	2006.5~2009	Start authorisation status
X150	2006.5~2009	Purge valve self test
X150	2006.5~2009	Evaporative system leak check
X150	2006.5~2009	Parking brake release to service position
X150	2006.5~2009	Tire pressure monitoring wheel sensor test
X150	2006.5~2009	Fuel prime routine
X150	2006.5~2009	Odometer calibration
X150	2006.5~2009	Flight recorder
X150	2006.5~2009	OBDII readiness tests
X150	2006.5~2009	Alarm trigger history
X150	2006.5~2009	Mirror personalisation features
X150	2006.5~2009	Vehicle immobilizer control module (steering column lock)
X150	2006.5~2009	Tire pressure monitor module
X150	2006.5~2009	Speed control module
X150	2006.5~2009	Passenger's seat module
X150	2006.5~2009	Heating ventilation and air conditioning control module
X150	2006.5~2009	Headlamp control module
X150	2006.5~2009	Folding top control module
X150	2006.5~2009	Driver's seat module
X150	2006.5~2009	Adaptive damping control module
X150	2006.5~2009	ABS control module
X150	2006.5~2009	Parking assist control module
X150	2010	Vehicle immobilizer control module (steering column lock)
X150	2010	Tire pressure monitor module
X150	2010	Speed control module
X150	2010	Satellite audio unit module

VehicleType	ModelYear	Specil Function Name
X150	2010	Heating ventilation and air conditioning control module
X150	2010	Headlamp control module
X150	2010	Folding top control module
X150	2010	Front control/display interface module (high level display front)
X150	2010	Driver's seat module
X150	2010	Digital audio broadcast module
X150	2010	Active damping control module
X150	2010	Passenger's seat module
X150	2010	Battery replacement
X150	2010	Brake bleed.
X150	2010	Vehicle reset
X150	2010	Powertrain control module adaption clear
X150	2010	Transmission control module adaption clear
X150	2010	Build mode
X150	2010	Calibration learn
X150	2010	Check engine oil level.
X150	2010	Driver's side – Door glass window calibration
X150	2010	Erase all existing keys.
X150	2010	Headlamp and axle sensor calibration.
X150	2010	Height calibration
X150	2010	Idle speed test.
X150	2010	Immobilization
X150	2010	Key programming
X150	2010	Oil service counter reset
X150	2010	Parking brake release to service position
X150	2010	Passenger's side – Door glass window calibration
X150	2010	Reset oil level
X150	2010	Seat cover replacement
X150	2010	Steering column calibration
X150	2010	Tire pressure monitor confirmation application.
X150	2010	Tire pressure monitor receiver calibration.
X150	2010	Tire pressure monitor sensor identification display
X150	2010	Tire pressure sensor replacement.
X150	2010	Verify keys
X150	2010	Driver's seat calibration
X150	2010	Passenger's seat calibration
X150	2010	Speed control alignment
X150	2010	Stepper motor initialisation
X150	2010	Control module calibration
X150	2010	Manufacturing Mode
X150	2010	Calibration Learn
X150	2010	Adaptive Damping Height Calibration
X150	2010	Start authorisation status
X150	2010	Purge valve self test
X150	2010	Evaporative System Diagnostic Test
X150	2010	Fuel prime routine
X150	2010	Service history data
X150	2010	Tire pressure monitoring wheel sensor test
X150	2010	Odometer calibration
X150	2010	Fuel lift pump
X150	2010	Flight recorder
X150	2010	OBDII readiness tests
X150	2010	High pressure fuel pump test
X150	2010	Fuel tank smoke test

VehicleType	ModelYear	Specil Function Name
X150	2010	Alarm trigger history
X150	2010	Mirror personalisation features
X150	2010	ABS control module
X150	2010	Gear shift module
X150	2010	Parking assist control module
X150	2010	Parking brake control module
X150	2010	Restraints occupant classification system module
X152	2014	Folding top control module B
X152	2014	Immobiliser antenna unit
X152	2014	Front control/display interface module (high level display front)
X152	2014	Navigation control module
X152	2014	Service interval reset.
X152	2014	Oil service counter reset
X152	2014	Parking brake pad replacement – Exit maintenance mode
X152	2014	Parking brake pad replacement – Release to service position
X152	2014	Parking brake activation
X152	2014	Brake bleed
X152	2014	Steering angle sensor calibration
X152	2014	Longitudinal accelerometer calibration
X152	2014	Headlamp control module system calibration
X152	2014	Drivers side window calibration
X152	2014	Passenger side window calibration
X152	2014	Steering column calibration
X152	2014	Tire pressure sensor replacement
X152	2014	Tire pressure monitor sensor identification display
X152	2014	Tire pressure monitoring wheel sensor test
X152	2014	Battery replacement
X152	2014	Verify battery 2 charging
X152	2014	Idle speed test
X152	2014	Throttle valve actuator replacement
X152	2014	Injector Valve Test
X152	2014	Verify keys
X152	2014	Check Passive Keys Enabled
X152	2014	Recover Programmed keys
X152	2014	Check all antennas
X152	2014	Immobiliser Antenna Unit Functionality Check
X152	2014	Driver's seat calibration
X152	2014	Seat cushion replacement
X152	2014	Brake calliper replacement assembly test
X152	2014	Valet Mode reset
X152	2014	Variable assist power steering curves programming
X152	2014	Actuator test
X152	2014	Actuator initialisation
X152	2014	Control module calibration
X152	2014	Manufacturing Mode
X152	2014	Height calibration
X152	2014	Calibrate dynamic volume control
X152	2014	Pre-delivery inspection
X152	2014	Pre-delivery inspection
X152	2014	Transportation Mode
X152	2014	Restraints build Mode
X152	2014	Vehicle reset
X152	2014	Start authorisation status
X152	2014	Test dual battery system

VehicleType	ModelYear	Specil Function Name
X152	2014	Quiescent relay box internal check
X152	2014	Purge valve self test
X152	2014	Evaporative System Diagnostic Test
X152	2014	Powertrain control module adaption clear
X152	2014	Transmission control module adaption clear
X152	2014	Disc wear protection reset
X152	2014	Disc wear protection level
X152	2014	Tailgate/trunk calibration
X152	2014	Tire pressure monitoring wheel sensor test
X152	2014	Power Train Control module unlock application
X152	2014	Odometer calibration
X152	2014	Smart Key health check
X152	2014	Fuel prime routine
X152	2014	OBDII readiness tests
X152	2014	Adaptive fuel trim display
X152	2014	High pressure fuel pump test
X152	2014	Fuel tank smoke test
X152	2014	Fuel Pump Supply Enable/Disable
X152	2014	Infotainment system special applications
X152	2014	DVD Region Counter Reset
X152	2014	Activate Television Test Picture
X152	2014	ABS control module
X152	2014	Folding top control module
X152	2014	Gear shift module
X152	2014	Auto high beam control module
X152	2014	Integrated control panel
X152	2014	Parking assist control module
X152	2014	Parking brake control module
X152	2014	Restraints occupant classification system module
X152	2014	All terrain control module
X152	2014	Image processing control module
X152	2014	Rear gate / trunk module
X152	2016	Oil change reset
X152	2016	Service interval reset
X152	2016	Driver's side - Door glass window calibration
X152	2016	Passenger's side - Door glass window calibration
X152	2016	Tailgate/trunk calibration
X202	2002.5	Parking brake release to service position
X202	2002.5	Reset the oil service counter.
X202	2002.5	Tire pressure monitor confirmation application.
X202	2002.5	Tire pressure monitor receiver calibration.
X202	2002.5	Tire pressure sensor replacement.
X250	2008-2009	Central junction box configuration update
X250	2008-2009	Vehicle immobilizer control module (steering column lock)
X250	2008-2009	Tire pressure monitor module
X250	2008-2009	Speed control module
X250	2008-2009	Side object detection control module - Left
X250	2008-2009	Front control/display interface module (high level display front)
X250	2008-2009	Adaptive damping control module
X250	2008-2009	ABS control module
X250	2008-2009	Parking aid control module
X250	2008-2009	Navigation control module
X250	2008-2009	Air conditioning system adaption reset
X250	2008-2009	Battery replacement

VehicleType	ModelYear	Specil Function Name
X250	2008–2009	Headlamp control module system calibration
X250	2008–2009	Adaptive damping module calibration learn
X250	2008–2009	Powertrain control module adaption clear
X250	2008–2009	Transmission control module adaption clear
X250	2008–2009	Diesel particulate filter condition (stored values)
X250	2008–2009	Brake bleed.
X250	2008–2009	Diesel particulate filter dynamic regeneration
X250	2008–2009	Diesel particulate filter fuel related component replacement
X250	2008–2009	Diesel particulate filter replacement
X250	2008–2009	Driver's side – Door glass window calibration
X250	2008–2009	Erase all existing keys.
X250	2008–2009	Headlamp control module system calibration
X250	2008–2009	Idle speed test.
X250	2008–2009	Immobilisation
X250	2008–2009	Key programming
X250	2008–2009	Parking brake release to service position
X250	2008–2009	Passenger's side – Door glass window calibration
X250	2008–2009	Pedestrian impact crash status reset
X250	2008–2009	Reset the oil service counter.
X250	2008–2009	Restraints build mode
X250	2008–2009	Seat cushion replacement
X250	2008–2009	Steering column calibration
X250	2008–2009	Tire pressure monitor confirmation application.
X250	2008–2009	Tire pressure monitor receiver calibration.
X250	2008–2009	Tire pressure sensor replacement.
X250	2008–2009	Verify keys
X250	2008–2009	Driver's seat calibration
X250	2008–2009	Speed control alignment
X250	2008–2009	Speed control internal state
X250	2008–2009	Vent actuators test
X250	2008–2009	Stepper motor initialisation
X250	2008–2009	Start authorisation status
X250	2008–2009	Side object detection module history
X250	2008–2009	Side Object Detection Configuration
X250	2008–2009	Purge valve self test
X250	2008–2009	Evaporative system leak check
X250	2008–2009	High pressure injection pump replacement
X250	2008–2009	Tire pressure monitoring wheel sensor test
X250	2008–2009	Odometer calibration
X250	2008–2009	Fuel prime routine
X250	2008–2009	Flight recorder
X250	2008–2009	OBDII readiness tests
X250	2008–2009	Mirror personalisation features
X250	2008–2009	Parking brake control module
X250	2010–2011	Vehicle immobilizer control module (steering column lock)
X250	2010–2011	Tire pressure monitor module
X250	2010–2011	Side object detection control module – Left
X250	2010–2011	Front control/display interface module (high level display front)
X250	2010–2011	Digital audio broadcast module
X250	2010–2011	Active damping control module
X250	2010–2011	Parking aid control module
X250	2010–2011	Navigation control module
X250	2010–2011	Battery replacement
X250	2010–2011	Headlamp control module system calibration

VehicleType	ModelYear	Specil Function Name
X250	2010–2011	Powertrain control module adaption clear
X250	2010–2011	Transmission control module adaption clear
X250	2010–2011	Brake bleed.
X250	2010–2011	Build mode
X250	2010–2011	Calibration learn
X250	2010–2011	Check engine oil level.
X250	2010–2011	Diesel particulate filter dynamic regeneration
X250	2010–2011	Diesel particulate filter replacement
X250	2010–2011	Driver's side – Door glass window calibration
X250	2010–2011	Erase all existing keys.
X250	2010–2011	Exhaust gas recirculation valve
X250	2010–2011	Headlamp control module system calibration
X250	2010–2011	Height calibration
X250	2010–2011	Idle speed test.
X250	2010–2011	Immobilization
X250	2010–2011	Injector replacement
X250	2010–2011	Key programming
X250	2010–2011	Oil service counter reset
X250	2010–2011	Parking brake release to service position
X250	2010–2011	Passenger's side – Door glass window calibration
X250	2010–2011	Pedestrian impact crash status reset
X250	2010–2011	Reset oil level
X250	2010–2011	Restraints build mode
X250	2010–2011	Seat cushion replacement
X250	2010–2011	Steering column calibration
X250	2010–2011	Throttle valve actuator
X250	2010–2011	Tire pressure monitor confirmation application.
X250	2010–2011	Tire pressure monitor receiver calibration.
X250	2010–2011	Tire pressure sensor replacement.
X250	2010–2011	Verify keys
X250	2010–2011	Driver's seat calibration
X250	2010–2011	Speed control alignment
X250	2010–2011	Vent actuators test
X250	2010–2011	Stepper motor initialisation
X250	2010–2011	Reset water in fuel detection
X250	2010–2011	Turbine shut-off valve
X250	2010–2011	Oxygen sensor
X250	2010–2011	Oxidation catalyst
X250	2010–2011	Control module calibration
X250	2010–2011	Start authorisation status
X250	2010–2011	Start authorisation status
X250	2010–2011	Side object detection module history
X250	2010–2011	Side Object Detection Configuration
X250	2010–2011	Purge valve self test
X250	2010–2011	Evaporative System Diagnostic Test
X250	2010–2011	Fuel prime routine
X250	2010–2011	Service history data
X250	2010–2011	Parking brake release to service position
X250	2010–2011	Parking brake release to service position
X250	2010–2011	Tire pressure monitoring wheel sensor test
X250	2010–2011	ROW Service interval options
X250	2010–2011	Odometer calibration
X250	2010–2011	Fuel lift pump
X250	2010–2011	Fuel lift pump

VehicleType	ModelYear	Specil Function Name
X250	2010–2011	Flight recorder
X250	2010–2011	Flight recorder
X250	2010–2011	OBDII readiness tests
X250	2010–2011	Display injector correction factors.
X250	2010–2011	High pressure fuel pump test
X250	2010–2011	Paddle shift configuration
X250	2010–2011	Fuel tank smoke test
X250	2010–2011	Air Path Set-up Routine
X250	2010–2011	Mirror personalisation features
X250	2010–2011	ABS control module
X250	2010–2011	Gear shift module
X250	2010–2011	Parking brake control module
X250	2010–2011	Restraints occupant classification system module
X250	2010–2011	Speed control module
X250	2012	Left side safety belt pretensioner
X250	2012	Right side safety belt pretensioner
X250	2012	Gateway module
X250	2012	Vehicle immobilizer control module (steering column lock)
X250	2012	Tire pressure monitor module
X250	2012	Speed control module
X250	2012	Digital audio broadcast module
X250	2012	Active damping control module
X250	2012	Navigation control module
X250	2012	Oil service counter reset
X250	2012	Oil change reset
X250	2012	Parking brake release to service position
X250	2012	Seat cushion replacement
X250	2012	Brake bleed
X250	2012	Yaw rate sensor calibration
X250	2012	Drivers side window calibration
X250	2012	Passenger side window calibration
X250	2012	Steering column calibration
X250	2012	Tire pressure sensor replacement
X250	2012	Tire pressure monitor receiver calibration
X250	2012	Throttle valve actuator
X250	2012	Exhaust gas recirculation valve
X250	2012	Injector replacement
X250	2012	Diesel particulate filter differential pressure sensor replacement
X250	2012	Build mode
X250	2012	Calibration learn
X250	2012	Height calibration
X250	2012	Battery replacement
X250	2012	Idle speed test
X250	2012	Transmission control module adaption clear
X250	2012	Diesel particulate filter dynamic regeneration
X250	2012	Diesel particulate filter replacement
X250	2012	Check engine oil level
X250	2012	Display injector correction factors
X250	2012	Idle speed – Adjustment
X250	2012	Tire size (rolling circumference)
X250	2012	Reset oil level
X250	2012	ROW Service interval options
X250	2012	Erase all existing keys
X250	2012	Verify keys

VehicleType	ModelYear	Specil Function Name
X250	2012	Driver's seat calibration
X250	2012	Passenger's seat calibration
X250	2012	Speed control alignment
X250	2012	Headlamp control module system calibration
X250	2012	Vent actuators test
X250	2012	Stepper motor initialisation
X250	2012	Reset water in fuel detection
X250	2012	Turbine shut-off valve
X250	2012	Oxygen sensor
X250	2012	Oxidation catalyst
X250	2012	DECM Fueling adaption re-initialization
X250	2012	Control module calibration
X250	2012	Calibrate dynamic volume control
X250	2012	Pre-delivery inspection
X250	2012	Restraints build Mode
X250	2012	Start authorisation status
X250	2012	Start authorisation status
X250	2012	Side object detection module history
X250	2012	Side Object Detection Configuration
X250	2012	Purge valve self test
X250	2012	Purge valve self test
X250	2012	Evaporative System Diagnostic Test
X250	2012	Powertrain control module adaption clear
X250	2012	Service history data
X250	2012	Reset water in fuel detection
X250	2012	Tire pressure monitoring wheel sensor test
X250	2012	Oxygen sensor
X250	2012	Odometer calibration
X250	2012	Fuel prime routine
X250	2012	Fuel lift pump
X250	2012	Flight recorder
X250	2012	OBDII readiness tests
X250	2012	High pressure fuel pump test
X250	2012	Fuel tank smoke test
X250	2012	Air Path Set-up Routine
X250	2012	Infotainment system special applications
X250	2012	Navigation Reset
X250	2012	DVD Region Counter Reset
X250	2012	Dynamic seat belt retract and release
X250	2012	Clear module learn data
X250	2012	Alarm trigger history
X250	2012	ABS control module
X250	2012	Gear shift module
X250	2012	Auto high beam control module
X250	2012	Front controls interface module 'B' (front audio control panel)
X250	2012	Parking aid control module
X250	2012	Parking brake control module
X250	2012	Restraints occupant classification system module
X250	2012	Side object detection control module - Left
X250	2013	Immobiliser antenna unit
X250	2013	Tire pressure monitor module
X250	2013	Front control/display interface module (high level display front)
X250	2013	Active damping control module
X250	2013	Navigation control module

VehicleType	ModelYear	Specil Function Name
X250	2013	Parking brake release to service position
X250	2013	Seat cushion replacement
X250	2013	Brake bleed
X250	2013	Yaw rate sensor calibration
X250	2013	Drivers side window calibration
X250	2013	Passenger side window calibration
X250	2013	Steering column calibration
X250	2013	Tire pressure sensor replacement
X250	2013	Tire pressure monitor receiver calibration
X250	2013	Throttle valve actuator
X250	2013	Exhaust gas recirculation valve
X250	2013	Injector replacement
X250	2013	Diesel particulate filter differential pressure sensor replacement
X250	2013	DECM Fueling adaption re-initialization
X250	2013	Build mode
X250	2013	Calibration learn
X250	2013	Height calibration
X250	2013	Battery replacement
X250	2013	Idle speed test
X250	2013	Diesel particulate filter dynamic regeneration
X250	2013	Diesel particulate filter replacement
X250	2013	Display injector correction factors
X250	2013	Idle speed - Adjustment
X250	2013	Throttle valve actuator replacement
X250	2013	Injector Valve Test
X250	2013	Oil service counter reset
X250	2013	ROW Service interval options
X250	2013	Service interval reset.
X250	2013	Verify keys
X250	2013	Check Passive Keys Enabled
X250	2013	Recover Programmed keys
X250	2013	Check all antennas
X250	2013	Immobiliser Antenna Unit Functionality Check
X250	2013	Driver's seat calibration
X250	2013	Passenger's seat calibration
X250	2013	Speed control alignment
X250	2013	Headlamp control module system calibration
X250	2013	Tailgate/trunk calibration
X250	2013	Vent actuators test
X250	2013	Stepper motor initialisation
X250	2013	Reset water in fuel detection
X250	2013	Turbine shut-off valve
X250	2013	Turbine shut-off valve
X250	2013	Oxygen sensor
X250	2013	Oxidation catalyst
X250	2013	Control module calibration
X250	2013	Manufacturing Mode
X250	2013	Height Calibration
X250	2013	Suspension deflation
X250	2013	Suspension enable
X250	2013	Suspension geometry set-up
X250	2013	Headlamp calibration suspension set-up
X250	2013	Calibrate dynamic volume control
X250	2013	Pre-delivery inspection

VehicleType	ModelYear	Specil Function Name
X250	2013	Reset water in fuel detection
X250	2013	Auxiliary heater priming routine.
X250	2013	Auxiliary heater activation test
X250	2013	Tire pressure monitoring wheel sensor test
X250	2013	Oxygen sensor
X250	2013	Fuel Pump Supply Enable/Disable
X250	2013	Power Train Control module unlock application
X250	2013	Calibrate clutch.
X250	2013	Transfer case classification
X250	2013	Odometer calibration
X250	2013	Test dual battery system
X250	2013	Verify battery 2 charging
X250	2013	Quiescent relay box internal check
X250	2013	Fuel prime routine
X250	2013	Fuel lift pump
X250	2013	OBDII readiness tests
X250	2013	Adaptive fuel trim display
X250	2013	High pressure fuel pump test
X250	2013	Fuel tank smoke test
X250	2013	Air Path Set-up Routine
X250	2013	Infotainment system special applications
X250	2013	Navigation Reset
X250	2013	DVD Region Counter Reset
X250	2013	Activate Television Test Picture
X250	2013	Dynamic seat belt retract and release
X250	2013	Clear module learn data
X250	2013	Alarm trigger history
X250	2013	ABS control module
X250	2013	Gear shift module
X250	2013	Auto high beam control module
X250	2013	Remote climate control module
X250	2013	Front controls interface module 'B' (front audio control panel)
X250	2013	Parking aid control module
X250	2013	Parking brake control module
X250	2013	Restraints occupant classification system module
X250	2013	Speed control module
X250	2013	Gateway module
X250	2013	Rear gate / trunk module
X250	2013	Safety belt pretensioner control module A - Drivers
X250	2013	Safety belt pretensioner control module A - Drivers
X250	2013	Safety belt pretensioner control module B - Passengers
X250	2013	Safety belt pretensioner control module B - Passengers
X250	2013	Oil change reset
X250	2013	Transportation Mode
X250	2013	Restraints build Mode
X250	2013	Start authorisation status
X250	2013	Start authorisation status
X250	2013	Ride level control module diagnostic interface
X250	2013	Ride level control module Inflation (Showroom)
X250	2013	Side Object Detection Configuration
X250	2013	Purge valve self test
X250	2013	Purge valve self test
X250	2013	Evaporative System Diagnostic Test
X250	2013	Powertrain control module adaption clear

VehicleType	ModelYear	Specil Function Name
X250	2013	Transmission control module adaption clear
X260	2016	Service interval reset
X260	2016	Roof blind - Calibration
X260	2016	Sunroof calibration
X260	2016	Tailgate/trunk calibration
X260	2016	Door window calibration
X350	2002–2005	Parking brake release to service position
X350	2002–2005	Reset the oil service counter.
X350	2002–2005	Tire pressure monitor confirmation application.
X350	2002–2005	Tire pressure monitor receiver calibration.
X350	2002–2005	Tire pressure sensor replacement.
X350	2008–2009	Dynamic stability control - Lateral accelerometer calibration.
X350	2008–2009	Dynamic stability control - Powertrain configuration reset.
X350	2008–2009	Dynamic stability control - Pressure sensor calibration.
X350	2008–2009	Dynamic stability control - Yaw rate sensor calibration.
X350	2008–2009	Electronic parking brake - Parking brake release to service position
X351	2010–2012	Right side safety belt pretensioner
X351	2010–2012	Left side safety belt pretensioner
X351	2010–2012	Rear gate / trunk module
X351	2010–2012	Rear climate seat module
X351	2010–2012	Vehicle immobilizer control module (steering column lock)
X351	2010–2012	Speed control module
X351	2010–2012	Side object detection control module - Left
X351	2010–2012	Rear Heating ventilation and air conditioning control module
X351	2010–2012	Front control/display interface module (high level display front)
X351	2010–2012	Digital audio broadcast module
X351	2010–2012	Navigation control module
X351	2010–2012	Add additional keys
X351	2010–2012	Air suspension deflation.
X351	2010–2012	Headlamp control module system calibration
X351	2010–2012	Tire pressure sensor replacement
X351	2010–2012	Restraints build mode
X351	2010–2012	Vehicle reset
X351	2010–2012	Powertrain control module adaption clear
X351	2010–2012	Transmission control module adaption clear
X351	2010–2012	Air suspension enable.
X351	2010–2012	Battery replacement
X351	2010–2012	Brake bleed.
X351	2010–2012	Build mode
X351	2010–2012	Calibration learn
X351	2010–2012	Check Passive Keys Enabled
X351	2010–2012	Diesel particulate filter dynamic regeneration
X351	2010–2012	Diesel particulate filter replacement
X351	2010–2012	Driver's side - Door glass window calibration
X351	2010–2012	Exhaust gas recirculation valve
X351	2010–2012	Headlamp calibration suspension set-up
X351	2010–2012	Headlamp control module system calibration
X351	2010–2012	Idle speed test.
X351	2010–2012	Immobilization
X351	2010–2012	Injector replacement
X351	2010–2012	Oil service counter reset
X351	2010–2012	Parking brake release to service position
X351	2010–2012	Passenger's side - Door glass window calibration
X351	2010–2012	Recover Programmed keys

VehicleType	ModelYear	Specil Function Name
X351	2010–2012	Replace faulty/lost keys
X351	2010–2012	Seat cushion replacement
X351	2010–2012	Service interval reset.
X351	2010–2012	Steering column calibration
X351	2010–2012	Sunroof calibration
X351	2010–2012	Suspension geometry set-up
X351	2010–2012	Suspension tight tolerance control
X351	2010–2012	Throttle valve actuator
X351	2010–2012	Verify keys
X351	2010–2012	Driver's seat calibration
X351	2010–2012	Passenger's seat calibration
X351	2010–2012	Speed control alignment
X351	2010–2012	Valet Mode reset
X351	2010–2012	Tailgate/trunk calibration
X351	2010–2012	Actuator test
X351	2010–2012	Actuator initialisation
X351	2010–2012	Evaporator and heater test
X351	2010–2012	Reset water in fuel detection
X351	2010–2012	Turbine shut-off valve
X351	2010–2012	Oxygen sensor
X351	2010–2012	Oxidation catalyst
X351	2010–2012	Control module calibration
X351	2010–2012	Height Calibration
X351	2010–2012	Calibrate dynamic volume control
X351	2010–2012	Pre-delivery inspection
X351	2010–2012	Transportation Mode
X351	2010–2012	Start authorisation status
X351	2010–2012	Start authorisation status
X351	2010–2012	Ride level control module diagnostic interface
X351	2010–2012	Side object detection module history
X351	2010–2012	Purge valve self test
X351	2010–2012	Evaporative System Diagnostic Test
X351	2010–2012	Fuel prime routine
X351	2010–2012	Service history data
X351	2010–2012	Immobiliser Antenna Unit Functionality Check
X351	2010–2012	Rear seat calibration – Right
X351	2010–2012	Rear seat calibration – Left
X351	2010–2012	Tire pressure monitor sensor identification display
X351	2010–2012	Tire pressure monitoring wheel sensor test
X351	2010–2012	ROW Service interval options
X351	2010–2012	Odometer calibration
X351	2010–2012	Ride level control module Inflation (Showroom)
X351	2010–2012	Fuel lift pump
X351	2010–2012	Fuel lift pump
X351	2010–2012	Flight recorder
X351	2010–2012	OBDII readiness tests
X351	2010–2012	Display injector correction factors.
X351	2010–2012	High pressure fuel pump test
X351	2010–2012	Paddle shift configuration
X351	2010–2012	Fuel tank smoke test
X351	2010–2012	Air Path Set-up Routine
X351	2010–2012	Navigation Reset
X351	2010–2012	DVD Region Counter Reset
X351	2010–2012	Dynamic seat belt retract and release

VehicleType	ModelYear	Specil Function Name
X351	2010–2012	Clear module learn data
X351	2010–2012	ABS control module
X351	2010–2012	Gear shift module
X351	2010–2012	Auto high beam control module
X351	2010–2012	Front controls interface module 'B' (front audio control panel)
X351	2010–2012	Parking assist control module
X351	2010–2012	Parking brake control module
X351	2010–2012	Restraints occupant classification system module
X351	2010–2012	Add additional keys
X351	2010–2012	Replace faulty/lost keys
X351	2013–2015	Rear climate seat module
X351	2013–2015	Immobiliser antenna unit
X351	2013–2015	Front control/display interface module (high level display front)
X351	2013–2015	Navigation control module
X351	2013–2015	Seat cushion replacement
X351	2013–2015	Brake bleed
X351	2013–2015	Headlamp control module system calibration
X351	2013–2015	Drivers side window calibration
X351	2013–2015	Passenger side window calibration
X351	2013–2015	Steering column calibration
X351	2013–2015	Sunroof calibration
X351	2013–2015	Tire pressure sensor replacement
X351	2013–2015	Tire pressure monitor sensor identification display
X351	2013–2015	Throttle valve actuator
X351	2013–2015	Exhaust gas recirculation valve
X351	2013–2015	Injector replacement
X351	2013–2015	Restraints build mode
X351	2013–2015	Idle speed test
X351	2013–2015	Diesel particulate filter dynamic regeneration
X351	2013–2015	Diesel particulate filter replacement
X351	2013–2015	Throttle valve actuator replacement
X351	2013–2015	Injector Valve Test
X351	2013–2015	Service interval reset.
X351	2013–2015	Oil service counter reset
X351	2013–2015	Parking brake release to service position
X351	2013–2015	ROW Service interval options
X351	2013–2015	Verify keys
X351	2013–2015	Check Passive Keys Enabled
X351	2013–2015	Recover Programmed keys
X351	2013–2015	Check all antennas
X351	2013–2015	Immobiliser Antenna Unit Functionality Check
X351	2013–2015	Driver's seat calibration
X351	2013–2015	Driver's seat calibration
X351	2013–2015	Passenger's seat calibration
X351	2013–2015	Rear seat calibration – Right
X351	2013–2015	Rear seat calibration – Left
X351	2013–2015	Speed control alignment
X351	2013–2015	Yaw rate sensor calibration
X351	2013–2015	Valet Mode reset
X351	2013–2015	Tailgate/trunk calibration
X351	2013–2015	Variable assist power steering curves programming
X351	2013–2015	Actuator test
X351	2013–2015	Actuator initialisation
X351	2013–2015	Evaporator and heater test

VehicleType	ModelYear	Specil Function Name
X351	2013–2015	Reset water in fuel detection
X351	2013–2015	Turbine shut-off valve
X351	2013–2015	Oxygen sensor
X351	2013–2015	Oxidation catalyst
X351	2013–2015	Control module calibration
X351	2013–2015	Manufacturing Mode
X351	2013–2015	Height Calibration
X351	2013–2015	Suspension deflation
X351	2013–2015	Suspension enable
X351	2013–2015	Suspension geometry set-up
X351	2013–2015	Headlamp calibration suspension set-up
X351	2013–2015	Calibrate dynamic volume control
X351	2013–2015	Transportation Mode
X351	2013–2015	Vehicle reset
X351	2013–2015	Start authorisation status
X351	2013–2015	Start authorisation status
X351	2013–2015	Ride level control module diagnostic interface
X351	2013–2015	Ride level control module Inflation (Showroom)
X351	2013–2015	Purge valve self test
X351	2013–2015	Purge valve self test
X351	2013–2015	Purge valve self test
X351	2013–2015	Evaporative System Diagnostic Test
X351	2013–2015	Evaporative System Diagnostic Test
X351	2013–2015	Evaporative System Diagnostic Test
X351	2013–2015	Powertrain control module adaption clear
X351	2013–2015	Powertrain control module adaption clear
X351	2013–2015	Transmission control module adaption clear
X351	2013–2015	Driver's side – Rear door blind initialisation
X351	2013–2015	Driver's side – Rear door blind initialisation
X351	2013–2015	Passenger's side – Rear door blind initialisation
X351	2013–2015	Passenger's side – Rear door blind initialisation
X351	2013–2015	Tire pressure monitoring wheel sensor test
X351	2013–2015	Fuel Pump Supply Enable/Disable
X351	2013–2015	Power Train Control module unlock application
X351	2013–2015	Calibrate clutch.
X351	2013–2015	Transfer case classification
X351	2013–2015	Odometer calibration
X351	2013–2015	Smart Key health check
X351	2013–2015	Battery replacement
X351	2013–2015	Test dual battery system
X351	2013–2015	Verify battery 2 charging
X351	2013–2015	Quiescent relay box internal check
X351	2013–2015	Fuel prime routine
X351	2013–2015	Fuel lift pump
X351	2013–2015	OBDII readiness tests
X351	2013–2015	Adaptive fuel trim display
X351	2013–2015	Display injector correction factors.
X351	2013–2015	High pressure fuel pump test
X351	2013–2015	Fuel tank smoke test
X351	2013–2015	Air Path Set-up Routine
X351	2013–2015	Infotainment system special applications
X351	2013–2015	Navigation Reset
X351	2013–2015	DVD Region Counter Reset
X351	2013–2015	Activate Television Test Picture

VehicleType	ModelYear	Specil Function Name
X351	2013–2015	ABS control module
X351	2013–2015	Gear shift module
X351	2013–2015	Auto high beam control module
X351	2013–2015	Rear Heating ventilation and air conditioning control module
X351	2013–2015	Front controls interface module 'B' (front audio control panel)
X351	2013–2015	Parking assist control module
X351	2013–2015	Parking brake control module
X351	2013–2015	Restraints occupant classification system module
X351	2013–2015	Side object detection control module – Left
X351	2013–2015	Speed control module
X351	2013–2015	Rear gate / trunk module
X351	2013–2015	Pre-delivery inspection
X351	2013–2015	Oil change reset
X351	2016	Oil change reset
X351	2016	Service interval reset
X351	2016	Driver's side – Door glass window calibration
X351	2016	Passenger's side – Door glass window calibration
X351	2016	Sunroof calibration
X351	2016	Tailgate/trunk calibration
X351	2016	Driver side – Rear door blind initialisation
X351	2016	Passenger side – Rear door blind initialisation
X400	2001–2003	Service interval reset.
X400	2001–2003	Steering angle sensor calibration
X400	2001–2003	Tire pressure monitor confirmation application.
X400	2001–2003	Tire pressure monitor receiver calibration.
X400	2001–2003	Tire pressure sensor replacement.
X100	2003–2005	Alignment set-up
X100	2003–2005	Brake sensor set-up
X100	2003–2005	Evaporative system leak check
X100	2003–2005	Clear lost keyfob transmitters
X100	2003–2005	Last alarm activations
X100	2003–2005	Program new keyfob transmitters
X100	2003–2005	Program new transponders
X100	2003–2005	Right headlamp and/or left headlamp
X100	2003–2005	Seat cushion replacement
X100	2003–2005	Transmission control module adaptation clear.
X204	2004–2005	Brake sensor set-up
X204	2004–2005	Evaporative system leak check
X204	2004–2005	Immobilization set-up
X204	2004–2005	Last alarm activations
X204	2004–2005	Program additional transponders
X204	2004–2005	Program new keyfob transmitters
X204	2004–2005	Program new transponders
X204	2004–2005	Seat calibration
X204	2004–2005	Seat cushion replacement
X204	2004–2005	Steering column calibration
X204	2004–2005	ABS control module configuration clear.
X204	2004–2005	Fuel burn heater – operation check
X204	2004–2005	Fuel burning heater, fuel priming routine.
X204	2004–2005	Transmission control module adaptation clear.
X204	2004–2005	Vehicle control module identification
X206	2006–2008	Evaporative system leak check
X206	2006–2008	Particle filter regeneration
X206	2006–2008	Reset the diesel particulate filter stored values.

VehicleType	ModelYear	Specil Function Name
X206	2006–2008	Immobilization set-up
X206	2006–2008	Last alarm activations
X206	2006–2008	Program additional transponders
X206	2006–2008	Program new keyfob transmitters
X206	2006–2008	Program new transponders
X206	2006–2008	Right headlamp and/or left headlamp
X206	2006–2008	Seat calibration
X206	2006–2008	Seat cushion replacement
X206	2006–2008	Steering column calibration
X206	2006–2008	Fuel burn heater – operation check
X206	2006–2008	Fuel burning heater, fuel priming routine.
X206	2006–2008	Fuel prime routine.
X206	2006–2008	Idle speed control
X206	2006–2008	OBDII readiness tests
X206	2006–2008	Petrol engine control module adaption clear
X206	2006–2008	Purge valve self test.
X206	2006–2008	Transmission control module adaptation clear.
X206	2006–2008	Vehicle control module identification
X250	2008–2009	Passenger restraint disable switch
X250	2010–2011	Passenger restraint disable switch
X350	2002–2005	Brake sensor set-up
X350	2002–2005	Evaporative system leak check
X350	2002–2005	Immobilization set-up
X350	2002–2005	Last alarm activations
X350	2002–2005	Program additional transponders
X350	2002–2005	Program new keyfob transmitters
X350	2002–2005	Program new transponders
X350	2002–2005	Right headlamp and/or left headlamp
X350	2002–2005	Seat calibration
X350	2002–2005	Seat cushion replacement
X350	2002–2005	Steering column calibration
X350	2002–2005	ABS control module configuration clear.
X350	2002–2005	Transmission control module adaptation clear.
X356	2006–2007	Air suspension transportation/customer mode.
X356	2006–2007	Evaporative system leak check
X356	2006–2007	Particle filter regeneration
X356	2006–2007	Reset the diesel particulate filter stored values.
X356	2006–2007	Immobilization set-up
X356	2006–2007	Last alarm activations
X356	2006–2007	Program additional transponders
X356	2006–2007	Program new keyfob transmitters
X356	2006–2007	Program new transponders
X356	2006–2007	Right headlamp and/or left headlamp
X356	2006–2007	Seat cushion replacement
X356	2006–2007	Steering column calibration
X356	2006–2007	Engine control module data recorder
X356	2006–2007	Engine fuel priming routine.
X356	2006–2007	Fuel burn heater – fuel prime application
X356	2006–2007	Fuel burn heater – operation check
X356	2006–2007	Fuel prime routine.
X356	2006–2007	Idle speed control
X356	2006–2007	OBDII readiness tests
X356	2006–2007	Petrol engine control module adaption clear
X356	2006–2007	Purge valve self test.

VehicleType	ModelYear	Specil Function Name
X356	2006-2007	Transmission control module adaptation clear.
X358	2008-2009	Air suspension transportation/customer mode.
X358	2008-2009	Evaporative system leak check
X358	2008-2009	Reset the diesel particulate filter stored values.
X358	2008-2009	Immobilization set-up
X358	2008-2009	Last alarm activations
X358	2008-2009	Program additional transponders
X358	2008-2009	Program new keyfob transmitters
X358	2008-2009	Program new transponders
X358	2008-2009	Right headlamp and/or left headlamp
X358	2008-2009	Seat calibration
X358	2008-2009	Seat cushion replacement
X358	2008-2009	Steering column calibration
X358	2008-2009	Engine control module data recorder
X358	2008-2009	Engine fuel priming routine.
X358	2008-2009	Fuel burn heater – fuel prime application
X358	2008-2009	Fuel burn heater – operation check
X358	2008-2009	Fuel prime routine.
X358	2008-2009	Idle speed control
X358	2008-2009	Petrol engine control module adaption clear
X358	2008-2009	Purge valve self test.
X358	2008-2009	Transmission control module adaptation clear.
X400	2001-2003	Evaporative system leak check
X400	2001-2003	Immobilization set-up
X400	2001-2003	Last alarm activations
X400	2001-2003	Program additional transponders
X400	2001-2003	Program new keyfob transmitters
X400	2001-2003	Program new transponders
X400	2001-2003	Seat cushion replacement
X400	2001-2003	Transmission control module adaptation clear.
X400	2001-2003	Transmission control module drive cycle
X404	2004-2009	Evaporative system leak check
X404	2004-2009	Reset the diesel particulate filter stored values.
X404	2004-2009	Immobilization set-up
X404	2004-2009	Last alarm activations
X404	2004-2009	Program additional transponders
X404	2004-2009	Program new keyfob transmitters
X404	2004-2009	Program new transponders
X404	2004-2009	Delta pressure sensor replacement
X404	2004-2009	Diesel particulate filter dynamic regeneration
X404	2004-2009	Display injector correction factors.
X404	2004-2009	Injector cycle test
X404	2004-2009	Injector leak back test
X404	2004-2009	Inlet metering valve
X404	2004-2009	Oil dilution reset
X404	2004-2009	Transmission control module adaptation clear.
X404	2004-2009	Transmission control module clear oil degradation counter
X404	2004-2009	Transmission control module clear self-learning data
X404	2004-2009	Transmission control module drive cycle
X404	2004-2009	Transmission control module neutral learn
X404	2004-2009	Transmission control module set adaptation mode
X760	2016	Roof blind – Calibration
X760	2016	Sunroof calibration
X760	2016	Tailgate/trunk calibration

VehicleType	ModelYear	Specil Function Name
X760	2016	Door window calibration
X760	2016	Service interval reset