

# MaxiSys\_Nissan\_V5.10 Function List (Note:For reference only)

**NOTES:**

- This function is supported.                      ✖ This function may be supported which depends on the actual condition of the vehicle.
  - This function is not supported.                ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
4WAS (FRONT)	●	●	●	○	●	●	○
4WAS (MAIN)/RAS/HICAS	●	●	●	○	●	●	○
ABS	●	●	●	✖	●	●	0002 0008 0010 0012 0014 0016 0018 0020 0022 0024 0025 0026 0028 0030 0032 0034 0036 0038 0040 0042 0044 0046 0048 0050 0150 0301 0329 0344 0369 0370 0371 0406 0450 0451 0452 0780 0781 0782 0783 0784
ACCELE PEDAL ACT	●	●	●	○	●	●	○
ACTIVE ENG MOUNT	●	●	●	○	●	○	○
ACTIVE SUS	●	●	●	●	●	●	✖
ADAPTIVE LIGHT	●	●	●	○	●	●	0009 0011
AIR BAG	●	●	●	●	●	○	0003 0005 0006 0013 0015 0017 0019 0021 0023 0025 0150 0453 0619 0620 0785 0786 0787
AIR LEVELIZER	●	●	●	○	●	●	0027 0029 0031
AIR PRESSURE MONITOR	●	●	●	○	●	●	0033 0035 0037 0407 0621 0622 0788 0789
ALL MODE AWD/4WD	●	●	●	○	●	●	0039 0041 0043 0045 0047 0049 0051 0342 0357 0408 0623 0624 0625 0626 0627
ASCD	○	●	●	○	●	○	○
AUTO BACK DOOR	●	●	●	○	●	○	0397
AUTO DRIVE POS.	●	●	●	○	●	●	0052 0054 0056
AUTO SLIDE DOOR	●	●	●	○	●	✖	○
AUTO SLIDE DOOR RIGHT	●	●	●	○	●	●	○
AVM	●	●	●	○	●	●	0053 0055 0057 0059 0061 0454 0455 0456 0457 0458 0459 0460 0461 0462 0628 0629 0630 0631 0632 0633 0634 0635 0636 0637 0638
BAC	●	●	●	○	●	○	0639
BCM	✖	●	●	○	●	●	0001 0063 0065 0067 0069 0071 0073 0075 0077 0079 0081 0083 0085 0087 0089 0091 0093 0095 0097 0099 0101 0103 0105 0107 0109 0111 0113 0115 0117 0119 0121 0123 0125 0127 0129 0131 0133 0135 0137 0139 0141 0143 0145 0147 0149 0151 0153 0155 0157 0159 0161 0163 0165 0167 0169 0171 0173 0175 0177 0179 0181 0183 0185 0187 0189 0191 0193 0195 0197 0199 0201 0203 0205 0207 0209 0211 0213 0215 0217 0219 0221 0223 0225 0227 0229 0372 0373 0374 0375 0376 0377 0378 0379 0380 0381 0409 0410 0411 0463 0640 0641 0642 0643 0644 0645 0646 0647 0648 0649 0650 0790
BRAKE	●	●	●	○	●	●	0293 0651
BSW	●	●	●	○	●	●	○
CAN GATEWAY	●	●	●	○	●	○	○

System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CHA	●	●	●	○	●	●	0058 0060 0062 0652 0653
CHARGER	●	●	●	○	●	●	○
CIU	●	●	●	○	●	○	0064 0655
CONVERTIBLE ROOF	●	●	●	○	●	●	0070 0072 0074 0076 0078 0080
Cluster	●	●	●	○	●	●	0066 0068 0412 0413 0414 0415 0464 0656 0657 0658 0659 0660 0661
DCU	●	●	●	○	●	○	0416 0417 0418 0419 0420 0421 0422 0465 0466 0467 0662 0663 0664 0665 0666
DIFF LOCK	●	●	●	○	●	○	○
DISTANCE CONTROL	●	●	●	○	●	○	○
DIU	○	●	●	○	●	○	○
E-4WD	●	●	●	※	●	●	0001
E-SUS	●	●	●	○	●	●	0164 0166 0168
EHS/PKB	●	●	●	○	●	●	0293 0387 0388 0389 0423 0424 0425 0426 0791
EMCM	●	●	●	○	●	●	0293 0402 0667
ENGINE	●	●	●	※	●	●	0001 0082 0084 0086 0088 0090 0092 0094 0096 0098 0100 0102 0104 0106 0108 0110 0112 0114 0116 0118 0120 0122 0124 0126 0128 0130 0132 0134 0136 0138 0140 0142 0144 0146 0148 0150 0152 0294 0295 0296 0297 0307 0308 0310 0312 0314 0315 0316 0319 0321 0322 0323 0324 0325 0326 0327 0328 0331 0334 0335 0337 0339 0340 0342 0343 0345 0346 0347 0348 0349 0351 0352 0353 0355 0357 0359 0360 0361 0362 0363 0364 0365 0366 0367 0368 0427 0428 0429 0430 0431 0432 0433 0434 0435 0436 0437 0438 0439 0440 0441 0468 0469 0470 0471 0472 0473 0474 0475 0476 0477 0478 0479 0480 0481 0482 0483 0484 0485 0486 0487 0488 0489 0490 0491 0492 0493 0494 0495 0496 0497 0498 0499 0500 0501 0502 0503 0504 0505 0506 0507 0508 0509 0510 0511 0512 0513 0514 0515 0516 0517 0518 0519 0520 0521 0522 0523 0524 0525 0526 0527 0528 0529 0530 0531 0532 0533 0534 0535 0536 0537 0538 0539 0540 0541 0542 0543 0544 0545 0546 0547 0548 0549 0550 0551 0552 0553 0554 0555 0556 0557 0558 0559 0560 0561 0562 0563 0564 0565 0566 0567 0568 0569 0570 0571 0572 0573 0574 0575 0576 0577 0578 0579 0580 0581 0582 0583 0584 0585 0586 0587 0588 0589 0590 0591 0592 0593 0594 0595 0596 0597 0598 0599 0600 0601 0602 0603 0604 0605 0606 0607 0608 0609 0668 0669 0670 0671 0672 0673 0674 0675 0676 0792 0793 0794 0795 0796 0797 0798 0799 0800 0801 0802 0803 0804 0805 0806 0807 0808 0809 0810
EPS	●	●	●	○	●	○	0001 0154 0156 0158 0160 0162
EV/HEV	●	●	●	●	●	●	0293 0395 0396 0437 0442 0443 0610 0683 0684 0685
HEAD LAMP LEVELIZER	●	●	●	○	●	●	0170 0172
HV BATTERY	●	●	●	●	●	●	0293 0398 0399 0611 0612 0613 0614 0691 0692
HVAC	●	●	●	○	●	●	0174 0176 0178 0180 0182 0184 0186 0188 0190 0192 0194 0196 0298 0302 0304 0320 0350 0382 0383 0384 0693 0694 0695 0696
ICC/ADAS	●	●	●	※	●	●	0001 0198 0200 0202 0204 0206 0444 0697 0698 0699
INTELLIGENT KEY	●	●	●	○	●	●	0001 0091 0121 0208 0210 0212 0214 0216 0218 0220 0222 0224 0226 0228 0230 0232 0234 0236 0238 0240 0242 0244 0246 0248 0250 0252 0393 0701 0702 0703
IPDM E/R	○	●	●	○	●	●	0001 0025 0391 0572 0573 0574 0575 0608 0704 0705 0706 0707 0708 0709 0710 0711

System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
IVMS	●	●	●	○	●	○	○
LANE CAMERA	●	●	●	○	●	●	0231 0233 0235
LASER/RADAR	●	●	●	○	●	○	0198 0206 0293 0392 0712 0713
METER/M&A	※	●	●	○	●	○	0001 0237 0306 0330 0338 0354 0445 0714 0715 0716 0717 0718
MM CONN	●	●	●	○	●	○	0239
MOTOR ASSIST	○	●	●	○	●	○	0241
MOTOR CONTROL	●	●	●	※	●	○	0293 0390 0616 0719
MULTI AV	※	●	●	○	●	○	0025 0061 0243 0617 0720
MULTI DISPLAY	○	●	●	○	●	●	○
NATS IMMU	○	●	●	○	○	○	○
OCCUPANT DETECTION	○	○	○	○	○	○	0293 0721
POP UP HOOD	●	●	●	○	●	○	0006
PRECRASH SEATBELT	●	●	●	○	●	○	0245
PTC HEATER	●	●	●	○	●	○	○
RADIO	●	●	●	○	●	※	0160 0247 0249 0404 0405 0723 0724 0725 0726
REARVIEW CAMERA	●	○	○	○	●	○	0251 0253
S/BLIND CAMERA	●	○	○	○	●	○	0255 0257
SHIFT	●	●	●	○	●	○	0293 0446
SIDE RADAR LEFT	●	●	●	○	●	●	0254
SIDE RADAR RIGHT	●	●	●	○	●	●	0256
SMART ENTRANCE	○	●	●	※	●	※	0001 0259 0261 0263 0265 0267 0269 0271 0273 0275 0277 0279 0281 0283 0285 0287
SONAR	●	●	●	○	●	●	0150 0258 0260 0262 0264 0266 0268 0270 0727 0728
SUB METER	○	●	●	○	○	○	○
SVT	●	●	●	○	●	○	0272
TCS	●	●	●	●	●	●	0293
TELEMATICS	●	●	●	○	●	○	0274 0276 0278 0400 0401 0618 0729 0730 0731 0732 0733
TOTAL ILLUM C/U	●	○	○	○	●	○	0280 0282 0284 0286 0288 0290 0291 0292
TRANSMISSION	●	●	●	※	●	※	0001 0134 0150 0289 0299 0303 0305 0309 0311 0313 0317 0318 0332 0333 0334 0336 0341 0356 0358 0385 0386 0447 0448 0449 0590 0734 0735 0736 0737 0738 0739 0740 0741 0742 0743 0744 0745 0746 0747 0748 0749 0750 0751 0752 0753 0754 0755 0756 0757 0758 0759 0760 0761 0762 0763 0764 0765 0766 0767 0768 0769 0770 0771 0772 0773 0774 0775 0776 0777 0778 0779
VSP	●	●	●	○	●	○	○
ANC	●	●	●	○	●	○	○
DAST 1	●	●	●	○	●	○	○

System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
DAST 2	●	●	●	○	●	○	○
DCU	●	●	●	○	●	○	0662 0663 0664 0665 0666
FSCM	●	●	●	○	●	○	○
IDM	●	●	●	○	●	○	0200 0403 0615 0700
PMAS	●	●	●	○	●	○	0444 0722
HAS	●	●	●	○	●	○	0371 0686 0687 0688 0689 0690

## Special\_Function

Index	Special Function Name	Index	Special Function Name
0001	CAN DIAG SUPPORT MNTR	0002	C/U INITIALIZATION
0003	ECU DISCRIMINATED NO	0004	SELF FOUNDATION CHECK
0005	READ CODES [PAST]	0006	TROUBLE DIAG RECORD
0007	CALIBRATION DATA	0008	BLD HYD UNIT BRK CIRC
0009	LEVELIZER ADJUSTMENT	0010	BLEEDING THE BRAKING SYSTEM
0011	ST ANG SEN ADJUSTMENT	0012	CAR COMPUTER DIAG.
0013	LOCK COMPUTER	0014	CHECK TARGET TEETH
0015	LOCK ECU	0016	DECEL G SEN CALIBRATION
0017	READING IMPACT CONTEXTS	0018	ESP AUTO RECONNECTION THRS
0019	UNLOCK COMPUTER	0020	ESP SENSOR PROGRAMMING
0021	UNLOCK ECU	0022	LONGITUDINAL ACCEL SEN
0023	WRITE VIN	0024	MEMORY ERASING
0025	Write date of last after sales OPE	0026	PRESS SEN CALIBRATION
0027	ADJUST HEIGHT INI	0028	SIDE G SEN CALIBRATION
0029	CLEAR HEIGHT INI	0030	SPEEDO INDEX
0031	STANDARD HEIGHT LEVEL	0032	ST ANGLE SENSOR ADJUSTMENT
0033	ID REGIST	0034	STEERING WHL ANGLE SEN
0035	ID READ	0036	TACHOMETRIC INDEX
0037	SWITCH TPMS BETWEEN ON/OFF	0038	TEST MODE
0039	ETS AIR BLEEDING	0040	TEST MODE END
0041	LOCK SLEEVE SENSOR INITIALIZE	0042	TEST MODE EXTEN
0043	LOCK SLEEVE SENSOR LEARNING	0044	VEH. SPEED AT INITIALISATION
0045	OIL DETERIORATION INFO RESET	0046	VEHICLE PARAMETERS
0047	START CALIBRATION	0048	WRITE VIN
0049	UNIT CHARACTERISTICS DATA	0050	Write date of last after sales OPE
0051	UNIT CHARACTERISTICS WRITE	0052	EXIT SEAT SLIDE SETTING
0053	INITIALIZE CAMERA IMAGE CALIBRATION	0054	EXIT TILT SETTING
0055	NON-VIEWABLE AREA REMINDER	0056	SEAT SLIDE VOLUME SET
0057	PREDICTIVE COURSE LINE DISPLAY	0058	ERASE OVERHEAT COUNTER
0059	SELECT LANGUAGE OF WARNING MESSAGE	0060	ERS INCRRCT CRNKNG CNTR
0061	STEERING ANGLE SENSOR ADJUSTMENT	0062	WRITE VIN
0063	ANS BACK I-KEY LOCK	0064	WRITE VIN
0065	ANS BACK I-KEY UNLOCK	0066	WRITE VIN
0067	ANSWER BACK FUNCTION	0068	FUEL GAUGE CALIBRATION
0069	ANTI KEY LOCK IN FUNCTI	0070	FLIPPER DOOR
0071	ANTI-LOCK OUT SET	0072	ROOF LATCH
0073	AUT D-LK SET	0074	ROOF STATE LEARNING
0075	AUTO LIGHT LOGIC SET	0076	ROOF STATE RESET
0077	AUTO LOCK SET	0078	ROOF/TRUNK/PARCEL SHELF
0079	AUTOMATIC DOOR LOCK SELECT	0080	TRUNK OPENER
0081	AUTOMATIC DOOR UNLOCK SELECT	0082	A/F INITIAL LEARNING
0083	AUTOMATIC LOCK/UNLOCK SELECT	0084	A/F SEN 1 LEARN CLR
0085	BATTERY SAVER SET	0086	A/F SEN 2 LEARN CLR
0087	COMPUTER CONFIGURATION	0088	A/F SEN LEAN CLR
0089	CONFIRM DONGLE ID	0090	AP POS LEARN CLR
0091	CONFIRM KEY FOB ID	0092	CHECK FUEL LINES
0093	CUSTOM A/LIGHT SETTING	0094	CLSD THL POS LEARN
0095	D/LOCK VHCL SPD AJT	0096	CML B/DCHRG CRNT CLEAR
0097	DEADLOCKING	0098	CO ADJUSTMENT
0099	DOOR LOCK-UNLOCK SET	0100	CONFIG CLR
0101	DROP WIPE FUNC SET	0102	DECREMENT IDLE SPEED
0103	DTRL	0104	DF EXH PRES SEN LEARN CLR
0105	ENGINE START BY I-KEY	0106	DIF EX PRE LRN CLR
0107	ERASE COMPUTER MEMORY	0108	DPF DATA CLEAR
0109	FLASHING BUZZER	0110	DPF DATA CLEAR
0111	HAZARD ANSWER BACK	0112	E/R AIR TEMP SEN LEARN CLR
0113	HAZARD LAMP SET	0114	EGR ADAPTIVES
0115	HEAD LIGHT TIMER	0116	EGR/V LEARN CLR
0117	HEADLAMP WASHER AUTO SET	0118	ENTER INJCTR CALIB DATA
0119	HORN CHIRP SET	0120	ETHANOL M/R ADJ
0121	HORN WITH KEYLESS LOCK	0122	EVAP SYSTEM CLOSE

Index	Special Function Name	Index	Special Function Name
0123	ID READ	0124	EXH FUEL INJ DATA CLEAR
0125	ID REGIST	0126	EXH PRSR SEN LEARN CLEAR
0127	ILL DELAY SET	0128	EXH V/T CONTROL LEARN
0129	INSIDE ANT DIAGNOSIS	0130	FUEL INJ QUANTITY LEARNING
0131	INSTRUMENT PANEL TYPE	0132	FUEL PRESSURE RELEASE
0133	INTELLIGENT KEY LINK SET	0134	G SENSOR CALIBRATION
0135	LO-BATT OF KEY FOB WARN	0136	IDLE AIR VOL LEARN
0137	LOCK/UNLOCK BY I-KEY	0138	IGNITION TIMING ADJ
0139	MULTI ANSWER BACK SET	0140	INCREMENT IDLE SPEED
0141	OVERSPEED FUNC-ARABIA	0142	INJ ADJ VAL CLR
0143	PANIC ALARM SET	0144	INJ ADJ VAL REGIST
0145	PW DOWN SET	0146	PTO REGISTRATION
0147	R LAMP TIMER LOGIC SET	0148	READ VIN
0149	RAIN SEN WIP FUNC SET	0150	VIN REGISTRATION
0151	REMO CONT ID CONFIR	0152	WRITE V. I. N.
0153	REMO CONT ID ERASUR	0154	COMPUTER CALIBRATION
0155	REMO CONT ID REGIST	0156	SENSOR CALIBRATION
0157	RESET SETTING VALUE	0158	ST/ANGLE ADJUSTMENT
0159	RETAINED PWR SET	0160	WRITE DATE OF AFTER SALES OPERATION
0161	RETRACTABLE MIRROR SET	0162	WRITE VIN
0163	ROOM LAMP BAT SAV SET	0164	STANDARD HEIGHT LEVEL
0165	ROOM LAMP OFF TIME SET	0166	ADJUST HEIGHT INI
0167	ROOM LAMP ON AT LOCK	0168	CLEAR HEIGHT INI
0169	ROOM LAMP ON TIME SET	0170	SENSOR CUSTOMIZE
0171	ROOM LAMP TIMER SET	0172	SENSOR INITIALISE
0173	RR WIP RVRS SET	0174	AIR FLOW REDUCTION SETTING
0175	SECURITY ALARM SET	0176	AIR INLET CHANGE SETTING
0177	SECURITY ALARM SET (SIREN)	0178	BLOW SET
0179	SECURITY DOOR LOCK SET	0180	CLEAN SW SET
0181	SET I/L D-UNLCK INTCON	0182	Door Motor Starting Position Reset
0183	SET R/DEF -ENG INTCON	0184	FRE MEMORY SET
0185	SHORT CRANKING OUTPUT	0186	GAS SENSOR ADJUSTMENT
0187	SIREN SET	0188	REAR TEMP SET CORRECT
0189	ST ANG SEN ADJUSTMENT	0190	REC MEMORY SET
0191	SWITCH MONITOR	0192	STOP/START SYSTEM OPERATION COND SETTING
0193	SWITCH TPMS BETWEEN On/Off	0194	TARGET EVAPORATOR TEMP UPPER LIMIT SETTING
0195	THEFT ALM TRG	0196	TEMP SET CORRECT
0197	TRUNK OPEN DELAY	0198	CAUSE OF AUTO-CANCEL
0199	TRUNK OPEN SET	0200	CAUSE OF AUTO-CANCEL 1
0201	TRUNK/GLASS HATCH OPEN	0202	CAUSE OF AUTO-CANCEL 2
0203	TYPE E2	0204	CAUSE OF AUTO-CANCEL 3
0205	TYPE E4	0206	LASER BEAM ADJUST
0207	TYPE N2	0208	ANSWER BACK FUNCTION
0209	TYPE N2 (SPECIFIC TO RUSSIA)	0210	ANSWER BACK WITH I-KEY LOCK
0211	TYPE N2 (SPECIFIC TO VENEZUELA COLOMBIA)	0212	ANSWER BACK WITH I-KEY UNLOCK
0213	TYPE N3	0214	ANTI KEY LOCK IN FUNCTION
0215	TYPE N4	0216	AUTO RELOCK TIMER
0217	TYPE N4 (SPECIFIC TO VENEZUELA COLOMBIA)	0218	CONFIRM KEY FOB ID
0219	TYPE N5	0220	ENGINE START BY I-KEY
0221	UCH TYPE	0222	HAZARD ANSWER BACK
0223	WELCOME LIGHT SELECT	0224	HORN WITH KEYLESS LOCK
0225	WELCOME LIGHT OP SET	0226	I-KEY FUNCTION
0227	WIPER SPEED SETTING	0228	KEYLESS FUNCTION
0229	WRITE V. I. N.	0230	LOCK/UNLOCK BY I-KEY
0231	AIM CHECK	0232	LOW BATT OF KEY FOB WARN
0233	AUTO AIM	0234	LUG ROOM ENGINE START
0235	CAUSE OF AUTO-CANCEL	0236	P/W DOWN DELAY
0237	W/L ON HISTORY	0238	PANIC ALARM DELAY
0239	WRITE VIN	0240	POWER SLIDE DOOR DELAY
0241	CALIBRATE ALL	0242	REGIST KEY FOB ID
0243	WRITE VIN	0244	SELECTIVE UNLOCK FUNCTION
0245	DOOR OPENING RETRACT RETRY	0246	SHORT CRANKING OUTPUT
0247	WRITE DATE OF AFTER SALES OPERATION	0248	TAKE OUT FROM WINDOW WARN
0249	WRITE VIN	0250	TRUNK OPEN DELAY
0251	SELCT GUIDELINE PATTERN	0252	TRUNK/GLASS HATCH OPEN

Index	Special Function Name	Index	Special Function Name
0253	ADJ GUIDELINE POSITION	0254	ACTIVATE OPERATION
0255	SELCT GUIDELINE PATTERN	0256	ACTIVATE OPERATION
0257	ADJ GUIDELINE POSITION	0258	CENTER SEN DISTANCE SET
0259	AUDIBLE TRAILER WARNING	0260	CORNER SEN DISTANCE SET
0261	AUTO RE-LOCK	0262	PARKING WIDTH LEVEL SETTING
0263	AUTO-RE ARM	0264	TIRE DIAMETER ADJUSTMENT
0265	KEY REMINDER	0266	TRAILER HITCH MODE
0267	KEYLESS CHECK	0268	VOLUME SETTING
0269	KEYLESS DI FLASH	0270	WRITE VIN
0271	KEYLESS REGISTRATION	0272	SVT SETTING
0273	LASTEST ALARM TRIGGER	0274	TCU ACTIVATE SETTING
0275	OLDEST ALARM TRIGGER	0276	SAVE VIN DATA
0277	PRE-ARM FAST FLASH	0278	WRITE VIN DATA
0279	PREVIOUS ALARM TRIGGER	0280	AMBIENCE LAMP FADE-IN/OUT
0281	SELECTIVE UNLOCK	0282	E/G SW ILL HEART BEAT FUNCTION
0283	SIREN FITTED	0284	E/G SW ILLUMI FADE-IN/OUT
0285	THEFT WARNING	0286	FOOT LAMP FADE-IN/OUT
0287	TRUNK OPEN DELAY	0288	HSPL ILLUMINATION FADE-IN/OUT
0289	WRITE VIN	0290	MAP&PERSNL LAMP FADE-IN/OUT
0291	PUDDLE LAMP FADE-IN/OUT	0292	MOOD LAMP FADE-IN/OUT
0293	Work Support	0294	AFTER DPF REGENERATION
0295	AFTER DPF REPLACEMENT	0296	AFTER PARTICLE FILTER REGENERATION WITH THE DIAG TOOL.
0297	AFTER REPLACEMENT OF THE PARTICLE FILTER	0298	AROMA SETTING
0299	AUTO-ADAPTIVES	0301	BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
0302	BLOWER MOTOR SETTING	0303	CLTH INI CLOSE POS
0304	COMP OPRT SET AT DEF MODE (TIM/RMT CLIMT	0305	CONFORM CVTF DETERIORTN
0306	CUSTOMIZE RESET CONSULT	0307	DIESEL PARTICLE FILTER REGENERATION
0308	ECU MEMORY	0309	EEPROM CLEAR CONFIRM
0310	EGR VALVE	0311	ELECTRIC O.P. AIR BLEEDING
0312	ENGINE ADAPTIVES	0313	ENGINE BRAKE ADJ.
0314	ENGINE OIL DILUTION DATA RESET	0315	ENGINE OIL OXIDATION DATA RESET
0316	ENTER INJECTOR CODES	0317	ERASE LEARNING VALUE
0318	ERASE MEMORY DATA	0319	FAST IDLE SPEED MODIFICATION
0320	FRAGRANCE SETTING	0321	FUEL SPLY PREV
0322	HEATER PLUGS	0323	High pressure fuel circuit fault finding
0324	INCREMENT OF IDLE SPD	0325	INJECTOR
0326	INLET FLAP	0327	LOCK INJECTOR CONTROL
0328	LOCK INJECTOR CTRL	0329	LONGITUDINAL ACCELERATION SENSOR
0330	OUTSIDE AIR TEMPERATURE DIAGNOSIS	0331	PRESSURE REGULATION ADAPTIVES
0332	PRG CLUTCH CLOSE POS	0333	PROGRAM SLIP POINT
0334	PROGRAMMED VALUES	0335	PUMP PRESSURE REGULATOR TYPE
0336	Programming selection/engaging zones	0337	REPLACE DIESEL PARTICULATE FILTER
0338	RESET GUIDELINE POSITION	0339	RESET INJCTR ADAPTATIVE
0340	RESET PUMP FORCEFEEDING	0341	Reinit. extreme cold REV gear ENGAGE
0342	SAVING DATA FOR REPLC CPU	0343	SELF-LEARNING CONT
0344	STEERING WHEEL ANGLE SENSOR	0345	STP FUEL SPLY PREV
0346	STRT OPRTN CNTR CLEAR	0347	SUB-STARTER & GENERATOR OPER COUNT CLEAR
0348	TARGET IDLE RPM ADJ	0349	TARGET IGN TIM ADJ
0350	TARGET MAX RPM ADJ AT PRE-CLIMATE	0351	THERMOPLUNGER
0352	TP SW/TP SEN IDLE POSI ADJ	0353	TURBOCHARGER PROGRAMMING
0354	TURN SIGNAL BUZZER DIAGNOSIS	0355	VALVE TIMING OFFSET DATA CLEAR
0356	WRITE DATE NEW CLTH FIT	0357	WRITING DATA FOR REPLC CPU
0358	WRTE CLTH INI CLOSE POS	0359	ZFC VALUE RESET
0360	BLEEDING OF HIGH PRESSURE FUEL CIRCUIT	0361	CYLINDER 1 INJECTOR CODE
0362	CYLINDER 2 INJECTOR CODE	0363	CYLINDER 3 INJECTOR CODE
0364	CYLINDER 4 INJECTOR CODE	0365	EXHAUST FLAP LOW SETTING

Index	Special Function Name	Index	Special Function Name
0366	FUEL RAIL PRESS LIMITING INJCTN COUNTR CLEAR	0367	INJECTION PUMP ADAPTATIVES
0368	SAVE COMPUTER DATA	0369	ACCELERATION SENSOR
0370	HILL START	0371	STROKE SENSOR CALIBRATION
0372	ACC BATTERY SAVER SET	0373	AUTO ACC FNCTN (AUDIO/NAVI SET AFTER IGN
0374	ENGINE SPEED	0375	HZRD REM SET
0376	IGN BATTERY SAVER SET	0377	REAR WIPER LINK WITH REVERSE SETTING
0378	RETAINED PWR SET	0379	ROOM LAMP BAT SAV SET
0380	SCENARIO LIGHTING SETTING	0381	TOUCH SENSOR UNLOCK FUNCTION SETTING
0382	AROMA DIFFUSER SETTING	0383	REC MEMORY SET
0384	TARGET MAX RPM ADJ AT IDL	0385	PROGRAMMED VALUES
0386	SET DEFAULT CHARACTERISTIC LINE	0387	BRAKE OPERATION
0388	BRAKE RELEASE	0389	INITIALIZATION POSITION ADJUSTMENT
0390	RESOLVER OFFSET	0391	NUMBER OF STARTING CYCLES
0392	FEB DEFAULT SETTING	0393	AUTO RELOCK TIMER
0394	RPS OFFSET LEARNING VALUE CLEAR	0395	BATTERY GRADUAL CAP LOSS DATA CLEAR
0396	HV BATT J/B DATA CLEAR	0397	RESET AUTO BACK DOOR STATUS
0398	CLEAR BATT CHARGE/DISCHARGE INFORMATION DATA	0399	IDM information clear
0400	GPS DATA LOGGER CONNECTION SETTING	0401	VEHICLE DATA TRANSMITTER SETTING ERASE
0402	CUMULATIVE SUB-BATTERY DISCHG CURRENT CLEAR	0403	ERASE PERSONAL SETTINGS
0404	CUSTOMER SETTINGS AND DETAILS	0405	RESET RADIO
0406	ACT OR DEACT ROLLER BENCH TEST MODE	0407	Switching the status of TPMS between On and Off
0408	CLUTCH/F RLS LIM ADJ	0409	CHECKING A KEY
0410	DAYTIME RUNNING LIGHTS	0411	REMOTE CLIMATE CONT ANSWER BACK FUNCTION
0412	OIL CHANGE INTERVAL IN MONTHS	0413	OIL CHANGE RANGE: IN KM
0414	OIL CHANGE RANGE:CURRENT VALUE IN MONTHS	0415	OIL CHG INT(km)
0416	NOX SENSOR 1 DATA CLEAR	0417	NOX SENSOR 2 DATA CLEAR
0418	OXIDATION CATALYST DATA CLEAR	0419	SCR CAT AMOUNT OF UREA ADSORPT DATA CLEAR
0420	SCR CATALYST DATA CLEAR	0421	SCR CATALYST TEMP SENSOR 1 DATA CLEAR
0422	UREA INJECTOR DATA CLEAR	0423	ACTUATOR 0 POINT LEARNING
0424	FINISH BRAKE PAD REPLACEMENT	0425	START BRAKE PAD REPLACEMENT
0426	SYSTEM MODE CHANGE	0427	ACTIVE CONTROL ENGINE MOUNTING A
0428	ACTIVE CONTROL ENGINE MOUNTING B	0429	AFTER FUEL INJECTOR REPLACEMENT
0430	ENGINE COOLANT BYPASS VALVE	0431	H/P FUEL PUMP TOTAL STARTS COUNTER CLEAR
0432	INJECTOR LEARNING VALUE CLEAR	0433	INTERVAL OF OIL CHANGE (OCS) OXIDATION
0434	MIXTURE RATIO LEARNING VALUE CLEAR	0435	OIL CHANGE INTERVAL (OCS): DILUTION
0436	SC MAGNETIC CLUTCH ENGAGE COUNT CLEAR	0437	SPEED LIMITER
0438	STARTER OPERATION COUNTER CLEAR	0439	UNLOCK INJECTOR CONTROL
0440	VOLUME CONTROL VALVE LEARNING VALUE CLEAR	0441	WASTEGATE ACTUATOR POSI LEARN VALUE CLEAR
0442	CLUTCH 1 POSITION LEARNING	0443	COOLING FAN INTEGRATED OPERATION TIME CLEAR
0444	CAUSE OF AUTO-CANCEL 4	0445	CLUSTER RE-CONFIGURATION (EXCEPT NATS)
0446	P POSITION LEARNING VALUE CLEAR	0447	INITIALIZATION
0448	MAX. CLTCH STRK MSRMNT	0449	D/C SOL FUNCTN CHECK
0450	ACCELERATION SENSOR	0451	ESP A-RECN THRSH
0452	PRESS SEN CALIBRATION	0453	TRIGGER LINE CONFG
0454	CALIBRATING CAMERA IMAGE (DR-SIDE CAMERA)	0455	CALIBRATING CAMERA IMAGE (FRONT CAMERA)
0456	CALIBRATING CAMERA IMAGE (PASS-SIDE CAMERA)	0457	CALIBRATING CAMERA IMAGE (REAR CAMERA)
0458	CALIBRATING CAMERA IMAGE 2 (DR-SIDE CAMERA)	0459	CALIBRATING CAMERA IMAGE 2 (FRONT CAMERA)
0460	CALIBRATING CAMERA IMAGE 2 (PASS-SIDE CAMERA)	0461	CALIBRATING CAMERA IMAGE 2 (REAR CAMERA)
0462	FINE TUNING OF BIRDS-EYE VIEW	0463	SPARE



Index	Special Function Name	Index	Special Function Name
0464	FUEL GAUGE CALIBRATION	0465	UREA INJECTOR LEARNING VALUE CLEAR
0466	UREA LEVEL SENSOR LEARNING VALUE CLEAR	0467	UREA PUMP LEARNING VALUE CLEAR
0468	A/F SEN1 (B1) P1271/P1272	0469	A/F SEN1 (B1) P1273
0470	A/F SEN1 (B1) P1274	0471	A/F SEN1 (B1) P1275
0472	A/F SEN1 (B1) P1276	0473	A/F SEN1 (B1) P1278/P1279
0474	A/F SEN1 (B2) P1281/P1282	0475	A/F SEN1 (B2) P1283
0476	A/F SEN1 (B2) P1284	0477	A/F SEN1 (B2) P1285
0478	A/F SEN1 (B2) P1285	0479	A/F SEN1 (B2) P1286
0480	A/F SEN1 (B2) P1288/P1289	0481	A/F SENSOR1 (B1) P014C/P014D
0482	A/F SENSOR1 (B1) P015A/P015B	0483	A/F SENSOR1 (B2) P014E/P014F
0484	A/F SENSOR1 (B2) P015C/P015D	0485	ACTIVATE EVAP SYSTEM
0486	ACTIVATION OF FUEL PUMP	0487	ADAPTIVES AFTER REGENERATING PF
0488	ADAPTIVES AFTER REPLACING CABIN FILTER	0489	ADAPTIVES ON AIR INTAKE FLAP MALFUNCTION
0490	ADAPTIVES ON ETC ACTUATOR MALFUNCTION	0491	AFTER CAMSHAFT POS SENSOR REPLACEMENT
0492	AFTER CLUCH PEDAL SWITCH REPLACEMENT	0493	AFTER CRANKSHAFT POS SENSOR REPLACEMENT
0494	AFTER FUEL RAIL PRESSURE SENSOR REPLACEMENT	0495	AFTER HIGH PRESSURE FUEL PUMP REPLACEMENT
0496	AFTER REPLACING THE COMPUTER WITHOUT HAVING SAVED DATA	0497	AFTER TC SOLENOID VALVE REPLACEMENT
0498	AFTER TURBOCHARGER REPLACEMENT	0499	AFTR ELECTRIC THRRTL CNTRL ACTUATOR RPLCMNT
0500	AIR DAMPER VALVE PROGRAMMING	0501	AIR DAMPER VALVE PROGRAMMING (R044)
0502	AIR DAMPER VALVE PROGRAMMING (R088)	0503	AIR FLOW METER PROGRAMMING
0504	AIR FLOWMETER PROGRAMMING	0505	AIR FUEL RATIO SENSOR
0506	AIR PATH PROGRAMMING	0507	ALTERNATOR SETPOINT VOLTAGE
0508	AVERAGE AIR TEMPERATURE	0509	AVERAGE AIR TEMPERATURE
0510	CABIN FILTER REGENERATION	0511	CC/SL PRGRM
0512	CLUTCH PEDAL END STROKE	0513	CONTROL DEVIATION CHARGE AIR SYSTEM
0514	CYLINDER FUNCTION FAULT FINDING	0515	DIFF EXH PRES. SEN
0516	DPF RELATIVE PRESSURE SENSOR	0517	E/O CC/SL PRGRM
0518	EGR BYPASS PROGRAMMING	0519	EGR PROGRAMMING
0520	EGR SYSTEM P0400	0521	EGR SYSTEM P1402
0522	EGR VALVE PROGRAMMING	0523	EGRC-BPT VLV P0402
0524	EVAP SML LEAK P0440/P1440	0525	EVAP V/S LEAK P1441
0526	EVP SML LEAK P0442/P1442	0527	EVP V/S LEAK P0456/P1456
0528	EXHAUST AIR FLAP PROGRAMMING	0529	EXHAUST THROTTLE VALVE PROGRAMMING
0530	FAULT MEMORY	0531	FLYWHL TGT PG
0532	FUEL PUMP	0533	FUEL PUMP PROGRAMMING
0534	FUEL RAIL PRESSURE TEST	0535	H/P FUEL PUMP INITIAL STARTS COUNTER RESET
0536	H/P FUEL PUMP TOTAL STARTS COUNTER RESET	0537	HIGH PRESSURE TURBINE BYPASS SOLENOID VALVE
0538	H02S1 (B1) P0130	0539	H02S1 (B1) P0131
0540	H02S1 (B1) P0132	0541	H02S1 (B1) P0133
0542	H02S1 (B1) P0134	0543	H02S1 (B1) P1144
0544	H02S1 (B2) P0150	0545	H02S1 (B2) P0151
0546	H02S1 (B2) P0152	0547	H02S1 (B2) P0153
0548	H02S1 (B2) P0154	0549	H02S1 (B2) P1163
0550	H02S1 (B2) P1164	0551	H02S2 (B1) P0137
0552	H02S2 (B1) P0138	0553	H02S2 (B1) P0139
0554	H02S2 (B1) P1146	0555	H02S2 (B1) P1147
0556	H02S2 (B2) P0157	0557	H02S2 (B2) P0158
0558	H02S2 (B2) P0159	0559	H02S2 (B2) P1166
0560	H02S2 (B2) P1167	0561	H02S3 (B1) P0143
0562	H02S3 (B1) P0144	0563	H02S3 (B1) P0145
0564	H02S3 (B1) P1169	0565	H02S3 (B1) P1170

Index	Special Function Name	Index	Special Function Name
0566	HP TURBINE BYPASS SOL VLV PROGRAMMING	0567	INHIBIT EVAP SYSTEM
0568	INJ ADJ VAL REGIST	0569	LOW PRESSURE EGR VALVE PROGRAMMING
0570	MANIFOLD PRESSURE SENSOR PROGRAMMING	0571	NOX TRAP
0572	NUMBER OF STARTING 1	0573	NUMBER OF STARTING 2
0574	NUMBER OF STARTING 3	0575	NUMBER OF STARTING 4
0576	OPR TIME BASIC DIAG OF TM NEUTRAL POS SEN	0577	P/FLT DIFF PRS SEN
0578	P062F EXCLUSIVE FUNCTION	0579	POOR ENG PWR P1196
0580	PREHEATER UNIT	0581	PROGRAMMING REINITIALISATION
0582	PRPR RICH SEN PROG	0583	PURG CN/V&S/V P1493
0584	PURG FLOW P0441	0585	PURG FLOW P1447
0586	PURG VOL CN/V P1444	0587	QK TCH IN OF ZERO QUNTY CALIB VAL AT IDL
0588	QK TCH IN ZERO QUNTY CALIB VAL WHILE DRIVING	0589	RAIL PRS SEN ADAPTIVES
0590	RESETTING OF ADAPTION VALUES	0591	Start OBD test: Catalytic converter
0592	Start OBD test: O2 sensors	0593	Static Test
0594	STATUS OF TEACH IN PROCESSES	0595	SWIRL FLAP
0596	SWIRL FLAP PROGRAMMING	0597	TCC S/V FNCTN P1776
0598	TEACH IN AFTER REPLAC ADBLUE METERING VALVE	0599	TEACH IN BOOST PRESSURE POSITIONER
0600	TEACH IN OF DPF AFTER REPLACE OF CDI C/U	0601	TEACH IN OF INTAKE PORT SHUTOFF
0602	TEACH IN OF THROTTLE VALVE STOP	0603	VACUUM PUMP
0604	VALVE TIMING ADJUSTMENT	0605	VC CUT/V BP/V P1491
0606	VEHICLE FUNC PROG	0607	WRITE H/P FUEL PUMP TOTAL STARTS COUNT
0608	WRITE SAVED DATA	0609	WRITE STARTER OPERATION COUNT
0610	SPECIFIC DTC CLEAR	0611	Cell voltage loss inspection
0612	CLEAR BATTERY GRADUAL CAPACITY LOSS DATA	0613	SAVE BATTERY INFORMATION DATA
0614	WRITE BATTERY INFORMATION DATA	0615	ERASE KEY ALLOTMENT USER
0616	CLEAR OUTPUT LIMIT REASON	0617	REVERSING CAMERA CALIBRATION
0618	CENTER CONNECTION SETTING	0619	CONFIGURATION OF SYSTEM COMPONENTS
0620	IGN MODULE CONFIG	0621	PROGRAMMING THE CODES OF THE FOUR VALVES
0622	REGISTER/SWITCH ID	0623	FUNCTION TEST OF ALL WHEEL DRIVE SOLENOID VALVE WHILE DRIVING
0624	MANUAL INITIAL STARTUP	0625	REPLACEMENT OF TRANSFER CASE
0626	RESETTING OF LEARNED VALUES OF ALL WHEEL DRIVE SOLENOID VALVE	0627	RESETTING THE OIL SERVICE DATA
0628	ZOOM FUNCTION	0629	CAUSE OF BSW CANCEL
0630	CAUSE OF ENTRY CANCEL	0631	CAUSE OF IPA CANCEL
0632	CAUSE OF LDW CANCEL	0633	CAUSE OF PSR CANCEL
0634	FRONT WIDE-VIEW FIXED GUIDE LINE CORRECTION	0635	PARTS WITH DOOR MIRROR AUTO FOLD FUNC
0636	REAR WIDE-VIEW FIXED GUIDE LINE CORRECTION	0637	TURNING RADIUS CORRECTION
0638	MOD FUNCTION	0639	COMP CONFIGURATION
0640	BOX I-Key OPERATION MODE SET	0641	FOG LAMP OVERRIDE
0642	FR RR DRIP	0643	IGN/ACC BATTERY SAVER
0644	KEY ASSIGNMENT	0645	MULTIPLEXED NETWORK CONFIGURATION
0646	RAIN SENSOR	0647	SIREN INITIALIZE
0648	STORED ENERGY MANAGEMENT DATA	0649	TWILIGHT On
0650	WIPER LINK	0651	STROKE SENSOR 0 POINT LEARNING
0652	COMPUTER REINITIALISATION	0653	COMPUTER REINITIALIZATION
0654	CHARGE CURRENT LIMITATION HISTORY	0655	VEHICLE IDENTIFIER
0656	ANALOGIC DISPLAY FUEL GAUGE CALIBRATION	0657	LCD DISPLAY FUEL GAUGE CALIBRATION
0658	OIL SERVICE AND ODOMETRY MILES - KM	0659	RESTART THE COMPUTER
0660	UPDATE ODOMETER	0661	WRITING OF INSTRUMENT PANEL DATA FOR INJECTION
0662	AFTER PRESSURE LINE REPLACEMENT	0663	DATA CLEAR FOR REPLACING CPU A
0664	DATA CLEAR FOR REPLACING CPU B	0665	SAVE DATA FOR REPLACING CPU

Index	Special Function Name	Index	Special Function Name
0666	WRITE DATA AFTER REPLACING CPU	0667	CHASSIS DYNAMOMETER MODE
0668	DPF REGENERATION	0669	PARTICLE FILTER REGENERATION
0670	Commercial VHCL idle SPD MOD	0671	INJECTOR INJECTION QUANTITY ADJUSTMENT
0672	RESET OF LAMBDA VALUES	0673	SERVIC REGENERATION
0674	SERVICE REGENERATION	0675	VALVE TIMING OFFSET DATA WRITING
0676	WRT FUEL LEARN VALUE	0677	CALIBRATION OF ELECTRIC POWER STEERING TORQUE SENSOR
0678	CB RE LEARNING	0679	POWER STEERING FLUID AIR BLEEDING
0680	DAST CALIBRATION (MODE1)	0681	DAST CALIBRATION (MODE2)
0682	RESETTING CENTER POSITION OF STEERING	0683	CLUTCH 1 ZERO POSITION LEARNING
0684	SAVE DATA FOR CPU REPLACE	0685	WRITE DATA AFTER REPLACE CPU
0686	ACCUMULATOR PRESSURE DECREASES	0687	PRESSURE SENSOR CALIBRATION
0688	PUMP LOCK/UNLOCK	0689	VALVE CALIBRATION
0690	VALVE CHECK	0691	Clear Battery Info
0692	LI-ION BATTERY CAPACITY BALANCING	0693	BREAKING IN OF REFRIGERANT COMPRESSOR
0694	CB RE LEARNING	0695	NORMALIZATION OF ACTUATOR MOTORS
0696	TEACH IN OF ACTUATOR MOTORS	0697	CAUSE OF AUTO-CANCEL 5
0698	CAUSE OF AUTO-CANCEL 6	0699	FEB OPERATION MILEAGE
0700	ERASE LAST DRIVER INFORMATION	0701	HANDS-FREE CARD READING
0702	H-FREE CARDS LOW BATTERY COUNTER	0703	PROGRAMMING THE HANDS-FREE CARD
0704	CALCULATE BATTERY WEAR COUNTERS(R011)	0705	CALCULATE BATTERY WEAR COUNTERS(S006)
0706	COMPUTER INITIALISATION	0707	CORROSION BATTERY COUNTER ESTIMATED
0708	CORROSION BATTERY COUNTER MEMORISED	0709	NUMBER OF STARTING
0710	RESETTING INTERNAL PROTECTION	0711	SENSOR INITIALIZE
0712	FEB OPERATION MILEAGE	0713	MILLIWAVE RADAR ADJUST
0714	FUEL METER DIAGNOSIS (ANALOG POINTER)	0715	TABLE INITIALIZATION ASSYST
0716	TEACH IN INSTRUMENT CLUSTER	0717	TRANSFER OF MANUFACTURER DEFAULT SETTINGS
0718	WARNING LAMP DIAGNOSIS	0719	RESOLVER WRITE
0720	COMP CONFIGURATION	0721	Zero point reset function
0722	G SENSOR HORIZON STATUS LEARNING	0723	VEHICLE CONFIGURATION
0724	CONFIGURING THE MULTIMEDIA COMPUTER	0725	COMP CONFIGURATION
0726	PARAMETRAGE PRIVE 1	0727	CARAVAN TOWING DISTANCE
0728	TRAILER HITCH DETECTION RANGE ADJUSTMENT	0729	Bluetooth FUNCTION
0730	Bluetooth PAIRING ERASE	0731	CHANGE Bluetooth NAME
0732	WRITE VIN (MANUAL INPUT)	0733	WRITE VIN (SAVED DATA)
0734	1ST GR FNCTN P0731	0735	2ND GR FNCTN P0732
0736	3RD GR FNCTN P0733	0737	4TH GR FNCTN P0734
0738	5TH GR FNCTN P0735	0739	6TH GR FNCTN P0729
0740	7TH GR FNCTN P1734	0741	ACCELERATION DOWNSHIFT
0742	ADAPT PRCDR FOR TRQ CONV LOOK UP CLUTCH	0743	ADAPTION VALUES OF SHIFT OPERATIONS
0744	Clutch Point	0745	CVT INSPECTION
0746	EMPTY PRESSURE RESERVOIR	0747	ERASE CALIBRATION DATA
0748	EXHAUST CLUTCH FAST MODE	0749	EXHAUST HYDRAULIC PUMP
0750	EXHAUST TRANSMISSION	0751	FILL PRESSURE RESERVOIR
0752	FORCE INITIAL ABSOLUTE CLUTCH POSITION	0753	FR/B SOL FUNCTN CHECK
0754	FWD CLUTCH POINT LEARNING	0755	GEAR SHIFTING
0756	HLR/C SOL FUNCTN CHECK	0757	I/C SOL FUNCTN CHECK
0758	LC/B SOL FUNCTN CHECK	0759	MEMORISATION OF SPEEDS
0760	NEW CLUTCH INSTALLED	0761	NOTE OIL WEAR COUNTER
0762	OIL LEVEL CHECK	0763	POSITION CLUTCH ACTUATOR
0764	PROGRAM CLUTCH OPEN POSITION	0765	R POSITION FNCTN
0766	READ IP CHARA - REPLACEMENT TCM	0767	RECALCULATE FACTOR RDYN
0768	REMOVE ADAPTATIONS VALUE OF SHIFT OPERATIONS	0769	RESET CLUTCH LOAD CONFIGURATION
0770	RESET INITIAL ABSOLUTE CLUTCH POSITION	0771	REVERSE GEAR RESET OF ADAPTION VALUES

Index	Special Function Name	Index	Special Function Name
0772	START TRANSMISSION SELF ADAPTION	0773	TCC SOL FUNCTN CHECK
0774	TEACH IN CLUTCH TOUCH POINT	0775	TEACH IN OF SELECTION RANGE SENSOR
0776	UPSHIFT	0777	WRITE DATE NEW CLUTCH FITTED
0778	WRITE IP CHARA - REPLACEMENT TCM	0779	WRITE TRANSMISSION OIL CHANGE DATE
0780	BRAKE PRESSURE OFFSET SENSOR	0781	LONGITUDINAL ACCELERATION SENSOR OFFSET
0782	Reset	0783	STEERING WHEEL ANGLE OFFSET SENSOR
0784	TRANSVERSE ACCELERATION OFFSET SENSOR	0785	CLEAR EDR
0786	LEARN KEY NUMBER	0787	SENSOR CONFIGURATION
0788	FRONT OR REAR SENSOR LOCALIZATION WAS UNSUCCESSFUL	0789	SET AUTOLOCATION DISABLE
0790	DAYTIME RUNNING LIGHT SETTING	0791	AUTO ACTIVATION ON (AT/CVT)
0792	AFT maintenance	0793	CAMSHAFT REFERENCE ADAPTATION
0794	ECU SERIAL NUMBER	0795	EGR_Study
0796	ETHANOL READING FREQUENCY COUNTER RESET	0797	INJECTOR ADAPTIVES
0798	NUMBER OF STARTING CYCLES (V343)	0799	OPE TIME BASIC DIAG TEMP SEN UPSTREAM SCR CAT
0800	OPR TIME BASIC DIAG SCR CATALYSTIC CONVRTR	0801	PROGRAMMING THROTTLE LIMITS
0802	Reset fuel and timing learn tables	0803	Reset fuel consumption short term log
0804	RICHNESS REGULATION PROGRAMMING	0805	RTCV actuator calibrate
0806	REGULATION WASTE GATE	0807	Teach in of sensor rotor adaptation
0808	TEACH IN THE ETHANOL PROPORTION IN THE FUEL	0809	THERMOPLUNGER PROGRAMMING