

# MaxiSys\_Peugeot\_V5.00 Function List (Note:For reference only)

**NOTES:**

- This function is supported.                      ※ This function may be supported, which depends on the actual condition of the vehicle.
  - This function is not supported.                ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
107	Engine ECU	HDI SID805	●	●	●	●	●	20419, 20527,
107	Engine ECU	ME795	○	▲	▲	▲	▲	20438, 20527, 20438,
107	Coded anti-start	ADC	○	▲	▲	▲	○	20558,
107	Power steering	DAE	▲	▲	▲	▲	○	20527,
107	Air bag	SAC TRW	▲	▲	▲	▲	○	20527,
107	ABS or ESP ECU	ABS 8 0 C1	○	▲	▲	▲	▲	20527,
107	ABS or ESP ECU	ESP 8 0 C1	○	▲	▲	▲	▲	20465, 20527,
107	Gearbox	MMT	○	▲	▲	▲	▲	20100, 20756, 20527,
107	Radio	RDE	▲	▲	▲	▲	▲	20139, 20334, 20335, 20336, 20337, 20030, 20519, 20527,
108	Engine ECU	V46	●	●	●	●	●	20010, 20172, 20419, 20251, 20262, 20260, 20659, 20681, 20685, 20149, 20580, 20527,
108	Engine management (Motor IKR)	ME17_9_52	○	▲	▲	▲	▲	20438, 20765, 20420, 20527,
108	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	RBV	▲	▲	▲	▲	▲	20056, 20170, 20527,
108	Air conditioning ECU	ACN HVAC	▲	▲	▲	▲	▲	20036, 20397, 20527,
108	Power steering	EPS T	▲	▲	▲	▲	○	20281, 20785,
108	Gearbox	MMT T	▲	▲	▲	▲	▲	20148
108	'stop & start' control ECU	ECO	▲	▲	▲	▲	▲	20054, 20097, 20345, 20708, 20578, 20527,
108	Coded anti-start / Hands free starting access electronic module.	IMMO	○	▲	▲	▲	○	20096, 20395, 20497, 20096, 20395, 20497, 20678, 20527,
108	TBTBotier mains-libres (entry and start): surveillance de dmarrage	PMN_SC	○	▲	▲	▲	▲	20527,
108	Hands-free unit (Entry and start) : Starting authorisation	PMN_PS	○	▲	▲	▲	▲	20527,
108	Instrument panel	MET	▲	▲	▲	▲	▲	20527,
108	Multifunction screen	AVN	○	▲	▲	▲	○	20527,
108	TBTBotier mains-libres (entry and start) : accs et dmarrage	IDT	▲	▲	▲	▲	▲	20790, 20789, 20795, 20796, 20441, 20451, 20472, 20473, 20475, 20539, 20541, 20094, 20320, 20545, 20565, 20567, 20645, 20646, 20669, 20527,
108	Air bags and pre-tensioners control unit	ABG	▲	▲	▲	▲	○	20527,
208	Built-in Systems Interface	BSI2010	●	●	●	●	●	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20495, 20549, 20731, 20301, 20489, 20047, 20086, 20154, 20228, 20411, 20844, 20489, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
208	Electric power steering	DAE	●	●	●	●	○	20527,
208	Electric power steering	DAE A515	●	●	●	●	●	20527,
208	Battery charge status unit	BECB GEN2	●	●	●	●	○	20527,
208	Engine ECU	ME749 EC5	●	●	●	●	●	20226, 20460, 20717, 20527,
208	Engine ECU	EDC17C10_BR2	●	●	●	●	●	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
208	Engine ECU	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
208	Engine ECU	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
208	Engine ECU	V46	●	●	●	●	●	20806, 20070, 20251, 20262, 20260, 20659, 20681, 20685, 20149, 20578, 20580, 20527,
208	Engine ECU	MED17_4_2	●	●	●	●	●	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
208	Engine ECU	MEVD17_4_2	●	●	●	●	●	20070, 20563, 20291, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20827, 20061, 20527,
208	Engine ECU	V344	●	●	●	●	●	20858, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20527,
208	Engine ECU	V345	●	●	●	●	●	20858, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20527,
208	Engine ECU	ME745 EC5	●	●	●	●	●	20460, 20717, 20527,
208	Engine ECU	VD46	●	●	●	●	●	20349, 20299, 20444, 20190, 20544, 20157, 20576, 20593, 20653, 20654, 20658, 20661, 20680, 20685, 20711, 20578, 20580, 20594, 20613, 20715, 20527,
208	Engine ECU	EDC17C60	●	●	●	●	●	20144, 20484, 20256, 20257, 20258, 20259, 20829, 20690, 20624, 20625, 20716, 20606, 20619, 20670, 20683, 20753, 20198, 20288, 20444, 20805, 20093, 20514, 20513, 20505, 20548, 20552, 20554, 20122, 20527,
208	Rain and brightness sensor	PLUIE LUMINOSITE UDS	●	●	●	●	○	20797, 20527, 20797, 20527,
208	Radio	RDE	●	●	●	●	●	20129, 20139, 20334, 20337, 20844, 20030, 20519, 20129, 20139, 20334, 20337, 20844, 20030, 20519, 20527,
208	Air bag	RBG UDS	●	●	●	●	○	20189, 20406, 20822, 20527,
208	Multiplexed control panel	FMUX	●	●	●	●	●	20527,
208	Steering wheel with integral controls (VCI)	VCI	●	●	●	●	●	20527,
208	Independent telematic unit (BTA)	BTA	●	●	●	●	●	20847, 20142, 20527,
208	Independent telematic unit (BTA)	BLVV	●	●	●	●	●	20176, 20527,
208	Instrument panel	COMBINE UDS	●	●	●	●	●	20145, 20192, 20527,
208	audio amplifier	AMPLI AUDIO	●	●	●	○	●	20527,
208	Parking aid	AAS UDS	●	●	●	●	○	20558, 20457, 20527,
208	ABS or ESP ECU	ABSMK100	●	●	●	●	●	20042, 20042, 20632, 20820, 20527,



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
301	ABS or ESP ECU	ABSMK100	▲	▲	▲	▲	▲	20042, 20042, 20632, 20820, 20527,
301	ABS or ESP ECU	ESPMK100	▲	▲	▲	▲	▲	20044, 20656, 20044, 20052, 20820, 20527,
301	Multifunction screen	EMF A UDS	▲	▲	▲	▲	▲	20527,
301	Multifunction screen	EMF C UDS	▲	▲	▲	○	▲	20477, 20151, 20527,
301	Switch module at the steering wheel	HDC	▲	▲	▲	▲	▲	20527,
301	Gearbox	BVA AL4	▲	▲	▲	▲	▲	20333, 20004, 20448, 20527,
301	Gearbox	MAPS_UDS	▲	▲	▲	▲	▲	20099, 20313, 20357, 20751, 20757, 20758, 20667, 20664, 20665, 20698, 20697, 20613, 20614, 20727, 20527,
301	Engine ECU	V46_21	▲	▲	▲	▲	▲	20029, 20003, 20070, 20255, 20386, 20387, 20825, 20527,
301	Engine ECU	EDC17C10_BR2	▲	▲	▲	▲	▲	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
301	Engine ECU	V46	▲	▲	▲	▲	▲	20070, 20251, 20262, 20260, 20659, 20681, 20685, 20149, 20580, 20527,
301	Engine ECU	ME745 EC5	▲	▲	▲	▲	▲	20460, 20717, 20527,
301	Airbag	RBG UDS	▲	▲	▲	▲	○	20189, 20406, 20822, 20527,
301	Electric power steering	DAE	▲	▲	▲	▲	○	20527,
301	Electric power steering	DAE A515	▲	▲	▲	▲	▲	20527,
301	Radio	RDE	▲	▲	▲	▲	▲	20129, 20139, 20334, 20337, 20844, 20030, 20519, 20129, 20139, 20334, 20337, 20844, 20030, 20519, 20527,
301	Radio	RD45	▲	▲	▲	▲	▲	20844, 20030, 20519, 20527, 20844, 20030, 20519,
301	Parking assistance	AAS UDS	▲	▲	▲	▲	○	20457, 20527,
301	Siren	SIR	▲	▲	▲	▲	▲	20131, 20131, 20527,
301	Instrument panel	COMBINE UDS	▲	▲	▲	▲	▲	20145, 20192, 20527,
301	Trailer relay unit	BSG 2010 RQ	▲	▲	▲	▲	▲	20527,
301	Multiplexed additive pump	PADDGO	▲	▲	▲	▲	▲	20011, 20586, 20590, 20527,
301	Electronic key reader	LCE	▲	▲	▲	▲	○	20527,
301	Electric steering lock	AVE	▲	▲	▲	▲	▲	20527, 20767,
301	Hands free starting access electronic module.	BML	▲	▲	▲	▲	▲	20075, 20076, 20077, 20078, 20079, 20080, 20081, 20082, 20083, 20358, 20527,
301	Multiplexed control panel	FMUX	▲	▲	▲	▲	▲	20527, 20527, 20527,
301	Telematics	MRN	▲	▲	▲	▲	▲	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20527,
308	Parking aid	AAS	●	●	●	●	○	20558, 20457, 20527,
308	ABS/traction control	ABS81	▲	▲	▲	▲	○	20192, 20039, 20527,
308	ABS/traction control	ESP81	▲	▲	▲	▲	▲	20558, 20192, 20408, 20039, 20527,
308	Multifunction display	EMF A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
308	Multifunction display	EMF C	▲	▲	▲	▲	▲	20137, 20151, 20137, 20151, 20527,
308	Driver and passenger airbags	SAC_AUTOLIV	▲	▲	▲	▲	○	20249, 20396, 20481, 20740, 20744, 20192, 20427, 20249, 20396, 20481, 20740, 20744, 20427, 20249, 20396, 20481, 20740, 20744, 20427, 20406, 20822, 20527,
308	Anti-theft alarm	ALARME	▲	▲	▲	▲	▲	20125, 20115, 20118,
308	Anti-theft alarm	ALARME LIN	▲	▲	▲	▲	▲	20527,
308	audio amplifier	AMPLI AUDIO	▲	▲	▲	○	▲	20527,
308	Radio or radiotelephone (radio part)	RD43	▲	▲	▲	▲	▲	20844, 20030, 20404, 20519, 20527, 20720, 20844, 20030, 20519,



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
308	Injection/ignition	DCM34	▲	▲	▲	▲	▲	20508, 20818, 20239, 20291, 20187, 20328, 20242, 20819, 20188, 20020, 20226, 20626, 20285, 20694, 20240, 20283, 20588, 20629, 20672, 20710, 20573, 20579, 20694,
308	Injection/ignition	DCM35	▲	▲	▲	▲	▲	20088, 20089, 20343, 20509, 20020, 20067, 20062, 20226, 20240, 20588, 20629, 20672, 20710, 20285, 20573, 20579, 20692, 20694, 20527,
308	Injection/ignition	EDC16C3	▲	▲	▲	▲	▲	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20468, 20296, 20719, 20226, 20241, 20344, 20470, 20483, 20246, 20635, 20527,
308	Injection/ignition	MED17_4_EUR04	▲	▲	▲	▲	▲	20559, 20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
308	Injection/ignition	MEV17_4_EUR04	▲	▲	▲	▲	▲	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
308	Injection/ignition	MM6LPB	▲	▲	▲	▲	▲	20843, 20112, 20005, 20159, 20226, 20437, 20059, 20527,
308	Injection/ignition	ME745	▲	▲	▲	▲	▲	20743, 20631, 20721, 20527,
308	Injection/ignition	ME749	▲	▲	▲	▲	▲	20856, 20743, 20631, 20721, 20527,
308	Injection/ignition	ME749_EC5	▲	▲	▲	▲	▲	20226, 20460, 20717, 20527,
308	Injection/ignition	MM6KP	▲	▲	▲	▲	▲	20463, 20859, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
308	Injection/ignition	MEV17_4_EUR05	▲	▲	▲	▲	▲	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
308	Injection/ignition	MED17_4_EUR05	▲	▲	▲	▲	▲	20192, 20559, 20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
308	Injection/ignition	HDI_SID807	▲	▲	▲	▲	▲	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
308	Injection/ignition	EDC17C10	▲	▲	▲	▲	▲	20088, 20089, 20343, 20509, 20063, 20062, 20065, 20064, 20068, 20226, 20296, 20284, 20374, 20461, 20470, 20564, 20589, 20710, 20527,
308	Injection/ignition	EDC17C10_BR2	▲	▲	▲	▲	▲	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
308	Injection/ignition	MEV17_4_2	▲	▲	▲	▲	▲	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
308	Injection/ignition	HDI_SID807_BR2	▲	▲	▲	▲	▲	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
308	Injection/ignition	MEVD17_4_2	▲	▲	▲	▲	▲	20070, 20563, 20291, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20827, 20061,
308	Injection/ignition	MED17_4_2	▲	▲	▲	▲	▲	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
308	Injection/ignition	ME745_EC5	▲	▲	▲	▲	▲	20460, 20717, 20527,
308	Injection/ignition	V46_21	▲	▲	▲	▲	▲	20029, 20003, 20070, 20255, 20386, 20387, 20527,
308	Hands-free kit (Telephone)	KML	▲	▲	▲	▲	▲	20145, 20129, 20120, 20192, 20527,
308	Hands-free kit (Telephone)	BOITIER NOMADE	▲	▲	▲	▲	▲	20135, 20135, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
308	Matrix screen integral to the instrument panel	MATT	▲	▲	▲	▲	▲	20527,
308	Service module	MD SERV	●	●	●	●	●	20124, 20124, 20527,
308	Service module	BTA	▲	▲	▲	▲	▲	20847, 20142, 20527,
308	Service module	BLVV	▲	▲	▲	▲	▲	20176, 20527,
308	Multiplexed additive pump	PADDGO	▲	▲	▲	▲	▲	20011, 20586, 20590, 20527,
308	Multiplexed additive pump	PADDGO_E5	▲	▲	▲	▲	▲	20282, 20163, 20234, 20235, 20323, 20584, 20163, 20234, 20235, 20323, 20686, 20163, 20234, 20235, 20323, 20687, 20163, 20234, 20235, 20323, 20527,
308	Door control pad	PDPC	▲	▲	▲	▲	▲	
308	Lane departure warning system	AFIL	▲	▲	▲	▲	○	20455, 20268, 20749, 20750, 20527,
308	Telematics	RADIONAV RNEGC	▲	▲	▲	▲	▲	20847, 20095, 20119, 20123, 20136, 20137, 20527,
308	Telematics	RADIONAV RNEG	▲	▲	▲	▲	▲	20847, 20095, 20119, 20123, 20136, 20137, 20527,
308	Telematics	RADIONAV NG4	▲	▲	▲	▲	▲	20847, 20095, 20119, 20123, 20136, 20527,
308	Telematics	BOITIER_TELEMATIQUE	▲	▲	▲	▲	▲	20128, 20847, 20095, 20123, 20127, 20137, 20006, 20114, 20121, 20133, 20128, 20847, 20095, 20123, 20128, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20527,
308	Telematics	RADIONAV RNEG ECO	▲	▲	▲	▲	▲	20847, 20095, 20119, 20123, 20136, 20527,
308	Telematics	RNEG2010	▲	▲	▲	▲	▲	20847, 20119, 20123, 20136, 20141, 20140, 20527,
308	Seat belts not fastened LED unit	TNB	▲	○	○	○	▲	
308	Sun roof	TOUV	▲	▲	▲	▲	▲	20506, 20527,
308	Folding roof	BTE	▲	▲	▲	▲	▲	20832, 20833, 20527,
308	Battery charge status unit	BECB	●	●	●	●	○	20527,
308	Battery charge status unit	BECB_GEN2	▲	▲	▲	▲	○	20527,
308	Central voltage retention device	DMTC	●	○	○	○	○	
308	High frequency receiver	RHF	●	●	●	●	○	
308	Moving panel deflector	DEFL PAN MOBIL	●	●	●	●	●	20527,
406	Engines/automatic gearbox	AL4 autoadaptive automatic gearbox	●	●	●	●	●	7011
406	Air bags	Air bag and seat belt		●	●			
406	Air bags	Side airbag. (right side)		●	●			
406	Active safety	Electronically managed suspension		●	●			
406	Active safety	ABS BOSCH		●	●			
406	Active safety	ABS BOSCH 5.3	●	●	●	●	●	
406	Engines/automatic gearbox	LFX MM1AP		●	●		●	
406	Engines/automatic gearbox	LFY BOSCH MP7.3		●	●		●	
406	Engines/automatic gearbox	LFY SAGEM SL 96		●	●			
406	Engines/automatic gearbox	XFZ BOSCH MP7.0		●	●			
406	Engines/automatic gearbox	RHZ BOSCH EDC15C2	●	●	●	●	●	
406	Engines/automatic gearbox	RHZ BOSCH EDC15C2		●	●	●	●	
406	Air bags	Side airbag. (left side)		●	●			
407	Boot wiring housing	BSC	▲	▲	▲	▲	▲	20527,
407	Rain and brightness sensor	PLUIE LUMINOSITE	●	●	●	○	○	
407	heating/ventilation	CLIM REGULEE	●	●	●	●	●	20017, 20018, 20021, 20202, 20474, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
407	CD player	CHANGEUR CD	●	●	●	○	●	20186, 20331, 20527, 20178, 20390, 20527,
407	Anti-theft alarm	ALARME	●	●	●	●	●	20125, 20115, 20125, 20115, 20115, 20527,
407	Switch module under the steering wheel (Top of column)	HDC	●	●	●	●	●	20269, 20271, 20272, 20527,
407	Injection/ignition	ME747	●	●	●	●	●	20005, 20381, 20437, 20147, 20309, 20527,
407	Injection/ignition	EDC16C3	●	●	●	●	●	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20296, 20719, 20226, 20241, 20344, 20470, 20483, 20246, 20635, 20527,
407	Injection/ignition	MM6LP	●	●	●	●	●	20843, 20112, 20226, 20437, 20059, 20692, 20527,
407	Injection/ignition	S2000PM2	●	●	●	●	●	20527,
407	Injection/ignition	SID201	○	●	●	●	●	20138, 20809, 20226, 20246, 20696, 20527,
407	Injection/ignition	HDI_SID803	●	●	●	●	●	20117, 20215, 20221, 20220, 20547, 20546, 20855, 20305, 20245, 20499, 20286, 20469, 20577, 20638, 20626, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20527,
407	Injection/ignition	HDI_SID803A	●	●	●	●	●	20117, 20215, 20221, 20220, 20547, 20546, 20855, 20305, 20245, 20499, 20286, 20469, 20577, 20638, 20626, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20527,
407	Injection/ignition	MM6LPB	●	●	●	●	●	20843, 20112, 20005, 20159, 20226, 20437, 20059, 20527,
407	Injection/ignition	DCM34	●	●	●	●	●	20508, 20818, 20239, 20291, 20187, 20328, 20242, 20819, 20188, 20020, 20226, 20626, 20285, 20694, 20240, 20283, 20588, 20629, 20672, 20710, 20573, 20579, 20694, 20527,
407	Injection/ignition	DCM35	●	●	●	●	●	20088, 20089, 20343, 20509, 20020, 20067, 20062, 20226, 20240, 20588, 20629, 20672, 20710, 20285, 20573, 20579, 20692, 20694, 20527,
407	Injection/ignition	EDC16CP39	●	●	●	●	●	20382, 20156, 20356, 20367, 20446, 20353, 20355, 20346, 20226, 20238, 20240, 20283, 20380, 20588, 20694, 20714, 20527,
407	Injection/ignition	MM6KP	●	●	●	●	●	20859, 20372, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
407	Injection/ignition	EDC17CP11	●	●	●	●	●	20295, 20243, 20244, 20348, 20360, 20062, 20226, 20626, 20285, 20694, 20626, 20285, 20694, 20283, 20380, 20588, 20692, 20694, 20527,
407	Injection/ignition	DCM35_BR2	●	●	●	●	●	20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
407	Multifunction display	EMF C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
407	Parking aid	AAS	●	●	●	●	○	20457, 20527,
407	Parking aid	AAS 407	●	●	●	●	○	20457, 20527,



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
407	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20846, 20155, 20516, 20763, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
407	Engine relay unit	BSM	▲	▲	▲	▲	▲	20527,
407	Trailer relay unit	BSR	●	●	●	●	●	
407	Under inflation detection	DSG	●	●	●	●	○	20168, 20267, 20536, 20303, 20304, 20538, 20543, 20857, 20826, 20527,
407	ABS/traction control	ESP EBC 440 CAN	●	●	●	●	●	20055, 20039, 20527,
407	ABS/traction control	ESP EBC 440 K	●	●	●	●	●	20055, 20039, 20527,
407	ABS/traction control	ESP81	●	●	●	●	●	20408, 20039, 20527,
407	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	●	○	20249, 20396, 20481, 20744, 20192, 20249, 20396, 20481, 20744, 20249, 20396, 20481, 20744, 20406, 20822, 20527,
407	Instrument panel	COMBINE	●	●	●	●	●	20130, 20527,
407	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
407	Hands-free kit (Telephone)	BOITIER NOMADE	●	●	●	●	●	20135, 20135, 20527,
407	Telematics	RADIONAV RNEG	▲	▲	▲	▲	▲	20847, 20095, 20119, 20123, 20136, 20137, 20527,
407	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20128, 20847, 20095, 20123, 20127, 20137, 20006, 20114, 20121, 20133, 20128, 20847, 20095, 20123, 20128, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20527,
407	Radio or radiotelephone (radio part)	AUTORADIO	●	●	●	●	●	20186, 20331, 20527,
407	Windscreen wiper	MOTEV	●	●	●	○	○	20400, 20739, 20400, 20739, 20527,
407	Additional heating	CHAUFF ADD	●	●	●	●	●	20048, 20527, 20107,
407	Driver's door electronics	EDPC	●	●	●	●	●	20814, 20174, 20442, 20527,
407	Passenger door electronics	EDPP	●	●	●	●	●	20814, 20174, 20442, 20527,
407	Power steering electric pump unit	GEP	●	●	●	●	○	20527,
407	gearbox	BVA AM6 AT6 EURO5	●	●	●	●	●	20502, 20634, 20600, 20605, 20527,
407	gearbox	BVA_AM6	●	●	●	●	●	20532, 20860, 20502, 20634, 20600, 20502, 20634, 20600, 20605, 20605,
407	gearbox	BVA ZF	▲	▲	▲	▲	▲	20748, 20108, 20527,
407	gearbox	BVA AL4	●	●	●	●	●	20333, 20004, 20448, 20527,
407	Electronically managed suspension	CSS	●	●	●	●	●	20527,
407	Right headlamp beam corrector	PROJETEURD	●	●	●	●	●	20527,
407	Left headlamp beam level corrector	PROJETEURG	●	●	●	●	●	20527,
407	Headlamp height adjuster / Directional headlamp	LAD	●	●	●	●	●	20527,
407	Headlamp height adjuster / Directional headlamp	LADAFS	●	●	●	●	●	20527,
407	Sun roof	TOUV	●	●	●	●	●	20506, 20527,
407	Driver's seat memorizing unit	BDMC	▲	▲	▲	▲	▲	20146, 20745, 20746, 20770, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
407	Passenger seat memorisation unit	BDMP	●	●	●	●	●	20146, 20325, 20410, 20745, 20746, 20770, 20527,
407	Battery charge status unit	BECB	●	●	●	●	○	20527,
407	Battery charge status unit	BECB_GEN2	●	●	●	●	○	20527,
407	High frequency receiver	RHF	●	●	●	●	○	
407	Diesel additive	ADDG03	●	●	●	●	●	20215, 20221, 20220, 20091, 20585, 20482, 20730, 20013, 20469, 20215, 20221, 20220, 20583, 20091, 20585, 20482, 20730, 20527,
408	Engine /Gearbox	DCM3.5	●	●	●	●	●	40, 100, 401, 404, 015, 000, 000, 000, 000, 000
408	Engine /Gearbox	EDC17C10_BR2	●	●	●	●	●	4, 014, 040, 150, 401, 700, 000
408	Engine /Gearbox	HDI_SID807_BR2	●	●	●	●	●	4, 014, 040, 150, 401, 700, 000
408	Engine /Gearbox	HDI_SID807	●	●	●	●	●	40, 140, 401, 504, 019
408	Engine /Gearbox	POMPE_MUX_TI	●	●	●	●	●	4026
508	Built-in Systems Interface (BSI)	BSI2010	●	●	●	●	●	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20495, 20549, 20731, 20301, 20489, 20086, 20154, 20228, 20411, 20844, 20489, 20162, 20237, 20323, 20426, 20428, 20433, 20610, 20527,
508	Engine ECU	DCM35_BR2	▲	▲	▲	▲	▲	20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
508	Engine ECU	DCM34_P	▲	▲	▲	▲	▲	20281, 20509, 20419, 20020, 20064, 20070, 20226, 20240, 20286, 20588, 20627, 20650, 20663, 20672, 20695, 20710, 20573, 20579, 20618, 20694,
508	Engine ECU	HDI_SID807_BR2	▲	▲	▲	▲	▲	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
508	Engine ECU	MED17_4_2	▲	▲	▲	▲	▲	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
508	Engine ECU	MEV17_4_2	▲	▲	▲	▲	▲	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
508	Engine ECU	EDC17CP42	▲	▲	▲	▲	▲	20088, 20089, 20117, 20295, 20245, 20348, 20360, 20062, 20065, 20070, 20374, 20461, 20469, 20637, 20620, 20621, 20626, 20651, 20657, 20660, 20661, 20662, 20679, 20711, 20285, 20579, 20597, 20527,
508	Engine ECU	MM6KP	▲	▲	▲	▲	▲	20463, 20859, 20372, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
508	Engine ECU	DCM35_HY	▲	▲	▲	▲	▲	20088, 20089, 20090, 20281, 20295, 20509, 20343, 20020, 20062, 20065, 20064, 20070, 20226, 20240, 20286, 20636, 20588, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
508	Engine ECU	DCM62	▲	▲	▲	▲	▲	20144, 20829, 20838, 20256, 20257, 20258, 20259, 20699, 20639, 20690, 20624, 20706, 20606, 20611, 20619, 20623, 20622, 20670, 20683, 20753, 20198, 20288, 20299, 20444, 20092, 20093, 20514, 20513, 20505, 20548, 20554, 20122, 20185, 20527,



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
508	Telematics unit (RTx) Or Radio Navigation	RNEG2010	▲	▲	▲	▲	▲	20847, 20119, 20123, 20136, 20141, 20140, 20527,
508	Telematics unit (RTx) Or Radio Navigation	MRN	▲	▲	▲	▲	▲	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20527,
508	Telematics unit (RTx) Or Radio Navigation	SMEG_PLUS	▲	▲	▲	▲	▲	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20843, 20527,
508	Independent telematic unit	BTA	▲	▲	▲	▲	▲	20847, 20142, 20527,
508	Independent telematic unit	BTA_CN	▲	▲	▲	▲	▲	20765, 20527,
508	Multiplexed control panel	FMUX	▲	▲	▲	▲	▲	20527,
508	Matrix screen integral to the instrument panel	MATT_C_2010	▲	▲	▲	○	▲	20527,
508	Matrix screen integral to the instrument panel	MATT_M_2010	▲	▲	▲	○	▲	20527,
508	Matrix screen integral to the instrument panel	MATT_P_2010	▲	▲	▲	○	▲	20527,
508	RD5 radio	RD5	▲	▲	▲	▲	▲	20844, 20030, 20519, 20527,
508	Hands free starting access electronic module.	BML	▲	▲	▲	▲	▲	20075, 20076, 20077, 20078, 20079, 20080, 20081, 20082, 20083, 20358, 20527,
508	Telematic navigator	CRT UDS	▲	○	○	▲	▲	
508	Radio amplifier	AMPLI_AUDIO	▲	▲	▲	○	▲	20527,
508	Switch module under the steering wheel (Top of column)	COM2008P	▲	▲	▲	▲	▲	20527,
508	Seat belts not fastened LED unit	TNB_2010	▲	○	○	○	▲	
508	Supply protection and management unit	BPGA2010	▲	▲	▲	▲	○	20527,
508	Steering wheel with integral controls (VCI)	VCI	▲	▲	▲	▲	▲	20527,
508	Rain and brightness sensor	PLUIE LUMINOSITE UDS	▲	▲	▲	▲	○	20797, 20527, 20797, 20527,
508	Air conditioning	CLIM REGULEE UDS	▲	▲	▲	▲	▲	20491, 20491, 20527,
508	Rear air conditioning	CLIM AR	▲	○	○	▲	▲	
508	Motorised Boot ECU	COFFRE MOTORISE	▲	▲	▲	▲	▲	20821, 20266, 20501, 20527,
508	Driver's seat memorizing unit	BDMC	▲	▲	▲	▲	▲	20146, 20410, 20745, 20746, 20747, 20770, 20146, 20410, 20745, 20746, 20747, 20770, 20527, 20146, 20410, 20745, 20746, 20747, 20770,
508	Door control pad	PDPC	▲	▲	▲	▲	▲	
508	Central voltage retention device	DMTC	▲	○	○	○	○	
508	Central voltage retention device	DMTR	▲	▲	▲	○	○	20527,
508	Electronic key reader	LCE	▲	▲	▲	▲	○	20527,
508	Electric steering lock	AVE	▲	▲	▲	▲	▲	20527, 20498,
508	High Head Vision	VTH UDS	▲	▲	▲	▲	○	20145, 20326, 20192, 20527,
508	Main beams assistant ECU	RETRO_INT	▲	▲	▲	▲	▲	20035, 20527,
508	Windscreen wiper (Left-hand side)	MOTEV_UDS	▲	▲	▲	▲	○	20527,
508	Windscreen wiper (Right-hand side)	MOTED_UDS	▲	▲	▲	▲	○	20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
508	Additional heating	CHAUFF ADD	▲	▲	▲	▲	▲	20048, 20527, 20107,
607	Engine/automatic gearbox	3FZ MM4MP2	●	●	●	●	●	7010
607	Engine/automatic gearbox	RFN MM4MP2 (Motored butterfly)	●	●	●	●	●	7010
607	Engine/automatic gearbox	RFN MM48P (Mechanical throttle housing)	●	●	●	●	●	7011
607	Engine/automatic gearbox	R6F mm4.8P	●	●	●	●	●	7011
607	Engine/automatic gearbox	XFX BOSCH ME7.4.6	●	●	●	●	●	7011
607		Built-in systems interface (BSI)	●	●	●	●	●	
607	Driver information/Communication	Multi-function display		●	●			
607	Driver information/Communication	Parking assistance	●	●	●	●		
607	Driver information/Communication	Radio	●	●	●	●		
607	Driver information/Communication	CD player	●	●	●	●		
607	Driver information/Communication	Instrument panel	●	●	●	●		
607	Driver information/Communication	Radio telephone	●	●	●	●	○	
607	Driver information/Communication	Hands Free Kit		●	●			
607	Driver information/Communication	On-board navigation system	●	●	●	●	○	
607	Visibility/Lighting	Headlamp height		●	●			
607		Air bags	●	●	●	○	○	
607	Control the openings	Motorised Boot ECU	●	●	●	●		
607	Control the openings	Driver's door control panel		●	●			
607	Control the openings	Passenger's door control panel		●	●			
607		Air conditioning		●	●			
607	Engine/automatic gearbox	4HX BOSCH EDC15C2	●	●	●	●	●	
607	Engine/automatic gearbox	RHS BOSCH EDC15C2	●	●	●	●	●	
607	Engine/automatic gearbox	RHZ BOSCH EDC15C2	●	●	●	●	●	
607	Engine/automatic gearbox	Diesel fuel additive control unit	●	●	●	●		
607	Engine/automatic gearbox	4HP20 gearbox	●	●	●	●		
607		Storing of the driving position	●	●	●	●		
607	Active safety	ABS BOSCH 5.3	●	●	●	●	●	
806	Engines/automatic gearbox	RFV BOSCH MP7.3	○	●	●	○	●	7009
806	Engines/automatic gearbox	RFN MM4.8P	●	●	●	●	●	7011
806	Engines/automatic gearbox	R6F MM4.8P	●	●	●	●	●	7011
806	Engines/automatic gearbox	AL4 autoadaptive automatic gearbox	●	○	●	●	●	7011
806	Active safety	BOSCH ABS5.3	●	●	●	●	○	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
806	Engines/automatic gearbox	RHW BOSCH EDC15C2	●	●	●	●	●	
806	Engines/automatic gearbox	RHZ BOSCH EDC15C2	●	●	●	●	●	
2008	Built-in Systems Interface	BSI2010	●	●	●	●	●	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20495, 20549, 20731, 20301, 20489, 20047, 20086, 20154, 20228, 20411, 20844, 20489, 20527,
2008	Electric power steering	DAE	●	●	●	●	○	20527,
2008	Electric power steering	DAE A515	●	●	●	●	●	20527,
2008	Battery charge status unit	BECEB_GEN2	●	●	●	●	○	20527,
2008	Engine ECU	ME749_EC5	●	●	●	●	●	20226, 20460, 20717, 20527,
2008	Engine ECU	EDC17C10_BR2	●	●	●	●	●	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
2008	Engine ECU	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
2008	Engine ECU	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
2008	Engine ECU	V46	●	●	●	●	●	20806, 20070, 20251, 20262, 20260, 20659, 20681, 20685, 20149, 20578, 20580, 20527,
2008	Engine ECU	MED17_4_2	●	●	●	●	●	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
2008	Engine ECU	MEVD17_4_2	●	●	●	●	●	20070, 20563, 20291, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20827, 20061, 20527,
2008	Engine ECU	V344	●	●	●	●	●	20858, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20527,
2008	Engine ECU	V345	●	●	●	●	●	20858, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20527,
2008	Engine ECU	ME745_EC5	●	●	●	●	●	20460, 20717, 20527,
2008	Engine ECU	VD46	●	●	●	●	●	20349, 20299, 20444, 20190, 20544, 20157, 20576, 20593, 20653, 20654, 20658, 20661, 20680, 20685, 20711, 20578, 20580, 20594, 20613, 20715, 20527,
2008	Engine ECU	EDC17C60	●	●	●	●	●	20144, 20484, 20256, 20257, 20258, 20259, 20829, 20690, 20624, 20625, 20716, 20606, 20619, 20670, 20683, 20753, 20198, 20288, 20444, 20805, 20093, 20514, 20513, 20505, 20548, 20552, 20554, 20122, 20527,
2008	Rain and brightness sensor	PLUIE LUMINOSITE UDS	●	●	●	●	○	20797, 20527, 20797, 20527,
2008	Radio	RDE	●	●	●	●	●	20129, 20139, 20334, 20337, 20844, 20030, 20519, 20129, 20139, 20334, 20337, 20844, 20030, 20519, 20527,
2008	Air bag	RBG UDS	●	●	●	●	○	20189, 20406, 20822, 20527,
2008	Multiplexed control panel	FMUX	●	●	●	●	●	20527,
2008	Steering wheel with integral controls (VCI)	VCI	●	●	●	●	●	20527,
2008	Independent telematic unit (BTA)	BTA	●	●	●	●	●	20847, 20142, 20527,







Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
3008	Air conditioning ECU	CLIM REGULEE	●	●	●	●	●	20527,
3008	Instrument panel	COMBINE	▲	▲	▲	▲	▲	20527,
3008	Headlamp height adjuster / Directional headlamp	LADCT	▲	▲	▲	▲	▲	20527,
3008	Rain sensor	PLUIE LUMINOSITE	●	●	●	○	○	20527,
3008	Power steering electric pump unit	GEP	▲	▲	▲	▲	○	20527,
3008	Deflation detection (DSG)	DSG	▲	▲	▲	▲	○	20168, 20459, 20737, 20530, 20267, 20536, 20303, 20304, 20538, 20543, 20368, 20857, 20826, 20527,
3008	Deflation detection (DSG)	DSG UDS	▲	▲	▲	▲	○	20536, 20857, 20527,
3008	Windscreen wiper	MOTEV	▲	▲	▲	○	▲	20527,
3008	Anti-slip mode selector	ASR	▲	▲	▲	▲	○	
3008	Electric secondary brake	FSE	▲	▲	▲	▲	▲	20049, 20247, 20518, 20049, 20247, 20518, 20527,
3008	Switch module under the steering wheel (Top of column)	HDC	▲	▲	▲	▲	▲	20527,
3008	Engine ECU	DCM35_BR2	▲	▲	▲	▲	▲	20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
3008	Engine ECU	EDC16C3	▲	▲	▲	▲	▲	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20468, 20296, 20719, 20226, 20241, 20344, 20470, 20483, 20246, 20635, 20527,
3008	Engine ECU	MEV17_4_EURO4	▲	▲	▲	▲	▲	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
3008	Engine ECU	MED17_4_EURO4	▲	▲	▲	▲	▲	20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
3008	Engine ECU	MEV17_4_EUR05	▲	▲	▲	▲	▲	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
3008	Engine ECU	MED17_4_EUR05	▲	▲	▲	▲	▲	20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
3008	Engine ECU	DCM35	▲	▲	▲	▲	▲	20088, 20089, 20343, 20509, 20020, 20067, 20062, 20226, 20240, 20588, 20629, 20672, 20710, 20285, 20573, 20579, 20692, 20694, 20527,
3008	Engine ECU	HDI_SID807	▲	▲	▲	▲	▲	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
3008	Engine ECU	MEV17_4_2	▲	▲	▲	▲	▲	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
3008	Engine ECU	HDI_SID807_BR2	▲	▲	▲	▲	▲	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
3008	Engine ECU	MED17_4_2	▲	▲	▲	▲	▲	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
3008	Engine ECU	DCM35_HY	▲	▲	▲	▲	▲	20088, 20089, 20090, 20281, 20295, 20509, 20343, 20020, 20062, 20065, 20064, 20070, 20226, 20240, 20286, 20636, 20588, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
3008	Engine ECU	MM6KP	▲	▲	▲	▲	▲	20859, 20372, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
3008	Engine ECU	DCM62	▲	▲	▲	▲	▲	20144, 20829, 20838, 20256, 20257, 20258, 20259, 20699, 20639, 20690, 20624, 20706, 20606, 20611, 20619, 20623, 20622, 20670, 20683, 20753, 20198, 20288, 20299, 20444, 20092, 20093, 20514, 20513, 20505, 20548, 20554, 20122, 20185, 20527,
3008	Engine ECU	EDC17C60	▲	▲	▲	▲	▲	20144, 20484, 20256, 20257, 20258, 20259, 20829, 20690, 20624, 20625, 20716, 20606, 20619, 20670, 20683, 20753, 20198, 20288, 20444, 20805, 20093, 20514, 20513, 20505, 20548, 20552, 20554, 20122, 20527,
3008	Hands-free kit (Telephone)	BOITIER NOMADE	▲	▲	▲	▲	▲	20135, 20135, 20527,
3008	Matrix screen integral to the instrument panel	MATT	●	●	●	●	●	20527,
3008	Services module	MD SERV	▲	▲	▲	▲	▲	20124, 20124, 20527,
3008	Services module	BTA	●	●	●	●	●	20847, 20142, 20527,
3008	Services module	BLVV	●	●	●	●	●	20176, 20527,
3008	Multiplexed additive pump	PADDGO	●	●	●	●	●	20011, 20586, 20590, 20527,
3008	Multiplexed additive pump	PADDGO_E5	●	●	●	●	●	20282, 20163, 20323, 20584, 20163, 20323, 20686, 20163, 20323, 20687, 20163, 20323, 20527,
3008	Multiplexed additive pump	PADDGO TI E6	●	●	●	●	●	20527,
3008	Door control pad	PDPC	●	●	●	●	●	
3008	Telematics	RADIONAV RNEG	▲	▲	▲	▲	▲	20847, 20095, 20119, 20123, 20136, 20137, 20527,
3008	Telematics	RADIONAV NG4	▲	▲	▲	▲	▲	20847, 20095, 20119, 20123, 20136, 20527,
3008	Telematics	RNEG2010	▲	▲	▲	▲	▲	20847, 20119, 20123, 20136, 20141, 20140, 20527,
3008	Telematics	RADIONAV RNEGC	▲	▲	▲	▲	▲	20847, 20095, 20119, 20123, 20136, 20137, 20527,
3008	High Head Vision	VTH	▲	▲	▲	▲	▲	20527,
3008	High Head Vision	VTH UDS	▲	▲	▲	▲	○	20326, 20192, 20527,
3008	High frequency receiver	RHF	▲	▲	▲	▲	○	
3008	Seat belts not fastened LED unit	TNB	●	○	○	○	●	
4007	Parking aid	AAS MMC	▲	▲	▲	▲	○	20527,
4007	ABS/traction control	ABS	▲	▲	▲	▲	▲	20409, 20418, 20815, 20527,
4007	ABS/traction control	ESP	●	●	●	●	●	20772, 20504, 20771, 20527,
4007	Locking and immobiliser control module	WCM	●	●	●	●	○	20145, 20192, 20084, 20494, 20515, 20500, 20084, 20494, 20332, 20674, 20675, 20677, 20500, 20527,
4007	Navigation	NAVIGATION	●	●	●	○	○	20527,
4007	Driver and passenger airbags	SAC_TRW	▲	▲	▲	▲	▲	20527,
4007	Radio or radiotelephone (radio part)	AUTORADIO_3	●	●	●	●	●	20527,
4007	Built-in Systems Interface (BSI)	ETACS_SUV	○	●	●	●	●	20403, 20407, 20848, 20452, 20835, 20486, 20610, 20845, 20527,
4007	gearbox	BV CVT	●	●	●	●	○	20527,
4007	gearbox	BOITE GETRAG	●	●	●	●	○	20415, 20351, 20359, 20615, 20527,
4007	Steering wheel angle sensor	CAV	●	●	●	○	○	20771, 20527,
4007	heating/ventilation	CLIM REGULEE	●	●	●	●	●	20527,
4007	Instrument panel	COMBINE	●	●	●	●	●	20412, 20275, 20274, 20392, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
4007	Injection/ignition	EDC16CP39	●	●	●	●	●	20296, 20507, 20012, 20379, 20354, 20347, 20068, 20226, 20238, 20240, 20380, 20470, 20517, 20718, 20692, 20527,
4007	Injection/ignition	MIVEC	●	●	●	●	●	20577, 20640, 20842, 20655, 20682, 20685, 20527,
4007	Injection/ignition	EDC16CP39_E5	●	●	●	●	●	20296, 20507, 20012, 20379, 20354, 20347, 20068, 20226, 20238, 20240, 20380, 20470, 20517, 20718, 20692, 20527,
4007	Hands-free kit (Telephone)	KML	●	●	●	●	●	20527,
4007	Rear RH door switch panel	PDPARD	●	●	●	●	○	20527,
4007	Rear LH door switch panel	PDPARG	●	●	●	●	○	20527,
4007	Driver's door module	PDPC	●	●	●	●	○	20527,
4007	Passenger door module	PDPP	●	●	●	●	○	20527,
4007	Sun roof	TO WEBASTO	●	●	●	●	○	20527,
4007	Rear final drive piloted clutch	TRANSMISSION	●	●	●	●	●	20527,
4007	Rain and brightness sensor	CDPL	●	●	●	●	○	20362, 20527,
4007	Headlamp height adjuster / Directional headlamp	CORPRO	●	●	●	●	●	20050,
4008	Parking aid	AAS MMC	●	●	●	●	○	20527,
4008	Driver and passenger airbags	SAC_TRW	●	●	●	●	●	20302, 20481, 20744, 20762, 20527,
4008	Driver's door module	PDPC	▲	▲	▲	▲	○	20527,
4008	Rain and brightness sensor	CDPL	●	●	●	●	○	20362, 20527,
4008	Anti-theft alarm	ALARME MMC	●	●	●	●	●	20527,
4008	Power steering	EPS	●	●	●	●	○	20527,
4008	Instrument panel	COMBINE	●	●	●	●	●	20412, 20275, 20274, 20392, 20527,
4008	Starting authorisation ECU	OSS	●	●	●	●	●	20527, 20720,
4008	Radio or radiotelephone (radio part)	AUTORADIO_3	●	●	●	●	●	20527,
4008	Injection/ignition	MIVEC	●	●	●	●	●	20577, 20649, 20841, 20842, 20655, 20682, 20685, 20527,
4008	Injection/ignition	CMM_4A92	●	●	●	●	●	20577, 20595, 20649, 20841, 20842, 20655, 20682, 20685, 20527,
4008	Injection/ignition	HDI_4N13	●	●	●	●	●	20143, 20112, 20143, 20112, 20293, 20449, 20469, 20571, 20595, 20629, 20841, 20293, 20842, 20293, 20655, 20527,
4008	Injection/ignition	HDI_SID807_J3J4	▲	▲	▲	▲	▲	20088, 20089, 20342, 20062, 20065, 20064, 20066, 20226, 20636, 20588, 20596, 20621, 20661, 20710, 20573, 20591, 20692, 20694, 20709, 20527,
4008	Rear final drive piloted clutch	TRANSMISSION	●	●	●	●	●	20527,
4008	Headlamp height adjuster / Directional headlamp	CORPRO	●	●	●	●	●	20050, 20527,
4008	Coded anti-start / Hands free starting access electronic module.	WCM	●	●	●	●	○	20145, 20192, 20084, 20494, 20515, 20321, 20322, 20431, 20084, 20494, 20332, 20674, 20676, 20677, 20321, 20322, 20431, 20527,
4008	Coded anti-start / Hands free starting access electronic module.	KOS	●	●	●	●	●	20084, 20494, 20084, 20494, 20084, 20494, 20495, 20511, 20324, 20431, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
4008	ECU-Stop and start	STT MMC	●	●	●	●	○	20527,
4008	Steering wheel angle sensor	CAV	●	●	●	○	○	20771, 20527,
4008	heating/ventilation	CLIM REGULEE	●	●	●	●	●	20527,
4008	gearbox	BV CVT	●	●	●	●	○	20527,
4008	Built-in Systems Interface (BSI)	ETACS_SUV	○	●	●	●	●	20403, 20407, 20848, 20452, 20835, 20486, 20845, 20610, 20845, 20527,
4008	Navigation	NAVIGATION	▲	▲	▲	○	○	20527,
5008	Engine/Gearbox	9HZ BOSCH EDC16C3	●	●	●	●	●	4, 007, 040, 140, 401, 500, 000
5008	Engine/Gearbox	HDI SID807	●	●	●	●	●	40, 140, 401, 504, 019
5008	Active and passive safety	ESP 8.1	●	●	●	●	●	500, 405, 006
1007 CAN	Driving assistance/Comfort	Under inflation	●	●	●	●	○	2, 002, 020, 030, 200, 400, 000, 000, 000, 000, 000, 000
1007 CAN		Built-in systems interface (BSI)	●	●	●	●	●	300, 210, 001
1007 CAN	Inform the driver/Audio/Communication	Instrument panel	●	●	●	●	●	3004
1007 CAN	Engine/Gearbox	9HZ BOSCH EDC16C3	●	●	●	●	●	40, 140, 401, 504, 020
1007 CAN	Engine/Gearbox	9HT BOSCH EDC16C3	●	●	●	●	●	40, 140, 401, 504, 020
1007 CAN	Active and passive safety	ESP MK60-0	●	●	●	●	●	500, 505, 012
1007 CAN	Engine/Gearbox	Controlled manual gearbox (BVMP)	●	●	●	●	●	7006
1007 CAN	Engine/Gearbox	KFU MM6LPC	●	●	●	●	●	7010
1007 CAN	Engine/Gearbox	KFV J34P	●	●	●	●	●	7011
1007 CAN	Engine/Gearbox	KFW J34P	●	●	●	●	●	7011
1007 CAN	Active and passive safety	ABS MK70.1	●	●	●	●	●	
1007 CAN	Active and passive safety	ESP MK60	●	●	●	●	●	
1007 CAN	Active and passive safety	Airbag ECU	●	●	●	●	○	
1007 CAN	Driving assistance/Comfort	Parking assistance	●	●	●	●	●	
1007 CAN	Driving assistance/Comfort	Air conditioning	●	●	●	●	●	
1007 CAN	Driving assistance/Comfort	Power steering	●	●	●	●	○	
1007 CAN	Engine/Gearbox	NFU BOSCH ME7.4.5	●	●	●	●	●	
1007 CAN	Engine/Gearbox	8HX SID 806 DV4	●	●	●	●	●	
1007 CAN	Engine/Gearbox	Multiplexed additive adding pump ECU	●	●	●	●	●	
1007 CAN	Inform the driver/Audio/Communication	Multi-function display	●	●	●	●	●	
1007 CAN	Inform the driver/Audio/Communication	Radio	●	●	●	●	●	
1007 CAN	Inform the driver/Audio/Communication	CD player	●	●	●	○	●	
1007 CAN	Inform the driver/Audio/Communication	Hands Free Kit	●	●	●	●	●	
1007 CAN	Inform the driver/Audio/Communication	Steering wheel switching module.	●	●	●	●	●	
1007 CAN	Inform the driver/Audio/Communication	Telematics	●	●	●	●	●	
1007 CAN	Inform the driver/Audio/Communication	High frequency receiver	●	●	●	●	○	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
1007 CAN	Vehicle protection/Management of accesses	Alarm	●	●	●	●	●	
1007 CAN	Engine/Gearbox	8HZ SID 806 DV4	●	●	●	●	●	
1007 CAN	Visibility/Lighting/Signalling	Rain/brightness sensor	●	●	●	○	○	
1007 CAN	Vehicle protection/Management of accesses	Motorised sliding side doors	●	●	●	●	●	
1007 VAN		Built-in systems interface (BSI)	●	●	●	●	●	300, 210, 001
1007 VAN	Driving assistance/Comfort	Air conditioning	●	●	●	●	●	
1007 VAN	Driving assistance/Comfort	Power steering DAE	●	●	●	●	○	
1007 VAN	Inform the driver/Audio/Communication	EMF	●	●	●	●	●	
1007 VAN	Inform the driver/Audio/Communication	RT3	●	●	●	●	●	
1007 VAN	Inform the driver/Audio/Communication	Radio	●	●	●	●	●	
1007 VAN	Inform the driver/Audio/Communication	CD player	●	●	●	●	●	
1007 VAN	Inform the driver/Audio/Communication	Instrument panel	●	●	●	●	●	
1007 VAN	Inform the driver/Audio/Communication	Steering wheel switching module.	●	●	●	●	○	
1007 VAN	Engine/Gearbox	Controlled manual gearbox (BVMP)	●	●	●	●	●	
1007 VAN	Engine/Gearbox	NFU ME744	●	●	●	●	●	
1007 VAN	Engine/Gearbox	N6A BOSCH ME7. 4. 5	●	●	●	●	●	
1007 VAN	Engine/Gearbox	N6B BOSCH ME7. 4. 5	●	●	●	●	●	
1007 VAN	Engine/Gearbox	NFU BOSCH ME7. 4. 5	●	●	●	●	●	
1007 VAN	Engine/Gearbox	KFU S2000MP2	●	●	●	●	●	
1007 VAN	Engine/Gearbox	KFU MM6LP	●	●	●	●	●	
1007 VAN	Engine/Gearbox	KFV J34P	●	●	●	●	●	
1007 VAN	Engine/Gearbox	8HX SIEEMENS SID 804	●	●	●	●		
1007 VAN	Vehicle protection/Management of accesses	Alarm	●	●	●	●	●	
1007 VAN	Engine/Gearbox	8HZ SIEEMENS SID 804	●	●	●	●		
1007 VAN	Active and passive safety	ABS MK70	●	●	●	●	●	
1007 VAN	Active and passive safety	ESP MK60	●	●	●	●	●	
1007 VAN	Active and passive safety	Airbag ECU	●	●	●	●	○	
1007 VAN	Visibility/Lighting/Signalling	Rain/brightness sensor	●	●	●	○	○	
1007 VAN	Visibility/Lighting/Signalling	Steering wheel switching module.	●	●	●	●	○	
1007 VAN	Vehicle protection/Management of accesses	Sliding side doors module	●	●	●	●		

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
206/206MUX	Active safety	ABS MK70	●	●	●	●	●	6001
206/206MUX	Engines/automatic gearbox	N6A BOSCH ME7.4.4	●	●	●	●	●	7011
206/206MUX	Engines/automatic gearbox	NFU BOSCH ME7.4.4	●	●	●	●	●	7011
206/206MUX	Engines/automatic gearbox	KFW BOSCH ME7.4.4	●	●	●	●	●	7011
206/206MUX	Engines/automatic gearbox	N6A BOSCH ME7.4.4 FLEX FUEL	●	●	●	●	●	7011
206/206MUX	Engines/automatic gearbox	NFU BOSCH ME7.4.4 FLEX FUEL	●	●	●	●	●	7011
206/206MUX	Engines/automatic gearbox	KFW BOSCH ME7.4.4 FLEX FUEL	●	●	●	●	●	7011
206/206MUX		Air bags	●	●	●	○	○	10003
206/206MUX	Engines/automatic gearbox	NFU BOSCH ME7.4.5	●	●	●	●	●	701, 110, 002
206/206MUX	Engines/automatic gearbox	KFW BOSCH ME7.4.5	●	●	●	●	●	701, 110, 002
206/206MUX		Built-in systems interface (BSI)	●	●	●	●	●	300, 310, 001
206/206MUX	Engines/automatic gearbox	Diesel fuel additive control unit	●	●	●	●	●	40, 030, 400, 604, 022
206/206MUX	Engines/automatic gearbox	RHY BOSCH EDC15C2	●	●	●	●	●	4012
206/206MUX	Active safety	ESP MK60	●	●	●	●	●	500, 505, 012
206/206MUX	Engines/automatic gearbox	KFW SAGEM S2000	●	●	●	●	●	7011
206/206MUX	Engines/automatic gearbox	K6D SAGEM S2000	●	●	●	●	●	7011
206/206MUX	Engines/automatic gearbox	RFN MM4.8P	●	●	●	●	●	7011
206/206MUX	Engines/automatic gearbox	HFX MM4.8P	●	●	●	●	●	7011
206/206MUX	Engines/automatic gearbox	KFW J34P	●	●	●	●	●	7011
206/206MUX	Engines/automatic gearbox	K6D J34P	●	●	●	●	●	7011
206/206MUX	Engines/automatic gearbox	NFU J35	●	●	●	●	●	7011
206/206MUX	Engines/automatic gearbox	AL4 automatic gearbox	●	●	●	●	●	7011
206/206MUX	Engines/automatic gearbox	7LZ MM5NP	●	●	●	●	●	10002
206/206MUX		Alarm	●	●	●	●	●	
206/206MUX	Driver information/Communication	Display/Telematics (AMF)	●	●	●	●	●	
206/206MUX	Driver information/Communication	Display/Telematics (RT3)	●	●	●	●	●	
206/206MUX	Driver information/Communication	Radio	●	●	●	●	●	
206/206MUX	Driver information/Communication	CD player	●	●	●	●	●	
206/206MUX	Driver information/Communication	Instrument panel	●	●	●	●	●	
206/206MUX	Driver information/Communication	Switch unit under steering wheel (COM 2000)	●	●	●	●	○	
206/206MUX	Driver information/Communication	On-board navigation system	●	●	●	●	○	
206/206MUX	Visibility/Lighting	Driving school	●	○	○	●	●	
206/206MUX	Visibility/Lighting	Rain/brightness sensor	●	●	●	○	○	
206/206MUX	Control the openings	Electric retractable	●	●	●	●	●	
206/206MUX		Air conditioning	●	●	●	●	●	
206/206MUX	Active safety	Anti-lock brakes TEVES	●	●	●	●	●	
206/206MUX	Engines/automatic gearbox	KFU MM6LP	●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
206/206MUX	Engines/automatic gearbox	RFK MM6LP	●	●	●	●	●	
206/206MUX	Engines/automatic gearbox	RFN MM6LP	●	●	●	●	●	
206/206MUX		Electric pump unit(power steering)	●	●	●	●	○	
206/206MUX	Engines/automatic gearbox	NFU Or N6A or N6B ME749 BIO FLEX	●	●	●	●	●	
206/206MUX	Engines/automatic gearbox	8HX/8HZ BOSCH EDC16C3 EUR3	●	●	●	●	●	
206/206MUX	Engines/automatic gearbox	8HZ BOSCH EDC16C3 EURO4	●	●	●	●	●	
206/206MUX	Engines/automatic gearbox	9HY BOSCH EDC16C3 EURO4	●	●	●	●	●	
206/206MUX	Engines/automatic gearbox	9HY BOSCH EDC16C3	●	●	●	●	●	
206/206MUX	Engines/automatic gearbox	9HZ BOSCH EDC16C3	●	●	●	●	●	
206/206MUX	Engines/automatic gearbox	WJY LUCAS DCN2	●	●	●	●	●	
206/206MUX	Engines/automatic gearbox	9HT BOSCH EDC16C3	●	●	●	●	●	
206+	ABS/traction control	ABSMK70 1	●	●	●	●	●	20039, 20527,
206+	ABS/traction control	ESPMK60 0	▲	▲	▲	▲	▲	20039, 20527,
206+	Radio or radiotelephone (radio part)	AUTORADIO	▲	▲	▲	▲	▲	20844, 20519, 20527,
206+	Radio or radiotelephone (radio part)	RDE	▲	▲	▲	▲	▲	20139, 20334, 20335, 20336, 20337, 20030, 20519, 20738, 20735, 20527,
206+	gearbox	BVA AL4	▲	▲	▲	▲	▲	20333, 20004, 20448, 20527,
206+	CD player	CHANGEUR CD	▲	▲	▲	▲	○	20527,
206+	Injection/ignition	EDC15C2	▲	▲	▲	▲	▲	20373, 20535, 20487, 20527,
206+	Injection/ignition	ME745	▲	▲	▲	▲	▲	20399, 20721, 20149, 20527,
206+	Injection/ignition	ME749	▲	▲	▲	▲	▲	20856, 20399, 20631, 20721, 20527,
206+	Injection/ignition	J34P	▲	▲	▲	▲	▲	20370, 20381, 20424, 20437, 20059, 20147, 20261, 20527,
206+	Injection/ignition	DCN2	▲	▲	▲	▲	▲	20527,
206+	Injection/ignition	EDC16C3DV4	▲	▲	▲	▲	▲	20377, 20378, 20112, 20464, 20527,
206+	Injection/ignition	EDC17C10_BR2	▲	▲	▲	▲	▲	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
206+	Injection/ignition	V343	▲	▲	▲	○	▲	20005, 20424, 20261, 20436, 20527,
206+	Built-in Systems Interface (BSI)	BSI	▲	▲	▲	▲	▲	20022, 20327, 20407, 20252, 20307, 20401, 20430, 20453, 20849, 20191, 20228, 20411, 20846, 20153, 20167, 20233, 20393, 20421, 20422, 20486, 20300, 20492, 20759, 20489, 20610, 20022, 20327, 20407, 20252, 20307, 20401, 20430, 20453, 20849, 20527,
206+	Multifunction display	RT3	▲	▲	▲	▲	▲	20160, 20250, 20454, 20121, 20416, 20417, 20445, 20160, 20804, 20161, 20804, 20527,
206+	Multifunction display	AMF	▲	▲	▲	▲	▲	20111, 20113, 20152, 20527, 20720, 20111, 20113, 20152,
206+	Driver and passenger airbags	SAC_AUTOLIV	▲	▲	▲	○	○	20527,
206+	Anti-theft alarm	ALARME	▲	▲	▲	▲	▲	20527,
206+	heating/ventilation	CLIM REGULEE	▲	▲	▲	▲	▲	20527,
206+	Instrument panel	COMBINE	▲	▲	▲	▲	▲	20527,
206+	Rain and brightness sensor	PLUIE LUMINOSITE	▲	▲	▲	○	○	20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
206+	Switch module at the steering wheel	COM2000	▲	▲	▲	▲	○	20527,
206+	Services module	BLVV	▲	▲	▲	▲	▲	20176, 20527,
206+	Power steering electric pump unit	GEP	▲	▲	▲	▲	○	20527,
207 CAN	Parking aid	AAS	●	●	●	●	○	20457, 20527,
207 CAN	ABS/traction control	ABSMK70 1	▲	▲	▲	▲	▲	20039, 20527,
207 CAN	ABS/traction control	ESPMK60 0	▲	▲	▲	▲	▲	20055, 20039, 20052, 20527,
207 CAN	Multifunction display	EMF A	▲	▲	▲	▲	▲	20137, 20151, 20137, 20151, 20527,
207 CAN	Multifunction display	EMF C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
207 CAN	Driver and passenger airbags	SAC_AUTOLIV	▲	▲	▲	▲	○	20249, 20396, 20481, 20740, 20744, 20192, 20249, 20396, 20481, 20740, 20744, 20192, 20249, 20396, 20481, 20740, 20744, 20192, 20249, 20396, 20481, 20740, 20744, 20406, 20822, 20527,
207 CAN	Anti-theft alarm	ALARME	▲	▲	▲	▲	▲	20125, 20115, 20125, 20115, 20115, 20527,
207 CAN	Radio or radiotelephone (radio part)	AUTORADIO	▲	▲	▲	▲	▲	20527, 20186, 20331,
207 CAN	Radio or radiotelephone (radio part)	RD45	▲	▲	▲	▲	▲	20844, 20030, 20519, 20527, 20844, 20030, 20519,
207 CAN	Built-in Systems Interface (BSI)	BSI	▲	▲	▲	▲	▲	20228, 20411, 20844, 20155, 20516, 20763, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
207 CAN	Engine relay unit	BSM	▲	▲	▲	▲	▲	20527,
207 CAN	Trailer relay unit	BSR	▲	▲	▲	▲	▲	
207 CAN	gearbox	BVA AL4	▲	▲	▲	○	▲	20333, 20004, 20448, 20527,
207 CAN	gearbox	BVMP	▲	▲	▲	▲	○	20316, 20101, 20103, 20316, 20101, 20103, 20757, 20758, 20099, 20313, 20357, 20316, 20101, 20103, 20729, 20527,
207 CAN	CD player	CHANGEUR CD	●	●	●	○	●	20110, 20527, 20178, 20390, 20527,
207 CAN	heating/ventilation	CLIM REGULEE	▲	▲	▲	▲	▲	
207 CAN	Instrument panel	COMBINE	▲	▲	▲	▲	▲	20130, 20527,
207 CAN	Headlamp height adjuster / Directional headlamp	AFS	▲	▲	▲	▲	▲	20527,
207 CAN	Rain and brightness sensor	PLUIE LUMINOSITE	▲	▲	▲	○	○	
207 CAN	Electric power steering	DAE	▲	▲	▲	▲	○	20032, 20527,
207 CAN	Under inflation detection	DSG	▲	▲	▲	▲	○	20168, 20459, 20737, 20530, 20267, 20536, 20303, 20304, 20538, 20543, 20368, 20857, 20826, 20527,
207 CAN	Driving school module	MAE	▲	▲	▲	○	▲	20527,
207 CAN	Switch module under the steering wheel (Top of column)	HDC	▲	▲	▲	▲	▲	20527,
207 CAN	Injection/ignition	EDC16C3	▲	▲	▲	▲	▲	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20468, 20296, 20719, 20226, 20241, 20344, 20470, 20483, 20710, 20246, 20635, 20527,
207 CAN	Injection/ignition	EDC16C3DV4	●	●	●	●	●	20377, 20378, 20112, 20464, 20527,
207 CAN	Injection/ignition	ME745	▲	▲	▲	▲	▲	20399, 20631, 20721, 20527,
207 CAN	Injection/ignition	MM6LPC	▲	▲	▲	▲	▲	20226, 20437, 20059, 20527,



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
207 CAN	Injection/ignition	MED17_4_EURO4	▲	▲	▲	▲	▲	20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
207 CAN	Injection/ignition	MEV17_4_EURO4	▲	▲	▲	▲	▲	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
207 CAN	Injection/ignition	J34P	▲	▲	▲	▲	▲	20370, 20381, 20424, 20437, 20059, 20147, 20261, 20527,
207 CAN	Injection/ignition	MEV17_4_EURO5	▲	▲	▲	▲	▲	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
207 CAN	Injection/ignition	HDI_SID807	▲	▲	▲	▲	▲	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
207 CAN	Injection/ignition	V341	▲	▲	▲	▲	▲	20192, 20487, 20372, 20005, 20424, 20261, 20436, 20527,
207 CAN	Injection/ignition	EDC17C10	▲	▲	▲	▲	▲	20088, 20089, 20343, 20509, 20063, 20062, 20065, 20064, 20068, 20226, 20296, 20284, 20374, 20461, 20470, 20564, 20589, 20710, 20527,
207 CAN	Injection/ignition	EDC17C10_BR2	●	●	●	●	●	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
207 CAN	Injection/ignition	MEV17_4_2	▲	▲	▲	▲	▲	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
207 CAN	Injection/ignition	HDI_SID807_BR2	▲	▲	▲	▲	▲	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20788, 20285, 20573, 20692, 20694, 20527,
207 CAN	Hands-free kit (Telephone)	KML	▲	▲	▲	▲	▲	20145, 20129, 20120, 20192, 20527,
207 CAN	Hands-free kit (Telephone)	BOITIER NOMADE	▲	▲	▲	▲	▲	20135, 20135, 20527,
207 CAN	Service module	BTA	▲	▲	▲	▲	▲	20847, 20142, 20527,
207 CAN	Diesel additive	PADDGO	▲	▲	▲	▲	▲	20011, 20586, 20590, 20527,
207 CAN	Seat belts not fastened LED unit	TNB	▲	○	○	○	▲	
207 CAN	Folding roof	BTE	▲	▲	▲	▲	▲	20832, 20833, 20527,
207 CAN	Telematics	RADIONAV RNEG	▲	▲	▲	▲	▲	20847, 20095, 20119, 20123, 20136, 20137, 20527,
207 CAN	Telematics	BOITIER TELEMATIQUE	●	●	●	●	●	20128, 20847, 20095, 20123, 20127, 20137, 20527,
207 CAN	High frequency receiver	RHF	▲	▲	▲	▲	○	
207 CAN	Battery charge status unit	BECB	●	●	●	●	○	20527,
207 CAN	Battery charge status unit	BECB GEN2	▲	▲	▲	▲	○	20527,
207 VAN	ABS/traction control	ABSMK70 1	●	●	●	●	●	20039, 20527,
207 VAN	ABS/traction control	ESPMK60 0	●	●	●	●	●	20039, 20527,
207 VAN	Radio or radiotelephone (radio part)	AUTORADIO	●	●	●	●	●	20844, 20519, 20527,
207 VAN	Radio or radiotelephone (radio part)	RDE	●	●	●	●	●	20139, 20334, 20335, 20336, 20337, 20030, 20519, 20738, 20735, 20527,
207 VAN	gearbox	BVA AL4	●	●	●	●	●	20333, 20004, 20448, 20527,
207 VAN	CD player	CHANGEUR CD	●	●	●	●	○	20527,
207 VAN	Injection/ignition	EDC15C2	●	●	●	●	●	20373, 20535, 20487, 20527,
207 VAN	Injection/ignition	ME745	●	●	●	●	●	20399, 20721, 20149, 20527,
207 VAN	Injection/ignition	ME749	●	●	●	●	●	20856, 20399, 20631, 20721, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
207 VAN	Injection/ignition	J34P	●	●	●	●	●	20370, 20381, 20424, 20437, 20059, 20147, 20261, 20527,
207 VAN	Injection/ignition	DCN2	●	●	●	●	●	20527,
207 VAN	Injection/ignition	EDC16C3DV4	●	●	●	●	●	20377, 20378, 20112, 20464, 20527,
207 VAN	Injection/ignition	EDC17C10_BR2	●	●	●	●	●	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
207 VAN	Injection/ignition	V343	●	●	●	○	●	20005, 20424, 20261, 20436, 20527,
207 VAN	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20022, 20327, 20407, 20252, 20307, 20401, 20430, 20453, 20849, 20191, 20228, 20411, 20846, 20153, 20167, 20233, 20393, 20421, 20422, 20486, 20300, 20492, 20759, 20489, 20610, 20022, 20327, 20407, 20252, 20307, 20401, 20430, 20453, 20849, 20527,
207 VAN	Multifunction display	RT3	●	●	●	●	●	20160, 20250, 20454, 20121, 20416, 20417, 20445, 20160, 20804, 20161, 20804, 20527,
207 VAN	Multifunction display	AMF	●	●	●	●	●	20111, 20113, 20152, 20527, 20720, 20111, 20113, 20152,
207 VAN	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	○	○	20527,
207 VAN	Anti-theft alarm	ALARME	●	●	●	●	●	20527,
207 VAN	heating/ventilation	CLIM REGULEE	●	●	●	●	●	20527,
207 VAN	Instrument panel	COMBINE	●	●	●	●	●	20527,
207 VAN	Rain and brightness sensor	PLUIE LUMINOSITE	●	●	●	○	○	20527,
207 VAN	Switch module at the steering wheel	COM2000	●	●	●	●	○	20527,
207 VAN	Services module	BLVV	●	●	●	●	●	20176, 20527,
207 VAN	Power steering electric pump unit	GEP	●	●	●	●	○	20527,
207+	Parking aid	AAS	●	●	●	●	○	20457, 20527,
207+	ABS/traction control	ABSMK70 1	●	●	●	●	●	20039, 20527,
207+	ABS/traction control	ESPMK60 0	●	●	●	●	●	20055, 20039, 20052, 20527,
207+	Multifunction display	EMF A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
207+	Multifunction display	EMF C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
207+	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	●	○	20249, 20396, 20481, 20740, 20744, 20192, 20249, 20396, 20481, 20740, 20744, 20192, 20249, 20396, 20481, 20740, 20744, 20406, 20822, 20527,
207+	Anti-theft alarm	ALARME	●	●	●	●	●	20125, 20115, 20125, 20115, 20115, 20527,
207+	Radio or radiotelephone (radio part)	AUTORADIO	●	●	●	●	●	20527, 20186, 20331,
207+	Radio or radiotelephone (radio part)	RD45	●	●	●	●	●	20844, 20030, 20519, 20527, 20844, 20030, 20519,
207+	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20844, 20155, 20516, 20763, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
207+	Engine relay unit	BSM	●	●	●	●	●	20527,
207+	Trailer relay unit	BSR	●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
207+	gearbox	BVA_AL4	●	●	●	○	●	20333, 20004, 20448, 20527,
207+	gearbox	BVMP	●	●	●	●	○	20316, 20101, 20103, 20316, 20101, 20103, 20757, 20758, 20099, 20313, 20357, 20316, 20101, 20103, 20729, 20527,
207+	CD player	CHANGEUR CD	●	●	●	○	●	20110, 20527, 20178, 20390, 20527,
207+	heating/ventilation	CLIM_REGULEE	●	●	●	●	●	
207+	Instrument panel	COMBINE	●	●	●	●	●	20130, 20527,
207+	Headlamp height adjuster / Directional headlamp	AFS	●	●	●	●	●	20527,
207+	Rain and brightness sensor	PLUIE_LUMINOSITE	●	●	●	○	○	
207+	Electric power steering	DAE	●	●	●	●	○	20032, 20527,
207+	Under inflation detection	DSG	●	●	●	●	○	20168, 20459, 20737, 20530, 20267, 20536, 20303, 20304, 20538, 20543, 20368, 20857, 20826, 20527,
207+	Driving school module	MAE	●	●	●	○	●	20527,
207+	Switch module under the steering wheel (Top of column)	HDC	●	●	●	●	●	20527,
207+	Injection/ignition	EDC16C3	●	●	●	●	●	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20468, 20296, 20719, 20226, 20241, 20344, 20470, 20483, 20710, 20246, 20635, 20527,
207+	Injection/ignition	EDC16C3DV4	●	●	●	●	●	20377, 20378, 20112, 20464, 20527,
207+	Injection/ignition	ME745	●	●	●	●	●	20399, 20631, 20721, 20527,
207+	Injection/ignition	MM6LPC	●	●	●	●	●	20226, 20437, 20059, 20527,
207+	Injection/ignition	MED17_4_EURO4	●	●	●	●	●	20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
207+	Injection/ignition	MEV17_4_EURO4	●	●	●	●	●	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
207+	Injection/ignition	J34P	●	●	●	●	●	20370, 20381, 20424, 20437, 20059, 20147, 20261, 20527,
207+	Injection/ignition	MEV17_4_EUR05	●	●	●	●	●	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
207+	Injection/ignition	HDI_SID807	●	●	●	●	●	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
207+	Injection/ignition	V341	●	●	●	●	●	20192, 20487, 20372, 20005, 20424, 20261, 20436, 20527,
207+	Injection/ignition	EDC17C10	●	●	●	●	●	20088, 20089, 20343, 20509, 20063, 20062, 20065, 20064, 20068, 20226, 20296, 20284, 20374, 20461, 20470, 20564, 20589, 20710, 20527,
207+	Injection/ignition	EDC17C10_BR2	●	●	●	●	●	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
207+	Injection/ignition	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
207+	Injection/ignition	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20788, 20285, 20573, 20692, 20694, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
207+	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
207+	Hands-free kit (Telephone)	BOITIER NOMADE	●	●	●	●	●	20135, 20135, 20527,
207+	Service module	BTA	●	●	●	●	●	20847, 20142, 20527,
207+	Diesel additive	PADDGO	●	●	●	●	●	20011, 20586, 20590, 20527,
207+	Seat belts not fastened LED unit	TNB	●	○	○	○	●	
207+	Folding roof	BTE	●	●	●	●	●	20832, 20833, 20527,
207+	Telematics	RADIONAV RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
207+	Telematics	BOITIER TELEMATIQUE	●	●	●	●	●	20128, 20847, 20095, 20123, 20127, 20137, 20527,
207+	High frequency receiver	RHF	●	●	●	●	○	
207+	Battery charge status unit	BECB	●	●	●	●	○	20527,
207+	Battery charge status unit	BECB GEN2	●	●	●	●	○	20527,
207i	ABS/traction control	ABSMK70_1	▲	▲	▲	▲	▲	20039, 20527,
207i	ABS/traction control	ESPMK60_0	▲	▲	▲	▲	▲	20039, 20527,
207i	Radio or radiotelephone (radio part)	AUTORADIO	▲	▲	▲	▲	▲	20844, 20519, 20527,
207i	Radio or radiotelephone (radio part)	RDE	▲	▲	▲	▲	▲	20139, 20334, 20335, 20336, 20337, 20030, 20519, 20738, 20735, 20527,
207i	gearbox	BVA_AL4	▲	▲	▲	▲	▲	20333, 20004, 20448, 20527,
207i	CD player	CHANGEUR_CD	▲	▲	▲	▲	○	20527,
207i	Injection/ignition	EDC15C2	▲	▲	▲	▲	▲	20373, 20535, 20487, 20527,
207i	Injection/ignition	ME745	▲	▲	▲	▲	▲	20399, 20721, 20149, 20527,
207i	Injection/ignition	ME749	▲	▲	▲	▲	▲	20856, 20399, 20631, 20721, 20527,
207i	Injection/ignition	J34P	▲	▲	▲	▲	▲	20370, 20381, 20424, 20437, 20059, 20147, 20261, 20527,
207i	Injection/ignition	DCN2	▲	▲	▲	▲	▲	20527,
207i	Injection/ignition	EDC16C3DV4	▲	▲	▲	▲	▲	20377, 20378, 20112, 20464, 20527,
207i	Injection/ignition	EDC17C10_BR2	▲	▲	▲	▲	▲	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
207i	Injection/ignition	V343	▲	▲	▲	○	▲	20005, 20424, 20261, 20436, 20527,
207i	Built-in Systems Interface (BSI)	BSI	▲	▲	▲	▲	▲	20022, 20327, 20407, 20252, 20307, 20401, 20430, 20453, 20849, 20191, 20228, 20411, 20846, 20153, 20167, 20233, 20393, 20421, 20422, 20486, 20300, 20492, 20759, 20489, 20610, 20022, 20327, 20407, 20252, 20307, 20401, 20430, 20453, 20849, 20527,
207i	Multifunction display	RT3	▲	▲	▲	▲	▲	20160, 20250, 20454, 20121, 20416, 20417, 20445, 20160, 20804, 20161, 20804, 20527,
207i	Multifunction display	AMF	▲	▲	▲	▲	▲	20111, 20113, 20152, 20527, 20720, 20111, 20113, 20152,
207i	Driver and passenger airbags	SAC_AUTOLIV	▲	▲	▲	○	○	20527,
207i	Anti-theft alarm	ALARME	▲	▲	▲	▲	▲	20527,
207i	heating/ventilation	CLIM_REGULEE	▲	▲	▲	▲	▲	20527,
207i	Instrument panel	COMBINE	▲	▲	▲	▲	▲	20527,
207i	Rain and brightness sensor	PLUIE_LUMINOSITE	▲	▲	▲	○	○	20527,
207i	Switch module at the steering wheel	COM2000	▲	▲	▲	▲	○	20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
207i	Services module	BLVV	▲	▲	▲	▲	▲	20176, 20527,
207i	Power steering electric pump unit	GEP	▲	▲	▲	▲	○	20527,
207VAN/207i	Active and passive safety	ABS MK70	●	●	●	●	●	6001
207VAN/207i	Engine/Gearbox	WJY DCN2	●	●	●	●	●	10002
207VAN/207i	Engine/Gearbox	RHY EDC15C2	●	●	●	●	●	10002
207VAN/207i	Active and passive safety	air-bag	●	●	●	○	○	10003
207VAN/207i	Active and passive safety	ESP MK60	●	●	●	●		500, 306, 001
207VAN/207i	Engine/Gearbox	N6A ME749 BIO FLEX	●	●	●	●	●	701, 112, 006
207VAN/207i	Engine/Gearbox	KFW ME749	●	●	●	●	●	701, 112, 006
207VAN/207i	Engine/Gearbox	KFW ME749 BIO ELEX	●	●	●	●	●	701, 112, 006
207VAN/207i	Engine/Gearbox	TU5JP4ME745	●	●	●	●	●	701, 112, 006
207VAN/207i	Engine/Gearbox	8HZ BOSCH EDC16C3 EURO4	●	●	●	●	●	1, 000, 212, 006
207VAN/207i	Engine/Gearbox	9HY BOSCH EDC16C3 EURO4	●	●	●	●	●	1, 000, 212, 006
207VAN/207i		Built-in systems interface (BSI)	●	●	●	●	●	300, 310, 001
207VAN/207i	Engine/Gearbox	EDC17C10 BR2	●	●	●	●	●	401, 504, 016
207VAN/207i	Engine/Gearbox	NFU Or N6A ME749	●	●	●	●	●	7011
207VAN/207i	Engine/Gearbox	KFW J34P	●	●	●	●	●	7011
207VAN/207i	Engine/Gearbox	HFX J34P	●	●	●	●	●	7011
207VAN/207i	Engine/Gearbox	AL4 automatic gearbox	●	●	●	●		7011
207VAN/207i	Inform the driver/Audio/Communication	RT3	●	●	●	●	●	
207VAN/207i	Inform the driver/Audio/Communication	display	●	●	●	●		
207VAN/207i	Driver information/Communication	Air conditioning	●	●	●	●	●	
207VAN/207i	Inform the driver/Audio/Communication	Steering wheel switching module.	●	●	●	●	○	
207VAN/207i	Inform the driver/Audio/Communication	Radio	●	●	●	●	●	
207VAN/207i	Inform the driver/Audio/Communication	CD player	●	●	●	●		
207VAN/207i	Inform the driver/Audio/Communication	Instrument panel	●	●	●	●	●	
207VAN/207i	Vehicle protection/Management of accesses	Alarm	●	●	●	○		
207VAN/207i	Visibility/Lighting/Signalling	Rain/brightness sensor	●	●	●	○	○	
208 (Ai91)	Built-in Systems Interface	BSI2010	●	●	●	●	●	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20495, 20549, 20731, 20301, 20489, 20047, 20086, 20154, 20228, 20411, 20844, 20489, 20527,
208 (Ai91)	Electric power steering	DAE	●	●	●	●	○	20527,
208 (Ai91)	Electric power steering	DAE A515	●	●	●	●	●	20527,
208 (Ai91)	Engine ECU	ME749 EC5	●	●	●	●	●	20226, 20460, 20717, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
208 (Ai91)	Engine ECU	EDC17C10_BR2	●	●	●	●	●	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
208 (Ai91)	Engine ECU	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
208 (Ai91)	Engine ECU	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
208 (Ai91)	Engine ECU	V46	●	●	●	●	●	20806, 20070, 20251, 20262, 20260, 20659, 20681, 20685, 20149, 20578, 20580, 20527,
208 (Ai91)	Engine ECU	MED17_4_2	●	●	●	●	●	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
208 (Ai91)	Engine ECU	MEVD17_4_2	●	●	●	●	●	20070, 20563, 20291, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20827, 20061, 20527,
208 (Ai91)	Engine ECU	V344	●	●	●	●	●	20858, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20527,
208 (Ai91)	Engine ECU	V345	●	●	●	●	●	20858, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20255, 20856, 20381, 20423, 20437, 20462, 20261, 20527,
208 (Ai91)	Engine ECU	ME745_EC5	●	●	●	●	●	20460, 20717, 20527,
208 (Ai91)	Engine ECU	VD46	●	●	●	●	●	20349, 20299, 20444, 20190, 20544, 20157, 20576, 20593, 20653, 20654, 20658, 20661, 20680, 20685, 20711, 20578, 20580, 20594, 20613, 20715, 20527,
208 (Ai91)	Engine ECU	EDC17C60	●	●	●	●	●	20144, 20484, 20256, 20257, 20258, 20259, 20829, 20690, 20624, 20625, 20716, 20606, 20619, 20670, 20683, 20753, 20198, 20288, 20444, 20805, 20093, 20514, 20513, 20505, 20548, 20552, 20554, 20122, 20527,
208 (Ai91)	Rain and brightness sensor	PLUIE LUMINOSITE UDS	●	●	●	●	○	20797, 20527, 20797, 20527,
208 (Ai91)	Radio	RDE	●	●	●	●	●	20129, 20139, 20334, 20337, 20844, 20030, 20519, 20129, 20139, 20334, 20337, 20844, 20030, 20519, 20527,
208 (Ai91)	Air bag	RBG UDS	●	●	●	●	○	20189, 20406, 20822, 20527,
208 (Ai91)	Multiplexed control panel	FMUX	●	●	●	●	●	20527,
208 (Ai91)	Steering wheel with integral controls (VCI)	VCI	●	●	●	●	●	20527,
208 (Ai91)	Stolen vehicle location control unit	BTA	●	●	●	●	●	20847, 20142, 20527,
208 (Ai91)	Stolen vehicle location control unit	BLVV	●	●	●	●	●	20176, 20527,
208 (Ai91)	Instrument panel	COMBINE UDS	●	●	●	●	●	20145, 20192, 20527,
208 (Ai91)	Parking assistance	AAS UDS	●	●	●	●	○	20558, 20457, 20527,
208 (Ai91)	ABS or ESP ECU	ABSMK100	●	●	●	●	●	20042, 20042, 20632, 20820, 20527,
208 (Ai91)	ABS or ESP ECU	ESPMK100	●	●	●	●	●	20044, 20055, 20656, 20044, 20052, 20820, 20527,
208 (Ai91)	Air conditioning	TDC CH MUX	●	●	●	●	●	20491, 20527,
208 (Ai91)	Air conditioning	TDC RF MUX	●	●	●	●	●	20491, 20527,
208 (Ai91)	Air conditioning	TDC RFTA MUX	●	●	●	●	●	20491, 20527,







Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
3008 Chine	Injection/ignition	HDI_SID807	●	●	●	●	●	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
3008 Chine	Injection/ignition	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
3008 Chine	Injection/ignition	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
3008 Chine	Injection/ignition	MED17_4_2	●	●	●	●	●	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
3008 Chine	Injection/ignition	DCM35_HY	●	●	●	●	●	20088, 20089, 20090, 20281, 20295, 20509, 20343, 20020, 20062, 20065, 20064, 20070, 20226, 20240, 20286, 20636, 20588, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
3008 Chine	Injection/ignition	MM6KP	●	●	●	●	●	20859, 20372, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
3008 Chine	Injection/ignition	DCM62	●	●	●	●	●	20144, 20829, 20838, 20256, 20257, 20258, 20259, 20699, 20639, 20690, 20624, 20706, 20606, 20611, 20619, 20623, 20622, 20670, 20683, 20753, 20198, 20288, 20299, 20444, 20092, 20093, 20514, 20513, 20505, 20548, 20554, 20122, 20185, 20527,
3008 Chine	Injection/ignition	EDC17C60	●	●	●	●	●	20144, 20484, 20256, 20257, 20258, 20259, 20829, 20690, 20624, 20625, 20716, 20606, 20619, 20670, 20683, 20753, 20198, 20288, 20444, 20805, 20093, 20514, 20513, 20505, 20548, 20552, 20554, 20122, 20527,
3008 Chine	Matrix screen integral to the instrument panel	MATT	●	●	●	●	●	20527,
3008 Chine	Door control pad	PDPC	●	●	●	●	●	
3008 Chine	Telematics	RADIONAV_RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
3008 Chine	Telematics	RADIONAV_NG4	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20527,
3008 Chine	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
3008 Chine	Telematics	RADIONAV_RNEGC	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
3008 Chine	High Head Vision	VTH	●	●	●	●	●	20527,
3008 Chine	High Head Vision	VTH_UDS	●	●	●	●	○	20326, 20192, 20527,
3008 HYbrid4	Traction battery ECU	TBMU	▲	▲	▲	▲	▲	20522, 20527,
3008 HYbrid4	Hybrid control ECU 2	HCU2	●	●	●	●	○	20527,
3008 HYbrid4	Hybrid control ECU 1	HCU1	●	●	●	●	●	20298, 20280, 20724, 20641, 20704, 20582, 20527,
3008 HYbrid4	Parking aid	AAS	●	●	●	●	○	20457, 20527,
3008 HYbrid4	ABS or ESP ECU	ESP81	●	●	●	●	●	20226, 20408, 20647, 20666, 20039, 20105, 20008, 20169, 20171, 20523, 20527,
3008 HYbrid4	Multifunction display	EMF_A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
3008 HYbrid4	Multifunction display	EMF_C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
3008 HYbrid4	Airbag	SAC_AUTOLIV	●	●	●	●	○	20249, 20481, 20740, 20744, 20762, 20192, 20249, 20481, 20740, 20744, 20762, 20406, 20822, 20527,
3008 HYbrid4	Anti-theft alarm	ALARME	●	●	●	●	●	20125, 20115, 20125, 20115, 20115, 20527, 20125, 20115, 20115, 20527, 20125, 20115,
3008 HYbrid4	audio amplifier	AMPLI_AUDIO	●	●	●	○	●	20527,



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
3008 HYbrid4	Engine ECU	EDC16C3	●	●	●	●	●	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20468, 20296, 20719, 20226, 20241, 20344, 20470, 20483, 20246, 20635, 20527,
3008 HYbrid4	Engine ECU	MEV17_4_EURO4	●	●	●	●	●	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
3008 HYbrid4	Engine ECU	MED17_4_EURO4	●	●	●	●	●	20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
3008 HYbrid4	Engine ECU	MEV17_4_EURO5	●	●	●	●	●	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
3008 HYbrid4	Engine ECU	MED17_4_EURO5	●	●	●	●	●	20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
3008 HYbrid4	Engine ECU	DCM35	●	●	●	●	●	20088, 20089, 20343, 20509, 20020, 20067, 20062, 20226, 20240, 20588, 20629, 20672, 20710, 20285, 20573, 20579, 20692, 20694, 20527,
3008 HYbrid4	Engine ECU	HDI_SID807	●	●	●	●	●	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
3008 HYbrid4	Engine ECU	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
3008 HYbrid4	Engine ECU	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
3008 HYbrid4	Engine ECU	MED17_4_2	●	●	●	●	●	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
3008 HYbrid4	Engine ECU	DCM35_HY	●	●	●	●	●	20088, 20089, 20090, 20281, 20295, 20509, 20343, 20020, 20062, 20065, 20064, 20070, 20226, 20240, 20286, 20636, 20588, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
3008 HYbrid4	Engine ECU	MM6KP	●	●	●	●	●	20859, 20372, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
3008 HYbrid4	Engine ECU	DCM62	●	●	●	●	●	20144, 20829, 20838, 20256, 20257, 20258, 20259, 20699, 20639, 20690, 20624, 20706, 20606, 20611, 20619, 20623, 20622, 20670, 20683, 20753, 20198, 20288, 20299, 20444, 20092, 20093, 20514, 20513, 20505, 20548, 20554, 20122, 20185, 20527,
3008 HYbrid4	Engine ECU	EDC17C60	●	●	●	●	●	20144, 20484, 20256, 20257, 20258, 20259, 20829, 20690, 20624, 20625, 20716, 20606, 20619, 20670, 20683, 20753, 20198, 20288, 20444, 20805, 20093, 20514, 20513, 20505, 20548, 20552, 20554, 20122, 20527,
3008 HYbrid4	Hands-free kit (Telephone)	BOITIER NOMADE	●	●	●	●	●	20135, 20135, 20527,
3008 HYbrid4	Matrix screen integral to the instrument panel	MATT	●	●	●	●	●	20527,
3008 HYbrid4	Services module	MD SERV	●	●	●	●	●	20124, 20124, 20527,
3008 HYbrid4	Services module	BTA	●	●	●	●	●	20847, 20142, 20527,
3008 HYbrid4	Services module	BLVV	●	●	●	●	●	20176, 20527,
3008 HYbrid4	Multiplexed additive pump	PADDGO	●	●	●	●	●	20011, 20586, 20590, 20527,
3008 HYbrid4	Multiplexed additive pump	PADDGO_E5	●	●	●	●	●	20282, 20163, 20323, 20584, 20163, 20323, 20686, 20163, 20323, 20687, 20163, 20323, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
3008 HYbrid4	Multiplexed additive pump	PADDGO TI E6	●	●	●	●	●	20527,
3008 HYbrid4	Door control pad	PDPC	●	●	●	●	●	
3008 HYbrid4	Telematics	RADIONAV RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
3008 HYbrid4	Telematics	RADIONAV NG4	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20527,
3008 HYbrid4	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
3008 HYbrid4	Telematics	RADIONAV RNEGC	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
3008 HYbrid4	High Head Vision	VTH	●	●	●	●	●	20527,
3008 HYbrid4	High Head Vision	VTH UDS	●	●	●	●	○	20326, 20192, 20527,
3008 HYbrid4	Hybrid mode selector	MCM	●	●	●	●	○	20281,
306R	Engine/automatic gearbox	KFX BOSCH MP7.3		●	●		●	7009
306R	Engine/automatic gearbox	LFY BOSCH MP7.3		●	●		●	7009
306R	Engine/automatic gearbox	NFZ BOSCH MP7.2		●	●		●	7009
306R	Engine/automatic gearbox	KFW SAGEM S2000	●		●	●	●	7011
306R	Engine/automatic gearbox	K6D SAGEM S2000	●		●	●	●	7011
306R	Engine/automatic gearbox	AL4 automatic gearbox	●	●	●	●	●	7011
306R	Engine/automatic gearbox	NFT BOSCH M7.4.4	●	●	●	●		
306R	Engine/automatic gearbox	NFV BOSCH M7.4.4	●	●	●	●		
306R	Engine/automatic gearbox	RHY BOSCH EDC15C2	●	●	●	●		
306R	Engine/automatic gearbox	WJY LUCAS DCN2	●	●	●	●	●	
306R	Engine/automatic gearbox	WJZ LUCAS DCN2	●	●	●	●	●	
306R	Active safety	ABS BOSCH 5.3	●	●	●	●	●	
307 CAN	Parking aid	AAS	●	●	●	●	○	20457, 20527,
307 CAN	ABS/traction control	ABS81	●	●	●	●	○	20039, 20527,
307 CAN	ABS/traction control	ESP81	●	●	●	●	●	20408, 20039, 20527,
307 CAN	ABS/traction control	ABS8 BOSCH	●	●	●	●	●	20039, 20527,
307 CAN	ABS/traction control	ESP8 BOSCH	●	●	●	●	○	20039, 20527,
307 CAN	Diesel additive	ADDG03	●	●	●	●	○	20215, 20221, 20220, 20013, 20469, 20583, 20091, 20585, 20482, 20730, 20527,
307 CAN	Multifunction display	EMF A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
307 CAN	Multifunction display	EMF C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
307 CAN	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	●	○	20249, 20396, 20481, 20740, 20744, 20192, 20249, 20396, 20481, 20740, 20744, 20192, 20249, 20396, 20481, 20740, 20744, 20406, 20822, 20527,
307 CAN	Anti-theft alarm	ALARME	●	●	●	●	●	20125, 20115, 20125, 20115, 20115, 20527,
307 CAN	Radio or radiotelephone (radio part)	AUTORADIO	●	●	●	●	●	20186, 20331, 20527,
307 CAN	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20844, 20155, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
307 CAN	Engine relay unit	BSM	●	●	●	●	●	20527,
307 CAN	Trailer relay unit	BSR	●	●	●	●	●	
307 CAN	gearbox	BVA AL4	●	●	●	●	●	20333, 20004, 20448, 20527,
307 CAN	gearbox	BVA AM6	●	●	●	●	●	20532, 20860, 20502, 20634, 20600, 20502, 20634, 20600, 20605, 20605, 20527,
307 CAN	CD player	CHANGEUR CD	●	●	●	○	●	20186, 20331, 20110, 20527, 20178, 20390, 20527,
307 CAN	heating/ventilation	CLIM REGULEE	●	●	●	●	●	20527,
307 CAN	Instrument panel	COMBINE	●	●	●	●	●	20130, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
307 CAN	Rain and brightness sensor	PLUIE LUMINOSITE	●	●	●	○	○	20527,
307 CAN	Power steering electric pump unit	GEP	▲	▲	▲	▲	▲	20209, 20273, 20209, 20222, 20225, 20273, 20277, 20279, 20816, 20207, 20218, 20225, 20791, 20816, 20213, 20207, 20222, 20224, 20273, 20277, 20253, 20816, 20222, 20277, 20279, 20816, 20527,
307 CAN	Under inflation detection	DSG	●	●	●	●	○	20168, 20459, 20737, 20530, 20267, 20536, 20303, 20304, 20538, 20543, 20303, 20304, 20538, 20543, 20857, 20826, 20527,
307 CAN	Driving school module	MAE	●	●	●	○	●	20527,
307 CAN	Switch module under the steering wheel (Top of column)	HDC	●	●	●	●	●	20002, 20270, 20527,
307 CAN	Injection/ignition	DCM34	●	●	●	●	●	20508, 20818, 20239, 20291, 20187, 20328, 20242, 20819, 20188, 20020, 20226, 20626, 20285, 20694, 20240, 20283, 20588, 20629, 20672, 20710, 20573, 20579, 20694, 20527,
307 CAN	Injection/ignition	EDC16C3	●	●	●	●	●	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20468, 20296, 20719, 20226, 20241, 20344, 20470, 20483, 20710, 20246, 20635, 20527,
307 CAN	Injection/ignition	MM6LPB	●	●	●	●	●	20843, 20112, 20005, 20159, 20226, 20437, 20059, 20527,
307 CAN	Injection/ignition	ME745	●	●	●	●	●	20743, 20631, 20721, 20527,
307 CAN	Injection/ignition	ME749	●	●	●	●	●	20856, 20463, 20399, 20631, 20721, 20527,
307 CAN	Injection/ignition	MM6KP	●	●	●	●	●	20859, 20372, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
307 CAN	Injection/ignition	EDC15C2	▲	▲	▲	▲	▲	20373, 20535, 20487, 20527,
307 CAN	Injection/ignition	MM6LP	●	●	●	●	●	20843, 20112, 20226, 20437, 20059, 20527,
307 CAN	Injection/ignition	HDI_SID803	●	●	●	●	●	20117, 20215, 20221, 20220, 20547, 20546, 20855, 20305, 20245, 20499, 20286, 20469, 20577, 20638, 20626, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20527,
307 CAN	Injection/ignition	HDI_SID803A	●	●	●	●	●	20117, 20215, 20221, 20220, 20547, 20546, 20855, 20305, 20245, 20499, 20286, 20469, 20577, 20638, 20626, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20527,
307 CAN	Injection/ignition	MM6LPC	●	●	●	●	●	20226, 20437, 20059, 20527,
307 CAN	Injection/ignition	ME745 EC5	●	●	●	●	●	20460, 20717, 20527,
307 CAN	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
307 CAN	Hands-free kit (Telephone)	BOITIER NOMADE	●	●	●	●	●	20135, 20135, 20527,
307 CAN	Diesel additive adding pump	PADDGO	●	●	●	●	●	20011, 20586, 20590, 20527,
307 CAN	Driver's door electronics	EDPC	●	●	●	●	●	20203, 20814, 20527,
307 CAN	Passenger door electronics	EDPP	●	●	●	●	●	20203, 20814, 20527, 20203,
307 CAN	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20128, 20847, 20095, 20123, 20127, 20137, 20006, 20114, 20121, 20133, 20128, 20847, 20095, 20123, 20128, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20527,
307 CAN	Services module	BLVV	●	●	●	●	●	20176, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
307 CAN	Right headlamp beam corrector *1	PROJECTEURD	●	●	●	●	●	20527,
307 CAN	Left headlamp beam level corrector *1	PROJECTEURG	●	●	●	●	●	20527,
307 CAN	Sun roof	TOUV	●	●	●	●	●	20506, 20527,
307 CAN	Folding roof	BTE	●	●	●	●	●	20741, 20742, 20527,
307 CAN	High frequency receiver	RHF	▲	▲	▲	▲	○	
307VAN	Active safety	ABS BOSCH 5.3		●	●			6001
307VAN	Active safety	ABS BOSCH 8	●	●	●	●	●	6001
307VAN	Engine/automatic gearbox	N6A BOSCH ME7.4.4	●	●	●	●	●	7011
307VAN	Engine/automatic gearbox	NFU BOSCH ME7.4.4	●	●	●	●	●	7011
307VAN	Engine/automatic gearbox	KFW SAGEM S2000	●		●	●	●	7011
307VAN	Engine/automatic gearbox	K6D SAGEM S2000	●		●	●	●	7011
307VAN	Engine/automatic gearbox	KFU MM6LP	●	●	●	●	●	7011
307VAN	Engine/automatic gearbox	RFK MM6LP	●	●	●	●	●	7011
307VAN	Engine/automatic gearbox	RFN MM6LP	●	●	●	●	●	7011
307VAN	Engine/automatic gearbox	KFU MM6LP	●	●	●	●	●	7011
307VAN	Engine/automatic gearbox	RFK MM6LP	●	●	●	●	●	7011
307VAN	Engine/automatic gearbox	RFN MM6LP	●	●	●	●	●	7011
307VAN	Driver information/Communication	RT3	●	●	●	●	●	12006
307VAN	Engine/automatic gearbox	N6A BOSCH ME7.4.5	●	●	●	●	●	701, 110, 002
307VAN	Engine/automatic gearbox	NFU BOSCH ME7.4.5	●	●	●	●	●	701, 110, 002
307VAN	Engine/automatic gearbox	AL4 gearbox	●		●	●	●	1, 100, 107, 011
307VAN		Built-in systems interface (BSI)	●	●	●	●	●	30, 040, 300, 310, 001
307VAN	Engine/automatic gearbox	RHR SIEMENS SID 803	●	●	●	●	●	40, 020, 401, 404, 015
307VAN	Engine/automatic gearbox	RHL SIEMENS SID 803	●	●	●	●	●	400, 204, 014, 040, 159, 000
307VAN	Engine/automatic gearbox	Diesel fuel additive control unit	●	●	●	●	●	40, 030, 400, 604, 022
307VAN	Active safety	ESP BOSCH 5.7	●	●	●	●	●	500, 505, 012
307VAN	Active safety	ESP BOSCH 8	●	●	●	●	●	500, 505, 012
307VAN	Engine/automatic gearbox	RFN MM48P (Mechanical throttle housing)	●	●	●	●	●	7011
307VAN	Engine/automatic gearbox	RFN MM4MP2 (Motorised butterfly)	●	●	●	●	●	7011
307VAN		Alarm	●	●	●	●	●	
307VAN	Driver information/Communication	AMF	●	●	●	●	●	
307VAN	Driver information/Communication	Parking assistance	●	●	●	●	●	
307VAN	Driver information/Communication	Radio	●	●	●	●	●	
307VAN	Driver information/Communication	CD player	●	●	●	●	●	
307VAN	Driver information/Communication	Instrument panel	●	●	●	●	●	
307VAN	Driver information/Communication	Switch unit under steering wheel (COM 2000)	●	●	●	●	○	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
307VAN	Visibility/Lighting	Driving school	●	○	○	●	○	
307VAN	Visibility/Lighting	Switch unit under steering wheel (COM 2000)	●	●	●	●	○	
307VAN		Air bags	●	●	●	○	○	
307VAN		Roll-over ECU	●	●	●	●	○	
307VAN	Control the openings	Driver's door module	●	●	●	●	○	
307VAN	Control the openings	Passenger door module	●	●	●	●	○	
307VAN	Control the openings	Retractable roof	●	●	●	●	●	
307VAN	Control the openings	Sun roof	●	●	●	●	●	
307VAN		Air conditioning	●	●	●	●		
307VAN	Engine/automatic gearbox	8HZ BOSCH EDC16C3	●	●	●	●	●	
307VAN	Engine/automatic gearbox	9HX BOSCH EDC16C3	●	●	●	●	●	
307VAN	Engine/automatic gearbox	9HY BOSCH EDC16C3 EURO4	●	●	●	●	●	
307VAN	Engine/automatic gearbox	9HZ BOSCH EDC16C3	●	●	●	●	●	
307VAN	Engine/automatic gearbox	RHS BOSCH EDC15C2	●	●	●	●	●	
307VAN	Engine/automatic gearbox	RHY BOSCH EDC15C2	●	●	●	●	●	
307VAN	Engine/automatic gearbox	RHZ BOSCH EDC15C2	●	●	●	●	●	
307VAN	Engine/automatic gearbox	RHY SIEMENS SID 801	●	●	●	●	●	
307VAN	Engine/automatic gearbox	9HT BOSCH EDC16C3	●	●	●	●	●	
307VAN		Electric pump unit (power steering)	●	●	●	●	○	
308 (T9)	Built-in Systems Interface	BSI2010	▲	▲	▲	▲	▲	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20495, 20549, 20731, 20301, 20489, 20047, 20086, 20154, 20228, 20411, 20844, 20489, 20527,
308 (T9)	Engine ECU	HDI_SID807_BR2	▲	▲	▲	▲	▲	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
308 (T9)	Engine ECU	EDC17C10_BR2	▲	▲	▲	▲	▲	20088, 20089, 20089, 20254, 20343, 20806, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
308 (T9)	Engine ECU	MED17_4_2	▲	▲	▲	▲	▲	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
308 (T9)	Engine ECU	V46	▲	▲	▲	▲	▲	20070, 20251, 20262, 20260, 20659, 20681, 20685, 20149, 20580, 20527,
308 (T9)	Engine ECU	V46 21	▲	▲	▲	▲	▲	20029, 20003, 20070, 20255, 20386, 20387, 20527,
308 (T9)	Engine ECU	EDC17C60	▲	▲	▲	▲	▲	20144, 20484, 20256, 20257, 20258, 20259, 20829, 20690, 20624, 20625, 20716, 20606, 20619, 20670, 20683, 20753, 20198, 20288, 20444, 20805, 20093, 20514, 20513, 20505, 20548, 20552, 20554, 20122, 20527,
308 (T9)	Engine ECU	VD46	▲	▲	▲	▲	▲	20349, 20299, 20444, 20190, 20544, 20157, 20576, 20593, 20653, 20654, 20658, 20661, 20680, 20685, 20711, 20578, 20580, 20594, 20613, 20715, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
308 (T9)	Engine ECU	DCM62	▲	▲	▲	▲	▲	20144, 20829, 20838, 20256, 20257, 20258, 20259, 20699, 20639, 20690, 20624, 20706, 20606, 20611, 20619, 20623, 20622, 20670, 20683, 20753, 20198, 20288, 20299, 20444, 20092, 20093, 20514, 20513, 20505, 20548, 20554, 20122, 20185, 20527,
308 (T9)	Engine ECU	V46_32	●	●	●	●	●	20806, 20029, 20003, 20070, 20255, 20386, 20387, 20768, 20527,
308 (T9)	Engine ECU	MED17_4_4	▲	▲	▲	▲	▲	20349, 20299, 20444, 20157, 20576, 20593, 20653, 20654, 20661, 20680, 20685, 20711, 20854, 20578, 20594, 20613, 20715, 20527,
308 (T9)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	▲	▲	▲	▲	▲	20055, 20408, 20039, 20177, 20527,
308 (T9)	gearbox	BVA_AM6_AT6_UDS	●	●	●	●	●	20034, 20599, 20601, 20572, 20604, 20072, 20311, 20467, 20502,
308 (T9)	Air bag	RBG UDS	●	●	●	●	○	20189, 20406, 20822, 20527,
308 (T9)	Trailer relay unit	BSG_2010_RQ	●	●	●	●	●	20527,
308 (T9)	Engine relay unit	BSM_2010	●	●	●	●	●	20327, 20780, 20252, 20401, 20327, 20780, 20252, 20401, 20527,
308 (T9)	Display	EMF_A UDS	●	●	●	○	●	20527,
308 (T9)	Display	EMF_C UDS	●	●	●	○	●	20477, 20151, 20527,
308 (T9)	Switch module under the steering wheel (Top of column)	COM2008P	●	●	●	●	●	20527,
308 (T9)	Switch module under the steering wheel (Top of column)	HDC	●	●	●	●	●	20527,
308 (T9)	Headlamp height adjuster / Directional headlamp	LADCT	▲	▲	▲	▲	▲	20527,
308 (T9)	External CD player	CDE	▲	▲	▲	▲	▲	20405, 20405, 20527,
308 (T9)	Supply protection and management unit	BPGA2010	▲	▲	▲	▲	○	20527,
308 (T9)	Anti-theft alarm	MUS	▲	▲	▲	▲	▲	20024, 20024, 20527,
308 (T9)	Door control pad	PDPC UDS	●	●	●	●	●	20527,
308 (T9)	Electric power steering	DAE_BVH2	●	●	●	●	○	20527,
308 (T9)	Voltage retaining device	DMTC	●	○	○	○	○	
308 (T9)	Voltage retaining device	DMTR	▲	▲	▲	○	○	20527,
308 (T9)	Electronic key reader	LCE	●	●	●	●	○	20527,
308 (T9)	Electric steering lock	AVE	●	●	●	●	●	20527, 20767,
308 (T9)	Diesel additive function	PADDGO_INERGY	●	●	●	●	●	20060, 20527,
308 (T9)	Air conditioning	BCC	●	●	●	●	●	20527,
308 (T9)	Steering wheel with integral controls (VCI)	VCI	●	●	●	●	●	20527,
308 (T9)	Rain and brightness sensor	CDPL UDS HELLA	▲	▲	▲	▲	○	20340, 20527,
308 (T9)	Touch screen	EMF_DGT UDS	●	●	●	●	●	20527,
308 (T9)	Parking aid	AAS UDS	●	●	●	●	●	20558, 20807, 20457, 20527,
308 (T9)	Seat driver position memory module.	BDMC	●	●	●	●	●	20146, 20745, 20746, 20527, 20146, 20745, 20746,



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
308 (T9)	Telematics unit SMEG_PLUS	SMEG_PLUS	▲	▲	▲	▲	▲	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20843, 20527,
308 (T9)	Telematics unit SMEG_PLUS	MRN	▲	▲	▲	▲	▲	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20527,
308 (T9)	Battery charge status unit	BECB_GEN2	●	●	●	●	○	20527,
308 (T9)	Hands free starting access electronic module.	BML	●	●	●	●	●	20075, 20076, 20077, 20078, 20079, 20080, 20081, 20082, 20083, 20358, 20527,
308 (T9)	audio amplifier	AMPLI_AUDIO	●	●	●	○	●	20527,
308 (T9)	Independent telematic unit (BTA)	BTA	●	●	●	●	●	20847, 20142, 20527,
308 (T9)	Independent telematic unit (BTA)	BTA_CN	●	●	●	●	●	20765, 20527,
308 (T9)	Multiplexed control panel	FMUX	●	●	●	●	●	20527,
308 (T9)	Siren	SIR	●	●	●	●	●	20131, 20131, 20527,
308 (T9)	Radiotelephone transceiver control	CRT_UDS_KOSTAL	▲	▲	▲	○	▲	20527,
308 (T9)	Radio	RD45	●	●	●	●	●	20844, 20030, 20519, 20844, 20030, 20519, 20527,
308 (T9)	Vehicle Distance Assistance	ARTIV_UDS	●	●	●	●	●	20027, 20527,
308 (T9)	Instrument panel	COMBINE_UDS	▲	▲	▲	▲	▲	20527,
308 (T9)	Instrument panel	COMBINE_UDS_2	▲	▲	▲	▲	▲	20527,
308 (T9)	Matrix screen integral to the instrument panel	MATT_C_2010	▲	▲	▲	○	▲	20527,
308 (T9)	Matrix screen integral to the instrument panel	MATT_M_2010	▲	▲	▲	○	▲	20527,
308 (T9)	Seat belts not fastened LED unit	TNB_2010	▲	○	○	○	▲	
308 (T9)	Additional heating	CHAUFF_ADD	▲	▲	▲	▲	▲	20048, 20527, 20107,
308 4 portes	Parking aid	AAS	●	●	●	●	○	20558, 20457, 20527,
308 4 portes	ABS/traction control	ABS81	●	●	●	●	○	20192, 20039, 20527,
308 4 portes	ABS/traction control	ESP81	●	●	●	●	●	20558, 20192, 20408, 20039, 20527,
308 4 portes	Multifunction display	EMF_A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
308 4 portes	Multifunction display	EMF_C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
308 4 portes	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	●	○	20249, 20396, 20481, 20740, 20744, 20192, 20427, 20249, 20396, 20481, 20740, 20744, 20427, 20249, 20396, 20481, 20740, 20744, 20427, 20406, 20822, 20527,
308 4 portes	Anti-theft alarm	ALARME	●	●	●	●	●	20125, 20115, 20118,
308 4 portes	Anti-theft alarm	ALARME LIN	●	●	●	●	●	20527,
308 4 portes	audio amplifier	AMPLI_AUDIO	●	●	●	○	●	20527,
308 4 portes	Driver's seat memorizing unit	BDMC	●	●	●	●	●	20146, 20745, 20746, 20770, 20527, 20146, 20745, 20746, 20770,
308 4 portes	Passenger seat memorisation unit	BDMP	●	●	●	●	●	20146, 20325, 20410, 20745, 20746, 20770, 20527,
308 4 portes	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20844, 20155, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
308 4 portes	Engine relay unit	BSM	●	●	●	●	●	20527,
308 4 portes	gearbox	BVA_AM6_AT6_EURO5	●	●	●	●	●	20502, 20634, 20600, 20605, 20527,
308 4 portes	gearbox	BVA_AL4	●	●	●	●	●	20333, 20004, 20448, 20527,



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
308 4 portes	Injection/ignition	ME745	●	●	●	●	●	20743, 20631, 20721, 20527,
308 4 portes	Injection/ignition	ME749	●	●	●	●	●	20856, 20743, 20631, 20721, 20527,
308 4 portes	Injection/ignition	ME749 EC5	●	●	●	●	●	20226, 20460, 20717, 20527,
308 4 portes	Injection/ignition	MM6KP	●	●	●	●	●	20463, 20859, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
308 4 portes	Injection/ignition	MEV17_4_EUR05	●	●	●	●	●	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
308 4 portes	Injection/ignition	MED17_4_EUR05	●	●	●	●	●	20192, 20559, 20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
308 4 portes	Injection/ignition	HDI_SID807	●	●	●	●	●	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
308 4 portes	Injection/ignition	EDC17C10	●	●	●	●	●	20088, 20089, 20343, 20509, 20063, 20062, 20065, 20064, 20068, 20226, 20296, 20284, 20374, 20461, 20470, 20564, 20589, 20710, 20527,
308 4 portes	Injection/ignition	EDC17C10_BR2	●	●	●	●	●	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
308 4 portes	Injection/ignition	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
308 4 portes	Injection/ignition	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
308 4 portes	Injection/ignition	MEVD17_4_2	●	●	●	●	●	20070, 20563, 20291, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20827, 20061,
308 4 portes	Injection/ignition	MED17_4_2	●	●	●	●	●	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
308 4 portes	Injection/ignition	ME745 EC5	●	●	●	●	●	20460, 20717, 20527,
308 4 portes	Injection/ignition	V46 21	●	●	●	●	●	20029, 20003, 20070, 20255, 20386, 20387, 20527,
308 4 portes	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
308 4 portes	Hands-free kit (Telephone)	BOITIER NOMADE	●	●	●	●	●	20135, 20135, 20527,
308 4 portes	Matrix screen integral to the instrument panel	MATT	●	●	●	●	●	20527,
308 4 portes	Service module	MD SERV	●	●	●	●	●	20124, 20124, 20527,
308 4 portes	Service module	BTA	●	●	●	●	●	20847, 20142, 20527,
308 4 portes	Service module	BLVV	●	●	●	●	●	20176, 20527,
308 4 portes	Multiplexed additive pump	PADDGO	●	●	●	●	●	20011, 20586, 20590, 20527,
308 4 portes	Multiplexed additive pump	PADDGO_E5	●	●	●	●	●	20282, 20163, 20234, 20235, 20323, 20584, 20163, 20234, 20235, 20323, 20687, 20163, 20234, 20235, 20323, 20527,
308 4 portes	Door control pad	PDPC	●	●	●	●	●	
308 4 portes	Lane departure warning system	AFIL	●	●	●	●	○	20455, 20268, 20749, 20750, 20527,
308 4 portes	Telematics	RADIONAV RNEGC	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
308 4 portes	Telematics	RADIONAV RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
308 4 portes	Telematics	RADIONAV NG4	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
308 4 portes	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20128, 20847, 20095, 20123, 20127, 20137, 20006, 20114, 20121, 20133, 20128, 20847, 20095, 20123, 20128, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20527,
308 4 portes	Telematics	RADIONAV RNEG ECO	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20527,
308 4 portes	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
308 4 portes	Seat belts not fastened LED unit	TNB	●	○	○	○	●	
308 4 portes	Sun roof	TOUV	●	●	●	●	●	20506, 20527,
308 4 portes	Folding roof	BTE	●	●	●	●	●	20832, 20833, 20527,
308 4 portes	Battery charge status unit	BECB	●	●	●	●	○	20527,
308 4 portes	Battery charge status unit	BECB GEN2	●	●	●	●	○	20527,
308 4 portes	Moving panel deflector	DEFL PAN MOBIL	●	●	●	●	●	20527,
406 COUPE	Air bags	Air bag and seat belt		●	●	○	○	
406 COUPE	Air bags	Side airbag. (right side)		●	●	○		
406 COUPE	Active safety	BOSCH ABS5		●	●			
406 COUPE	Active safety	BOSCH ABS5.3		●	●		●	
406 COUPE	Engines/automatic gearbox	AL4 autoadaptive automatic gearbox	●	●	●	●	●	
406 COUPE	Air bags	Side airbag. (left side)		●	●	○		
406R/406R COUPE	Engine/automatic gearbox	4HX BOSCH EDC15C2		●	●			4012
406R/406R COUPE	Engine/automatic gearbox	RHY BOSCH EDC15C2		●	●			4012
406R/406R COUPE	Engine/automatic gearbox	RHZ BOSCH EDC15C2		●	●			4012
406R/406R COUPE	Engine/automatic gearbox	RHS BOSCH EDC15C2	●	●	●	●	●	4012
406R/406R COUPE	Engine/automatic gearbox	Diesel fuel additive control unit	●	●	●	●	●	4022
406R/406R COUPE	Engine/automatic gearbox	R6F MM4.8P	●	●	●	●	●	700, 907, 011
406R/406R COUPE	Engine/automatic gearbox	RFN MM4.8P	●	●	●	●	●	700, 907, 011
406R/406R COUPE	Engine/automatic gearbox	AL4 autoadaptive automatic gearbox	●		●	●	●	7011
406R/406R COUPE	Engine/automatic gearbox	6FZ SAGEM S2000	●		●	●	●	7011
406R/406R COUPE	Engine/automatic gearbox	6FZ SAGEM S2000	●		●	●	●	7011
406R/406R COUPE	Engine/automatic gearbox	XFZ BOSCH ME7.4.6	●		●	●	●	7011
406R/406R COUPE	Engine/automatic gearbox	3FZ MM4MP2	●	●	●	●	●	
406R/406R COUPE	Engine/automatic gearbox	6FZ SAGEM S2000	●			●		
406R/406R COUPE	Engine/automatic gearbox	RLZ SIEMENS SIRIUS 81	●	●	●	●	●	
406R/406R COUPE	Engine/automatic gearbox	LFY BOSCH MP7.3		●	●		●	
406R/406R COUPE	Engine/automatic gearbox	R6F MM4.8P	●	●	●	●	●	
406R/406R COUPE	Engine/automatic gearbox	RFR MM4.8P	●	●	●	●	●	
406R/406R COUPE	Engine/automatic gearbox	RFN MM4.8P	●	●	●	●	●	
406R/406R COUPE	Engine/automatic gearbox	XFZ BOSCH ME7.4.6	●		●	●	●	
406R/406R COUPE		Built-in systems interface (BSI)		●	●	●		
406R/406R COUPE	Driver information/Communication	Multi-function display	●	●	●	●		
406R/406R COUPE	Driver information/Communication	Radio	●	●	●	●		
406R/406R COUPE	Driver information/Communication	CD player	●	●	●	●		

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
406R/406R COUPE	Driver information/Communication	Instrument panel		●	●			
406R/406R COUPE	Driver information/Communication	On-board navigation system	●	●	●	●	○	
406R/406R COUPE	Air bags	Air bag and seat belt		●	●	○	○	
406R/406R COUPE	Air bags	Side airbag. (right side)		●	●	○		
406R/406R COUPE		Air conditioning		●	●			
406R/406R COUPE	Engine/automatic gearbox	4HP20 automatic gearbox	●	●	●	●		
406R/406R COUPE	Engine/automatic gearbox	3FZ MM4MP2	●	●	●	●	●	
406R/406R COUPE	Engine/automatic gearbox	RLZ IDE SIRIUS 81	●	●	●	●	●	
406R/406R COUPE	Engine/automatic gearbox	4HX BOSCH EDC15C2	●	●	●	●	●	
406R/406R COUPE		Built-in systems interface (BSI)	●	●	●	●	●	
406R/406R COUPE		Alarm	●	●	●	●	●	
406R/406R COUPE	Driver information/Communication	Multi-function display	●	●	●	●	●	
406R/406R COUPE	Driver information/Communication	Instrument panel	●	●	●	●	●	
406R/406R COUPE	Driver information/Communication	Radio	●	●	●	●	●	
406R/406R COUPE	Driver information/Communication	CD player	●	●	●	●	●	
406R/406R COUPE	Driver information/Communication	On-board navigation system	●	●	●	●	○	
406R/406R COUPE	Driver information/Communication	Switch unit under steering wheel (COM 2000)	●	●	●	●	○	
406R/406R COUPE	Visibility /lighting	Rain/brightness sensor	●	●	●	○	○	
406R/406R COUPE		Air bags	●	●	●	○	○	
406R/406R COUPE		Air conditioning	●	●	●	●	●	
406R/406R COUPE	Air bags	Side airbag. (left side)		●	●	○		
406R/406R COUPE	Engine/automatic gearbox	Diesel fuel additive control unit	●	●	●	●	●	
406R/406R COUPE	Engine/automatic gearbox	4HP20 automatic gearbox	●	●	●	●		
406R/406R COUPE	Engine/automatic gearbox	AL4 autoadaptive automatic gearbox	●		●	●	●	
406R/406R COUPE	Active safety	ABS BOSCH 5.3	●	●	●	●	●	
406R/406R COUPE	Active safety	ABS BOSCH 5.3	●	●	●	●	●	
406R/406R COUPE	Engine/automatic gearbox	RHY SIEMENS SID 801	●	●	●	●	●	
408 (T73)	Parking aid	AAS	●	●	●	●	○	20558, 20457, 20527,
408 (T73)	ABS/traction control	ABS81	●	●	●	●	○	20192, 20039, 20527,
408 (T73)	ABS/traction control	ESP81	●	●	●	●	●	20558, 20192, 20408, 20039, 20527,
408 (T73)	Multifunction display	EMF A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
408 (T73)	Multifunction display	EMF C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
408 (T73)	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	●	○	20249, 20396, 20481, 20740, 20744, 20192, 20427, 20249, 20396, 20481, 20740, 20744, 20427, 20249, 20396, 20481, 20740, 20744, 20427, 20406, 20822, 20527,
408 (T73)	Anti-theft alarm	ALARME	●	●	●	●	●	20125, 20115, 20118,
408 (T73)	Anti-theft alarm	ALARME LIN	●	●	●	●	●	20527,
408 (T73)	audio amplifier	AMPLI AUDIO	●	●	●	○	●	20527,



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
408 (T73)	Injection/ignition	DCM35_BR2	●	●	●	●	●	20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
408 (T73)	Injection/ignition	DCM34	●	●	●	●	●	20508, 20818, 20239, 20291, 20187, 20328, 20242, 20819, 20188, 20020, 20226, 20626, 20285, 20694, 20240, 20283, 20588, 20629, 20672, 20710, 20573, 20579, 20694,
408 (T73)	Injection/ignition	DCM35	●	●	●	●	●	20088, 20089, 20343, 20509, 20020, 20067, 20062, 20226, 20240, 20588, 20629, 20672, 20710, 20285, 20573, 20579, 20692, 20694, 20527,
408 (T73)	Injection/ignition	EDC16C3	●	●	●	●	●	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20468, 20296, 20719, 20226, 20241, 20344, 20470, 20483, 20246, 20635, 20527,
408 (T73)	Injection/ignition	MED17_4_EUR04	●	●	●	●	●	20559, 20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
408 (T73)	Injection/ignition	MEV17_4_EUR04	●	●	●	●	●	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
408 (T73)	Injection/ignition	MM6LPB	●	●	●	●	●	20843, 20112, 20005, 20159, 20226, 20437, 20059, 20527,
408 (T73)	Injection/ignition	ME745	●	●	●	●	●	20743, 20631, 20721, 20527,
408 (T73)	Injection/ignition	ME749	●	●	●	●	●	20856, 20743, 20631, 20721, 20527,
408 (T73)	Injection/ignition	ME749_EC5	●	●	●	●	●	20226, 20460, 20717, 20527,
408 (T73)	Injection/ignition	MM6KP	●	●	●	●	●	20463, 20859, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
408 (T73)	Injection/ignition	MEV17_4_EUR05	●	●	●	●	●	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
408 (T73)	Injection/ignition	MED17_4_EUR05	●	●	●	●	●	20192, 20559, 20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
408 (T73)	Injection/ignition	HDI_SID807	●	●	●	●	●	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
408 (T73)	Injection/ignition	EDC17C10	●	●	●	●	●	20088, 20089, 20343, 20509, 20063, 20062, 20065, 20064, 20068, 20226, 20296, 20284, 20374, 20461, 20470, 20564, 20589, 20710, 20527,
408 (T73)	Injection/ignition	EDC17C10_BR2	●	●	●	●	●	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
408 (T73)	Injection/ignition	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
408 (T73)	Injection/ignition	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
408 (T73)	Injection/ignition	MEVD17_4_2	●	●	●	●	●	20070, 20563, 20291, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20827, 20061,
408 (T73)	Injection/ignition	MED17_4_2	●	●	●	●	●	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
408 (T73)	Injection/ignition	ME745 EC5	●	●	●	●	●	20460, 20717, 20527,
408 (T73)	Injection/ignition	V46 21	●	●	●	●	●	20029, 20003, 20070, 20255, 20386, 20387, 20527,
408 (T73)	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
408 (T73)	Hands-free kit (Telephone)	BOITIER NOMADE	●	●	●	●	●	20135, 20135, 20527,
408 (T73)	Service module	MD SERV	●	●	●	●	●	20124, 20124, 20527,
408 (T73)	Service module	BTA	●	●	●	●	●	20847, 20142, 20527,
408 (T73)	Service module	BLVV	●	●	●	●	●	20176, 20527,
408 (T73)	Multiplexed additive pump	PADDGO	●	●	●	●	●	20011, 20586, 20590, 20527,
408 (T73)	Multiplexed additive pump	PADDGO_E5	●	●	●	●	●	20282, 20163, 20234, 20235, 20323, 20584, 20163, 20234, 20235, 20323, 20687, 20163, 20234, 20235, 20323, 20527,
408 (T73)	Door control pad	PDPC	●	●	●	●	●	
408 (T73)	Lane departure warning system	AFIL	●	●	●	●	○	20455, 20268, 20749, 20750, 20527,
408 (T73)	Telematics	RADIONAV RNEGC	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
408 (T73)	Telematics	RADIONAV RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
408 (T73)	Telematics	RADIONAV NG4	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20527,
408 (T73)	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20128, 20847, 20095, 20123, 20127, 20137, 20006, 20114, 20121, 20133, 20128, 20847, 20095, 20123, 20128, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20527,
408 (T73)	Telematics	RADIONAV RNEG ECO	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20527,
408 (T73)	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
408 (T73)	Seat belts not fastened LED unit	TNB	●	○	○	○	●	
408 (T73)	Sun roof	TOUV	●	●	●	●	●	20506, 20527,
408 (T73)	Folding roof	BTE	●	●	●	●	●	20832, 20833, 20527,
408 (T73)	Battery charge status unit	BECB	●	●	●	●	○	20527,
408 (T73)	Battery charge status unit	BECB_GEN2	●	●	●	●	○	20527,
408 (T73)	High frequency receiver	RHF	●	●	●	●	○	
408 (T73)	Moving panel deflector	DEFL PAN MOBIL	●	●	●	●	●	20527,
408 (T93)	Built-in Systems Interface	BSI2010	▲	▲	▲	▲	▲	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20495, 20549, 20731, 20301, 20489, 20047, 20086, 20154, 20228, 20411, 20844, 20489, 20527,
408 (T93)	Engine ECU	HDI_SID807_BR2	▲	▲	▲	▲	▲	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
408 (T93)	Engine ECU	EDC17C10_BR2	▲	▲	▲	▲	▲	20088, 20089, 20089, 20254, 20343, 20806, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
408 (T93)	Engine ECU	MED17_4_2	▲	▲	▲	▲	▲	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
408 (T93)	Engine ECU	V46	▲	▲	▲	▲	▲	20070, 20251, 20262, 20260, 20659, 20681, 20685, 20149, 20580, 20527,
408 (T93)	Engine ECU	V46 21	▲	▲	▲	▲	▲	20029, 20003, 20070, 20255, 20386, 20387, 20527,



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
408 (T93)	Engine ECU	EDC17C60	▲	▲	▲	▲	▲	20144, 20484, 20256, 20257, 20258, 20259, 20829, 20690, 20624, 20625, 20716, 20606, 20619, 20670, 20683, 20753, 20198, 20288, 20444, 20805, 20093, 20514, 20513, 20505, 20548, 20552, 20554, 20122, 20527,
408 (T93)	Engine ECU	VD46	▲	▲	▲	▲	▲	20349, 20299, 20444, 20190, 20544, 20157, 20576, 20593, 20653, 20654, 20658, 20661, 20680, 20685, 20711, 20578, 20580, 20594, 20613, 20715, 20527,
408 (T93)	Engine ECU	DCM62	▲	▲	▲	▲	▲	20144, 20829, 20838, 20256, 20257, 20258, 20259, 20699, 20639, 20690, 20624, 20706, 20606, 20611, 20619, 20623, 20622, 20670, 20683, 20753, 20198, 20288, 20299, 20444, 20092, 20093, 20514, 20513, 20505, 20548, 20554, 20122, 20185, 20527,
408 (T93)	Engine ECU	V46_32	▲	▲	▲	▲	▲	20806, 20029, 20003, 20070, 20255, 20386, 20387, 20768, 20527,
408 (T93)	Engine ECU	MED17_4_4	▲	▲	▲	▲	▲	20349, 20299, 20444, 20157, 20576, 20593, 20653, 20654, 20661, 20680, 20685, 20711, 20854, 20578, 20594, 20613, 20715, 20527,
408 (T93)	Anti-lock Braking System (ABS) or Electronic Stability Program (ESP)	ESP90	▲	▲	▲	▲	▲	20055, 20408, 20039, 20177, 20527,
408 (T93)	gearbox	BVA_AM6_AT6_UDS	▲	▲	▲	▲	▲	20034, 20599, 20601, 20572, 20604, 20072, 20311, 20467, 20502,
408 (T93)	Air bag	RBG UDS	▲	▲	▲	▲	○	20189, 20406, 20822, 20527,
408 (T93)	Engine relay unit	BSM_2010	▲	▲	▲	▲	▲	20327, 20780, 20252, 20401, 20327, 20780, 20252, 20401, 20527,
408 (T93)	Display	EMF A UDS	▲	▲	▲	○	▲	20527,
408 (T93)	Display	EMF C UDS	▲	▲	▲	○	▲	20477, 20151, 20527,
408 (T93)	Switch module under the steering wheel (Top of column)	COM2008P	▲	▲	▲	▲	▲	20527,
408 (T93)	Switch module under the steering wheel (Top of column)	HDC	▲	▲	▲	▲	▲	20527,
408 (T93)	Headlamp height adjuster / Directional headlamp	LADCT	▲	▲	▲	▲	▲	20527,
408 (T93)	Supply protection and management unit	BPGA2010	▲	▲	▲	▲	○	20527,
408 (T93)	Electric power steering	DAE BVH2	▲	▲	▲	▲	○	20527,
408 (T93)	Voltage retaining device	DMTC	▲	○	○	○	○	
408 (T93)	Voltage retaining device	DMTR	▲	▲	▲	○	○	20527,
408 (T93)	Electronic key reader	LCE	▲	▲	▲	▲	○	20527,
408 (T93)	Electric steering lock	AVE	▲	▲	▲	▲	▲	20527, 20767,
408 (T93)	Air conditioning	BCC	▲	▲	▲	▲	▲	20527,
408 (T93)	Rain and brightness sensor	CDPL UDS HELLA	▲	▲	▲	▲	○	20340, 20527,
408 (T93)	Touch screen	EMF DGT UDS	▲	▲	▲	▲	▲	20527,
408 (T93)	Parking aid	AAS UDS	▲	▲	▲	▲	▲	20558, 20807, 20457, 20527,
408 (T93)	Seat driver position memory module.	BDMC	▲	▲	▲	▲	▲	20146, 20745, 20746, 20527, 20146, 20745, 20746,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
408 (T93)	Telematics unit (RTx) Or Radio Navigation	SMEG_PLUS	▲	▲	▲	▲	▲	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20843, 20527,
408 (T93)	Telematics unit (RTx) Or Radio Navigation	MRN	▲	▲	▲	▲	▲	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20527,
408 (T93)	Battery charge status unit	BECB_GEN2	▲	▲	▲	▲	○	20527,
408 (T93)	Hands free starting access electronic module.	BML	▲	▲	▲	▲	▲	20075, 20076, 20077, 20078, 20079, 20080, 20081, 20082, 20083, 20358, 20527,
408 (T93)	Independent telematic unit (BTA)	BTA	▲	▲	▲	▲	▲	20847, 20142, 20527,
408 (T93)	Independent telematic unit (BTA)	BTA_CN	▲	▲	▲	▲	▲	20765, 20527,
408 (T93)	Multiplexed control panel	FMUX	▲	▲	▲	▲	▲	20527,
408 (T93)	Radiotelephone transceiver control	CRT_UDS_KOSTAL	▲	▲	▲	○	▲	20527,
408 (T93)	Radio	RD45	▲	▲	▲	▲	▲	20844, 20030, 20519, 20844, 20030, 20519, 20527,
408 (T93)	Instrument panel	COMBINE_UDS	▲	▲	▲	▲	▲	20527,
408 (T93)	Instrument panel	COMBINE_UDS_2	▲	▲	▲	▲	▲	20527,
408 (T93)	Matrix screen integral to the instrument panel	MATT_C_2010	▲	▲	▲	○	▲	20527,
408 (T93)	Matrix screen integral to the instrument panel	MATT_M_2010	▲	▲	▲	○	▲	20527,
408 (T93)	Anti-theft alarm	ALARME	▲	▲	▲	▲	▲	20527,
508 HYbrid4	Built-in Systems Interface (BSI)	BSI2010	▲	▲	▲	▲	▲	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20495, 20549, 20731, 20301, 20489, 20086, 20154, 20228, 20411, 20844, 20489, 20162, 20237, 20323, 20426, 20428, 20433, 20610, 20527,
508 HYbrid4	Engine ECU	DCM35_BR2	▲	▲	▲	▲	▲	20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
508 HYbrid4	Engine ECU	DCM34_P	▲	▲	▲	▲	▲	20281, 20509, 20419, 20020, 20064, 20070, 20226, 20240, 20286, 20588, 20627, 20650, 20663, 20672, 20695, 20710, 20573, 20579, 20618, 20694,
508 HYbrid4	Engine ECU	HDI_SID807_BR2	▲	▲	▲	▲	▲	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
508 HYbrid4	Engine ECU	MED17_4_2	▲	▲	▲	▲	▲	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
508 HYbrid4	Engine ECU	MEV17_4_2	▲	▲	▲	▲	▲	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
508 HYbrid4	Engine ECU	EDC17CP42	▲	▲	▲	▲	▲	20088, 20089, 20117, 20295, 20245, 20348, 20360, 20062, 20065, 20070, 20374, 20461, 20469, 20637, 20620, 20621, 20626, 20651, 20657, 20660, 20661, 20662, 20679, 20711, 20285, 20579, 20597, 20527,
508 HYbrid4	Engine ECU	MM6KP	▲	▲	▲	▲	▲	20463, 20859, 20372, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
508 HYbrid4	Headlamp height adjuster / Directional headlamp	BEMP	▲	▲	▲	▲	▲	20527,
508 HYbrid4	Parking assistance	AAS UDS	▲	▲	▲	▲	▲	20558, 20807, 20457, 20527,
508 HYbrid4	Anti-theft alarm	ALARME	▲	▲	▲	▲	▲	20125, 20115, 20118, 20125, 20115, 20118, 20527, 20125, 20115, 20118,
508 HYbrid4	Instrument panel	COMBINE UDS	▲	▲	▲	▲	▲	20527,
508 HYbrid4	Multifunction screen	EMF A UDS	▲	▲	▲	○	▲	20527,
508 HYbrid4	Multifunction screen	EMF C UDS	▲	▲	▲	○	▲	20477, 20151, 20527,
508 HYbrid4	Telematics unit (RTx) Or Radio Navigation	RNEG2010	▲	▲	▲	▲	▲	20847, 20119, 20123, 20136, 20141, 20140, 20527,
508 HYbrid4	Telematics unit (RTx) Or Radio Navigation	MRN	▲	▲	▲	▲	▲	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20527,
508 HYbrid4	Telematics unit (RTx) Or Radio Navigation	SMEG_PLUS	▲	▲	▲	▲	▲	20477, 20847, 20116, 20119, 20123, 20136, 20477, 20847, 20095, 20116, 20119, 20123, 20136, 20843, 20527,
508 HYbrid4	Independent telematic unit (BTA)	BTA	▲	▲	▲	▲	▲	20847, 20142, 20527,
508 HYbrid4	Independent telematic unit (BTA)	BTA_CN	▲	▲	▲	▲	▲	20765, 20527,
508 HYbrid4	Multiplexed control panel	FMUX	▲	▲	▲	▲	▲	20527,
508 HYbrid4	Matrix screen integral to the instrument panel	MATT_C_2010	▲	▲	▲	○	▲	20527,
508 HYbrid4	Matrix screen integral to the instrument panel	MATT_M_2010	▲	▲	▲	○	▲	20527,
508 HYbrid4	Matrix screen integral to the instrument panel	MATT_P_2010	▲	▲	▲	○	▲	20527,
508 HYbrid4	RD5 radio	RD5	▲	▲	▲	▲	▲	20844, 20030, 20519, 20527,
508 HYbrid4	Hands free starting access electronic module.	BML	▲	▲	▲	▲	▲	20075, 20076, 20077, 20078, 20079, 20080, 20081, 20082, 20083, 20358, 20527,
508 HYbrid4	Telematic navigator	CRT UDS	▲	○	○	▲	▲	
508 HYbrid4	Radio amplifier	AMPLI_AUDIO	▲	▲	▲	○	▲	20527,
508 HYbrid4	Switch module under the steering wheel (Top of column)	COM2008P	▲	▲	▲	▲	▲	20527,
508 HYbrid4	Seat belts not fastened LED unit (TNB)	TNB_2010	▲	○	○	○	▲	
508 HYbrid4	Supply protection and management unit	BPGA2010	▲	▲	▲	▲	○	20527,
508 HYbrid4	Steering wheel with integral controls (VCI)	VCI	▲	▲	▲	▲	▲	20527,
508 HYbrid4	Rain and brightness sensor	PLUIE LUMINOSITE UDS	▲	▲	▲	▲	○	20797, 20527, 20797, 20527,
508 HYbrid4	Air conditioning	CLIM REGULEE UDS	▲	▲	▲	▲	▲	20491, 20491, 20527,
508 HYbrid4	Rear air conditioning	CLIM AR	▲	○	○	▲	▲	
508 HYbrid4	Driver's seat memorizing unit	BDMC	▲	▲	▲	▲	▲	20146, 20410, 20745, 20746, 20747, 20770, 20146, 20410, 20745, 20746, 20747, 20770, 20527, 20146, 20410, 20745, 20746, 20747, 20770,
508 HYbrid4	Door control pad	PDPC	▲	▲	▲	▲	▲	
508 HYbrid4	Electronic key reader	LCE	▲	▲	▲	▲	○	20527,
508 HYbrid4	Electric steering lock	AVE	▲	▲	▲	▲	▲	20527, 20498,
508 HYbrid4	High Head Vision	VTH UDS	▲	▲	▲	▲	○	20145, 20326, 20192, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
508 HYbrid4	Main beams assistant ECU	RETRO_INT	▲	▲	▲	▲	▲	20035, 20527,
508 HYbrid4	Windscreen wiper (Left-hand side)	MOTEV_UDS	▲	▲	▲	▲	○	20527,
508 HYbrid4	Windscreen wiper (Right-hand side)	MOTED_UDS	▲	▲	▲	▲	○	20527,
508 HYbrid4	Additional heating	CHAUFF_ADD	▲	▲	▲	▲	▲	20048, 20527, 20107,
508 HYbrid4	Traction battery ECU	TBMU	▲	▲	▲	▲	▲	20522, 20527,
508 HYbrid4	Hybrid mode selector	MCM	▲	▲	▲	▲	○	20281,
508 RXH HYbrid4	Built-in Systems Interface (BSI)	BSI2010	▲	▲	▲	▲	▲	20516, 20850, 20201, 20204, 20205, 20430, 20154, 20228, 20411, 20844, 20074, 20495, 20549, 20731, 20301, 20489, 20086, 20154, 20228, 20411, 20844, 20489, 20162, 20237, 20323, 20426, 20428, 20433, 20610, 20527,
508 RXH HYbrid4	Engine ECU	DCM35_BR2	▲	▲	▲	▲	▲	20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
508 RXH HYbrid4	Engine ECU	DCM34_P	▲	▲	▲	▲	▲	20281, 20509, 20419, 20020, 20064, 20070, 20226, 20240, 20286, 20588, 20627, 20650, 20663, 20672, 20695, 20710, 20573, 20579, 20618, 20694,
508 RXH HYbrid4	Engine ECU	HDI_SID807_BR2	▲	▲	▲	▲	▲	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
508 RXH HYbrid4	Engine ECU	MED17_4_2	▲	▲	▲	▲	▲	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
508 RXH HYbrid4	Engine ECU	MEV17_4_2	▲	▲	▲	▲	▲	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
508 RXH HYbrid4	Engine ECU	EDC17CP42	▲	▲	▲	▲	▲	20088, 20089, 20117, 20295, 20245, 20348, 20360, 20062, 20065, 20070, 20374, 20461, 20469, 20637, 20620, 20621, 20626, 20651, 20657, 20660, 20661, 20662, 20679, 20711, 20285, 20579, 20597, 20527,
508 RXH HYbrid4	Engine ECU	MM6KP	▲	▲	▲	▲	▲	20463, 20859, 20372, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
508 RXH HYbrid4	Engine ECU	DCM35_HY	▲	▲	▲	▲	▲	20088, 20089, 20090, 20281, 20295, 20509, 20343, 20020, 20062, 20065, 20064, 20070, 20226, 20240, 20286, 20636, 20588, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
508 RXH HYbrid4	Engine ECU	DCM62	▲	▲	▲	▲	▲	20144, 20829, 20838, 20256, 20257, 20258, 20259, 20699, 20639, 20690, 20624, 20706, 20606, 20611, 20619, 20623, 20622, 20670, 20683, 20753, 20198, 20288, 20299, 20444, 20092, 20093, 20514, 20513, 20505, 20548, 20554, 20122, 20185, 20527,
508 RXH HYbrid4	Engine ECU	MED17_4_4	▲	▲	▲	▲	▲	20349, 20299, 20444, 20157, 20576, 20593, 20653, 20654, 20661, 20680, 20685, 20711, 20854, 20578, 20594, 20613, 20715, 20527,
508 RXH HYbrid4	ABS/traction control	ABS81	▲	▲	▲	▲	○	20039, 20527,
508 RXH HYbrid4	ABS/traction control	ESP81	▲	▲	▲	▲	▲	20226, 20408, 20647, 20039, 20008, 20169, 20171, 20523, 20527,
508 RXH HYbrid4	Gearbox	BVA AM6 AT6 EURO5	▲	▲	▲	▲	▲	20502, 20634, 20600, 20605, 20527,



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
508 RXH HYbrid4	Independent telematic unit (BTA)	BTA_CN	▲	▲	▲	▲	▲	20765, 20527,
508 RXH HYbrid4	Multiplexed control panel	FMUX	▲	▲	▲	▲	▲	20527,
508 RXH HYbrid4	Matrix screen integral to the instrument panel	MATT_C_2010	▲	▲	▲	○	▲	20527,
508 RXH HYbrid4	Matrix screen integral to the instrument panel	MATT_M_2010	▲	▲	▲	○	▲	20527,
508 RXH HYbrid4	Matrix screen integral to the instrument panel	MATT_P_2010	▲	▲	▲	○	▲	20527,
508 RXH HYbrid4	RD5 radio	RD5	▲	▲	▲	▲	▲	20844, 20030, 20519, 20527,
508 RXH HYbrid4	Hands free starting access electronic module.	BML	▲	▲	▲	▲	▲	20075, 20076, 20077, 20078, 20079, 20080, 20081, 20082, 20083, 20358, 20527,
508 RXH HYbrid4	Telematic navigator	CRT UDS	▲	○	○	▲	▲	
508 RXH HYbrid4	Radio amplifier	AMPLI AUDIO	▲	▲	▲	○	▲	20527,
508 RXH HYbrid4	Switch module under the steering wheel (Top of column)	COM2008P	▲	▲	▲	▲	▲	20527,
508 RXH HYbrid4	Seat belts not fastened LED unit (TNB)	TNB_2010	▲	○	○	○	▲	
508 RXH HYbrid4	Supply protection and management unit	BPGA2010	▲	▲	▲	▲	○	20527,
508 RXH HYbrid4	Steering wheel with integral controls (VCI)	VCI	▲	▲	▲	▲	▲	20527,
508 RXH HYbrid4	Rain and brightness sensor	PLUIE LUMINOSITE UDS	▲	▲	▲	▲	○	20797, 20527, 20797, 20527,
508 RXH HYbrid4	Air conditioning	CLIM REGULEE UDS	▲	▲	▲	▲	▲	20491, 20491, 20527,
508 RXH HYbrid4	Rear air conditioning	CLIM AR	▲	○	○	▲	▲	
508 RXH HYbrid4	Motorised Boot ECU	COFFRE MOTORISE	▲	▲	▲	▲	▲	20821, 20266, 20501, 20527,
508 RXH HYbrid4	Driver's seat memorizing unit	BDMC	▲	▲	▲	▲	▲	20146, 20410, 20745, 20746, 20747, 20770, 20146, 20410, 20745, 20746, 20747, 20770, 20527, 20146, 20410, 20745, 20746, 20747, 20770,
508 RXH HYbrid4	Door control pad	PDPC	▲	▲	▲	▲	▲	
508 RXH HYbrid4	Electronic key reader	LCE	▲	▲	▲	▲	○	20527,
508 RXH HYbrid4	Electric steering lock	AVE	▲	▲	▲	▲	▲	20527, 20498,
508 RXH HYbrid4	High Head Vision	VTH UDS	▲	▲	▲	▲	○	20145, 20326, 20192, 20527,
508 RXH HYbrid4	Main beams assistant ECU	RETRO INT	▲	▲	▲	▲	▲	20035, 20527,
508 RXH HYbrid4	Windscreen wiper (Left-hand side)	MOTEV_UDS	▲	▲	▲	▲	○	20527,
508 RXH HYbrid4	Windscreen wiper (Right-hand side)	MOTED_UDS	▲	▲	▲	▲	○	20527,
508 RXH HYbrid4	Additional heating	CHAUFF ADD	▲	▲	▲	▲	▲	20048, 20527, 20107,
508 RXH HYbrid4	Traction battery ECU	TBMU	▲	▲	▲	▲	▲	20522, 20527,
508 RXH HYbrid4	Hybrid mode selector	MCM	▲	▲	▲	▲	○	20281,
508/508HY/508RXH		RBG UDS	●	●	●	●	○	10003
508/508HY/509RXH		BVA AM6 AT6 EURO5	●	●	●	●	●	12006
508/508HY/510RXH		ABS81	●	●	●	●	●	5003
508/508HY/511RXH		DCM35 BR2	●	●	●	●	●	401, 312, 006
508/508HY/512RXH		CFC300P HY	●	●	●	●	●	501, 012, 006
508/508HY/513RXH		CFC300P	●	●	●	●	●	501, 012, 006
508/508HY/514RXH		MED17 4 2	●	●	●	●	●	701, 112, 006

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
508/508HY/515RXH		MEV17 4 2	●	●	●	●	●	701, 112, 006
508/508HY/516RXH		MM6KP	●	●	●	●	●	701, 112, 006
508/508HY/517RXH		DCM35 HY	●	●	●	●	●	40, 130, 700, 112, 006
508/508HY/518RXH		DCM34 P	●	●	●	●	●	40, 140, 401, 512, 006
508/508HY/519RXH		HDI SID807 BR2	●	●	●	●	●	40, 140, 401, 512, 006
508/508HY/520RXH		EDC17CP42	●	●	●	●	●	4, 007, 040, 140, 401, 510, 000
508/508HY/521RXH		81 ESP	●	●	●	●	●	10, 020, 100, 505, 003, 000, 000, 000
508/508HY/522RXH		FSE	●	●	●	●	●	10, 010, 100, 301, 004
508/508HY/523RXH		DSG	●	●	●	●	○	20, 020, 200, 402, 005, 000, 000, 000, 000, 000
508/508HY/524RXH		BSI2010	●	●	●	●	●	30, 030, 300, 410, 001
508/508HY/525RXH		COM2008P	●	●	●	●	●	5002
508/508HY/526RXH		AVE	●	●	●	●	●	5009
508/508HY/527RXH		CHAUFF ADD	●	●	●	●	●	12006
508/508HY/528RXH		BEBA	●	●	●	●	●	
508/508HY/529RXH		CLIM REGULEE UDS	●	●	●	●	●	
508/508HY/530RXH		ALARME	●	●	●	●	●	
508/508HY/531RXH		BECB GEN2	●	●	●	●	○	
508/508HY/532RXH		RT6	●	●	●	●	●	
508/508HY/533RXH		LADCT	●	●	●	●	●	
508/508HY/534RXH		BDMC	●	●	●	●	●	
508/508HY/535RXH		LCE	●	●	●	●	○	
508/508HY/536RXH		BSM 2010	●	●	●	●	●	
508/508HY/537RXH		BML	●	●	●	●	●	
508/508HY/538RXH		VTH UDS	●	●	●	●	●	
508/508HY/539RXH		MCM	●	●	●	●	●	
508/508HY/540RXH		HCU1	●	●	●	●	●	
508/508HY/541RXH		HCU2	●	●	●	●	●	
508/508HY/542RXH		BTA	●	●	●	●	●	
508/508HY/543RXH		COMBINE UDS	●	●	●	●	●	
508/508HY/544RXH		RETRO INT	●	●	●	●	●	
508/508HY/545RXH		MATT C 2010	●	●	●	○	●	
508/508HY/546RXH		MATT M 2010	●	●	●	○	●	
508/508HY/547RXH		COFFRE MOTORISE	●	●	●	●	●	
508/508HY/548RXH		EMF A UDS	●	●	●	○	●	
508/508HY/549RXH		EMF C UDS	●	●	●	○	●	
508/508HY/550RXH		FMUX	●	●	●	●	●	
508/508HY/551RXH		AAS UDS	●	●	●	●	○	
508/508HY/552RXH		PDPF	●	●	●	●	●	
508/508HY/553RXH		GEP	●	●	●	●	●	
508/508HY/554RXH		AMPLI AUDIO	●	●	●	○	●	
508/508HY/555RXH		PLUIE LUMINOSITE UDS	●	●	●	●	○	
508/508HY/556RXH		RD5	●	●	●	●	●	
508/508HY/557RXH		CLIM AR	●	○	○	●	●	
508/508HY/558RXH		TNB 2010	●	○	○	○	●	
508/508HY/559RXH		VCI	●	●	●	●	●	
508/508HY/560RXH		BPGA2010	●	●	●	●	○	
508/508HY/561RXH		CRT UDS	●	○	○	●	●	
508/508HY/562RXH		TBMU	●	●	●	●	●	
508/508HY/563RXH		BSG 2010 RQ	●	●	●	●	●	



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
508/508HY/564RXH		DMTC	●	○	○	○	○	
508/508HY/565RXH		MOTEV UDS	●	●	●	●	●	
508/508HY/566RXH		MOTED UDS	●	●	●	●	●	
607R	Parking aid	AAS	▲	▲	▲	▲	○	20457, 20527,
607R	ABS/traction control	ESP8 BOSCH	●	●	●	●	○	20039, 20527,
607R	Diesel additive	ADDG03	●	●	●	●	●	20215, 20221, 20220, 20013, 20469, 20583, 20091, 20585, 20482, 20730, 20527,
607R	Multifunction display	EMF A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
607R	Multifunction display	EMF C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
607R	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	○	○	20249, 20396, 20481, 20744, 20192, 20249, 20396, 20481, 20744, 20249, 20396, 20481, 20744, 20406, 20822, 20527,
607R	Anti-theft alarm	ALARME	●	●	●	●	●	20125, 20115, 20115, 20527,
607R	Radio or radiotelephone (radio part)	AUTORADIO	●	●	●	●	●	20186, 20331, 20527, 20186, 20331,
607R	Driver's seat memorizing unit	BDMC	●	●	●	●	●	20146, 20745, 20746, 20770, 20527,
607R	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20844, 20155, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
607R	Engine relay unit	BSM	▲	▲	▲	▲	▲	20527,
607R	Trailer relay unit	BSR	●	●	●	●	●	
607R	gearbox	BVA_AM6	●	●	●	●	●	20532, 20860, 20502, 20634, 20600, 20502, 20634, 20600, 20605, 20605, 20527,
607R	gearbox	BVA_ZF	●	●	●	●	●	20748, 20108, 20527,
607R	CD player	CHANGEUR CD	●	●	●	○	●	20110, 20527, 20178, 20390, 20527,
607R	heating/ventilation	CLIM_REGULEE	●	●	●	●	●	
607R	Instrument panel	COMBINE	●	●	●	●	●	20130, 20527,
607R	Rain and brightness sensor	PLUIE LUMINOSITE	●	●	●	○	○	
607R	Power steering electric pump unit	GEP	●	●	●	●	●	
607R	Under inflation detection	DSG	●	●	●	●	○	20168, 20267, 20536, 20303, 20304, 20538, 20543, 20857, 20826, 20527,
607R	Switch module under the steering wheel (Top of column)	HDC	▲	▲	▲	▲	▲	20527,
607R	Injection/ignition	ME747	●	●	●	●	●	20005, 20381, 20437, 20147, 20309, 20527,
607R	Injection/ignition	EDC15C2	●	●	●	●	●	20373, 20535, 20487, 20373, 20535, 20487, 20527,
607R	Injection/ignition	SID201	○	●	●	●	●	20485, 20226, 20238, 20246, 20527,
607R	Injection/ignition	HDI_SID803A	●	●	●	●	●	20117, 20215, 20221, 20220, 20547, 20546, 20855, 20305, 20245, 20499, 20286, 20469, 20577, 20638, 20626, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20527,
607R	Injection/ignition	MM6LP	●	●	●	●	●	20843, 20112, 20226, 20437, 20059, 20527,
607R	Injection/ignition	MM6LPB	●	●	●	●	●	20843, 20112, 20005, 20159, 20226, 20437, 20059, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
607R	Injection/ignition	EDC16CP39	●	●	●	●	●	20382, 20156, 20367, 20446, 20353, 20355, 20346, 20226, 20238, 20380, 20587, 20692, 20694, 20714, 20527,
607R	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
607R	Driver's door electronics	EDPC	●	●	●	●	●	20814,
607R	Passenger door electronics	EDPP	●	●	●	●	●	20814,
607R	Electronically managed suspension	CSS	●	●	●	●	●	20496, 20527,
607R	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20128, 20847, 20095, 20123, 20127, 20137, 20006, 20114, 20121, 20133, 20128, 20847, 20095, 20123, 20128, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20527,
607R	Headlamp height adjuster / Directional headlamp	PROJECTEURS	●	●	●	●	○	20000, 20001, 20527,
607R	Motorised Boot ECU	COFFRE MOTORISE	●	●	●	●	●	20352, 20527,
807 CAN	Parking aid	AAS	●	●	●	●	○	20457, 20527,
807 CAN	ABS/traction control	ESP8 BOSCH	●	●	●	●	○	20408, 20039, 20527,
807 CAN	ABS/traction control	ESP81	●	●	●	●	●	20408, 20039, 20527,
807 CAN	Diesel additive	ADDG03	●	●	●	●	●	20215, 20221, 20220, 20013, 20091, 20585, 20482, 20730, 20583, 20091, 20585, 20482, 20730, 20527,
807 CAN	Multifunction display	EMF A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
807 CAN	Multifunction display	EMF C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
807 CAN	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	●	○	20249, 20396, 20481, 20744, 20192, 20249, 20396, 20481, 20744, 20249, 20396, 20481, 20744, 20406, 20822, 20527,
807 CAN	Anti-theft alarm	ALARME	●	●	●	●	●	20125, 20115, 20125, 20115, 20115, 20527,
807 CAN	Radio or radiotelephone (radio part)	AUTORADIO	●	●	●	●	●	20527, 20186, 20331,
807 CAN	Radio or radiotelephone (radio part)	RD45	●	●	●	●	●	20844, 20030, 20519, 20527, 20844, 20030, 20519,
807 CAN	Driver's seat memorizing unit	BDMC	●	●	●	●	●	20146, 20745, 20746, 20527,
807 CAN	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20558, 20228, 20411, 20844, 20155, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
807 CAN	Engine relay unit	BSM	●	●	●	●	●	20527,
807 CAN	Trailer relay unit	BSR	●	●	●	●	●	
807 CAN	gearbox	BVA AM6 AT6 EURO5	●	●	●	●	●	20502, 20634, 20600, 20605, 20527,
807 CAN	gearbox	BVA_AM6	●	●	●	●	●	20532, 20860, 20502, 20634, 20600, 20502, 20634, 20600, 20605, 20605, 20527,
807 CAN	gearbox	BVA AL4	●	●	●	●	●	20333, 20004, 20448, 20527,
807 CAN	CD player	CHANGEUR CD	●	●	●	○	●	20110, 20527, 20178, 20390, 20527,
807 CAN	Additional heating	CHAUFF ADD	●	●	●	●	●	20048, 20527, 20107,
807 CAN	heating/ventilation	CLIM REGULEE	●	●	●	●	●	20527,
807 CAN	Instrument panel	COMBINE	●	●	●	●	●	
807 CAN	Rain and brightness sensor	PLUIE LUMINOSITE	●	●	●	○	○	
807 CAN	Power steering electric pump unit	GEP	●	●	●	●	○	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
807 CAN	Under inflation detection	DSG	●	●	●	●	○	20168, 20267, 20536, 20303, 20304, 20538, 20543, 20857, 20826, 20527,
807 CAN	Switch module under the steering wheel (Top of column)	HDC	●	●	●	●	●	20002, 20270, 20527,
807 CAN	Injection/ignition	EDC15C2	●	●	●	●	●	20373, 20535, 20487, 20527,
807 CAN	Injection/ignition	MM6LPB	●	●	●	●	●	20843, 20112, 20005, 20159, 20226, 20437, 20059, 20527,
807 CAN	Injection/ignition	HDI_SID803A	●	●	●	●	●	20117, 20215, 20221, 20220, 20547, 20546, 20855, 20305, 20245, 20499, 20286, 20469, 20577, 20638, 20626, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20527,
807 CAN	Injection/ignition	EDC16CP39	●	●	●	●	●	20382, 20156, 20367, 20446, 20353, 20355, 20346, 20226, 20238, 20240, 20283, 20380, 20588, 20694, 20714, 20527,
807 CAN	Injection/ignition	DCM35	●	●	●	●	●	20088, 20089, 20343, 20509, 20020, 20067, 20062, 20226, 20240, 20588, 20629, 20672, 20710, 20285, 20573, 20579, 20692, 20694, 20527,
807 CAN	Injection/ignition	DCM35_BR2	●	●	●	●	●	20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
807 CAN	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
807 CAN	Hands-free kit (Telephone)	BOITIER NOMADE	●	●	●	●	●	20135, 20135, 20527,
807 CAN	Driver's door electronics	EDPC	●	●	●	●	●	20203, 20814, 20527,
807 CAN	Passenger door electronics	EDPP	●	●	●	●	●	20203, 20814, 20527, 20203,
807 CAN	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20128, 20847, 20095, 20123, 20127, 20137, 20006, 20114, 20121, 20133, 20128, 20847, 20095, 20123, 20128, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20527, 20006, 20114, 20121, 20133, 20128, 20847, 20095, 20123, 20128, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394,
807 CAN	Telematics	RADIONAV RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
807 CAN	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
807 CAN	Odometer Warning Lights unit	BTO	●	●	●	●	●	20109, 20527,
807 CAN	Right headlamp beam corrector	PROJETEURD	●	●	●	●	●	20527,
807 CAN	Left headlamp beam level corrector	PROJETEURG	●	●	●	●	●	20527,
807 CAN	Telematic receiver control	CRT	●	○	○	●	○	
807 CAN	Sliding side door modules (left-hand or only)	PLCM	●	●	●	●	●	20527,
807 CAN	Front sunroof	TO INALFA	●	●	●	●	●	20527,
807 CAN	Rear sunroof	TO INALFA	●	●	●	●	●	20527,
807 CAN	Middle sunroof	TO INALFA	●	●	●	●	●	20527,
807VAN	Built-in systems interface (BSI)		●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
807VAN		Alarm	●	●	●	●	●	
807VAN	Driver information/Communication	AMF	●	●	●	●	●	
807VAN	Driver information/Communication	RT3	●	●	●	●	●	
807VAN	Driver information/Communication	Radio/telematic receiver control	●	●	●	●	●	
807VAN	Driver information/Communication	Parking assistance	●	●	●	●	●	
807VAN	Driver information/Communication	Warning lights and odometer ECU	●	●	●	●	●	
807VAN	Driver information/Communication	Instrument panel	●	●	●	●	●	
807VAN	Driver information/Communication	CD player	●	●	●	●	●	
807VAN	Driver information/Communication	Switch unit under steering wheel (COM 2000)	●	●	●	●	○	
807VAN	Visibility/Lighting	Switch unit under steering wheel (COM 2000)	●	●	●	●	○	
807VAN	Visibility/Lighting	Right headlamp beam corrector	●	●	●	●	●	
807VAN	Visibility/Lighting	Left headlamp beam corrector	●	●	●	●	●	
807VAN		Air bags	●	●	●	●	○	
807VAN	Control the openings	Driver's door module	●	●	●	●	○	
807VAN	Control the openings	Passenger door module	●	●	●	●	○	
807VAN	Control the openings	Sliding door module	●	●	●	●		
807VAN	Control the openings	Front sunroof	●	●	●	●	●	
807VAN	Control the openings	Rear sunroof	●	●	●	●	●	
807VAN	Control the openings	Middle sunroof	●	●	●	●	●	
807VAN	Air conditioning	Climate control	●	●	●	●	●	
807VAN		Storing of the driving position	●	●	●	●		
807VAN		Additional heating	●	●	●	●	●	
807VAN	Engines/automatic gearbox	RFN MM48P (Mechanical throttle housing)	●	●	●	●	●	
807VAN	Engines/automatic gearbox	R6F MM4.8P	●	●	●	●	●	
807VAN	Engines/automatic gearbox	3FZ MM4MP2	●	●	●	●	●	
807VAN	Engines/automatic gearbox	RFN MM4MP2 (Motorised butterfly)	●	●	●	●	●	
807VAN	Engines/automatic gearbox	3FZ MM6LP	●	●	●	●	●	
807VAN	Engines/automatic gearbox	RFN MM6LP	●	●	●	●	●	
807VAN	Engines/automatic gearbox	XFW BOSCH ME746	●		●	●	●	
807VAN	Engines/automatic gearbox	RHW BOSCH EDC15C2	●	●	●	●	●	
807VAN	Engines/automatic gearbox	RHM BOSCH EDC15C2	●	●	●	●	●	
807VAN	Engines/automatic gearbox	RHT BOSCH EDC15C2	●	●	●	●	●	
807VAN	Engines/automatic gearbox	4HW BOSCH EDC15C2	●	●	●	●	●	
807VAN	Engines/automatic gearbox	Diesel fuel additive control unit:ADDITIF FAP	●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
807VAN	Engines/automatic gearbox	Diesel fuel additive control unit:ADDG02	●	●	●	●	●	
807VAN	Engines/automatic gearbox	4HP20 automatic gearbox	●	●	●	●		
807VAN	Engines/automatic gearbox	AL4 automatic gearbox	●		●	●	●	
807VAN	Active safety	ABR BOSCH 5.7	●	●	●	●	●	
807VAN	Active safety	ESP BOSCH 5.7	●	●	●	●		
BIPPER	Parking aid	AAS	●	●	●	●	○	20192, 20192, 20527,
BIPPER	ABS/traction control	ABS81	●	●	●	●	●	20527,
BIPPER	ABS/traction control	ESP81	●	●	●	●	●	20055, 20408, 20527,
BIPPER	ABS/traction control	ESP90 F	●	●	●	●	●	20053, 20175, 20055, 20633, 20527,
BIPPER	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	●	●	20028, 20734, 20527,
BIPPER	Built-in Systems Interface (BSI)	BCM	●	●	●	●	●	20319, 20476, 20830, 20319, 20476, 20830, 20435, 20434, 20734, 20489, 20609, 20527,
BIPPER	gearbox	BVMP_MTA	●	●	●	●	●	20553, 20040, 20199, 20350, 20491, 20398, 20725, 20566, 20575, 20581, 20644, 20667, 20664, 20691, 20613, 20527,
BIPPER	gearbox	BVMP	●	●	●	●	●	20102, 20106, 20317, 20314, 20099, 20313, 20357, 20752, 20099, 20313, 20357, 20752, 20102, 20106, 20317, 20314, 20102, 20106, 20317, 20314, 20102, 20106, 20317, 20314, 20099, 20313, 20357, 20752, 20102, 20106, 20317, 20314, 20099, 20313, 20357, 20752, 20102, 20106, 20317, 20314, 20102, 20106, 20317, 20314, 20099, 20313, 20357, 20752, 20102, 20106, 20317, 20314, 20760, 20761, 20527,
BIPPER	Instrument panel	COMBINE	●	●	●	●	●	20413, 20414, 20862, 20413, 20026, 20414, 20834, 20527,
BIPPER	Injection/ignition	EDC16C34	●	●	●	●	●	20553, 20226, 20574, 20660, 20527,
BIPPER	Injection/ignition	V34P	●	●	●	●	●	20526, 20341, 20058, 20381, 20424, 20437, 20824, 20261, 20527,
BIPPER	Injection/ignition	V342	●	●	●	●	●	20526, 20341, 20381, 20424, 20437, 20824, 20059, 20261, 20527,
BIPPER	Injection/ignition	HDI_8DF2	○	●	●	●	●	20551, 20852, 20293, 20450, 20461, 20521, 20574, 20638, 20629, 20722, 20726, 20591, 20652, 20527,
BIPPER	Injection/ignition	HDI_8DF3	○	●	●	●	●	20551, 20852, 20293, 20450, 20461, 20469, 20521, 20574, 20638, 20592, 20593, 20617, 20629, 20662, 20733, 20722, 20726, 20652, 20527,
BIPPER	Telematics unit	CTM	●	●	●	●	●	20527,
BOXER 3	Parking aid	AAS	●	●	●	●	○	20810, 20527,
BOXER 3	ABS/traction control	ABS80	●	●	●	●	●	20041, 20527,
BOXER 3	ABS/traction control	ESP80	●	●	●	●	●	20039, 20527,
BOXER 3	ABS/traction control	ASR80	●	●	●	●	●	20043, 20527,
BOXER 3	Driver and passenger airbags	SAC_TRW	●	●	●	●	●	20028, 20527,
BOXER 3	Driver and passenger airbags	SDM	●	●	●	●	●	20028, 20527,
BOXER 3	Built-in Systems Interface (BSI) (TBTbody computer)	NBC	●	●	●	●	●	20318, 20839, 20227, 20528, 20232, 20229, 20230, 20231, 20515, 20500, 20500, 20609, 20195, 20292, 20527,
BOXER 3	Additional heating	CHAUFF ADD	●	●	●	●	●	20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
BOXER 3	heating/ventilation	CLIM_REGULEE	●	●	●	●	●	20397, 20026, 20527,
BOXER 3	Instrument panel	COMBINE	●	●	●	●	●	20026, 20755, 20527,
BOXER 3	Power steering	SSCU	●	●	●	●	○	
BOXER 3	Tachograph	CHRONOTACHYGRAPHE	●	●	●	●	●	20126, 20132, 20126, 20132, 20527,
BOXER 3	Injection/ignition	PUMA	●	●	●	●	●	20534, 20533, 20555, 20015, 20069, 20158, 20329, 20569, 20570, 20447, 20512, 20527,
BOXER 3	Injection/ignition	EDC16C39	●	●	●	●	●	20853, 20533, 20555, 20014, 20447, 20461, 20469, 20521, 20612, 20629, 20662, 20375, 20376, 20652, 20527,
BOXER 3	Injection/ignition	EDC17CP52	●	●	●	●	●	20853, 20531, 20533, 20555, 20297, 20375, 20376, 20447, 20461, 20521, 20629, 20700, 20712, 20591, 20853, 20527,
BOXER 3	Electronically managed suspension	SUSPENSION	●	●	●	●	●	20226, 20046, 20180, 20289, 20527,
BOXER 3	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20026, 20527,
BOXER 3 Euro 5	Built-in Systems Interface	BCM	●	●	●	●	●	20022, 20194, 20196, 20197, 20476, 20022, 20194, 20196, 20197, 20476, 20435, 20434, 20489, 20489, 20609, 20195, 20527,
BOXER 3 Euro 5	Trailer relay unit	TTM	▲	▲	▲	▲	▲	20527,
BOXER 3 Euro 5	ABS/traction control	ABS90_F	▲	▲	▲	▲	▲	20633, 20527,
BOXER 3 Euro 5	ABS/traction control	ESP90_F	▲	▲	▲	▲	▲	20053, 20175, 20055, 20633, 20527,
BOXER 3 Euro 5	Engine ECU	EDC17CP52_UDS	▲	▲	▲	▲	▲	20553, 20852, 20293, 20447, 20461, 20521, 20638, 20617, 20629, 20662, 20713, 20652, 20694, 20527,
BOXER 3 Euro 5	Engine ECU	SID208	▲	▲	▲	▲	▲	20553, 20852, 20458, 20294, 20295, 20447, 20521, 20564, 20638, 20592, 20628, 20629, 20662, 20671, 20684, 20688, 20711, 20652, 20694, 20527,
BOXER 3 Euro 5	Telematics unit	CTM	▲	▲	▲	▲	▲	20527,
BOXER 3 Euro 5	TBTRadionavigation LTM	LTM	●	●	●	●	●	20736, 20781, 20527,
BOXER 3 Euro 5	Instrument panel	IPC	▲	▲	▲	▲	▲	20414, 20754, 20862, 20413, 20026, 20414, 20834, 20527,
BOXER 3 Euro 5	Air conditioning	ACM	▲	▲	▲	▲	▲	20033,
BOXER 3 Euro 5	Air bag	SDM	▲	▲	▲	▲	▲	20028, 20527,
BOXER 3 Euro 5	Power steering	SSCU	▲	▲	▲	▲	○	20558,
BOXER 3 Euro 5	Additional heating	CHAUFF_ADD	▲	▲	▲	▲	▲	20527,
BOXER 3 Euro 5	Tachograph	CHRONOTACHYGRAPHE	▲	▲	▲	▲	▲	20126, 20132, 20126, 20132, 20527,
BOXER 3 Euro 5	Parking aid	AAS	▲	▲	▲	▲	○	20192, 20192, 20527,
BOXER 3 Euro 5	Electronically managed suspension	SUSPENSION	●	●	●	●	●	20226, 20339, 20046, 20180, 20289, 20527,
BOXER 3 Euro 5	Under inflation detection	TPMS	▲	▲	▲	▲	○	20527,
BOXER 3 Euro 5	Radio	RRM	▲	▲	▲	▲	▲	20527,
BOXER 3 Euro 5	Lane departure warning system	HALF	▲	▲	▲	▲	○	20527,
BOXER 3 minibus	Parking aid	AAS	●	●	●	●	○	20810, 20837, 20810, 20837, 20527,
BOXER 3 minibus	ABS/traction control	ABS80	●	●	●	●	●	20765, 20527,
BOXER 3 minibus	ABS/traction control	ESP80	●	●	●	●	●	20039, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
BOXER 3 minibus	ABS/traction control	ASR80	●	●	●	●	●	20043, 20527,
BOXER 3 minibus	Driver and passenger airbags	SAC_TRW	●	●	●	●	●	20028, 20527,
BOXER 3 minibus	Driver and passenger airbags	SDM	●	●	●	●	●	20028, 20527,
BOXER 3 minibus	Built-in Systems Interface (BSI)	NBC	●	●	●	●	●	20318, 20839, 20227, 20281, 20232, 20229, 20230, 20231, 20515, 20500, 20500, 20609, 20195, 20292, 20527,
BOXER 3 minibus	Additional heating	CHAUFF_ADD	●	●	●	●	●	20527,
BOXER 3 minibus	heating/ventilation	CLIM_REGULEE	●	●	●	●	●	20397, 20026, 20527,
BOXER 3 minibus	Instrument panel	COMBINE	●	●	●	●	●	20755, 20527,
BOXER 3 minibus	Power steering	SSCU	●	●	●	●	○	
BOXER 3 minibus	Tachograph	CHRONOTACHYGRAPHE	●	●	●	●	●	20126, 20132, 20126, 20132, 20527,
BOXER 3 minibus	Injection/ignition	PUMA	●	●	●	●	●	20534, 20533, 20555, 20015, 20069, 20158, 20329, 20569, 20570, 20447, 20512, 20527,
BOXER 3 minibus	Injection/ignition	EDC16C39	●	●	●	●	●	20853, 20533, 20555, 20014, 20447, 20461, 20469, 20521, 20612, 20629, 20662, 20375, 20376, 20652, 20527,
BOXER 3 minibus	Injection/ignition	EDC17CP52	●	●	●	●	●	20853, 20531, 20533, 20555, 20297, 20375, 20376, 20447, 20461, 20521, 20629, 20700, 20712, 20591, 20853, 20527,
BOXER 3 minibus	Electronically managed suspension	SUSPENSION	●	●	●	●	●	20226, 20046, 20180, 20289, 20527,
BOXER 3 minibus	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20026, 20527,
BOXER_U5	Air conditioning	WEBASTO additional teating	●			●		
BOXER_U5	Engines/automatic gearbox	MM4.8P 2L Unleaded	●	●	●	●	●	
BOXER_U5	Engines/automatic gearbox	MM48P 2L essence plombée	●	●	●	●	●	
BOXER_U5	Engines/automatic gearbox	MM48P 2L dual fuel(LPG)	●	●	●	●	●	
BOXER_U5	Engines/automatic gearbox	2.0L Bosch EDC15C7	●	●	●	●		
BOXER_U5	Engines/automatic gearbox	2.2L Bosch EDC15C7	●	●	●	●		
BOXER_U5	Engines/automatic gearbox	2.8L Bosch EDC15C7	●	●	●	●		
BOXER_U5	Engines/automatic gearbox	4HP20 automatic gearbox	●			●	○	
EXPERT	Engine/automatic gearbox	AL4 autoadaptive automatic gearbox	●		●	●	●	7011
EXPERT	Air bags	Air bag and seat belt	●		●			
EXPERT	Engine/automatic gearbox	R6F MM4.8P	●	●	●	●	●	
EXPERT	Engine/automatic gearbox	RFN MM4.8P	●	●	●	●	●	
EXPERT	Engine/automatic gearbox	RHW BOSCH EDC15C2	●	●	●	●	●	
EXPERT	Engine/automatic gearbox	RHX BOSCH EDC15C2	●	●	●	●	●	
EXPERT	Engine/automatic gearbox	RHZ BOSCH EDC15C2	●	●	●	●	●	
EXPERT	Engine/automatic gearbox	WJY LUCAS DCN2	●	●	●	●	●	
EXPERT	Active safety	BOSCH ABS5.3	●	●	●	●	●	
EXPERT		Additional heating	●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
EXPERT 2		Built-in systems interface (BSI)	●	●	●	●	●	3005
EXPERT 2	Engine/Gearbox	RHR SIEMENS SID 803	●	●	●	●	●	40, 020, 401, 404, 015
EXPERT 2	Engine/Gearbox	RHL SIEMENS SID 803	●	●	●	●	●	40, 020, 401, 404, 015
EXPERT 2	Engine/Gearbox	RHK SIEMENS SID 803	●	●	●	●	●	40, 020, 401, 404, 015
EXPERT 2	Engine/Gearbox	RHG SIEMENS SID 803	●	●	●	●	●	40, 020, 401, 404, 015
EXPERT 2	Engine/Gearbox	DCM3.5	●	●	●	●	●	40, 100, 401, 404, 015, 000, 000, 000, 000, 000
EXPERT 2	Active and passive safety	ABS8_BOSCH	●	●	●	●	●	5003
EXPERT 2	Active and passive safety	ESP_BOSCH8	●	●	●	●	●	5003
EXPERT 2	Engine/Gearbox	RFH MM6KP	●	●	●	●	●	7011
EXPERT 2	Driving assistance/Comfort	Parking assistance	●	●	●	●	●	
EXPERT 2	Driving assistance/Comfort	Additional heating	●	●	●	●	●	
EXPERT 2	Driving assistance/Comfort	Air conditioning / Front air conditioning	●	●	●	●	●	
EXPERT 2	Driving assistance/Comfort	Rear air conditioning	●	●	●	●	●	
EXPERT 2	Driving assistance/Comfort	Power steering	●	●	●	●	●	
EXPERT 2	Driving assistance/Comfort	Pneumatic suspension	●	●	●	●		
EXPERT 2	Inform the driver/Audio/Communication	Multi-function display	●	●	●	●	●	
EXPERT 2	Inform the driver/Audio/Communication	Radio	●	●	●	●	●	
EXPERT 2	Inform the driver/Audio/Communication	CD player	●	●	●	○	●	
EXPERT 2	Inform the driver/Audio/Communication	Instrument panel	●	●	●	●		
EXPERT 2	Inform the driver/Audio/Communication	Hands Free Kit	●	●	●	●	●	
EXPERT 2	Inform the driver/Audio/Communication	Steering wheel switching module.	●	●	●	●	●	
EXPERT 2	Inform the driver/Audio/Communication	Data communication ECU	●	●	●	●	●	
EXPERT 2	Inform the driver/Audio/Communication	RNEG radio navigation	●	●	●	●	●	
EXPERT 2	Engine/Gearbox	9HU BOSCH EDC16C3-EDC16C34	●	●	●	●	●	
EXPERT 2	Engine/Gearbox	9HT BOSCH EDC16C3	●	●	●	●	●	
EXPERT 2	Vehicle protection/Management of accesses	Alarm	●	●	●	●	●	
EXPERT 2	Active and passive safety	Airbag ECU	●	●	●	●	○	
EXPERT 2	Visibility/Lighting/Signalling	Rain/brightness sensor	●	●	●	○	○	
EXPERT 2	Visibility/Lighting/Signalling	Steering wheel switching module.	●	●	●	●	●	
EXPERT 2	Active and passive safety	ABS8.1	●	●	●	●	●	



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
EXPERT 2	Active and passive safety	ESP8.1	●	●	●	●	●	
EXPERT 3	Parking aid	AAS	▲	▲	▲	▲	○	20457, 20527,
EXPERT 3	ABS/traction control	ABS81	●	●	●	●	●	20039, 20527,
EXPERT 3	ABS/traction control	ESP81	●	●	●	●	●	20408, 20039, 20527,
EXPERT 3	ABS/traction control	ABS8_BOSCH	●	●	●	●	●	20039, 20527,
EXPERT 3	ABS/traction control	ESP8_BOSCH	●	●	●	●	○	20408, 20039, 20527,
EXPERT 3	Multifunction display	EMF_A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
EXPERT 3	Multifunction display	EMF_C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
EXPERT 3	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	●	○	20249, 20396, 20481, 20744, 20192, 20249, 20396, 20481, 20744, 20249, 20396, 20481, 20744, 20406, 20822, 20527,
EXPERT 3	Anti-theft alarm	ALARME	●	●	●	●	●	20125, 20115, 20125, 20115, 20115, 20527,
EXPERT 3	Radio or radiotelephone (radio part)	AUTORADIO	●	●	●	●	●	20527, 20186, 20331,
EXPERT 3	Radio or radiotelephone (radio part)	RD45	▲	▲	▲	▲	▲	20844, 20030, 20519, 20527, 20844, 20030, 20519,
EXPERT 3	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20844, 20155, 20516, 20763, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
EXPERT 3	Engine relay unit	BSM	●	●	●	●	●	20527,
EXPERT 3	Trailer relay unit	BSR	●	●	●	●	●	
EXPERT 3	CD player	CHANGEUR_CD	●	●	●	○	●	20110, 20527, 20178, 20390, 20527,
EXPERT 3	Additional heating	CHAUFF_ADD	●	●	●	●	●	20048, 20527, 20107,
EXPERT 3	heating/ventilation	CLIM_REGULEE	●	●	●	●	●	20016, 20019, 20033, 20202, 20474, 20527,
EXPERT 3	Instrument panel	COMBINE	●	●	●	●	●	20130, 20527,
EXPERT 3	Rain and brightness sensor	PLUIE_LUMINOSITE	●	●	●	○	○	
EXPERT 3	Power steering electric pump unit	GEP	●	●	●	●	○	
EXPERT 3	Switch module under the steering wheel (Top of column)	HDC	▲	▲	▲	▲	▲	20002, 20270, 20527,
EXPERT 3	Injection/ignition	DCM35_BR2	●	●	●	●	●	20852, 20088, 20089, 20281, 20295, 20509, 20343, 20020, 20063, 20062, 20065, 20064, 20070, 20226, 20286, 20636, 20588, 20598, 20621, 20627, 20629, 20661, 20672, 20710, 20573, 20579, 20692, 20694,
EXPERT 3	Injection/ignition	EDC16C3	●	●	●	●	●	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20468, 20296, 20719, 20226, 20241, 20246, 20527,
EXPERT 3	Injection/ignition	HDI_SID803A	●	●	●	●	●	20117, 20215, 20221, 20220, 20547, 20546, 20855, 20305, 20245, 20499, 20286, 20469, 20577, 20638, 20626, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20245, 20305, 20281, 20305, 20281, 20499, 20305, 20281, 20305, 20281, 20527,
EXPERT 3	Injection/ignition	MM6KP	●	●	●	●	●	20005, 20159, 20437, 20689, 20059, 20618, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
EXPERT 3	Injection/ignition	DCM35	●	●	●	●	●	20088, 20089, 20343, 20509, 20020, 20067, 20062, 20226, 20240, 20588, 20629, 20672, 20710, 20285, 20573, 20579, 20692, 20694, 20527,
EXPERT 3	Injection/ignition	EDC17C10_BR2	●	●	●	●	●	20456, 20456, 20088, 20089, 20456, 20456, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
EXPERT 3	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
EXPERT 3	Hands-free kit (Telephone)	BOITIER_NOMADE	●	●	●	●	●	20135, 20135, 20527,
EXPERT 3	Pneumatic suspension	SUSPENSION	●	●	●	●	●	20182, 20479, 20226, 20046, 20179, 20527,
EXPERT 3	Rear air conditioning table	TAB_CLIM_AR	●	●	●	●	●	20033, 20432, 20527,
EXPERT 3	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20128, 20847, 20095, 20123, 20127, 20137, 20006, 20114, 20121, 20133, 20128, 20847, 20095, 20123, 20128, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20527,
EXPERT 3	Telematics	RADIONAV_RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
EXPERT 3	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
EXPERT 3	Bodywork conversion unit	BTC	●	●	●	●	●	
EXPERT 3	Deflation detection (DSG)	DSG	●	●	●	●	○	20168, 20459, 20737, 20530, 20267, 20536, 20303, 20304, 20538, 20543, 20368, 20857, 20826, 20527,
EXPERT 3	Deflation detection (DSG)	DSG_UDS	●	●	●	●	○	20536, 20857, 20527,
EXPERT 3	gearbox	BVA_AM6_AT6_EUR05	●	●	●	●	●	20502, 20634, 20600, 20605, 20527,
EXPERT 3	High frequency receiver	RHF	▲	▲	▲	▲	○	
EXPERT 3	Anti-slip mode selector	ASR	●	●	●	●	○	
EXPERT 3	Battery charge status unit	BECB_GEN2	●	●	●	●	○	20527,
HOGGAR	ABS/traction control	ABSMK70_1	▲	▲	▲	▲	▲	20039, 20527,
HOGGAR	ABS/traction control	ESPMK60_0	▲	▲	▲	▲	▲	20039, 20527,
HOGGAR	Radio or radiotelephone (radio part)	AUTORADIO	▲	▲	▲	▲	▲	20844, 20519, 20527,
HOGGAR	Radio or radiotelephone (radio part)	RDE	▲	▲	▲	▲	▲	20139, 20334, 20335, 20336, 20337, 20030, 20519, 20738, 20735, 20527,
HOGGAR	gearbox	BVA_AL4	▲	▲	▲	▲	▲	20333, 20004, 20448, 20527,
HOGGAR	CD player	CHANGEUR_CD	▲	▲	▲	▲	○	20527,
HOGGAR	Injection/ignition	EDC15C2	▲	▲	▲	▲	▲	20373, 20535, 20487, 20527,
HOGGAR	Injection/ignition	ME745	▲	▲	▲	▲	▲	20399, 20721, 20149, 20527,
HOGGAR	Injection/ignition	ME749	▲	▲	▲	▲	▲	20856, 20399, 20631, 20721, 20527,
HOGGAR	Injection/ignition	J34P	▲	▲	▲	▲	▲	20370, 20381, 20424, 20437, 20059, 20147, 20261, 20527,
HOGGAR	Injection/ignition	DCN2	▲	▲	▲	▲	▲	20527,
HOGGAR	Injection/ignition	EDC16C3DV4	▲	▲	▲	▲	▲	20377, 20378, 20112, 20464, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
HOGGAR	Injection/ignition	EDC17C10_BR2	▲	▲	▲	▲	▲	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
HOGGAR	Injection/ignition	V343	▲	▲	▲	○	▲	20005, 20424, 20261, 20436, 20527,
HOGGAR	Built-in Systems Interface (BSI)	BSI	▲	▲	▲	▲	▲	20022, 20327, 20407, 20252, 20307, 20401, 20430, 20453, 20849, 20191, 20228, 20411, 20846, 20153, 20167, 20233, 20393, 20421, 20422, 20486, 20300, 20492, 20759, 20489, 20610, 20022, 20327, 20407, 20252, 20307, 20401, 20430, 20453, 20849, 20527,
HOGGAR	Multifunction display	RT3	▲	▲	▲	▲	▲	20160, 20250, 20454, 20121, 20416, 20417, 20445, 20160, 20804, 20161, 20804, 20527,
HOGGAR	Multifunction display	AMF	▲	▲	▲	▲	▲	20111, 20113, 20152, 20527, 20720, 20111, 20113, 20152,
HOGGAR	Driver and passenger airbags	SAC_AUTOLIV	▲	▲	▲	○	○	20527,
HOGGAR	Anti-theft alarm	ALARME	▲	▲	▲	▲	▲	20527,
HOGGAR	heating/ventilation	CLIM_REGULEE	▲	▲	▲	▲	▲	20527,
HOGGAR	Instrument panel	COMBINE	▲	▲	▲	▲	▲	20527,
HOGGAR	Rain and brightness sensor	PLUIE_LUMINOSITE	▲	▲	▲	○	○	20527,
HOGGAR	Switch module at the steering wheel	COM2000	▲	▲	▲	▲	○	20527,
HOGGAR	Services module	BLVV	▲	▲	▲	▲	▲	20176, 20527,
HOGGAR	Power steering electric pump unit	GEP	▲	▲	▲	▲	○	20527,
HOGGAR	Active and passive safety	ESP MK60	●	●	●	●		5003
iON	Built-in Systems Interface	ETACS	▲	▲	▲	▲	▲	20471, 20780, 20402, 20515, 20500, 20674, 20675, 20500, 20610, 20527,
iON	Electric machine management ECU	MCU	●	●	●	●	●	20226, 20527,
iON	Traction battery ECU	BMU	●	●	●	●	●	20777, 20778, 20779, 20773, 20775, 20776, 20527, 20812, 20813,
iON	Onboard charger of the traction battery	OBC	○	●	●	○	○	
iON	Electric vehicle management ECU	EV_ECU	●	●	●	○	●	20173, 20527,
iON	Traction battery cells management ECU	CMU_01	●	○	○	●	○	
iON	Traction battery cells management ECU	CMU_02	●	○	○	●	○	
iON	Traction battery cells management ECU	CMU_03	●	○	○	●	○	
iON	Traction battery cells management ECU	CMU_04	●	○	○	●	○	
iON	Traction battery cells management ECU	CMU_05	●	○	○	●	○	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
iON	Traction battery cells management ECU	CMU_06	●	○	○	●	○	
iON	Traction battery cells management ECU	CMU_07	●	○	○	●	○	
iON	Traction battery cells management ECU	CMU_08	●	○	○	●	○	
iON	Traction battery cells management ECU	CMU_09	●	○	○	●	○	
iON	Traction battery cells management ECU	CMU_10	●	○	○	●	○	
iON	Traction battery cells management ECU	CMU_11	●	○	○	●	○	
iON	Traction battery cells management ECU	CMU_12	●	○	○	●	○	
iON	ESP	ASC	●	●	●	●	●	20527,
iON	Power steering	EPS	●	●	●	●	○	20527,
iON	Steering wheel angle sensor	SAS	●	●	●	●	○	20055, 20529, 20527,
iON	Airbag	SRS	●	●	●	●	●	20527,
iON	Airbag	ORC	●	●	●	●	●	20527,
iON	Gateway wiring housing	BSP	●	●	●	●	○	20847, 20087, 20466, 20847, 20527,
iON	Independent telematic unit (BTA)	BTA	●	●	●	●	●	20847, 20142, 20527,
iON	Instrument panel	METER	●	●	●	●	●	20086, 20031, 20443, 20412, 20527,
iON	Radio	RDE	●	●	●	●	●	20139, 20334, 20335, 20336, 20337, 20030, 20519, 20527,
iON	Air conditioning	HVAC	●	●	●	●	●	20527,
iON	Air conditioning compressor and passenger compartment heating control module	COMP_HTR	●	●	●	○	●	20527,
iON	Onboard charger of the traction battery	OBC_DCDC	●	●	●	●	○	20527,
iON	Direct voltage (DC/DC) transformer	DCDC	●	●	●	●	○	20527,
PARTNER	engines/automatic gearbox	EDC17C10_BR2	●	●	●	●		4, 014, 040, 150, 401, 700, 000
PARTNER	engines/automatic gearbox	HDI_SID807	●	●	●	●		40, 140, 401, 504, 019
PARTNER	engines/automatic gearbox	9HW BOSCH EDC16C3	●	●	●	●		401, 404, 020
PARTNER	engines/automatic gearbox	9HX BOSCH EDC16C3	●	●	●	●		401, 404, 020
PARTNER	engines/automatic gearbox	9HT BOSCH EDC16C3	●	●	●	●		401, 404, 020
PARTNER	Active safety	ESP 8.1	●	●	●	●	●	500, 305, 006
PARTNER	Active safety	ESP BOSCH 5.7	●	●	●	●	●	500, 505, 012
PARTNER	Active safety	ESP BOSCH 8	●	●	●	●	●	500, 505, 012
PARTNER	Engines/automatic gearbox	HFX BOSCH M7.4.4	●	●	●	●		7011
PARTNER	Engines/automatic gearbox	KFW SAGEM S2000	●		●	●	●	7011

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
PARTNER		Built-in systems interface (BSI)		●	●			
PARTNER	Driver information/Communication	Radio PHILIPS		●	●		●	
PARTNER	Driver information/Communication	Radio CLARION		●	●		●	
PARTNER	Driver information/Communication	CD player	●	●	●	●		
PARTNER	Driver information/Communication	Instrument panel	●	●	●	●		
PARTNER	Air bags	Air bag and seat belt		●	●	○	○	
PARTNER	Engines/automatic gearbox	HDY BOSCH MA3.1	●	●	●	●	●	
PARTNER		Additional heating	●	●	●	●	●	
PARTNER	driving assistance / Comfort	Parking assistance	●	●	●	●	●	
PARTNER	driving assistance / Comfort	Additional heating	●	●	●	●	●	
PARTNER		Built-in systems interface (BSI)	●	●	●	●		
PARTNER		Alarm	●	●	●	●	●	
PARTNER	Driver information/Communication	AMF	●	●	●	●	●	
PARTNER	Driver information/Communication	RT3	●	●	●	●	●	
PARTNER	Driver information/Communication	radio	●	●	●	●	●	
PARTNER	Driver information/Communication	CD player	●	●	●	●		
PARTNER	Driver information/Communication	Instrument panel	●	●	●	●	●	
PARTNER	Driver information/Communication	steering wheel switching module.	●	●	●	●	○	
PARTNER		air bags	●	●	●	○	○	
PARTNER	Visibility/Lighting/Signalling	Steering wheel switching module.	●	●	●	●	○	
PARTNER	Visibility/Lighting/Signalling	Rain/brightness sensor	●	●	●	○	○	
PARTNER	Engines/automatic gearbox	K6D SAGEM S2000	●		●	●	●	
PARTNER	Engines/automatic gearbox	KFX BOSCH MP7.3		●	●		●	
PARTNER	Engines/automatic gearbox	N6A BOSCH ME7.4.4	●	●	●	●	●	
PARTNER	Engines/automatic gearbox	NFU BOSCH ME7.4.4	●	●	●	●	●	
PARTNER	Engines/automatic gearbox	N6A BOSCH ME7.4.5	●	●	●	●	●	
PARTNER	Engines/automatic gearbox	N6B BOSCH ME7.4.5	●	●	●	●	●	
PARTNER	Engines/automatic gearbox	NFU BOSCH ME7.4.5	●	●	●	●	●	
PARTNER	Engines/automatic gearbox	RHY BOSCH EDC15C2	●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
PARTNER	Engines/automatic gearbox	WJY LUCAS DCN2	●	●	●	●	●	
PARTNER	Engines/automatic gearbox	WJZ LUCAS DCN2	●	●	●	●	●	
PARTNER	engines/automatic gearbox	HFX MM4. 8P	●	●	●	●	●	
PARTNER	engines/automatic gearbox	KFW SAGEM S2000PM1	●	●	●	●		
PARTNER	engines/automatic gearbox	KFW SAGEM S2000PM2	●	●	●	●		
PARTNER	engines/automatic gearbox	N6A BOSCH ME7. 4. 4	●	●	●	●	●	
PARTNER	Active safety	BOSCH ABS5. 3	●	●	●	●	●	
PARTNER	Active safety	ABS BOSCH 8	●	●	●	●	●	
PARTNER	engines/automatic gearbox	NFU BOSCH ME7. 4. 4	●	●	●	●	●	
PARTNER	engines/automatic gearbox	N6A BOSCH ME7. 4. 5	●	●	●	●	●	
PARTNER	engines/automatic gearbox	N6B BOSCH ME7. 4. 5	●	●	●	●	●	
PARTNER	engines/automatic gearbox	NFU BOSCH ME7. 4. 5	●	●	●	●	●	
PARTNER	engines/automatic gearbox	KFW J34P	●	●	●	●	●	
PARTNER	Engines/automatic gearbox	RHY SIEMENS SID801	●	●	●	●	●	
PARTNER	engines/automatic gearbox	WJY LUCAS DCN2	●	●	●	●	●	
PARTNER	engines/automatic gearbox	RHY SIEMENS SID801	●	●	●	●	●	
PARTNER	engines/automatic gearbox	SAGEM SAX500	●	●	●	●		
PARTNER	Active safety	ABS 8. 1	●	●	●	●	●	
PARTNER (B9)	Power steering electric pump unit	GEP	▲	▲	▲	▲	○	20527,
PARTNER (B9)	Rain sensor	PLUIE_LUMINOSITE	●	●	●	○	○	20527,
PARTNER (B9)	Air conditioning ECU	CLIM_REGULEE	●	●	●	●	●	20016, 20019, 20033, 20202, 20474, 20527,
PARTNER (B9)	Air conditioning ECU	CLIM	●	●	●	●	●	20033, 20527,
PARTNER (B9)	Radio	AUTORADIO	●	●	●	●	●	20527, 20186, 20331,
PARTNER (B9)	Radio	RD45	●	●	●	●	●	20844, 20030, 20519, 20527, 20844, 20030, 20519,
PARTNER (B9)	CD player	CHANGEUR_CD	●	●	●	○	●	20186, 20331, 20110, 20527, 20178, 20390, 20527,
PARTNER (B9)	Alarm	ALARME	●	●	●	●	●	20125, 20115, 20125, 20115, 20115, 20527,
PARTNER (B9)	Switch module under the steering wheel (Top of column)	HDC	●	●	●	●	●	20527,
PARTNER (B9)	gearbox	CFC300P	●	●	●	●	●	20527,
PARTNER (B9)	Engine ECU	ME745	●	●	●	●	●	20399, 20631, 20721, 20527,
PARTNER (B9)	Engine ECU	EDC16C3	●	●	●	●	●	20212, 20211, 20210, 20377, 20378, 20377, 20378, 20184, 20468, 20296, 20719, 20226, 20241, 20344, 20470, 20483, 20246, 20635, 20527,
PARTNER (B9)	Engine ECU	MEV17_4_EUR05	●	●	●	●	●	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
PARTNER (B9)	Engine ECU	EDC17C10_BR2	●	●	●	●	●	20456, 20456, 20088, 20089, 20456, 20456, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
PARTNER (B9)	Engine ECU	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
PARTNER (B9)	Engine ECU	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
PARTNER (B9)	Engine ECU	HDI_SID807	●	●	●	●	●	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
PARTNER (B9)	Multifunction display	EMF_A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
PARTNER (B9)	Multifunction display	EMF_C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
PARTNER (B9)	Parking aid	AAS	●	●	●	●	○	20457, 20527,
PARTNER (B9)	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20844, 20155, 20516, 20763, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527, 20558,
PARTNER (B9)	Engine relay unit	BSM	●	●	●	●	●	20527,
PARTNER (B9)	Trailer relay unit	BSR	●	●	●	●	●	
PARTNER (B9)	Bodywork conversion unit	BTC	●	●	●	●	●	
PARTNER (B9)	Deflation detection (DSG)	DSG	●	●	●	●	○	20168, 20459, 20737, 20530, 20267, 20536, 20303, 20304, 20538, 20543, 20368, 20857, 20826, 20527,
PARTNER (B9)	Deflation detection (DSG)	DSG_UDS	●	●	●	●	○	20536, 20857, 20527,
PARTNER (B9)	ABS or ESP ECU	ABS81	●	●	●	●	○	20039, 20527,
PARTNER (B9)	ABS or ESP ECU	ESP81	●	●	●	●	●	20408, 20039, 20527,
PARTNER (B9)	Air bag	SAC_AUTOLIV	●	●	●	●	○	20249, 20481, 20744, 20762, 20192, 20249, 20481, 20744, 20762, 20249, 20481, 20744, 20762, 20406, 20822, 20527,
PARTNER (B9)	Instrument panel	COMBINE	●	●	●	●	●	20130, 20527,
PARTNER (B9)	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
PARTNER (B9)	Hands-free kit (Telephone)	BOITIER_NOMADE	●	●	●	●	●	20135, 20135, 20527,
PARTNER (B9)	Service module	BTA	●	●	●	●	●	20847, 20142, 20527,
PARTNER (B9)	Multiplexed additive pump	PADDGO	●	●	●	●	●	20011, 20586, 20590, 20527,
PARTNER (B9)	Multiplexed additive pump	PADDGO_E5	●	●	●	●	●	20282, 20235, 20323, 20584, 20235, 20323, 20686, 20235, 20323, 20687, 20235, 20323, 20527,
PARTNER (B9)	Telematics	RADIONAV_RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
PARTNER (B9)	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
PARTNER (B9)	High frequency receiver	RHF	●	●	●	●	○	
PARTNER (B9)	Anti-slip mode selector	ASR	●	●	●	●	○	
PARTNER (B9)	Central voltage retention device	DMTC	●	○	○	○	○	
PARTNER (B9)	Battery charge status unit	BECB	●	●	●	●	○	20527,
PARTNER (B9)	Battery charge status unit	BECB_GEN2	●	●	●	●	○	20527,
PARTNER Electric (B9e)	Power steering electric pump unit	GEP	●	●	●	●	○	20527,

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
PARTNER Electric (B9e)	Rain sensor	PLUIE_LUMINOSITE	●	●	●	○	○	20527,
PARTNER Electric (B9e)	Air conditioning ECU	CLIM_REGULEE	●	●	●	●	●	20016, 20019, 20033, 20202, 20474, 20527,
PARTNER Electric (B9e)	Air conditioning ECU	CLIM	●	●	●	●	●	20033, 20527,
PARTNER Electric (B9e)	Radio	AUTORADIO	●	●	●	●	●	20527, 20186, 20331,
PARTNER Electric (B9e)	Radio	RD45	●	●	●	●	●	20844, 20030, 20519, 20527, 20844, 20030, 20519,
PARTNER Electric (B9e)	Onboard charger of the traction battery	OBC_DCDC	●	●	●	●	○	20527,
PARTNER Electric (B9e)	Alarm	ALARME	●	●	●	●	●	20125, 20115, 20125, 20115, 20115, 20527,
PARTNER Electric (B9e)	Traction battery ECU	BMU	●	●	●	●	○	20773, 20776, 20527, 20812, 20811, 20813,
PARTNER Electric (B9e)	Switch module under the steering wheel (Top of column)	HDC	●	●	●	●	●	20527,
PARTNER Electric (B9e)	Multifunction display	EMF_A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
PARTNER Electric (B9e)	Multifunction display	EMF_C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
PARTNER Electric (B9e)	Parking aid	AAS	●	●	●	●	○	20457, 20527,
PARTNER Electric (B9e)	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20844, 20155, 20516, 20763, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527, 20558,
PARTNER Electric (B9e)	Engine relay unit	BSM	●	●	●	●	●	20527,
PARTNER Electric (B9e)	ABS or ESP ECU	ABS81	●	●	●	●	○	20039, 20527,
PARTNER Electric (B9e)	ABS or ESP ECU	ESP81	●	●	●	●	●	20408, 20039, 20527,
PARTNER Electric (B9e)	Air bag	SAC_AUTOLIV	●	●	●	●	○	20249, 20481, 20744, 20762, 20192, 20249, 20481, 20744, 20762, 20249, 20481, 20744, 20762, 20406, 20822, 20527,
PARTNER Electric (B9e)	Instrument panel	COMBINE	●	●	●	●	●	20130, 20527,
PARTNER Electric (B9e)	Service module	BTA	●	●	●	●	●	20847, 20142, 20527,
PARTNER Electric (B9e)	Telematics	RADIONAV_RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
PARTNER Electric (B9e)	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
PARTNER Electric (B9e)	Battery charge status unit Generation 2	BECB_GEN2_VE	●	●	●	●	○	20527,
PARTNER Electric (B9e)	Traction battery cell electronics	CMU_01	●	○	○	●	○	
PARTNER Electric (B9e)	Traction battery cell electronics	CMU_02	●	○	○	●	○	
PARTNER Electric (B9e)	Traction battery cell electronics	CMU_03	●	○	○	●	○	
PARTNER Electric (B9e)	Traction battery cell electronics	CMU_04	●	○	○	●	○	
PARTNER Electric (B9e)	Traction battery cell electronics	CMU_05	●	○	○	●	○	
PARTNER Electric (B9e)	Traction battery cell electronics	CMU_06	●	○	○	●	○	



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
PARTNER Electric (B9e)	Traction battery cell electronics	CMU_07	●	○	○	●	○	
PARTNER Electric (B9e)	Traction battery cell electronics	CMU_08	●	○	○	●	○	
PARTNER Electric (B9e)	Traction battery cell electronics	CMU_09	●	○	○	●	○	
PARTNER Electric (B9e)	Traction battery cell electronics	CMU_10	●	○	○	●	○	
PARTNER Electric (B9e)	Passenger compartment air heating resistor	CTPA	●	●	●	●	●	20527,
PARTNER Electric (B9e)	air conditioning compressor	CCE	●	●	●	●	●	20527,
PARTNER Electric (B9e)	Electric vehicle management ECU	EV_ECU	●	●	●	○	○	20226, 20527,
PARTNER Electric (B9e)	Drive train interface ECU	PIU	●	●	●	●	○	20145, 20843, 20456, 20456, 20525, 20630, 20647, 20701, 20705, 20527,
PARTNER Electric (B9e)	Electric machine management ECU	MCU	●	●	●	●	○	20226, 20527,
RCZ	Parking aid	AAS	●	●	●	●	○	20558, 20457, 20527,
RCZ	ABS/traction control	ABS81	●	●	●	●	○	20192, 20039, 20527,
RCZ	ABS/traction control	ESP81	●	●	●	●	●	20558, 20192, 20408, 20039, 20527,
RCZ	Multifunction display	EMF_A	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
RCZ	Multifunction display	EMF_C	●	●	●	●	●	20137, 20151, 20137, 20151, 20527,
RCZ	Driver and passenger airbags	SAC_AUTOLIV	●	●	●	●	○	20249, 20396, 20481, 20740, 20744, 20192, 20427, 20249, 20396, 20481, 20740, 20744, 20427, 20249, 20396, 20481, 20740, 20744, 20427, 20406, 20822, 20527,
RCZ	Anti-theft alarm	ALARME	●	●	●	●	●	20125, 20115, 20118,
RCZ	audio amplifier	AMPLI_AUDIO	●	●	●	○	●	20527,
RCZ	Radio or radiotelephone (radio part)	RD43	●	●	●	●	●	20844, 20030, 20404, 20519, 20527, 20720, 20844, 20030, 20519,
RCZ	Radio or radiotelephone (radio part)	AUTORADIO	●	●	●	●	●	20186, 20331, 20527,
RCZ	Radio or radiotelephone (radio part)	RD45	●	●	●	●	●	20558, 20844, 20030, 20519, 20527,
RCZ	Driver's seat memorizing unit	BDMC	●	●	●	●	●	20146, 20745, 20746, 20770, 20527, 20146, 20745, 20746, 20770,
RCZ	Passenger seat memorisation unit	BDMP	●	●	●	●	●	20146, 20325, 20410, 20745, 20746, 20770, 20527,
RCZ	Built-in Systems Interface (BSI)	BSI	●	●	●	●	●	20228, 20411, 20844, 20155, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20007, 20073, 20732, 20301, 20489, 20492, 20047, 20086, 20403, 20516, 20850, 20201, 20204, 20205, 20430, 20191, 20489, 20527,
RCZ	Engine relay unit	BSM	●	●	●	●	●	20527,
RCZ	Trailer relay unit	BSR	●	●	●	●	●	20527,
RCZ	gearbox	BVA_AM6_AT6_EUR05	●	●	●	●	●	20502, 20634, 20600, 20605, 20527,
RCZ	gearbox	BVA_AL4	●	●	●	●	●	20333, 20004, 20448, 20527,



Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
RCZ	Injection/ignition	MM6LPB	●	●	●	●	●	20843, 20112, 20005, 20159, 20226, 20437, 20059, 20527,
RCZ	Injection/ignition	ME745	●	●	●	●	●	20743, 20631, 20721, 20527,
RCZ	Injection/ignition	ME749	●	●	●	●	●	20856, 20743, 20631, 20721, 20527,
RCZ	Injection/ignition	ME749_EC5	●	●	●	●	●	20226, 20460, 20717, 20527,
RCZ	Injection/ignition	MM6KP	●	●	●	●	●	20463, 20859, 20005, 20159, 20437, 20607, 20689, 20059, 20618, 20527,
RCZ	Injection/ignition	MEV17_4_EUR05	●	●	●	●	●	20561, 20310, 20384, 20385, 20389, 20808, 20823, 20827, 20828, 20061, 20527,
RCZ	Injection/ignition	MED17_4_EUR05	●	●	●	●	●	20192, 20559, 20057, 20306, 20308, 20388, 20389, 20520, 20808, 20823, 20061, 20527,
RCZ	Injection/ignition	HDI_SID807	●	●	●	●	●	20088, 20089, 20382, 20509, 20342, 20062, 20065, 20064, 20066, 20226, 20588, 20710, 20285, 20573, 20591, 20692, 20694, 20527,
RCZ	Injection/ignition	EDC17C10	●	●	●	●	●	20088, 20089, 20343, 20509, 20063, 20062, 20065, 20064, 20068, 20226, 20296, 20284, 20374, 20461, 20470, 20564, 20589, 20710, 20527,
RCZ	Injection/ignition	EDC17C10_BR2	●	●	●	●	●	20088, 20089, 20089, 20254, 20343, 20806, 20503, 20509, 20063, 20062, 20065, 20064, 20068, 20070, 20226, 20284, 20330, 20374, 20461, 20470, 20564, 20636, 20589, 20598, 20617, 20621, 20661, 20707, 20710, 20527,
RCZ	Injection/ignition	MEV17_4_2	●	●	●	●	●	20070, 20562, 20310, 20383, 20384, 20389, 20823, 20827, 20828, 20061, 20527,
RCZ	Injection/ignition	HDI_SID807_BR2	●	●	●	●	●	20088, 20089, 20382, 20503, 20509, 20806, 20342, 20062, 20065, 20064, 20068, 20070, 20226, 20571, 20636, 20588, 20598, 20617, 20621, 20661, 20663, 20707, 20710, 20285, 20573, 20692, 20694, 20527,
RCZ	Injection/ignition	MEVD17_4_2	●	●	●	●	●	20070, 20563, 20291, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20827, 20061,
RCZ	Injection/ignition	MED17_4_2	●	●	●	●	●	20085, 20070, 20560, 20306, 20308, 20310, 20386, 20388, 20389, 20520, 20823, 20061, 20527,
RCZ	Injection/ignition	ME745_EC5	●	●	●	●	●	20460, 20717, 20527,
RCZ	Injection/ignition	V46_21	●	●	●	●	●	20029, 20003, 20070, 20255, 20386, 20387, 20527,
RCZ	Hands-free kit (Telephone)	KML	●	●	●	●	●	20145, 20129, 20120, 20192, 20527,
RCZ	Hands-free kit (Telephone)	BOITIER_NOMADE	●	●	●	●	●	20135, 20135, 20527,
RCZ	Matrix screen integral to the instrument panel	MATT	●	●	●	●	●	20527,
RCZ	Service module	MD_SERV	●	●	●	●	●	20124, 20124, 20527,
RCZ	Service module	BTA	●	●	●	●	●	20847, 20142, 20527,
RCZ	Service module	BLVV	●	●	●	●	●	20176, 20527,
RCZ	Multiplexed additive pump	PADDGO	●	●	●	●	●	20011, 20586, 20590, 20527,
RCZ	Multiplexed additive pump	PADDGO_E5	●	●	●	●	●	20282, 20163, 20234, 20235, 20323, 20584, 20163, 20234, 20235, 20323, 20686, 20163, 20234, 20235, 20323, 20687, 20163, 20234, 20235, 20323, 20527,
RCZ	Door control pad	PDPC	●	●	●	●	●	

Vehicle	System	ECU Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
RCZ	Lane departure warning system	AFIL	●	●	●	●	○	20455, 20268, 20749, 20750, 20527,
RCZ	Telematics	RADIONAV_RNEGC	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
RCZ	Telematics	RADIONAV_RNEG	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20137, 20527,
RCZ	Telematics	RADIONAV_NG4	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20527,
RCZ	Telematics	BOITIER_TELEMATIQUE	●	●	●	●	●	20128, 20847, 20095, 20123, 20127, 20137, 20006, 2014, 20121, 20133, 20128, 20847, 20095, 20123, 20128, 20847, 20095, 20123, 20127, 20137, 20127, 20137, 20265, 20394, 20527,
RCZ	Telematics	RADIONAV_RNEG_ECO	●	●	●	●	●	20847, 20095, 20119, 20123, 20136, 20527,
RCZ	Telematics	RNEG2010	●	●	●	●	●	20847, 20119, 20123, 20136, 20141, 20140, 20527,
RCZ	Seat belts not fastened LED unit	TNB	●	○	○	○	●	
RCZ	Sun roof	TOUV	●	●	●	●	●	20506, 20527,
RCZ	Folding roof	BTE	●	●	●	●	●	20832, 20833, 20527,
RCZ	Battery charge status unit	BECB	●	●	●	●	○	20527,
RCZ	Battery charge status unit	BECB_GEN2	●	●	●	●	○	20527,
RCZ	High frequency receiver	RHF	●	●	●	●	○	
RCZ	Pedestrian impact detection unit	DETECT_CHOC_PIETON	▲	▲	▲	▲	○	
RCZ	Moving panel deflector	DEFL_PAN_MOBIL	●	●	●	●	●	20527,

## Special\_Function

Index	Specil Function Name	Index	Specil Function Name
01001	Cable tensioning	01002	Clutch pedal position sensor calibration
01003	Deactivation of the automatic application of the electric parking brake function	01004	Longitudinal acceleration sensor calibration
01005	Electric parking brake calibration	01006	Put in fitting / removal position
01007	Part removal / refitting	01008	Reactivation of automatic application of the electric parking brake
01009	Slope sensor calibration	02001	Deactivation / Activation of the tyre under-inflation detection function
02002	Erasing of the secondary wheels	02003	Wheel transmitter module management
02004	Initialisation of a single wheel transmitter module	02005	Valve search faulty
02006	Initialisation of the wheel transmitter modules	02007	Program additional wheel set
02008	Program wheel transmitter modules of main wheel set	02009	Read wheel transmitter module identifiers
02010	Tyre pressure detector activation / deactivation	02011	Valve programming check
02012	Write wheel transmitter module identifiers by references	03001	EU10
03002	EU11	03003	Maintenance limit
03004	Option INT	03005	Reset maintenance indicator
03006	Reset maintenance information	03007	Reset maintenance mileage
03008	Reset maintenance mileage + maintenance number	03009	Reset maintenance number done
04001	Configuration of the amount of additive in the particle filter	04002	Filling of the diesel additive adding reservoir
04003	Filling of the diesel additive tank	04004	Forced particle filter regeneration
04005	Forced regeneration of the particle filter, vehicle stationary	04006	Forced regeneration, vehicle stationary
04007	Particle filter regeneration	04008	Particle filter replacement
04009	Programming of the total quantity of additive injected into the particulate emission filter	04010	Repair to the diesel additive system
04011	Replacement of the diesel additive reservoir, of the pump or of the pipes	04012	Replacement of the particle emission filter
04013	Replacement or filling of the diesel additive tank	05001	Calibration of the steering wheel angle sensor
05002	Calibration of the steering wheel angle sensor : C2, C3, C3 pluriel, New Look C5 with ESP MK60	05003	Calibration/decalsibration of the steering wheel angle sensor
05004	Definition of the steering wheel with fixed central controls configurable control menu	05005	Reading of the calibration status of the steering wheel angle
05006	Steering wheel angle calibration	05007	Steering wheel angle sensor calibration
05008	Steering wheel angle sensor programming	06001	Bleeding
07001	Initialisation of auto-adaptation	07002	Initialisation of the autoadaptive values
07003	Initialise auto-adaptives	07004	Initialising the autoadaptives
07005	Manual configuration	07006	Air Flow Sensor Replacement
07007	Classification of the 4 injectors	07008	Differential pressure sensor
07009	Egr electrovalve	07010	Electric EGR valve replacement
07011	Filling of the additive reservoir	07012	Flowmeter
07013	High pressure pump	07014	Injector 1 classification
07015	Injector 2 classification	07016	Injector 3 classification
07017	Injector 4 classification	07018	Pairing
07019	Replacement Of 4 Injectors	07020	Replacement of injector 1
07021	Replacement of injector 2	07022	Replacement of injector 3
07023	Replacement of injector 4	07050	Replacement of the additive reservoir, of the pump or of the pipes
07051	Replacement of the differential pressure sensor	07052	Replacement Of The High Pressure Pump Or The Flow Regulation Valve
07053	Replacement Of The Turbo	07054	Turbo
07055	Forced regeneration, vehicle moving	07056	Change of engine block without the flowmeter
07057	Checking the immobiliser code in the engine management ecu	07058	Replacement of the cooling fan
07059	Replacement of the diesel high pressure rail	07060	Replacement of the engine block and cylinder head with the flowmeter

Index	Specil Function Name	Index	Specil Function Name
07080	Replacement of the fuel flow regulator	07081	Replacement of the particle emission filter differential pressure sensor
07082	Initialisation of the 4 diesel injectors	07083	Initialisation of diesel injector 1
07084	Initialisation of diesel injector 2	07085	Initialisation of diesel injector 3
07086	Initialisation of diesel injector 4	07087	Change of air mixer
07088	Change of ras (turbo air cooler) by-pass	07089	Replacement of the oxygen sensor
07090	Change of EGR valve	07091	Change of engine block with the flowmeter
07092	Replacement of the ancillaries drive belt	07093	Replacement of the cylinder head
07094	Replacement of the EGR exchanger	07095	Replacement of the exhaust manifold
07096	Replacement Of The Particle Filter	08000	EGR mixer butterfly replacement
08001	Replacement of the egr doser butterfly and replacement of the egr doser by-pass butterfly	08002	Priming of the additive system if replacing parts (additive reservoir, pump or pipes)
08003	Initialisation of the additive level when filling or replacing the additive reservoir	08004	Injector characterisation IMA 4 pts
08005	Injector characterisation IMA 5 pts	08006	Initialisation of the air flow sensor
08007	Initialisation of the EGR butterfly	08008	Initialisation of the EGR valve
08009	Initialisation of the engine ECU	08010	Initialisation of the turbocharger 2 turbine valve (VT2)
08011	O2 sensor initialisation	08012	Replacement of the turbocharger turbine valve 2
08013	Replacement of the exhaust gas recycling valve	08014	Replacement Of The Impeller Block
08015	Replacement Of The Cylinder Block Bearing	08016	Replacement of the EGR exchanger by-pass
08017	Replacement Of The Flowmeter	08018	Replacement Of The Engine Block Without The Flowmeter
08019	Replacement Of The Exchanger Of The Exhaust Gas Recycling Solenoid	08020	Egr Valve Programming
08021	Initialisation Of The Air Mixer	08022	Initialisation Of The Oxygen Sensor
08023	Change of high pressure pump with its fuel flow regulator	08024	Replacement of the power accumulator or of the voltage retaining device
08025	Replacement of the reversible alternator	08026	Temporary reactivation of the stop and start function (for a maximum distance of 10 km)
08027	Accelerator pedal sensor	08028	Control unit
08029	Fuel pump	08050	Injectors
08051	Motorised throttle unit	08052	Oxygen sensors
08053	Canister discharge electrovalve	08054	Catalytic converter
08055	Check the timing adjustment	08056	Fuel pressure regulation electrovalve
08057	Fuel HP pump	08058	Inlet camshaft dephaser
08059	Inlet camshaft dephasing electrovalve	08060	Inlet pressure sensor
08061	Rail pressure sensor	08062	Upstream and downstream oxygen sensors
08063	Camshaft phase sensor	08064	Timing
08065	Inlet and exhaust camshaft dephaser	08066	Variable valve lift motor
08067	Variable valve lift system position sensor	08068	Cylinder reference sensor
08069	Write VIN	08070	Configuration of the quantity of additive present in the particle emission filter
08071	Top up diesel additive tank	08072	Initialising of the active damper
08073	Interrogation of the status of the active damper function	08074	Reactivation of the function
08075	Satellites	08076	Front airbags
08077	Pre-tensioners	08078	Side air bags
08079	Locking	08080	Unlocking
08081	Configuration of the detection peak	08082	Thatcham mode configuration
08083	Vehicle configuration	08084	Identification of the configuration
08085	Accelerator pedal initialisation	08086	Oil wear counter
08087	Reading of the oil wear counter	08088	Programming of the neutral position
08089	Replacement of the automatic gearbox and its ECU	08090	Replacement of the automatic gearbox oil
08091	Replacement of the automatic gearbox without its ECU	08092	Semi-automatic configuration
08093	Writing to oil wear counter	08094	Replacement of the ECU without the automatic gearbox
08095	Depressurisation of the hydraulic circuit	08096	Pressurise the hydraulic circuit
08097	Bleeding of the hydraulic circuit	08098	Gearbox programming
08099	Removal/refitting or replacement of the gearbox ecu	08200	Replacement of the hydraulic clutch bearing
08201	Check of the gearbox control actuator oil level	08202	Draining of the gearbox control actuator oil

Index	Specil Function Name	Index	Specil Function Name
08203	Removal/refitting or replacement of a gearbox control actuator position sensor	08204	Removal/refitting or replacement of the electropump assembly
08205	Removal/refitting or replacement of the gearbox control actuator	08206	Removal/refitting or replacement of a solenoid valve or of the pressure sensor
08207	Removal/refitting or replacement of the control actuator reservoir or of the accumulator	08208	Removal/refitting or replacement of the electropump assembly electric motor
08209	Removal/refitting or replacement of the clutch cover or of the clutch disc	08210	Removal/refitting or replacement of the gearbox
08211	Replacement of the gear lever	08212	Replacement of the paddles at the steering wheel
08213	Read / write counters	08214	Vehicle height sensor programming
08250	Audio parameter configuration	08251	Configuration of the Hands Free Kit
08252	Configuration of the audio parameters	08253	Configuration of the instrument panel
08254	Customer configuration	08255	Orientation of infrared sensors
08256	Erasing sensor addresses	08257	Sensor programming
08258	Sensor programming check	08259	Erasing of the customisable position programmed by the motorised tailgate
08260	Erasing of the motorised tailgate programming	08261	Programming of the motorised tailgate customisable position
08262	Reinitialisation of the motor's thermal protection	08263	Personalisation menu configuration
08264	Overall check of the sensors	08265	Antenna configuration
08266	Radio configuration	08267	VIN code
08268	Different configuration for the 16 levels	08269	Identical configuration for the 16 levels
08270	Configuration of vehicle options	08271	VIN configuration
08272	Configuration of client services	08273	Vehicle reference height adjustment
08274	Depressurise	08275	Programming of the heights
08300	Tyre above specification	08301	Bleeding of the hydraulic block ABS MK100
08302	Calibration of the gyrometer/accelerometre sensor	08303	Replacement of the ECU ABS
08304	Configuration of the screen	08305	Illumination table/button lighting level
08306	Illumination table/screen lighting level	08307	Check of the detection of a hands-free remote control by the front left door handle aerial
08308	Check of the detection of a hands-free remote control by the front right door handle aerial	08309	Check of the detection of a hands-free remote control by the boot external aerial
08310	Check of the detection of a hands-free remote control inside the vehicle (dashboard)	08311	Check of the detection of a hands-free remote control inside the vehicle (central armrest)
08312	Check of the detection of a hands-free remote control inside the vehicle's boot	08313	Check of the detection of a hands-free remote control located outside the vehicle
08314	Check of the detection of a hands-free remote control inside the vehicle (inside front and boot)	08315	Filling of the additive reservoir or pouch
08316	High Pressure Pump Replacement	08317	Replacement of the turbo
08318	Change To The Air Flowmeter	08319	Injector 1 replacement
08320	Injector 2 replacement	08321	Injector 3 replacement
08322	Injector 4 replacement	08323	Replacement Of 4 Injectors
08324	Programming Of The Quantity Of Additive Remaining In The Reservoir	08325	Setting of the gearbox actuator to the removal position
08326	Setting of the gearbox actuator to the fitting position	08327	Sequence of programming operations
08328	Clutch actuators programming operations	08329	Gearbox actuator programming operations
08330	Initilisation of the gearbox actuator	08331	Replacement of the piloted manual gearbox and of the piloted manual gearbox actuators
08332	Replacement of the gearbox	08333	Replacement of the gearbox actuator
08334	Replacement of the gear lever	08335	Replacement of the clutch
08336	Replacement of the clutch actuator	08337	Counters
08338	Repalcing the gearbox ECU	08339	Replacement of the piloted manual gearbox and of the piloted manual gearbox ECU
08340	Replacement of the vacuum pump	08341	Replacement of the additive tank
08342	Configuration of the intrusion alarm siren	08343	Replacement of the motorised butterfly housing
08344	Replacement of the acclerator pedal	08345	Replacement of injectors
08346	Engine speed sensor programming procedure	08347	Learninig pairing
08348	All the engine management ECU programmed auto-adaptive values	08349	Vacuum pump
08350	Inlet camshaft dephaser solenoid valve		
20022	alarm	20608	Replacement of the brake pads.

Index	Specil Function Name	Index	Specil Function Name
20327	heating/ventilation	20611	Replacement of the camshaft
20738	rewriting of the unlocking code	20612	Replacement of the catalytic converter
20818	turbo	20616	Replacement of the clutch mechanism or
20774	-Step 2 : replacement of parts	20617	Replacement of the clutch proportional sensor
20000	607 with CAN architecture	20615	Replacement of the clutches
20001	607 with VAN architecture	20619	Replacement of the cylinder block
20002	81 ESP	20620	Replacement of the cylinder block bearing
20003	Accelerator pedal	20621	Replacement of the cylinder head
20004	Accelerator pedal initialisation	20623	Replacement of the cylinder head with the air flow sensor
20005	Accelerator pedal sensor	20622	Replacement of the cylinder head without the air flow sensor
20007	Activation of Stop and Start( new vehicle)	20624	Replacement of the deNOx catalytic converter
20006	Activation of emergency and assistance services	20625	Replacement of the deNOx system reservoir, gauge-pump module or pipes
20008	Activation of the electric vacuum pump diagnostics strategy	20626	Replacement of the diesel additive reservoir, of the pump or of the pipes
20009	Activation of the simulation of the Distance Alert function	20627	Replacement of the diesel high pressure rail
20010	Activation of the speed limiter buzzer	20628	Replacement of the diesel injection at exhaust dosing pump
20011	Additive assembly replacement (bag tank + pump)	20629	Replacement of the differential pressure sensor
20012	Additive circuit pipe and pump replacement	20630	Replacement of the drive train interface ECU
20013	Additive tank top up or replacement (low additive level LED illuminated)	20641	Replacement of the electric drive machine or of the reversible alternator
20014	After-sales particulate emission filter repair operation	20642	Replacement of the electric parking brake (FSE) left-hand actuator
20015	Air conditioning or cruise control replacement	20643	Replacement of the electric parking brake (FSE) right-hand actuator
20017	Air distribution motor, driver's side	20644	Replacement of the electric pump
20018	Air distribution motor, passenger's side	20645	Replacement of the electric steering lock( Left hand drive)
20020	Air flow sensor replacement	20646	Replacement of the electric steering lock( Right hand drive)
20021	Air inlet and recycling motor	20647	Replacement of the electric vacuum pump
20024	Alarm configuration	20648	Replacement of the electropump assembly electric motor
20025	Alarm with anti-lift module	20649	Replacement of the engine block
20028	Alignment of the ECU configuration with the configuration entered in the BSI	20650	Replacement of the engine block and cylinder head with the flowmeter
20027	Alignment of the distance alert radar	20651	Replacement of the engine block without the flowmeter
20029	All the engine management ECU programmed auto-adaptive values	20653	Replacement of the engine flywheel
20031	Arduous maintenance schedule	20654	Replacement of the engine management ECU
20032	Autocalibration of the torque sensor	20655	Replacement of the engine management ECU and of the immobiliser and locking management module
20034	Automatic gearbox and automatic gearbox ECU replacement	20657	Replacement of the exchanger of the exhaust gas recycling solenoid valve



Index	Specil Function Name	Index	Specil Function Name
20035	Automatic headlamp dip function test	20658	Replacement of the exhaust camshaft dephaser
20036	Automatic setting of all of the reduction motors	20659	Replacement of the exhaust camshaft dephasing solenoid valve
20038	BDMC China version	20660	Replacement of the exhaust gas recycling valve
20040	Bleeding of the clutch	20661	Replacement of the exhaust manifold
20047	Built-in Systems Interface (BSI) replacement	20662	Replacement of the flowmeter
20048	CO2 adjustment	20663	Replacement of the fuel flow regulator
20050	CALIBRATION	20667	Replacement of the gear lever
20107	CO2 reading.	20668	Replacement of the gear selection
20146	CONTROL FUNCTION	20664	Replacement of the gearbox
20049	Cable tensioning	20665	Replacement of the gearbox actuator
20053	Calibration of the longitudinal and lateral acceleration sensor	20666	Replacement of the gearbox differential housing
20054	Calibration of the nominal value of the accelerometer	20669	Replacement of the hands-free (Entry and start) unit
20055	Calibration of the steering wheel angle sensor.	20670	Replacement of the high pressure pump
20056	Calibration of the yaw speed sensor	20671	Replacement of the high pressure pump or of the fuel flow regulator
20051	Calibration/decalibration of the steering wheel angle sensor	20672	Replacement of the high pressure pump or the flow regulation valve
20057	Camshaft phase sensor	20673	Replacement of the hydraulic clutch
20058	Canister discharge electrovalve	20674	Replacement of the ignition switch supplied with new keys
20060	Capacity of the additive bag tank	20675	Replacement of the ignition switch supplied with new keys with replacement of the electric traction supervision and built-in systems interface ECUs
20063	Change of EGR valve	20676	Replacement of the ignition switch supplied with new keys with replacement of the engine and immobiliser ECUs
20067	Change of RAS (turbo air cooler) by-pass	20678	Replacement of the immobiliser ECU
20062	Change of air mixer	20677	Replacement of the immobiliser control module and locking
20065	Change of engine block with the flowmeter	20679	Replacement of the impeller block
20064	Change of engine block without the flowmeter	20680	Replacement of the inlet camshaft dephaser
20066	Change of high pressure pump with its fuel flow regulator	20681	Replacement of the inlet camshaft dephasing solenoid valve
20068	Change to the air flowmeter	20682	Replacement of the knock sensor
20069	Changing the engine ECU	20683	Replacement of the low pressure fuel pump, of the fuel filter or of the pipes
20072	Check of the automatic gearbox oil pressure	20684	Replacement of the low pressure pump
20073	Check of the coded engine immobiliser code in the BSI	20685	Replacement of the motorised butterfly housing
20074	Check of the coded engine immobiliser code in the built-in systems interface	20686	Replacement of the multiplexed additive adding pump
20075	Check of the detection of a hands-free remote control by the boot external aerial	20687	Replacement of the multiplexed additive adding pump / additive reservoir pair

Index	Specil Function Name	Index	Specil Function Name
20076	Check of the detection of a hands-free remote control by the front left door handle aerial	20688	Replacement of the neutral sensor
20077	Check of the detection of a hands-free remote control by the front right door handle aerial	20689	Replacement of the non BioFlex engine management ECU
20078	Check of the detection of a hands-free remote control inside the vehicle (central armrest)	20691	Replacement of the oil pressure accumulator
20079	Check of the detection of a hands-free remote control inside the vehicle (dashboard)	20693	Replacement of the paddles at the steering wheel
20080	Check of the detection of a hands-free remote control inside the vehicle (inside front and boot)	20695	Replacement of the particle emission filter differential pressure sensor
20081	Check of the detection of a hands-free remote control inside the vehicle's boot	20698	Replacement of the piloted manual gearbox and of the piloted manual gearbox ECU
20082	Check of the detection of a hands-free remote control located outside the vehicle	20697	Replacement of the piloted manual gearbox and of the piloted manual gearbox
20083	Check of the pairing of the hands-free remote controls to the hands-free unit	20699	Replacement of the power accumulator or of the voltage retaining device
20084	Check of the programming of the wheel transmitter modules	20700	Replacement of the precatalyser
20085	Check the timing adjustment	20701	Replacement of the proportional brake switch
20070	Checking the immobiliser code in the engine management ECU	20702	Replacement of the rear left motorised brake caliper
20071	Checking the oil level of the gearbox control actuator	20703	Replacement of the rear right motorised brake caliper
20086	Choice of maintenance schedule	20704	Replacement of the reduction gear
20087	Circumference of the wheels	20705	Replacement of the reduction gear park finger
20091	Cleaning or replacement of the particle filter	20706	Replacement of the reservoir, of the gauge - pump module, of the deNOx system pipes or of the urea injector
20092	Cleaning the EGR exchanger bypass	20707	Replacement of the reversible alternator
20093	Cleaning the EGR valve	20710	Replacement of the turbo
20094	Clearing of a hands-free identifier	20711	Replacement of the turbocharger
20096	Clearing the keys	20712	Replacement of the turbocharger or of the turbocharger position sensor
20097	Clearing the nominal value of the accelerometer	20713	Replacement of the turbocharger position sensor
20098	Clutch actuator	20716	Replacement of the urea injector
20100	Clutch and gearbox actuator programming	20717	Replacement of the vacuum pump
20102	Clutch cycle counter	20718	Replacement or filling of the diesel additive tank
20104	Clutch pedal position sensor calibration	20721	Replacements of the throttle housing, of the accelerator pedal sensor, of the injectors, of the oxygen sensors
20106	Clutch sensor	20728	Reset the limits of the rear RH and LH seats
20110	Configuration of CD player	20731	Reset to zero of the counter for the number of restarts

Index	Specil Function Name	Index	Specil Function Name
20111	Configuration of display modes	20732	Reset to zero of the counter for the number of restarts (Stop and start and
20114	Configuration of other services	20733	Reset to zero of the data from the particle filter
20128	Configuration of the DVD player geographical zone	20734	Restore supply after impact
20134	Configuration of the MENU button on the steering wheel with fixed central controls	20735	Retrieval of the security code
20143	Configuration of the VIN code	20736	Return to the factory configuration
20117	Configuration of the amount of additive in the particle filter	20741	Roof closing control
20122	Configuration of the characterisation of diesel injector 1	20742	Roof opening control
20125	Configuration of the detection peak	20743	Routine
20129	Configuration of the hands-free kit	20745	SEAT BACK FUNCTION
20131	Configuration of the intrusion alarm siren	20746	SEAT FUNCTION
20139	Configuration of the screen	20747	SEAT TYPE
20141	Configuration of the telematic unit logo	20748	SEMI-AUTOMATIC CONFIGURATION
20145	Configuration with displaying of the parameters	20770	STEERING COLUMN FUNCTION
20144	Configuration-Vehicle configuration	20777	STEP *: Conditions to be met prior to maintenance
20150	Counters	20778	STEP *: Measurement of the traction battery state of health
20154	Customer personalisation	20779	STEP *: Preparation to measure the traction battery state of health
20157	Cylinder head replacement	20749	Sensor programming
20158	Cylinder head replacement or fuel injector learning	20750	Sensor programming check
20159	Cylinder reference sensor	20756	Setting of the clutch actuator to the removal/refitting position
20163	DCM3.5	20763	Signalling - Exterior lighting - Interior lighting
20164	DCM3.5 BR2	20764	Slope sensor calibration
20165	DCM3.5 HY	20765	Spare part
20162	DCM34 P	20766	Speed limiter that can be set
20166	DCM6.2	20767	Start again
20167	DCN2	20768	Starter
20213	DV6 TED4 (9HX/9HY/9HZ/9HV)	20772	Steering wheel angle sensor programming
20206	DV6ATED4 (9HX)	20773	Step 1 : Discharging and charging of the traction battery
20208	DV6ATED4 (9HX) ou DV6TED4 (9HY ou 9HZ ou 9HV)	20775	Step 2 : TBTTracabilite de la maintenance
20207	DV6ATED4 (9HX/9HY/9HZ/9HV)	20776	Step 2 : Traceability of the maintenance
20209	DV6ATED4, DV6TED4 (9HX/9HY/9HZ/9HV)	20780	Supply
20210	DV6AUTED4 - 90CV	20781	Switching off of the audio-navigation ECU
20211	DV6BTED4 - 75 CV	20797	TBT Proc閘ure d'initialisation automatique du capteur de pluie et de
20212	DV6BUTED4 - 75CV	20782	TBTActionneur de bo類e de vitesses
20214	DV6TED4 (9HY or 9HZ)	20783	TBTApprentissage du radar d'aide au freinage automatique en cas de risque de collision (en ville)

Index	Specil Function Name	Index	Specil Function Name
20215	DV6TED4 (9HZ) / DW12TED4(4HX) / DW10B4HP20 (RHR) automatic gear box / DT17 (UHZ)	20784	TBTBut閑 d'embrayage
20216	DV6TED4 or 9HZ or 9HV (9HY)	20785	TBTCalibrage du capteur de couple de direction assist閑
20218	DW10 ATED (RHS/RHZ)	20786	TBTCapteur de passage de vitesse
20219	DW10ATED (RHZ)	20787	TBTCapteur de s閑ction
20217	DW10ATED4 (RHS) (RHZ)	20788	TBTChangement d閑itm錄re seul
20222	DW10B TED4 (RHR)	20790	TBTCoffre (ext閑ieur)
20221	DW10BTED4 (RHJ / RHR) Manual gearbox	20789	TBTCoffre arri鐳e (int閑ieur)
20223	DW10BTED4 (RHR) except 6 gear automatic gearbox	20791	TBTEW10A
20224	DW10BTED4 (RHR) sauf Bo閑e de Vitesse Automatique 6 rapports	20792	TBTFourchette d'embrayage
20220	DW10BTED4 AM6(RHR-RHL) automatic gear box	20793	TBTLa transmission
20225	DW10TD (RHY)	20794	TBTM閑anisme d'embrayage
20168	Deactivation / Activation of the tyre under-inflation detection function	20795	TBTPorte arri鐳e (ext閑ieur)
20169	Deactivation of the automatic application of the electric parking brake function	20796	TBTPorte arri鐳e (int閑ieur)
20170	Deactivation of the dynamic stability control and traction control systems	20798	TBTRemplacement du calculateur de freinage automatique en cas de risque de collision (en ville)
20171	Deactivation of the electric vacuum pump diagnostics strategy	20799	TBTRemplacement du pare-brise
20172	Deactivation of the speed limiter buzzer	20800	TBTU5JP4 (NFU ou N6A) avec Boite de Vitesse Automatique
20173	Deactivation of the vehicle speed governor	20801	TBTU5JP4 (NFU ou N6A) avec Boite de Vitesse Manuelle
20175	Decalibration of the longitudinal and lateral acceleration sensor	20802	TBTVilebrequin
20176	Declaration SIM card	20803	TBTVolant moteur
20177	Defragmenting of the ESP ECU memory	20817	TU5JP4 (NFU or N6A)
20182	Depressurise	20816	TU5JP4 (NFU/N6A)
20183	Detection of the reduction geared motor stops	20805	Temporary reactivation of the Stop and Start function
20184	Diesel additive ECU	20806	Temporary reactivation of the Stop and Start function (for a maximum distance of 10 km)
20185	Diesel injectors programming procedure	20807	Test of the blind spot monitoring
20190	Disconnection of the ancillaries battery	20808	Timing
20194	Do you want to finish the configuration procedure?	20809	Top up diesel additive tank
20195	Do you want to start again?	20812	Traction battery ECU replacement
20196	Do you want to start configuring this ECU again?	20811	Traction battery cells management ECU (CMU) replacement procedure
20198	Draining and filling of the urea solution reservoir	20813	Traction battery replacement procedure
20199	Draining of the hydraulic pressure accumulator	20815	Transverse acceleration sensor programming
20200	Draining the oil from the gearbox control actuator	20819	Turbo programming information
20226	ECU replacement	20821	Unit configuration
20232	ECUS with permanent faults	20823	Upstream and downstream oxygen sensors

Index	Specil Function Name	Index	Specil Function Name
20227	ECUs operating mode	20824	Upstream or downstream oxygen sensor
20228	ECUs present	20844	VIN code
20229	ECUs triggered and communicating	20846	VIN code (Vehicle Identification Number)
20230	ECUs with communication faults	20845	VIN code (vehicle identification)
20231	ECUs with faults in their memory	20847	VIN configuration
20233	EDC15C2	20827	Variable valve lift motor
20234	EDC17C10	20828	Variable valve lift system position
20235	EDC17C10 BR2	20840	Vehicle Speed limitation
20236	EDC17C60	20829	Vehicle configuration
20237	EDC17CP42	20830	Vehicle definition-Equipment
20238	EGR butterfly replacement	20831	Vehicle height sensor programming
20239	EGR electrovalve	20835	Vehicle options
20240	EGR electrovalve replacement	20836	Vehicle reference height adjustment
20241	EGR mixer butterfly replacement	20838	Vehicle servicing profile
20242	EGR programming information	20841	Vehicle with hands-free starting
20243	EGR valve * learning (Close to the bumper )	20843	View and print all configuration parameters
20244	EGR valve * learning (passenger compartment side )	20848	Visibility
20245	EGR valve programming	20850	Washing and wiping
20263	EP6 (5FW)	20851	Windscreen replacement procedure
20264	EP6 DT (5FX)	20854	Work on the timing belt
20269	ESP8.1	20856	Write VIN
20270	ESP8 BOSCH	20855	Write counters.
20271	ESP_EBC_440_CAN	20857	Write wheel transmitter module identifiers by references
20272	ESP EBC 440 K	20858	Writing of the alcohol content
20273	ET3 (KFU)	20859	Writing of the ethanol content
20275	EU 11	20861	Yes
20274	EU10	20016	air distribution motor
20277	EW10A (RFJ/RFH)	20019	air entry and recycling motor
20276	EW10A or RFH (RFJ)	20023	alarm : China version
20278	EW10J4 or RFR (RFN)	20026	alignment of the configuration of the ECUs with the configuration configured in the BSI
20279	EW10J4S (RFK)	20030	antenna configuration
20247	Electric parking brake calibration	20033	automatic addressing and Programming of all of the engines
20248	Electric pump unit replacement	20037	battery replacement
20249	Emergency call	20039	bleeding
20250	Emergency voice number for emergency calls	20042	bleeding of the hydraulic block ABS MK100
20251	Engine	20043	bleeding of the hydraulic block ASR8.0
20253	Engine DW10BTED4 with 6-speed automatic gearbox (RHR)	20044	bleeding of the hydraulic block ESP MK100
20255	Engine management ECU	20041	bleeding of the hydraulic block abs8.0.
20256	Engine oil change interval (normal servicing) Europe	20045	bleeding of the hydraulic circuit
20257	Engine oil change interval (normal servicing) outside Europe	20046	body height sensor replacement
20258	Engine oil change intervals (arduous servicing) Europe	20052	calibration of the gyrometer/accelerometer sensor
20259	Engine oil change intervals (arduous servicing) outside Europe	20059	canister purge electrovalve
20262	Engine speed sensor target	20061	catalytic converter

Index	Specil Function Name	Index	Specil Function Name
20265	Erase Juke-Box files	20088	classification of injector 1
20266	Erasing of the motorised tailgate programming	20090	classification of the injectors
20268	Erasing sensor addresses	20089	classification of the 4 injectors
20280	Exit from "Factory" mode	20095	clearing of personal data
20281	Fault reading	20099	clutch actuator programming operations
20282	Fill additive tank	20101	clutch counters
20283	Filling of the additive reservoir	20103	clutch cycles counters
20284	Filling of the additive reservoir or pouch	20105	clutch pedal sensor calibration
20286	Filling of the diesel additive tank	20109	configuration * Indicator Light Unit
20287	Filling of the integrated hydraulic unit with LDS (Steering and Suspension Fluid)	20108	configuration by the technical assistance platform (secure)
20288	Filling of the urea reservoir	20112	configuration of ECU
20290	First activation of the electric parking brake	20115	configuration of Thatcham mode
20291	Flowmeter	20113	configuration of options
20292	Follow the procedure for replacing the built-in systems interface ?	20135	configuration of the Nomad unit
20294	Forced regeneration of the particle filter, vehicle moving	20116	configuration of the air conditioning
20295	Forced regeneration of the particle filter, vehicle stationary	20118	configuration of the anti-lift function
20296	Forced regeneration, vehicle moving	20119	configuration of the audio functions
20297	Forced regeneration, vehicle stationary	20120	configuration of the audio parameters
20298	Forced starting by starter mode	20121	configuration of the automatic service numbers
20299	Forcing of stopping	20123	configuration of the customer options
20302	Front airbags	20124	configuration of the customer services
20303	Front left hand wheel	20126	configuration of the display
20304	Front right hand wheel	20127	configuration of the display options
20306	Fuel HP pump	20130	configuration of the instrument panel
20308	Fuel pressure regulation electrovalve	20132	configuration of the language
20310	Fuel sender / pump module	20133	configuration of the manual service
20311	Full realignment of the programmed values	20136	configuration of the other functions
20316	Gear lever and steering wheel gear shift control counters	20137	configuration of the personalisation menu
20317	Gear lever counter	20138	configuration of the quantity of additive present in the particle emission filter
20312	Gearbox actuator position sensor replacement	20140	configuration of the telematic unit
20314	Gearbox counters	20142	configuration of the vehicle options
20315	Gearbox programming	20147	control unit
20319	General information on configuration- Summary of ECUs present on the multiplex networks	20148	control unit MMT
20321	HDI 4N13	20149	control unit replacement
20322	HDI SID807	20151	customer configuration
20323	HDI SID807 BR2	20152	customer language configuration
20324	HDI SID807 J3J4	20153	customer options
20320	Hands-free identifiers recording procedure	20155	customisation customer
20325	Head restraint functions	20156	cylinder compression tests
20326	Head-up Display ECU configuration	20160	data communication ECU
20329	High Pressure pump or flow regulation valve learning	20161	data communication ECU * code *

Index	Specil Function Name	Index	Specil Function Name
20330	High pressure pump replacement	20174	deadlocking
20392	INT option	20178	deinstallation of the CD changer
20332	Identification	20179	depressurisation
20333	Identification of the configuration	20180	depressurisation of the air reservoir
20334	Illumination table / Button lighting level	20181	depressurisation of the hydraulic circuit
20335	Illumination table / Lighting level of the buttons in night mode	20186	different configuration for the 16 levels
20336	Illumination table / Lighting level of the screen in night mode	20187	differential pressure sensor
20337	Illumination table / Screen lighting level	20188	differential pressure sensor programming information
20338	Immediate activation of the radar	20189	direction of the vehicle
20339	Inhibit	20191	display and printing of all the configuration parameters
20340	Initialisation	20192	display and printing of all the
20342	Initialisation of diesel injector 1	20193	distribution motor
20343	Initialisation of the 4 diesel injectors	20197	do you wish to continue the configuration of the other ECUs?
20344	Initialisation of the additive level when filling or replacing the additive reservoir	20201	driver information
20345	Initialisation of the air conditioning presence information	20202	driver's mixing motor
20348	Initialisation of the air mixer	20203	driver's side: Second phase of diagnostics of the Folding/Unfolding
20349	Initialisation of the autoadaptive values	20204	driving assistance
20350	Initialisation of the clutch	20205	driving comfort
20351	Initialisation of the clutches	20246	electric EGR valve replacement
20356	Initialisation of the engine ECU	20254	engine ECU configuration
20358	Initialisation of the hands-free control unit (Coded immobiliser code and hands-free remote controls)	20252	engine compartment
20359	Initialisation of the hydraulic block	20260	engine speed sensor
20360	Initialisation of the oxygen sensor	20261	engine speed sensor or engine speed sensor target
20361	Initialisation of the radar	20267	erasing of the secondary wheels
20363	Initialisation of the rear LH and RH seat limits	20285	filling of the diesel additive adding reservoir
20364	Initialisation of the rear LH seat limits	20289	filling the air reservoir
20365	Initialisation of the rear RH seat limits	20293	forced regeneration of the particle emission filter
20366	Initialisation of the transmissibility value	20300	forcing of the customer mode
20367	Initialisation of the turbocharger 2 turbine valve (VT2)	20301	forcing of the fuel gauging data
20370	Initialise auto-adaptives	20305	fuel additive level zero reset
20371	Initialising of the active damper	20307	fuel information
20374	Injector 1 replacement	20309	fuel pump
20375	Injector 1 replacement (timing side)	20313	gearbox actuator programming operations
20376	Injector 4 replacement (flywheel side)	20318	general configuration information ? Assessment of the ECUs present on the multiplexed networks
20379	Injector classification	20328	high pressure pump
20380	Injector replacement	20331	identical configuration for the 16 levels

Index	Specil Function Name	Index	Specil Function Name
20381	Injectors	20341	initialisation of auto-adaptation
20382	Injectors classification	20352	initialisation of the ECU supply
20383	Inlet and exhaust camshaft dephaser	20353	initialisation of the EGR butterfly
20384	Inlet and exhaust camshaft dephasing electrovalve	20354	initialisation of the EGR solenoid valve
20385	Inlet and exhaust camshaft phase sensor	20355	initialisation of the EGR valve
20386	Inlet camshaft dephaser	20346	initialisation of the air flow sensor
20387	Inlet camshaft dephaser solenoid valve	20347	initialisation of the air flow sensor following replacement of the engine ECU
20388	Inlet camshaft dephasing electrovalve	20357	initialisation of the gearbox actuator
20389	Inlet pressure sensor	20362	initialisation of the rain and brightness sensor
20391	Interrogation of the status of the active damper function	20368	initialisation of the wheel transmitter modules
20393	J34P	20369	initialisation of the wheel transmitter modules *1
20394	Juke-Box configuration	20372	initialising the autoadaptives
20395	Key programming	20373	injection ECU
20410	LUMBAR SUPPORT FUNCTION	20377	injector characterisation IMA 4 pts
20396	Lateral airbags	20378	injector characterisation IMA 5 pts
20397	Learning	20390	installation of the CD changer
20403	Lighting - Signalling	20399	learning /pairing
20405	Location of the CD player	20398	learning of the gearbox gate
20407	Locking / Unlocking	20400	left hand drive
20408	Longitudinal acceleration sensor calibration	20401	lighting and signalling
20409	Longitudinal acceleration sensor programming	20404	lighting table
20421	ME745	20402	lighting-signaling
20422	ME749	20406	locking
20426	MED17 4 2	20414	maintenance limit
20428	MEV17 4 2	20416	manual configuration of service numbers
20429	MEVD17 4 2	20417	manual configuration of the voice mail
20431	MIVEC	20420	matching of the engine ECU
20433	MM6KP	20425	mechanical parts of the transmission
20411	Maintenance	20430	miscellaneous
20412	Maintenance indicator reset	20432	mixing motor
20413	Maintenance indicators	20436	motorised throttle housing
20415	Manual configuration	20441	no component available
20418	Master cylinder pressure sensor programming	20442	normal locking
20419	Matching	20445	number to call the voice mail
20423	Mechanical components relating to engine combustion	20448	oil wear counter
20424	Mechanical parts linked with the engine combustion (cylinder head, valve, ...)	20451	on the driver' s side
20427	Mercosur	20452	opening
20435	Mode Park	20453	openings and access
20434	Mode customer	20455	orientation of the infra-red sensors
20437	Motorised throttle unit	20459	over specification tyre fit
20438	Motorised throttle valve programming	20457	overall check of the sensors
20439	Multifunction video camera replacement procedure	20458	overhaul
20440	NO	20463	pack repair



Index	Specil Function Name	Index	Specil Function Name
20443	Normal maintenance schedule	20464	pairing
20444	Normal operation	20472	passenger compartment (front)
20446	O2 sensor initialisation	20473	passenger compartment (rear)
20447	Oil parameter reinitialisation	20474	passenger's mixing motor
20450	Oil wear counter zero reset	20475	passenger's side
20449	Oil wear counters reset	20481	pre-tensioners
20454	Ordinary SMS centre number	20480	pressurise the hydraulic circuit
20456	Other speed	20482	priming of the additive adding circuit
20460	Oxygen sensor	20486	programming by default
20461	Oxygen sensor replacement	20489	programming of keys
20462	Oxygen sensors	20492	programming of the built-in systems interface (Engine immobiliser code and keys)
20465	Pairing of the ESP ECU and engine management ECU	20493	programming of the clutch biting point
20466	Parc shunt configuration status	20496	programming of the heights
20467	Partial realignment of the programmed values	20500	programming of the keys and remote controls
20468	Particle filter regeneration	20504	programming of the sensors
20469	Particle filter replacement	20505	programming of the stops of the turbocharger
20470	Particulate filter replacement	20506	programming of the sunroof
20471	Passenger compartment	20508	programming of the total quantity of additive
20476	Passive safety	20509	programming of the total quantity of additive injected into the particulate emission filter
20477	Personalisation menu configuration	20510	programming of the type of headlamp
20478	Positioning of the gear selection actuator in neutral	20519	radio configuration
20479	Pressurisation	20524	reactivation of the function * damper
20483	Priming of the additive system if replacing parts (additive reservoir, pump or pipes)	20535	read the component tachometers
20484	Profile of the adaptive servicing system	20527	reading and clearing of faults
20485	Program and match	20528	reading of the BSI faults
20515	Program remote controls	20530	reading of the change of fit parameters
20487	Programming / matching	20531	reading of the injector codes (IMA)
20488	Programming of electronic keys	20532	reading of the oil wear counter
20490	Programming of positions P, R, N, D	20533	reading of the recognition
20491	Programming of the actuators	20539	rear LH
20494	Programming of the first or second set of wheel transmitter modules	20540	rear LH mixer motor
20495	Programming of the hands-free remote controls	20541	rear RH
20497	Programming of the high frequency remote controls	20542	rear RH mixer motor
20498	Programming of the immobiliser code for the electric steering lock	20547	recovery of the ECU data
20499	Programming of the injectors	20555	reinitialisation of the recognition
20501	Programming of the motorised tailgate	20558	repair
20502	Programming of the neutral position	20722	replace the flywheel
20503	Programming of the quantity of additive remaining in the reservoir	20726	replace the sensor *

Index	Specil Function Name	Index	Specil Function Name
20507	Programming of the total additive quantity	20560	replacement control unit MED17.4.2
20511	Programming of the vehicle chassis number (VIN) in the hands-free unit	20563	replacement control unit MEVD17.4.2
20512	Programming parameters	20559	replacement control unit MED17.4
20514	Programming the EGR valve stops	20561	replacement control unit MEV17.4
20513	Programming the air mixer stops	20562	replacement control unit MEV17.4.2
20516	Protection - Accesses - Mechanical assistance	20572	replacement of hydraulic block
20517	Pump or pipe replacement	20573	replacement of injector 1
20518	Put in fitting / removal position	20578	replacement of starter motor
20546	RECORDING THE COUNTERS	20579	replacement of the 4 injectors
20520	Rail pressure sensor	20609	replacement of the BSI
20521	Rail pressure sensor replacement	20610	replacement of the Built-In Systems Interface (BSI)
20553	Re-initialisation of the configuration	20632	replacement of the ECU ABS
20522	Reactivation	20633	replacement of the ECU ABS / ESP
20523	Reactivation of automatic application of the electric parking brake	20634	replacement of the ECU without the automatic gearbox
20525	Reactivation of the traction battery ECU following a crash	20635	replacement of the EGR doser butterfly and replacement of the EGR doser by-pass butterfly
20537	Read / Write counters	20696	replacement of the Particle Emission Filter (PEF)
20526	Read configuration	20580	replacement of the accelerator pedal
20536	Read wheel transmitter module identifiers	20582	replacement of the accessories drive belt
20529	Reading of the calibration status of the steering wheel angle	20583	replacement of the additive adding ECU
20534	Reading the mileage at the last programming	20591	replacement of the air flow sensor
20538	Rear left hand wheel	20594	replacement of the ancillaries battery
20543	Rear right hand wheel	20597	replacement of the ancillaries drive belt
20544	Reconnection of the ancillaries battery	20600	replacement of the automatic gearbox and its ECU
20545	Recording of the electric steering lock communication code in the hands-free (Entry and start) unit	20604	replacement of the automatic gearbox oil
20548	Regeneration of the deNOx catalytic converter	20605	replacement of the automatic gearbox without its ECU
20549	Rehabilitation of the distance alert radar following the detection of an impact (if fitted as an option)	20613	replacement of the clutch
20550	Reinitialisation	20614	replacement of the clutch actuator
20551	Reinitialisation configuration *	20618	replacement of the cooling fan
20552	Reinitialisation following replacement of the urea injector	20652	replacement of the engine ECU
20554	Reinitialisation of the deNOx system faults	20692	replacement of the oxygen sensor
20556	Removal/refitting or replacement of the reservoir of the control actuator or the accumulator	20694	replacement of the particle emission filter
20557	Removing - refitting the gear selection actuator	20709	replacement of the timing belt
20723	Replace the gearbox actuator.	20714	replacement of the turbocharger turbine valve 2

Index	Specil Function Name	Index	Specil Function Name
20724	Replace the hybrid management ECU	20715	replacement of the turbocharging pressure regulation valve
20725	Replace the hydraulic block	20719	replacement particle emission filter
20574	Replacement of injectors	20720	replacement parts
20564	Replacement of 4 injectors	20727	replacing the gearbox ECU
20568	Replacement of a solenoid valve (clutch, selection, engagement) or of the pressure sensor	20729	resetting of the paddles at the steering wheel counter
20565	Replacement of all of the hands-free identifiers	20730	resetting to zero of the total quantity of additive injected from the reservoir (2nd counter)
20566	Replacement of an actuator	20737	return to the original fit
20567	Replacement of an old hands-free identifier with a new hands-free identifier	20739	right hand drive
20569	Replacement of cylinder 1 injector (timing side)	20740	roll-over hoops
20570	Replacement of cylinder 4 injector (flywheel side)	20744	satellites
20571	Replacement of diesel high pressure pump	20751	sequence of programming operations
20575	Replacement of one of the actuator position sensors	20752	sequence of programming operations ( gearbox and clutch actuators )
20576	Replacement of one or more petrol injectors	20753	service action
20577	Replacement of one or several injectors	20754	service indicator
20607	Replacement of the BioFlex engine management ECU	20755	service information reset
20631	Replacement of the ECU.	20757	setting of the gearbox actuator to the fitting position
20636	Replacement of the EGR exchanger	20758	setting of the gearbox actuator to the removal position
20637	Replacement of the EGR exchanger bypass	20759	setting the service distance to zero
20638	Replacement of the EGR valve	20760	setting to the gearbox actuator fitting position
20639	Replacement of the EGR valve or of the EGR exchange bypass	20761	setting to the gearbox actuator removal position
20640	Replacement of the EGR valve stepper motor	20762	side air bags
20656	Replacement of the ESP ECU	20769	status of the backup battery
20690	Replacement of the NOx sensor	20771	steering wheel angle calibration
20708	Replacement of the Stop and Start ECU	20804	telematics screen
20581	Replacement of the accelerometer-gyrometer sensor	20810	towbar
20585	Replacement of the additive ECU	20814	transition from Factory mode to Customer mode
20584	Replacement of the additive adding pump pipes -> Diesel reservoir or replacement of the pump gauge module	20820	tyre above specification
20586	Replacement of the additive pump	20822	unlocking
20587	Replacement of the additive pump or cerine reservoir	20825	vacuum pump
20589	Replacement of the additive reservoir or additive pouch, of the pump or of the pipes	20826	valve programming check

Index	Specil Function Name	Index	Specil Function Name
20588	Replacement of the additive reservoir, of the pump or of the pipes	20832	vehicle in Cabriolet position
20590	Replacement of the additive tank	20833	vehicle in coupú position
20592	Replacement of the air mixer	20834	vehicle mileage
20593	Replacement of the alternator	20837	vehicle serial number (VIN)
20595	Replacement of the ancillaries battery current sensor	20839	vehicle specification - Equipment
20596	Replacement of the ancillaries battery or of the ancillaries battery current sensor	20842	vehicle with mechanical key
20598	Replacement of the ancillary drive belt	20849	warnings
20599	Replacement of the automatic gearbox	20852	without limitation
20601	Replacement of the automatic gearbox ECU	20853	without speed limiter
20602	Replacement of the automatic gearbox electric control ECU	20860	writing to oil wear counter
20603	Replacement of the automatic gearbox electric control ECU and the gear selection actuator	20862	zeroing of the service indicator
20606	Replacement of the battery		