

MaxiSys_Renault_V3.60 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
AVANTIME	Instrument panel	●	○	○	●	○	○	○	●	321 036
AVANTIME	Injection	●	●	●	●	●	●	※	※	239 530 215 530 234 790 748 805 765 037 178 353 785 743 813 775
AVANTIME	Immobiliser	●	●	●	●	●	○	●	○	529
AVANTIME	Heater	●	●	●	●	●	●	○	○	
AVANTIME	Discharge lamp	●	●	●	●	●	○	●	○	
AVANTIME	Connection unit	●	●	●	●	●	※	●	●	307 003 651 546 040 694 068 550 207
AVANTIME	Automatic gearbox	●	●	●	●	●	●	○	○	016 060 264
AVANTIME	Airbag / pretensioners	●	●	●	●	○	●	●	●	622 348 555
AVANTIME	Air conditioning	●	●	●	●	○	●	●	●	250 249 075 074 073 072
AVANTIME	A. B. S.	●	●	●	●	●	●	●	○	820 628
CAPTUR/QM3/KABIN	Variable P. A. S.	●	●	●	●	●	●	●	○	816 263
CAPTUR/QM3/KABIN	UPC	●	●	●	●	●	●	○	●	138 582 816 716 435 173 047
CAPTUR/QM3/KABIN	UCH	●	●	●	●	●	●	●	●	726 435 329 263 573 607 045 610 322
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	※	816 263 141
CAPTUR/QM3/KABIN	Radio	●	●	●	●	●	●	○	●	819 263 581 263 168 561 649 574 420 381 161 071 050
CAPTUR/QM3/KABIN	Parking prox can	●	●	●	●	●	●	○	●	816 263 620 559 273 669 088
CAPTUR/QM3/KABIN	Multimedia interface	●	●	●	●	●	●	○	○	263 331 665 660
CAPTUR/QM3/KABIN	Instrument panel	●	●	●	●	●	●	○	●	699 443 263 138 154 187 383 007
CAPTUR/QM3/KABIN	Injection	●	●	●	●	●	●	●	●	329 435 707 048 434 433 432 431 471 470 634 299 726 172 171 170 169 437 338 361 020 259 627 216 267 267 267 267 533 643 329 360 359 728 014 355 042 117 213 435 631 359 111 483 043 408 682 296 402 252 267 046 536 267 365 364 363 362 361 164 361 549 042 291 112 504 267 484 587 044 533 214 021 215 263 525 513 229 212 263 452 740
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	●	●	●	●	●	●	●	●	816 101 263 145 130 573 571 312 663 144 149 148 554 540 012 152 531 143
CAPTUR/QM3/KABIN	Communications unit	●	●	●	●	●	●	○	●	263 222 381 689 187 161
CAPTUR/QM3/KABIN	Automatic gearbox	●	●	●	●	●	●	●	○	308 518 517 522 519 617 820 532 472 816 384 128 576 244 263 524
CAPTUR/QM3/KABIN	Amplifier	●	●	●	●	●	●	○	●	816 263 653

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
CAPTUR/QM3/KABIN	Airbag / pretensioners	●	●	●	●	●	●	○	●	816 696 398 555 263
CAPTUR/QM3/KABIN	Air conditioning	●	●	●	※	●	※	○	※	140 469 816 263
CAPTUR/QM3/KABIN	A. B. S.	●	●	●	●	●	●	●	●	013 628 820 640 576 401 098 679 639 263
CLIO II	Injection	●	●	●	●	●	※	※	●	399 726 697 635 328 530 412 525 714 234 212 263 507 165 664 509 037 307 758 178 353 646 512 804 764 785 743 789 747
CLIO II	Immobiliser	●	●	●	●	●	※	●	○	377 516 535 534 129 181
CLIO II	GAS INJ.	●	●	●	●	●	●	●	※	
CLIO II	Connection unit	●	●	●	●	●	※	●	※	349 548 068 756 797 594 454 788 746 770 809 767 737 760 800 776 814 777 815 266 058 547
CLIO II	Automatic gearbox	●	●	●	●	●	●	●	※	436 157 060 392 038 235 427 041 611 123 678 738 779 785 743 438 821 819 819
CLIO II	Airbag / pretensioners	●	●	●	●	●	●	●	※	802 761 819
CLIO II	Air conditioning	●	●	●	●	●	●	●	○	820 759 142 150 223 623 313 081 771 754 763 808 769 794 752 792 750 798 757
CLIO II	A. B. S.	●	●	●	●	●	※	●	※	094 820 628
CLIO II P2/3/4	Variable P. A. S.	●	●	●	●	○	○	●	○	136 820
CLIO II P2/3/4	Injection	●	●	●	●	●	●	※	※	399 726 697 635 328 530 525 714 234 212 263 165 664 509 037 307
CLIO II P2/3/4	Immobiliser	●	●	●	●	●	○	●	○	377 516 780 739
CLIO II P2/3/4	GAS INJ.	●	●	●	●	●	●	※	※	
CLIO II P2/3/4	Discharge lamp	●	●	●	●	●	○	○	○	
CLIO II P2/3/4	Connection unit	●	●	●	●	●	●	●	●	068
CLIO II P2/3/4	Automatic gearbox	●	●	●	●	●	●	●	※	127 436 157 060 524 525 264 392 038 235 427 041 611 123 678 821 819
CLIO II P2/3/4	Airbag / pretensioners	●	●	●	●	○	○	●	●	496 198 501 205 486 488 204 192 191 489 288 287 167 166 499 201
CLIO II P2/3/4	Air conditioning	●	●	●	●	●	○	●	○	
CLIO II P2/3/4	A. B. S.	●	●	●	●	●	※	●	※	094 820 628
CLIO II PH6	UCH	●	●	●	●	●	●	○	●	816 263 599 266
CLIO II PH6	Tracker	●	●	●	●	○	●	○	●	726 263 254 045 666 601
CLIO II PH6	Injection	●	●	●	●	●	●	※	※	299 816 726 338 046 267 587 533 530 263 229 263
CLIO II PH6	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 696 398 263 621 496 198 486 350 495 197 485
CLIO II PH6	A. B. S.	●	●	●	●	●	●	●	○	628 820 716 816 094 124 263
CLIO III	Variable P. A. S.	●	●	●	●	○	●	●	●	136 819 641 816 263
CLIO III	UPC	●	●	●	●	●	●	○	●	716 816 263
CLIO III	UCH	●	●	●	●	●	●	○	●	424 816 104 101 263 556 453 660 694 323 002 125 610 184 258 730 322 274 207 307 176
CLIO III	Tyres	●	●	●	●	○	●	○	●	609 240 816 467 526 263 719
CLIO III	Radio	●	●	●	●	●	●	○	●	819 816 263

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
CLIO III	Parking assistance	●	●	●	●	○	●	○	●	113 816 263 669 715 088
CLIO III	Multimedia interface	●	●	●	●	●	●	○	●	816 132 263 395 420 545 711 719
CLIO III	Multimed. connection	●	●	●	●	○	●	○	○	820 263 653
CLIO III	Lighting	●	●	●	●	●	●	○	●	654 816 263 158 624 182 062 209 719
CLIO III	Instrument panel	●	●	●	●	●	●	○	●	052 052 379 379 052 052 379 379 293 292 052 379 583 261 699 444 443 442 441 816 727 080 263 606 269 502 257 584 460 605 162 307 396 688 154 678 462 187 300 383 006 190 481 586 126 116 659 095 007 575 718 186 382
CLIO III	Injection	●	●	●	●	●	●	※	※	473 645 299 816 399 726 697 172 171 170 169 437 338 108 361 008 020 105 627 241 328 597 216 725 164 549 042 253 347 291 112 504 267 484 587 044 533 482 530 215 263 525 513 229 212 263
CLIO III	Communications unit	●	●	●	●	●	●	○	●	816 820 263 222 310 053 153 187 653
CLIO III	Automatic gearbox	●	●	●	●	●	●	●	○	521 821 427 817 818 820 532 816 127 060 263 524 525 264
CLIO III	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 820 696 398 147 555 263 621 203 196 494 560 202 486 488 192 191 489 288 287 167 166 499 201 811 723 736 285
CLIO III	Air conditioning	●	●	●	●	●	●	○	●	816 263 327 719 304
CLIO III	A. B. S.	●	●	●	●	●	●	※	○	705 248 059 515 628 820 716 816 094 124 220 263
CLIO IV	Variable P. A. S.	●	●	●	●	●	●	●	○	816 263
CLIO IV	UPC	●	●	●	●	●	●	○	●	138 582 816 716 435 173 047
CLIO IV	UCH	●	●	●	●	●	●	●	●	726 435 329 263 573 607 045 610 322
CLIO IV	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	※	816 263 141
CLIO IV	Radio	●	●	●	●	●	●	○	●	819 263 581 263 168 561 649 574 420 381 161 071 050
CLIO IV	Parking prox can	●	●	●	●	●	●	○	●	816 263 620 559 273 669 088
CLIO IV	Multimedia interface	●	●	●	●	●	●	○	○	263 331 665 660
CLIO IV	Instrument panel	●	●	●	●	●	●	○	●	699 443 263 138 154 187 383 007
CLIO IV	Injection	●	●	●	●	●	●	●	●	329 435 707 048 434 433 432 431 471 470 634 299 726 172 171 170 169 437 338 361 020 259 627 216 267 267 267 267 533 643 329 360 359 728 014 355 042 117 213 435 631 359 111 483 043 408 682 296 402 252 267 046 536 267 365 364 363 362 361 164 361 549 042 291 112 504 267 484 587 044 533 214 021 215 263 525 513 229 212 263 452 740
CLIO IV	HANDS-FREE MODULE	●	●	●	●	●	●	●	●	816 101 263 145 130 573 571 312 663 144 149 148 554 540 012 152 531 143
CLIO IV	Communications unit	●	●	●	●	●	●	○	●	263 222 381 689 187 161
CLIO IV	Automatic gearbox	●	●	●	●	●	●	●	○	518 517 522 519 617 532 472 816 384 128 576 244 263 524
CLIO IV	Amplifier	●	●	●	●	●	●	○	●	816 263 653

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
CLIO IV	Airbag / pretensioners	●	●	●	●	●	●	○	●	816 696 398 555 263
CLIO IV	Air conditioning	●	●	●	※	●	※	○	※	140 469 816 263
CLIO IV	A. B. S.	●	●	●	●	●	●	●	●	013 628 820 640 816 124 576 401 098 679 639 263
CLIO V6	Injection	●	●	●	●	●	●	●	○	530
CLIO V6	Connection unit	●	●	●	●	●	○	●	○	756 797 594 454 788 746 770 809 767 737 760 800 776 814 777 815 058 547
CLIO V6	Airbag / pretensioners	●	●	●	●	●	●	●	●	820
CLIO V6	Air conditioning	●	●	●	●	●	●	●	○	763 142 150 081 313 771 754 759 808 769 794 752 792 750
CLIO V6 PH2	Injection	●	●	●	●	●	●	●	○	530
CLIO V6 PH2	Immobiliser	●	●	●	●	●	○	●	○	377 516
CLIO V6 PH2	Connection unit	●	●	●	●	●	●	●	●	068
CLIO V6 PH2	Airbag / pretensioners	●	●	●	●	○	○	●	●	496 198 501 205 486 488 204 192 191 489 288 287 167 166 499 201
CLIO V6 PH2	Air conditioning	●	●	●	●	●	○	●	○	
DOKKER/KANGOO	Variable P. A. S.	●	●	●	●	○	●	●	○	819 263
DOKKER/KANGOO	UCH	●	●	●	●	●	●	●	●	726 435 329 263 573 607 045 610 322
DOKKER/KANGOO	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	263 141
DOKKER/KANGOO	Radio	●	●	●	●	●	●	○	●	819 263 263 561 381 161
DOKKER/KANGOO	Multimedia interface	●	●	●	●	●	●	○	○	263 331 665 660
DOKKER/KANGOO	Instrument panel	●	●	●	●	●	●	○	●	699 263 089 138 257 460 162 307 154 187 007
DOKKER/KANGOO	Injection	●	●	●	●	●	●	●	●	329 435 707 048 434 433 432 431 471 470 634 299 726 172 171 170 169 437 338 361 020 259 627 216 267 267 267 267 533 643 329 360 359 728 014 355 042 117 213 435 631 359 111 483 043 408 682 296 402 252 267 046 536 267 365 364 363 362 361 164 361 549 042 291 112 504 267 484 587 044 533 214 021 215 263 525 513 229 212 263 148
DOKKER/KANGOO	HANDS-FREE MODULE	●	●	●	●	●	●	●	●	816 263 145 130 573 571 312 663 144 149 148 554 540 012 152 531 143
DOKKER/KANGOO	Airbag / pretensioners	●	●	●	●	●	●	○	●	816 696 398 555 263
DOKKER/KANGOO	A. B. S.	●	●	●	●	●	●	●	※	628 820 640 816 124 098 679 639 263
DUSTER	Variable P. A. S.	●	●	●	●	○	●	●	●	136 819 816 263
DUSTER	UCH	●	●	●	●	●	●	○	●	816 263 599 266
DUSTER	Tracker	●	●	●	●	○	●	○	●	726 263 254 045 666 601
DUSTER	Radio	●	●	●	●	●	●	○	●	819 263 581 263 381 161
DUSTER	Injection	●	●	●	●	●	●	※	※	473 645 299 816 399 726 172 171 170 169 437 338 108 361 008 020 105 627 328 597 216 725 046 164 549 042 253 291 112 267 484 587 044 533 530 215 263 513 229 212 263

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
DUSTER	Automatic gearbox	●	●	●	●	●	●	●	○	821 427 820 816 060 263
DUSTER	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 696 398 555 263 621 498 200 491 500 202 486 288 287 350 495 197 497 199 604 605 485
DUSTER	A. B. S.	●	●	●	●	●	●	●	○	628 820 716 816 094 124 614 263
DUSTER	4 wheels drive	●	●	●	●	●	●	●	○	415 138 816 628 716 124 263 307 719
DUSTER PH2	Variable P. A. S.	●	●	●	●	○	●	●	○	819 263
DUSTER PH2	UCH	●	●	●	●	●	●	●	●	726 435 329 263 573 607 045 610 322
DUSTER PH2	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	263 141
DUSTER PH2	Radio	●	●	●	●	●	●	○	●	819 263 263 561 381 161
DUSTER PH2	Multimedia interface	●	●	●	●	●	●	○	○	263 331 665 660
DUSTER PH2	Instrument panel	●	●	●	●	●	●	○	●	699 263 089 138 257 460 162 307 154 187 007
DUSTER PH2	Injection	●	●	●	●	●	●	●	●	329 435 707 048 434 433 432 431 474 471 470 634 299 358 726 172 171 170 169 437 338 361 020 259 627 108 216 267 267 267 267 533 643 329 360 359 728 014 355 042 117 213 435 631 359 111 483 043 408 682 296 402 252 267 046 536 267 365 364 363 362 361 164 361 549 042 253 291 112 504 267 484 587 044 533 214 021 215 263 525 513 229 212 263 148
DUSTER PH2	HANDS-FREE MODULE	●	●	●	●	●	●	●	●	816 263 145 130 573 571 312 663 144 149 148 554 540 012 152 531 143
DUSTER PH2	Automatic gearbox	●	●	●	●	●	●	●	○	308 821 427 820 816 579 578 577 244 060 263
DUSTER PH2	Airbag / pretensioners	●	●	●	●	●	●	○	●	696 398 263
DUSTER PH2	Air conditioning	●	●	●	●	●	●	○	○	304 140 263 304
DUSTER PH2	A. B. S.	●	●	●	●	●	●	●	※	013 628 820 640 576 401 098 679 639 263
DUSTER PH2	4 wheels drive	●	●	●	●	●	●	●	○	415 138 628 263 719
ESPACE	Instrument panel	●	※	※	●	○	※	※	●	820 791 749 789 747 810 772 180 503 425 732 784 742 590 589 387 588 386 385 591 388 806 766 712 156
ESPACE	Injection	●	●	●	●	●	●	※	※	239 530 215 234 790 748 805 765 507 664 037 781 740 343 344 785 743 793 751 804 764 813 775 785 743 789 747
ESPACE	Immobiliser	●	●	●	●	●	※	●	※	776 814 767 737 535 534 179 181 535 534 238
ESPACE	Heater	●	●	●	●	●	●	○	○	
ESPACE	Discharge lamp	●	●	●	●	●	○	●	○	
ESPACE	Connection unit	●	●	●	●	●	※	●	●	082 796 755 778 735 591 388 720 721 210 598 784 742 265 457 806 766 812 774 712 082 156
ESPACE	Automatic gearbox	●	●	●	●	●	●	●	※	436 157 060 427 041 611 123 678 738 779 785 039 438 821 819 819
ESPACE	Airbag / pretensioners	●	●	●	●	●	●	●	○	820 753 795 773 811
ESPACE	Air conditioning	●	●	●	●	○	●	●	●	250 249 075 074 073 072

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
ESPACE	A. B. S.	●	●	●	●	●	●	●	○	820 628
ESPACE IV	UCH	●	●	●	●	●	●	○	●	708 240 816 010 380 692 100 311 103 526 626 467 268 263 539 063 357 462 396 686 713 061 316 323 393 320 114 719 650 411 057 610 551 224 608 184 322 687 207 174 307 319 176
ESPACE IV	Parking brake	●	●	●	●	●	●	○	●	816 600 724 596 263 711
ESPACE IV	Parking assistance	●	●	●	●	○	●	○	●	816 263 669 715 088
ESPACE IV	Instrument panel	●	●	●	●	●	●	○	●	450 352 185 816 263 502 107 447 183 479 459 458 702 701 162 307 396 421 065 688 315 154 678 462 187 722 300 719 689 661 383 481 007
ESPACE IV	Injection	●	●	●	●	●	●	※	※	044 645 299 816 399 353 726 697 178 597 216 725 530 263 525 229 212 664 037
ESPACE IV	Heater	●	●	●	●	●	●	○	○	263 245 246
ESPACE IV	Hands-free kit	●	●	●	●	●	●	○	●	106 056 616 413 816 820 263 381
ESPACE IV	Discharge lamp	●	●	●	●	●	●	○	●	816 263 719 136
ESPACE IV	Automatic gearbox	●	●	●	●	●	●	●	○	423 820 816 016 060 264
ESPACE IV	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 820 696 398 622 348 147 555 263 621
ESPACE IV	Air conditioning	●	●	●	●	●	●	○	●	816 263 672 327 207 565 040 035 189 049 134 304
ESPACE IV	A. B. S.	●	●	●	●	●	●	●	●	332 122 059 515 628 820 716 816 124 098 679 639 263 716 307 005
ESPACE IV PH2/3/4	Variable P. A. S.	●	●	●	●	○	●	●	○	136 263
ESPACE IV PH2/3/4	UCH	●	●	●	●	●	●	○	●	708 240 816 010 692 311 103 526 626 467 268 263 539 063 357 396 686 713 061 316 323 393 320 719 650 411 057 610 551 224 184 322 687 207 174 307 319 176
ESPACE IV PH2/3/4	Radio	●	※	※	※	※	※	○	※	819 816 263 662 102 187
ESPACE IV PH2/3/4	Parking prox can	●	●	●	●	○	●	○	●	820 113 816 263 289 272 669 715 088
ESPACE IV PH2/3/4	Parking brake	●	●	●	●	●	●	●	●	106 816 600 724 596 263 711
ESPACE IV PH2/3/4	Parking assistance	●	●	●	●	○	●	○	●	113 816 263 669 715 088
ESPACE IV PH2/3/4	Multimedia interface	●	●	●	●	●	●	○	●	816 222 263 711 719
ESPACE IV PH2/3/4	Multimed. connection	●	●	●	●	○	●	○	○	820 263 653
ESPACE IV PH2/3/4	Lighting	●	●	●	●	●	●	○	●	654 726 263 183 394 207 624 062 209 719
ESPACE IV PH2/3/4	Instrument panel	●	●	●	●	●	●	○	●	450 699 816 816 263 089 226 502 107 447 183 479 162 307 396 688 678 462 187 300 689 383 481 007
ESPACE IV PH2/3/4	Injection	●	●	●	●	●	●	※	※	048 044 645 299 644 816 399 514 353 726 697 178 437 338 008 020 530 108 597 216 725 043 296 536 164 549 042 267 484 222 530 021 215 263 525 229 212 263 664 037
ESPACE IV PH2/3/4	Heater	●	●	●	●	●	●	○	○	263 245 246
ESPACE IV PH2/3/4	Communications unit	●	●	●	●	●	●	○	●	422 816 820 263 168 222 263 310 053 153 187 653 719
ESPACE IV PH2/3/4	Automatic gearbox	●	●	●	●	●	●	●	○	423 820 816 016 244 060 264

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
ESPACE IV PH2/3/4	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 820 696 398 348 147 555 263 621
ESPACE IV PH2/3/4	Air conditioning	●	●	●	●	●	●	○	●	816 263 672 327 207 565 040 035 189 049 134 304
ESPACE IV PH2/3/4	A. B. S.	●	●	●	●	●	●	●	●	332 122 059 515 628 820 716 816 124 098 679 639 263 307
ESPACE V	Variable P. A. S.	●	●	●	●	○	●	●	○	816 263
ESPACE V	UPC	●	●	●	●	●	●	○	○	632 329 155 138 582 329 435 173
ESPACE V	UCH	●	●	●	●	●	●	●	●	726 263 177 318 676 607 603 045 571 730 322 349 174
ESPACE V	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	263 141
ESPACE V	Right-hand door	●	●	●	●	●	●	○	○	816 263
ESPACE V	Radio	●	●	●	●	●	●	○	●	816 671 263 689 661 665 381 187 161
ESPACE V	Piloted suspension	●	●	●	●	○	●	●	○	816 263
ESPACE V	Parking prox can	●	●	●	●	●	●	○	●	816 263 620 559 273 669 088
ESPACE V	Parking brake	●	●	●	●	○	●	●	●	175 015 816 263
ESPACE V	POWER BACK DOOR	●	●	●	●	○	●	○	○	263 508
ESPACE V	Multimedia interface	●	●	●	○	●	○	○	○	816 222
ESPACE V	Left-hand door	●	●	●	●	●	●	○	○	403 566 286 816 263
ESPACE V	Instrument panel	●	●	●	●	●	●	○	●	816 263 138 460 154 187 689 007 382
ESPACE V	Injection	●	●	●	●	●	●	●	※	345 194 329 435 048 299 726 172 171 170 169 643 329 117 213 435 631 359 602 483 043 296 652 402 252 536 164 549 042 267 587 533 021 215 263 525 229 263
ESPACE V	HEAD UP DISPLAY	●	●	●	○	●	○	○	○	726 263
ESPACE V	Gearbox elec control	●	●	●	●	●	●	●	○	147 816 263
ESPACE V	FRONT CAMERA	●	●	●	●	○	●	○	○	816 263 136
ESPACE V	Driver's position	●	●	●	●	●	●	○	○	403 566 286 816 263
ESPACE V	Distance regulator	●	●	●	●	○	●	○	○	816 263
ESPACE V	Automatic gearbox	●	●	●	●	●	●	●	○	618 064 520 617 532 816 263
ESPACE V	Amplifier	●	●	●	●	●	●	○	○	816 051 263 426
ESPACE V	Airbag / pretensioners	●	●	●	●	●	●	○	●	816 696 398 263 621
ESPACE V	Air conditioning	●	●	●	●	●	●	○	○	304 140 263
ESPACE V	A. B. S.	●	●	●	●	●	●	●	●	400 680 628 640 816 576 401 098 679 639 641 263 677
ESPACE V	4 wheels steering	●	●	●	●	●	●	●	○	570 356 263
KADJAR	Variable P. A. S.	●	●	●	●	○	●	●	○	263
KADJAR	UPC	●	●	●	●	●	●	○	○	632 329 155 138 582 329 435 173
KADJAR	UCH	●	●	●	●	●	●	●	●	726 263 177 318 676 607 603 045 571 730 322 349 174
KADJAR	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	263 141

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
KADJAR	Radio	●	●	●	●	●	●	○	●	816 671 263 263 689 661 665 381 187 161
KADJAR	Parking prox can	●	●	●	●	●	●	○	●	816 263 620 559 273 669 088
KADJAR	Parking brake	●	●	●	●	○	●	●	●	175 015 816 263
KADJAR	Multimedia interface	●	●	●	○	○	○	○	○	816 263
KADJAR	Instrument panel	●	●	●	●	●	●	○	●	816 263 138 460 154 187 689 007 382
KADJAR	Injection	●	●	●	●	●	●	●	※	345 194 329 435 048 434 433 432 431 299 726 172 171 170 169 437 338 533 643 329 359 728 014 355 117 213 435 631 359 111 602 483 043 296 652 402 252 536 267 164 361 549 042 112 267 484 587 533 021 215 263 525 229 212 263
KADJAR	FRONT CAMERA	●	●	●	●	○	●	○	○	263 136
KADJAR	Distance regulator	●	●	●	○	○	○	○	○	816 263
KADJAR	Automatic gearbox	●	●	●	●	※	●	※	○	308 518 517 522 519 617 817 820 532 816 128 244 263 524
KADJAR	Amplifier	●	●	●	●	●	●	○	○	816 051 263 426
KADJAR	Airbag / pretensioners	●	●	●	●	●	●	○	●	816 696 398 263 621
KADJAR	Air conditioning	●	●	●	●	●	●	○	○	304 140 263
KADJAR	A. B. S.	●	●	●	●	●	●	●	●	013 628 820 640 576 401 098 679 639 263
KADJAR	4 wheels drive	●	●	●	●	○	●	○	○	263 263
KANGOO	Supervisor	●	●	●	●	●	※	○	○	553 096 001 807 768 819
KANGOO	Inverter	●	●	●	●	●	○	○	○	
KANGOO	Injection	●	●	●	●	●	※	※	●	399 726 697 239 635 328 439 530 215 412 525 714 234 212 263 790 748 805 765 507 165 664 509 037 307 758 178 353 646 512 785 743 804 764 813 775 785 743 789 747
KANGOO	Immobiliser	●	●	●	●	●	●	●	○	535 534 129 181
KANGOO	Heater	●	●	●	●	●	●	○	○	
KANGOO	GAS INJ.	●	●	●	●	●	●	●	※	
KANGOO	Connection unit	●	●	●	●	●	○	●	○	594 454 767 737 776 814 058 547
KANGOO	Automatic gearbox	●	●	●	●	●	●	●	※	436 157 060 392 038 235 427 041 611 123 678 738 779 785 743 438 821 819 819
KANGOO	Airbag / pretensioners	●	●	●	●	※	●	●	※	622 348 147 555 132 696 398 820 762 803 801 786
KANGOO	Air conditioning	●	●	●	●	●	●	●	○	820 759 142 150 223 623 313 081 771 754 763 808 769 794 752 792 750 798 757
KANGOO	A. B. S.	●	●	●	●	●	●	●	○	820 628
KANGOO II	Variable P. A. S.	●	●	●	●	○	●	●	●	819 641 816 263 414
KANGOO II	UPC	●	●	●	●	●	●	○	●	820 716 816 263
KANGOO II	UCH	●	●	●	●	●	●	●	●	816 104 648 263
KANGOO II	Tyres	●	●	●	○	○	○	●	○	263
KANGOO II	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	263 141 137

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
KANGOO II	Radio	●	●	●	●	●	●	○	●	151 819 816 263 662 102 187
KANGOO II	Parking assistance	●	●	●	●	○	●	○	●	816 263 669 715 088
KANGOO II	Multimedia interface	●	●	●	●	●	●	○	●	816 263 395 420 545 711
KANGOO II	Multimed. connection	●	●	●	●	○	●	○	○	816 820 263 653
KANGOO II	Instrument panel	●	●	●	●	●	●	○	●	137 052 052 379 379 052 052 379 379 293 292 052 379 583 820 261 699 444 443 442 441 816 727 080 263 087 642 351 330 606 269 502 687 257 584 460 605 162 307 396 678 462 187 300 383 006 190 126 659 007 186 382
KANGOO II	Injection	●	●	●	●	●	●	●	※	473 645 299 399 726 697 172 171 170 169 437 338 108 361 008 020 105 627 241 328 597 216 725 164 549 042 253 347 291 112 504 267 484 587 044 533 482 530 215 525 513 229 212 263
KANGOO II	Communications unit	●	●	●	●	●	●	○	●	816 820 263 222 153 187
KANGOO II	Automatic gearbox	●	●	●	●	●	●	●	○	821 427 820 816 060 263
KANGOO II	Airbag / pretensioners	●	●	●	●	●	●	○	●	816 696 398 555 263 621 202 486 495 197 280 275 593 391 592 281 389 543 562 276
KANGOO II	Air conditioning	●	●	●	●	●	●	○	●	816 263 095 327 207 304
KANGOO II	Adaptation unit	●	●	●	●	○	●	●	○	263
KANGOO II	A. B. S.	●	●	●	●	●	●	※	○	248 059 515 628 820 716 816 094 124 263
KANGOO MUX	Injection	●	●	●	●	●	●	※	※	399 726 697 239 635 328 530 215 525 714 234 212 263 790 748 805 765 165 664 509 037 307 178 353 785 743 813 775
KANGOO MUX	Immobiliser	●	●	●	●	●	※	●	○	377 516
KANGOO MUX	GAS INJ.	●	●	●	●	●	●	※	※	
KANGOO MUX	Connection unit	●	●	●	●	●	●	●	●	349 668 174 068 610
KANGOO MUX	Automatic gearbox	●	●	●	●	●	●	●	※	436 157 060 264 392 038 235 427 041 611 123 678 821 819
KANGOO MUX	Airbag / pretensioners	●	●	●	●	※	●	●	●	622 348 147 555 819
KANGOO MUX	A. B. S.	●	●	●	●	●	※	●	※	094 820 628
KANGOO VLL	Variable P. A. S.	●	●	●	●	○	○	●	○	819 816 263
KANGOO VLL	UCH	●	●	●	●	●	●	○	●	816 263 599
KANGOO VLL	Tracker	●	●	●	●	○	●	○	●	726 263 254 045 666 601
KANGOO VLL	Injection	●	●	●	●	●	●	※	※	299 816 399 726 172 171 170 169 338 216 046 267 587 533 530 263 513 229 212 263
KANGOO VLL	Airbag / pretensioners	●	●	●	●	○	●	○	●	820 696 398 263
KANGOO VLL	A. B. S.	●	●	●	●	●	●	●	○	628 820 816 263
KANGOO ZE/StopStart/PH2	Variable P. A. S.	●	●	●	●	○	●	●	●	819 641 263 414
KANGOO ZE/StopStart/PH2	UPC	●	●	●	●	●	●	○	●	476 475 472 469 091 092 093 090 159 160 434 433 432 431 582 820 816 109 109 430 435 173 263 047 647

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
KANGOO ZE/StopStart/PH2	UCH	●	●	●	●	●	●	○	●	104 648 263 667
KANGOO ZE/StopStart/PH2	Tyres	●	●	●	●	○	●	●	○	263
KANGOO ZE/StopStart/PH2	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	※	816 263 141
KANGOO ZE/StopStart/PH2	Radio	●	●	●	●	●	●	○	●	819 816 263 581 263 168 561 649 574 420 381 227 161 071 050 256 711 653
KANGOO ZE/StopStart/PH2	Parking prox can	●	●	●	●	●	●	○	●	263 088
KANGOO ZE/StopStart/PH2	Parking assistance	●	●	●	●	●	●	○	●	263 669 088
KANGOO ZE/StopStart/PH2	PEB	●	●	●	●	○	●	●	○	371 263
KANGOO ZE/StopStart/PH2	Multimedia interface	●	●	●	●	●	●	○	○	263 331 665 660
KANGOO ZE/StopStart/PH2	Multimed. connection	●	●	●	●	○	●	○	○	820 222 263
KANGOO ZE/StopStart/PH2	LBC2	●	●	●	※	○	※	※	○	630 263
KANGOO ZE/StopStart/PH2	LBC	●	●	●	●	○	●	●	○	416 629 673 674 263
KANGOO ZE/StopStart/PH2	Instrument panel	●	●	●	●	●	●	○	○	052 052 379 379 407 406 405 404 583 699 444 443 442 441 816 727 080 263 606 502 687 460 187 300 383 007
KANGOO ZE/StopStart/PH2	Injection	●	●	●	●	●	●	●	●	329 435 707 048 434 433 432 431 471 470 634 299 726 172 171 170 169 437 338 020 627 108 216 533 643 329 360 359 728 014 355 042 117 213 435 631 359 111 483 043 408 682 296 402 252 536 267 361 164 361 549 042 112 504 267 484 587 044 533 214 021 215 263 525 229 212 263
KANGOO ZE/StopStart/PH2	Heater	●	●	●	●	○	●	○	○	263 245 246
KANGOO ZE/StopStart/PH2	EVC	●	●	●	●	●	●	●	●	674 703 121 208 674 262 263 164 703 326
KANGOO ZE/StopStart/PH2	Communications unit	●	●	●	●	●	●	○	●	816 820 263 222 381 689 187 187 161
KANGOO ZE/StopStart/PH2	CHARGE CONTROLER	●	●	●	●	○	●	○	○	263
KANGOO ZE/StopStart/PH2	BCB	●	●	●	※	※	※	※	○	263
KANGOO ZE/StopStart/PH2	Automatic gearbox	●	●	●	●	●	●	●	○	518 517 522 519 617 532 472 816 384 128 576 244 263 524
KANGOO ZE/StopStart/PH2	Airbag / pretensioners	●	●	●	●	●	●	○	●	696 398 263 621 486 495 197 280 275 284 279 593 391 592 281 389 276
KANGOO ZE/StopStart/PH2	Air conditioning	●	●	●	●	●	●	○	●	140 263 095 327 207 304

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
KANGOO ZE/StopStart/PH2	Adaptation unit	●	●	●	●	○	●	○	○	263
KANGOO ZE/StopStart/PH2	A. B. S.	●	●	●	●	●	●	●	※	013 248 059 515 628 820 716 124 576 098 679 639 263
KOLEOS/QM5	Variable P. A. S.	●	●	●	●	○	●	●	○	263
KOLEOS/QM5	UPC	●	●	●	●	●	●	○	○	263
KOLEOS/QM5	UCH	●	●	●	●	●	●	●	●	726 101 054 263 354 552 045 455 551 322 174 319
KOLEOS/QM5	Tyres	●	●	●	●	※	●	※	○	469 467 263 148
KOLEOS/QM5	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	263 141 137
KOLEOS/QM5	Radio	●	●	●	●	※	●	○	※	819 816 263 581 263 187 161 207 256 653
KOLEOS/QM5	Parking prox can	●	●	●	●	○	●	○	●	820 816 263 615 307 669 088
KOLEOS/QM5	Parking brake	●	●	●	●	●	●	●	●	558 557 086 106 816 596 619 263 711
KOLEOS/QM5	Multimedia interface	●	●	●	●	●	●	○	●	816 706 263 420 545 711 665 660 719
KOLEOS/QM5	Multimed. connection	●	●	●	●	○	●	○	○	469 820 263 653
KOLEOS/QM5	Instrument panel	●	●	●	●	○	●	○	●	625 185 263 685 687 460 154 678 187 383 007
KOLEOS/QM5	Injection	●	●	●	●	●	●	●	※	118 335 340 339 645 299 816 353 726 437 338 333 334 530 108 597 216 725 222 018 019 242 714 525 263
KOLEOS/QM5	Discharge lamp	●	●	●	●	●	●	○	○	211 211 211 211 654 263
KOLEOS/QM5	Communications unit	●	●	●	※	●	※	○	●	816 820 544 263 222 263 381 187 653 161 719
KOLEOS/QM5	Automatic gearbox	●	●	●	●	○	●	○	○	580 263
KOLEOS/QM5	Auto front lighting	●	●	●	●	●	●	○	○	637 263
KOLEOS/QM5	Amplifier	●	●	●	●	●	●	○	●	819 816 051 263 653 137
KOLEOS/QM5	Airbag / pretensioners	●	●	●	●	○	●	○	○	263
KOLEOS/QM5	ADIVI	●	●	●	●	●	●	○	○	263 148
KOLEOS/QM5	A. B. S.	●	●	●	●	●	●	○	○	263
KOLEOS/QM5	4 wheels drive	●	●	●	●	○	●	○	○	263
KWID	Variable P. A. S.	●	●	●	●	○	●	○	○	263
KWID	UCH	●	●	●	●	●	●	●	○	263
KWID	Radio	●	●	●	●	●	●	○	●	819 263 381 161
KWID	Instrument panel	●	●	●	●	●	●	※	●	699 263 138 230
KWID	Injection	●	●	●	●	●	●	●	○	410 299 338 700 267 587 533 263 229 212
KWID	Airbag / pretensioners	●	●	●	●	●	●	○	●	696 398 263
LAGUNA	Voice synthesiser	※	※	※	※	○	※	※	※	428
LAGUNA	Variable P. A. S.	●	●	●	●	●	●	●	○	820 822
LAGUNA	Instrument panel	※	※	※	※	○	※	※	※	231 186 382 428
LAGUNA	Injection	●	●	●	●	●	●	※	※	507 664 037 343 344 785 743 789 747
LAGUNA	Immobiliser	●	●	●	●	●	●	●	○	776 814 767 737 535 534 179 181

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
LAGUNA	Driver's position	●	●	●	●	●	●	●	○	819
LAGUNA	Automatic gearbox	●	●	●	●	●	●	●	○	039
LAGUNA	Airbag / pretensioners	●	●	●	●	※	●	●	○	132 696 398 820 762 803 801 786
LAGUNA	Air conditioning	●	●	●	●	○	●	●	○	
LAGUNA	A. B. S.	●	●	●	●	●	※	●	○	124 820
LAGUNA II	UCH	●	●	●	●	●	●	○	●	119 708 240 816 380 692 100 099 103 526 467 268 263 462 396 686 510 722 061 698 316 188 067 668 370 115 114 069 176 411 057 224 608 322 687 207 174 550 307 319
LAGUNA II	Parking assistance	●	●	●	●	○	●	○	●	816 263 669 715 088
LAGUNA II	Instrument panel	●	●	●	●	※	●	○	●	261 699 444 443 442 441 185 816 263 107 605 459 458 702 701 465 464 162 307 396 065 688 678 462 187 722 300 719 689 383 017 305 481 691 659 007 575
LAGUNA II	Injection	●	●	●	●	●	●	※	※	645 299 816 353 726 178 530 108 597 216 725 530 263 525 229 212 664 037
LAGUNA II	Heater	●	●	●	●	●	●	○	○	263 245 246
LAGUNA II	GAS INJ.	●	●	●	●	●	●	○	●	263
LAGUNA II	Discharge lamp	●	●	●	●	●	●	○	●	816 263 719 136
LAGUNA II	Automatic gearbox	●	●	●	●	●	●	※	※	821 427 820 816 016 436 157 060 263 264 427 041 611 123 678
LAGUNA II	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 820 696 398 622 348 147 555 263 621
LAGUNA II	Air conditioning	●	●	●	●	●	●	○	●	816 263 251 686 189 134 325 719
LAGUNA II	A. B. S.	●	●	●	●	●	●	●	●	628 820 816 124 263 716 307 005
LAGUNA III	Variable P. A. S.	●	●	●	●	○	●	●	○	136 263
LAGUNA III	UPC	●	●	●	●	●	●	○	※	476 475 472 469 091 092 093 090 159 160 434 433 432 431 138 582 816 109 109 430 435 173 263 647
LAGUNA III	UCH	●	●	●	●	●	●	●	●	708 726 704 542 101 467 263 367 370
LAGUNA III	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	○	263 141
LAGUNA III	Right-hand door	●	○	○	○	○	○	○	○	140
LAGUNA III	Radio	●	●	●	※	※	※	○	※	819 816 263 581 263 168 662 381 227 161 256 653
LAGUNA III	Passenger's door	●	●	●	●	●	●	○	○	816 260 263
LAGUNA III	Parking prox can	●	●	●	●	※	●	○	●	113 816 263 289 272 669 088
LAGUNA III	Parking brake	●	●	●	●	●	●	●	●	055 816 336 466 596 263
LAGUNA III	Multimedia interface	●	●	●	●	●	●	○	※	816 263 665 660
LAGUNA III	Multimed. connection	●	●	●	●	○	●	○	○	820 222 263
LAGUNA III	Lighting	●	●	●	●	●	●	○	●	654 263
LAGUNA III	Left-hand door	●	○	○	○	○	○	○	○	140
LAGUNA III	Instrument panel	●	●	●	●	●	●	○	●	816 185 263 460 162 154 187 689 383 007

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
LAGUNA III	Injection	●	●	●	●	●	●	●	●	434 433 432 431 478 044 118 645 299 469 726 530 437 338 008 020 530 108 597 216 725 435 359 043 408 682 296 046 536 164 549 042 253 347 112 504 267 484 222 587 044 533 021 215 714 525 513 229 212 263
LAGUNA III	Driver's position	●	●	●	●	○	●	○	○	816 528 263
LAGUNA III	Driver's door	●	●	●	●	●	●	○	○	816 260 263
LAGUNA III	Communications unit	●	●	●	●	●	●	○	※	816 820 263 263 381 187 161
LAGUNA III	Automatic gearbox	●	●	●	●	●	●	※	※	518 517 522 519 617 532 472 816 128 576 244 263 524 264
LAGUNA III	Amplifier	●	●	●	●	●	●	○	●	819 051 263 649
LAGUNA III	Airbag / pretensioners	●	●	●	●	○	●	○	●	486 816 696 398 555 263 621
LAGUNA III	Air conditioning	●	●	●	●	●	●	○	●	140 469 816 263 304
LAGUNA III	A. B. S.	●	●	●	●	●	●	●	●	628 820 816 124 098 679 639 263
LAGUNA III	4 wheels steering	●	●	●	●	●	●	●	○	570 356 263
LAGUNA PHASE 2	Voice synthesiser	※	※	※	※	○	※	※	※	428
LAGUNA PHASE 2	Variable P. A. S.	●	●	●	●	●	●	●	○	820 822
LAGUNA PHASE 2	Instrument panel	※	※	※	※	○	※	※	※	231 186 382 428
LAGUNA PHASE 2	Injection	●	●	●	●	●	●	※	※	530 507 664 037 178 353 785 743 813 775 785 743 789 747
LAGUNA PHASE 2	Immobiliser	●	●	●	●	●	●	●	○	776 814 767 737 535 534 179 181
LAGUNA PHASE 2	GAS INJ.	●	●	●	●	●	●	●	●	
LAGUNA PHASE 2	Driver's position	●	●	●	●	●	●	●	○	819
LAGUNA PHASE 2	Automatic gearbox	●	●	●	●	●	●	●	○	738 779 785 039 438 821 819
LAGUNA PHASE 2	Airbag / pretensioners	●	●	●	●	※	●	●	※	132 696 398 820 762 803 801 786
LAGUNA PHASE 2	Air conditioning	●	●	●	●	○	●	●	○	
LAGUNA PHASE 2	A. B. S.	●	●	●	●	●	※	●	○	124 820
LAGUNAII PH2	UCH	●	●	●	●	●	●	○	●	119 708 240 816 010 380 692 100 099 311 103 526 467 268 263 539 357 462 396 686 510 713 722 061 698 316 188 323 067 668 370 393 320 115 114 719 069 650 176 411 057 610 551 224 608 184 322 687 207 174 550 307 319 176
LAGUNAII PH2	Radio	●	○	○	○	○	○	○	○	
LAGUNAII PH2	Parking brake	●	●	●	●	●	●	●	●	106 816 600 724 596 263 711
LAGUNAII PH2	Parking assistance	●	●	●	●	○	●	○	●	113 816 263 669 715 088
LAGUNAII PH2	Lighting	●	●	●	●	●	●	○	●	654 816 263 624 182 062 209 719
LAGUNAII PH2	Instrument panel	●	●	●	●	●	●	○	●	261 699 444 443 442 441 816 263 107 605 162 307 396 065 688 678 462 187 722 300 719 689 383 305 481 691 659 007 575
LAGUNAII PH2	Injection	●	●	●	●	●	●	※	※	645 299 644 816 399 353 726 697 178 338 530 108 597 216 725 222 263 525 229 212 263 664 037

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
LAGUNAII PH2	Heater	●	●	●	●	●	●	○	○	263 245 246
LAGUNAII PH2	Hands-free kit	●	●	●	●	●	●	○	●	106 056 616 413 816 820 263 381
LAGUNAII PH2	Communications unit	●	●	●	●	●	●	○	●	132 422 816 168 222 263 719
LAGUNAII PH2	Automatic gearbox	●	●	●	●	●	●	※	○	821 427 816 016 060 263 264
LAGUNAII PH2	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 820 696 398 348 147 555 263 621
LAGUNAII PH2	Air conditioning	●	●	●	●	●	●	○	●	816 263 251 686 189 134 325 719
LAGUNAII PH2	A. B. S.	●	●	●	●	●	●	●	●	332 122 059 515 628 820 716 816 124 098 679 639 263 307
LATITUDE/SM5	Variable P. A. S.	●	●	●	●	○	●	●	○	816 263
LATITUDE/SM5	UPC	●	●	●	●	●	●	○	●	138 582 816 173 263 218 647
LATITUDE/SM5	UCH	●	●	●	●	●	●	●	●	726 542 101 626 467 263 130
LATITUDE/SM5	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	○	816 263 141
LATITUDE/SM5	Right-hand door	●	○	○	●	○	●	○	○	140
LATITUDE/SM5	Radio	●	●	●	●	●	●	○	●	819 816 263 581 263 168 561 381 227 161 256 653
LATITUDE/SM5	Passenger's door	●	●	●	●	●	●	○	○	263
LATITUDE/SM5	Parking prox can	●	●	●	●	※	●	○	●	113 816 263 289 272 669 088
LATITUDE/SM5	Parking brake	●	●	●	●	●	●	●	●	055 816 336 466 596 263
LATITUDE/SM5	Multimedia interface	●	●	●	●	●	●	○	●	263 665 660
LATITUDE/SM5	Multimed. connection	●	●	●	●	○	●	○	○	816 820 222 263
LATITUDE/SM5	Lighting	●	●	●	●	●	●	○	●	654 263
LATITUDE/SM5	Left-hand door	●	○	○	●	○	●	○	○	140
LATITUDE/SM5	Instrument panel	●	●	●	●	●	●	○	●	816 185 263 687 131 460 162 307 154 678 187 689 383 007
LATITUDE/SM5	Injection	●	●	●	●	●	●	●	●	329 435 707 048 434 433 432 431 471 470 478 295 118 634 645 299 726 437 338 008 020 333 334 530 108 597 216 725 533 643 329 359 728 014 355 435 359 111 043 408 682 296 046 536 267 164 361 549 042 253 347 112 504 267 484 222 587 044 533 018 019 242 021 215 714 612 613 525 513 229 212 263
LATITUDE/SM5	Driver's position	●	●	●	●	○	●	○	○	528 263
LATITUDE/SM5	Driver's door	●	●	●	●	●	●	○	○	263
LATITUDE/SM5	Communications unit	●	●	●	※	●	※	○	※	816 820 263 263 381 187 161
LATITUDE/SM5	Automatic gearbox	●	●	●	●	●	●	※	○	518 517 522 519 617 820 532 472 816 384 128 576 244 263 524
LATITUDE/SM5	Amplifier	●	●	●	●	●	○	○	●	819 051 263 649
LATITUDE/SM5	Airbag / pretensioners	●	●	●	●	○	●	○	●	696 398 263 621
LATITUDE/SM5	Air conditioning	●	●	●	●	●	●	○	●	140 816 263 304
LATITUDE/SM5	ADIVI	●	●	●	●	○	●	○	○	816 263
LATITUDE/SM5	A. B. S.	●	●	●	●	●	●	●	●	628 820 640 816 124 098 679 639 263

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
LOGGY	Variable P. A. S.	●	●	●	●	○	●	●	○	819 263
LOGGY	UCH	●	●	●	●	●	●	●	●	726 435 329 263 573 607 045 610 322
LOGGY	Radio	●	●	●	●	●	●	○	●	819 263 263 561 381 161
LOGGY	Instrument panel	●	●	●	●	●	●	○	●	699 263 089 138 257 460 162 307 154 187 007
LOGGY	Injection	●	●	●	●	●	●	●	●	329 435 707 048 434 433 432 431 474 471 470 634 299 358 726 172 171 170 169 437 338 361 020 259 627 108 216 267 267 267 267 533 643 329 360 359 728 014 355 042 117 213 435 631 359 111 483 043 408 682 296 402 252 267 046 536 267 365 364 363 362 361 164 361 549 042 253 291 112 504 267 484 587 044 533 214 021 215 263 525 513 229 212 263 148
LOGGY	HANDS-FREE MODULE	●	●	●	●	●	●	●	●	816 263 145 130 573 571 312 663 144 149 148 554 540 012 152 531 143
LOGGY	Automatic gearbox	●	●	●	●	●	●	●	○	821 427 820 816 579 578 577 060 263
LOGGY	Airbag / pretensioners	●	●	●	●	●	●	○	●	816 696 398 555 263
LOGGY	A. B. S.	●	●	●	●	●	●	●	※	628 820 640 816 124 098 679 639 263
LOGAN	Variable P. A. S.	●	●	●	●	○	●	●	●	136 819 816 263
LOGAN	UCH	●	●	●	●	●	●	○	●	816 263 599 266
LOGAN	Tracker	●	●	●	●	○	●	○	●	726 263 254 045 666 601
LOGAN	Radio	●	●	●	●	●	●	○	●	819 263 581 263 381 161
LOGAN	Injection	●	●	●	●	●	●	※	※	473 645 299 816 399 726 172 171 170 169 437 338 361 008 020 105 627 216 670 360 341 046 164 549 042 253 291 112 267 484 587 044 533 530 215 263 513 229 212 263
LOGAN	GAS INJ.	●	●	●	●	●	●	○	●	816 263
LOGAN	Automatic gearbox	●	●	●	●	●	●	●	○	821 427 820 816 060 263
LOGAN	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 696 398 147 555 263 621 498 200 202 496 198 486 288 287 350 495 197 604 605 485 283 278
LOGAN	A. B. S.	●	●	●	●	●	●	●	○	628 820 716 816 094 124 263
LOGAN II/SANDERO II	Variable P. A. S.	●	●	●	●	○	●	●	○	819 263
LOGAN II/SANDERO II	UCH	●	●	●	●	●	●	●	●	726 435 329 263 573 607 045 610 322
LOGAN II/SANDERO II	Tracker	●	●	●	●	○	●	○	●	726 263 254 045 666 601
LOGAN II/SANDERO II	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	263 141
LOGAN II/SANDERO II	Radio	●	●	●	●	●	●	○	●	819 263 263 561 381 161
LOGAN II/SANDERO II	Multimedia interface	●	●	●	●	●	●	○	○	263 331 665 660
LOGAN II/SANDERO II	Instrument panel	●	●	●	●	●	●	○	●	699 263 089 138 257 460 162 307 154 187 007

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
LOGAN II/SANDERO II	Injection	●	●	●	●	●	●	●	●	329 435 048 434 433 432 431 299 726 172 171 170 169 437 338 361 020 259 627 216 267 267 267 267 643 329 360 359 728 042 117 213 435 631 359 483 043 408 682 296 402 252 267 046 536 267 365 364 363 362 361 164 361 549 042 291 112 267 484 587 044 533 214 021 215 263 525 513 229 212 263 452 148 740
LOGAN II/SANDERO II	HANDS-FREE MODULE	●	●	●	●	●	●	●	●	816 263 145 130 573 571 312 663 144 149 148 554 540 012 152 531 143
LOGAN II/SANDERO II	Automatic gearbox	●	●	●	●	●	●	●	○	821 427 820 816 579 578 577 060 263
LOGAN II/SANDERO II	Airbag / pretensioners	●	●	●	●	●	●	○	●	816 696 398 555 263
LOGAN II/SANDERO II	Air conditioning	●	●	●	●	●	●	○	●	140 263
LOGAN II/SANDERO II	A. B. S.	●	●	●	●	●	●	●	※	013 628 820 640 816 124 576 401 098 679 639 263
MAST RWD PH2	Injection	●	●	●	●	●	●	○	●	239 009 234
MAST RWD PH2	Immobiliser	●	●	●	●	●	※	●	○	377 516
MAST RWD PH2	Connection unit	●	●	●	●	●	●	●	●	563 068 185
MAST RWD PH2	Airbag / pretensioners	●	●	●	●	○	●	●	●	348 147 555
MAST RWD PH2	Adaptation unit	●	●	●	●	○	○	○	○	
MAST RWD PH2	A. B. S.	●	●	●	●	●	●	※	○	628
MAST RWD PH3	UCH	●	●	●	●	●	●	○	●	816 377 337 516 263 174
MAST RWD PH3	Injection	●	●	●	●	●	●	●	●	645 299 726 530 597 216 725 525 263
MAST RWD PH3	Communications unit	●	●	●	●	●	●	○	●	132 816 263
MAST RWD PH3	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 820 696 398 348 147 555 263
MAST RWD PH3	Adaptation unit	●	●	●	●	○	●	●	○	263
MAST RWD PH3	A. B. S.	●	●	●	●	●	●	●	●	628 820 716 816 083 124 263
MASTER	Piloted suspension	●	●	●	●	○	●	●	○	819
MASTER	Injection	●	●	●	●	●	※	※	※	717 239 215 234 790 748 805 765 507 664 037 781 740 178 353 783 744 782 741 785 743 793 751 813 775 487
MASTER	Immobiliser	●	●	●	●	●	●	●	○	535 534 129 181
MASTER	Connection unit	●	●	●	●	●	○	●	○	594 454 767 737 776 814 058 547
MASTER	Airbag / pretensioners	●	●	●	●	※	●	●	※	132 696 398 820 786
MASTER	A. B. S.	●	●	●	●	●	○	●	○	
MASTER III	Variable P. A. S.	●	●	●	●	○	●	○	●	816 263 681
MASTER III	UREA DOSING CONTROL MODULE	●	●	●	●	●	●	●	○	816 027 022 024 029 026 033 030 028 032 025 263 023 031 034

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
MASTER III	UPC	●	●	●	●	●	●	○	●	476 475 472 469 091 092 093 090 159 160 434 433 432 431 582 820 816 109 109 430 435 173 263 047 647 274
MASTER III	UCH	●	●	●	●	●	●	○	●	726 104 376 648 263 667
MASTER III	Tyres	●	●	●	●	○	●	●	○	263
MASTER III	Tracker	●	●	●	●	○	●	○	●	726 263 254 045 666 601
MASTER III	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	※	816 263 141
MASTER III	Smart keyless	●	●	●	●	○	●	○	○	282 277 255 369 368 816 263 317
MASTER III	Radio	●	●	●	●	●	●	○	●	819 816 263 581 263 168 561 649 574 420 381 227 161 071 050 256 711 653
MASTER III	Parking assistance	●	●	●	●	●	●	○	●	263 669 088
MASTER III	Multimedia interface	●	●	●	●	●	●	○	○	816 263 331 665 660
MASTER III	Multimed. connection	●	●	●	●	○	●	○	○	820 222 263
MASTER III	Lighting	●	●	●	●	●	●	○	○	263
MASTER III	Instrument panel	●	●	●	●	●	●	○	○	052 052 379 379 583 699 444 443 442 441 816 727 080 263 606 502 687 460 187 300 383 007
MASTER III	Injection	●	●	●	●	●	●	●	●	329 435 434 433 432 431 299 726 172 171 170 169 437 338 008 020 259 627 108 216 643 314 042 117 213 435 359 602 483 043 408 682 296 652 511 536 164 549 042 253 267 484 076 044 021 215 263 513 229 212 263
MASTER III	FRONT CAMERA	●	●	●	●	○	●	○	○	222 263
MASTER III	Communications unit	●	●	●	●	●	●	○	●	816 820 263 222 381 689 187 187 161
MASTER III	Automatic gearbox	●	●	●	●	●	●	●	○	410 521 817 818 820 532 127 263 524 525
MASTER III	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 696 398 147 555 263 621 486
MASTER III	Air conditioning	●	●	●	●	●	●	○	※	140 469 816 263
MASTER III	Adaptation unit	●	●	●	※	○	※	○	○	263 263
MASTER III	A. B. S.	●	●	●	●	●	●	●	※	013 400 628 820 640 816 094 124 576 098 679 639 263 677
MASTER PH2	Piloted suspension	●	●	●	●	○	●	●	○	819
MASTER PH2	Parking prox can	●	●	●	●	○	○	○	●	669 715 088
MASTER PH2	Parking assistance	●	●	●	●	○	○	○	●	669 715 088
MASTER PH2	Injection	●	●	●	●	●	●	○	●	717 239 009 215 234 037 178 353 487
MASTER PH2	Immobiliser	●	●	●	●	●	※	●	○	377 516
MASTER PH2	Connection unit	●	●	●	●	●	●	●	●	068 163
MASTER PH2	Automatic gearbox	●	●	●	●	●	●	●	○	127 524 525 264
MASTER PH2	Airbag / pretensioners	●	●	●	●	○	●	●	●	348 147 555
MASTER PH2	Adaptation unit	●	●	●	●	○	○	○	○	
MASTER PH2	A. B. S.	●	●	●	●	●	●	○	○	
MASTER PH3	UCH	●	●	●	●	●	●	○	●	816 726 377 337 516 263 174

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
MASTER PH3	Tracker	●	●	●	●	○	●	○	●	726 263 254 045 666 601
MASTER PH3	Piloted suspension	●	●	●	●	●	●	○	○	523 263
MASTER PH3	Parking assistance	●	●	●	●	○	●	○	●	816 263 669 715 088
MASTER PH3	Injection	●	●	●	●	●	●	●	●	468 709 710 645 299 726 437 338 105 530 108 597 216 725 222 214 263 525 229 263 096 664 037 178 353
MASTER PH3	Communications unit	●	●	●	●	●	●	○	●	132 816 263
MASTER PH3	Automatic gearbox	●	●	●	●	●	●	○	○	521 817 818 820 532 816 127 524 525 264
MASTER PH3	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 820 696 398 348 147 555 263
MASTER PH3	Adaptation unit	●	●	●	●	○	●	●	○	263
MASTER PH3	A. B. S.	●	●	●	●	●	●	※	※	716 628 820 640 083 263
MASTER RWD	Injection	●	●	●	●	○	○	○	○	
MASTER RWD	Immobiliser	●	●	●	●	●	●	●	○	535 534 129 181
MASTER RWD	Connection unit	●	●	●	●	●	○	●	○	594 454 767 737 776 814 058 547
MASTER RWD	Airbag / pretensioners	●	●	●	●	●	●	●	●	819
MEGANE II	Variable P. A. S.	●	●	●	●	○	●	●	●	819 641 816 136 263 537 538
MEGANE II	UPC	●	●	●	●	●	●	○	●	716 816 263 049
MEGANE II	UCH	●	●	●	●	●	●	○	●	424 240 816 125 694 101 467 541 263 556 564 693 125 608 258 236 322 274 207 068 307 176
MEGANE II	Tracker	●	●	●	●	○	●	○	●	726 263 254 045 666 601
MEGANE II	Sunroof control unit	●	●	●	●	●	●	●	●	726 263 595
MEGANE II	Right coslad	●	●	●	●	●	●	○	●	816 263 135 719 136
MEGANE II	Parking assistance	●	●	●	●	○	●	○	●	113 816 263 669 715 088
MEGANE II	Lighting	●	●	●	●	●	●	○	●	654 816 263 624 062 209 719
MEGANE II	Left coslad	●	●	●	●	●	●	○	●	816 263 135 719 136
MEGANE II	Instrument panel	●	●	●	●	●	●	○	●	261 699 444 443 442 441 816 263 502 605 162 307 396 688 154 678 462 187 300 719 481 586 126 116 659 095 575 718 382
MEGANE II	Injection	●	●	●	●	●	●	※	※	645 299 644 399 353 726 697 178 172 171 170 169 338 105 627 530 108 241 597 216 725 222 482 530 263 525 513 212 263 664
MEGANE II	GAS INJ.	●	●	●	●	●	●	○	●	816 263
MEGANE II	Discharge lamp	●	●	●	●	○	●	○	●	816 263 135
MEGANE II	Communications unit	●	●	●	●	●	●	○	●	132 816 263
MEGANE II	Automatic gearbox	●	●	●	●	●	●	※	○	821 427 820 816 157 060 263
MEGANE II	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 820 696 398 147 555 263 374 373 375 372 302 301 077 078 079 492 195 206 493 621 203 271 196 494 560 491 500 202 486 488 192 191 489 568 567 288 287 167 166 719 499 201
MEGANE II	Air conditioning	●	●	●	●	○	●	○	●	816 263 327 719

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
MEGANE II	A. B. S.	●	●	●	●	●	●	●	○	705 248 059 515 628 820 716 816 094 124 220 263
MEGANE III/SCENIC III	Variable P. A. S.	●	●	●	●	●	●	●	○	641 263
MEGANE III/SCENIC III	UPC	●	●	●	●	●	●	○	○	476 475 472 469 091 092 093 090 159 160 434 433 432 431 582 816 109 109 430 435 173 263 647
MEGANE III/SCENIC III	UCH	●	●	●	●	●	●	●	●	477 726 704 101 467 263 638 146
MEGANE III/SCENIC III	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	※	816 263 141
MEGANE III/SCENIC III	Sunroof control unit	●	●	●	●	●	●	○	○	138 139 141 263
MEGANE III/SCENIC III	Radio	●	●	●	●	●	●	○	●	819 816 263 581 263 168 662 561 381 227 161 256 711 653
MEGANE III/SCENIC III	Passenger's door	●	●	●	●	○	●	○	○	816 263
MEGANE III/SCENIC III	Parking prox can	●	●	●	●	※	●	○	●	113 816 263 289 272 669 088
MEGANE III/SCENIC III	Parking brake	●	●	●	●	●	●	●	●	175 015 055 816 263
MEGANE III/SCENIC III	Multimedia interface	●	●	●	●	●	●	○	○	816 263 331 665 660
MEGANE III/SCENIC III	Multimed. connection	●	●	●	●	○	●	○	○	820 222 263
MEGANE III/SCENIC III	Lighting	●	●	●	○	●	○	○	●	654 263
MEGANE III/SCENIC III	Instrument panel	●	●	●	●	●	●	○	●	211 440 699 443 185 816 727 080 185 263 695 138 687 460 162 307 154 187 689 383 007
MEGANE III/SCENIC III	Injection	●	●	●	●	●	●	●	●	329 435 707 048 434 433 432 431 471 470 478 634 645 299 726 172 171 170 169 437 338 361 008 020 216 530 108 597 216 725 267 267 267 533 643 329 359 728 014 355 117 085 213 435 631 359 111 602 483 043 408 682 296 652 402 252 267 046 511 536 267 365 364 363 362 361 164 361 549 042 253 347 291 112 504 267 484 076 587 044 533 021 215 714 263 525 513 229 212 263
MEGANE III/SCENIC III	FRONT CAMERA	●	●	●	●	○	●	○	○	222 263 136
MEGANE III/SCENIC III	Driver's position	●	●	●	●	○	●	○	○	528 263
MEGANE III/SCENIC III	Driver's door	●	●	●	●	●	●	○	○	140 816 263
MEGANE III/SCENIC III	Communications unit	●	●	●	●	●	●	○	※	816 820 263 263 381 187 161
MEGANE III/SCENIC III	Automatic gearbox	●	●	●	●	●	●	※	○	518 517 522 519 617 820 532 472 816 384 128 576 244 263 524 264
MEGANE III/SCENIC III	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 696 398 555 263 621

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
MEGANE III/SCENIC III	Air conditioning	●	●	●	●	●	●	○	●	140 816 263
MEGANE III/SCENIC III	A. B. S.	●	●	●	●	●	●	●	●	628 820 816 124 401 098 679 639 263
MEGANE IV	Variable P.A.S.	●	●	●	●	○	●	●	○	816 263
MEGANE IV	UPC	●	●	●	●	●	●	○	○	632 329 155 138 582 329 435 173
MEGANE IV	UCH	●	●	●	●	●	●	●	●	726 263 177 318 676 607 603 045 571 730 322 349 174
MEGANE IV	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	263 141
MEGANE IV	Supervisor	●	●	●	●	●	●	●	○	263
MEGANE IV	Radio	●	●	●	●	●	●	○	●	816 671 141 263 689 661 665 381 187 161
MEGANE IV	Parking prox can	●	●	●	●	●	●	○	●	816 263 620 559 273 669 088
MEGANE IV	Parking brake	●	●	●	●	○	●	●	●	175 015 816 263
MEGANE IV	PEB	●	●	●	●	○	●	○	○	263
MEGANE IV	Multimedia interface	●	●	●	※	●	※	○	○	816 263 141 222
MEGANE IV	Left-hand door	●	●	●	●	●	●	○	○	403 566 286 816 263
MEGANE IV	LBC2	●	●	●	○	○	○	○	○	630 263
MEGANE IV	LBC	●	●	●	●	●	●	○	○	629 263
MEGANE IV	Instrument panel	●	●	●	●	●	●	○	●	816 263 138 460 154 187 689 007 382
MEGANE IV	Injection	●	●	●	●	●	●	●	※	345 194 329 435 048 434 433 432 431 299 726 172 171 170 169 437 338 700 533 643 329 359 728 014 355 117 213 435 631 359 111 602 483 043 682 296 652 402 252 536 267 164 361 549 042 112 267 484 587 533 021 215 263 525 229 212 263
MEGANE IV	HEAD UP DISPLAY	●	●	●	○	●	○	○	○	726 263
MEGANE IV	FRONT CAMERA	●	●	●	●	○	●	○	○	816 263 136
MEGANE IV	Driver's position	●	●	●	●	●	●	○	○	403 566 286 816 263
MEGANE IV	Distance regulator	●	●	●	●	○	●	○	○	816 263
MEGANE IV	Automatic gearbox	●	●	●	●	●	●	※	○	618 064 308 518 517 522 519 520 617 817 820 532 816 128 244 263 524
MEGANE IV	Amplifier	●	●	●	●	●	●	○	○	816 051 263 426
MEGANE IV	Airbag / pretensioners	●	●	●	●	●	●	○	●	816 696 398 263 621
MEGANE IV	Air conditioning	●	●	●	●	●	●	○	○	304 140 263
MEGANE IV	A. B. S.	●	●	●	●	●	●	●	●	400 680 628 640 816 576 401 098 679 639 641 263 677
MEGANE IV	4 wheels steering	●	●	●	●	●	●	●	○	570 356 263
MEGANE/SCEN.	Tyres	●	●	●	●	●	○	●	●	526 268 719
MEGANE/SCEN.	Injection	●	●	●	●	●	※	※	※	239 243 530 215 714 234 790 748 805 765 507 664 509 037 307 178 353 646 512 785 743 813 775 804 764 813 775 785 743 789 747
MEGANE/SCEN.	Immobiliser	●	●	●	●	●	○	●	●	787 745 233 232 181 129 684 683 011 228

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
MEGANE/SCEN.	Hood control	●	●	●	●	●	●	○	○	
MEGANE/SCEN.	GAS INJ.	●	●	●	●	●	●	●	○	
MEGANE/SCEN.	Driver's position	●	●	●	●	●	●	●	○	819
MEGANE/SCEN.	Connection unit	●	●	●	●	●	○	●	●	
MEGANE/SCEN.	Automatic gearbox	●	●	●	●	●	●	●	※	436 157 060 392 038 235 427 041 611 123 678 738 779 785 039 438 821 819 819
MEGANE/SCEN.	Airbag / pretensioners	●	●	●	●	※	●	●	※	622 348 147 555 132 696 398 820 762 803 801 786
MEGANE/SCEN.	Air conditioning	●	●	●	●	●	●	●	※	820 759 142 150 223 623 313 081 771 754 763 808 769 794 752 390 591 792 750 798 757
MEGANE/SCEN.	A. B. S.	●	●	●	●	●	●	●	○	820 628
MODUS	Variable P. A. S.	●	●	●	●	○	●	●	●	136 819 641 816 263
MODUS	UPC	●	●	●	●	●	●	○	●	716 816 263
MODUS	UCH	●	●	●	●	●	●	○	●	424 816 104 263 694 323 658 002 125 610 730 322 207 176
MODUS	Tyres	●	●	●	●	○	●	○	●	609 240 816 467 526 263 719
MODUS	Parking assistance	●	●	●	●	○	●	○	●	113 816 263 669 715 088
MODUS	Lighting	●	●	●	●	●	●	○	●	654 816 263 158 624 182 062 209 719
MODUS	Instrument panel	●	●	●	●	●	●	○	●	418 417 298 297 699 444 443 442 441 816 263 269 502 162 307 396 688 678 462 187 300 719 383 481 007
MODUS	Injection	●	●	●	●	●	●	※	※	473 645 299 816 399 726 697 172 171 170 169 437 338 361 008 020 105 627 241 597 216 725 164 549 042 253 347 291 112 504 267 484 587 044 533 482 530 215 263 525 513 229 212 263
MODUS	Hands-free kit	●	●	●	●	●	●	○	●	106 056 616 413 816 820 263 381
MODUS	Automatic gearbox	●	●	●	●	●	●	●	○	521 821 427 817 818 820 532 816 127 060 263 524 525 264
MODUS	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 820 696 398 147 555 263 621 203 560 491 500 202 486 488 192 191 489 288 287 167 166 490 193 499 201 811 723 736 285
MODUS	Air conditioning	●	●	●	●	●	●	○	●	816 263 327 719 304
MODUS	A. B. S.	●	●	●	●	●	●	※	○	705 248 059 515 628 820 716 816 094 124 220 263
NEW SM3/FLUENCE/MEGANE	Variable P. A. S.	●	●	●	●	●	●	●	○	641 263
NEW SM3/FLUENCE/MEGANE	UPC	●	●	●	●	●	●	○	※	582 816 173 263 217 219 647
NEW SM3/FLUENCE/MEGANE	UCH	●	●	●	●	●	●	●	●	104 467 263 638 146 393
NEW SM3/FLUENCE/MEGANE	Tracker	●	●	●	●	○	●	○	●	726 263 254 045 666 601
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	※	816 263 141
NEW SM3/FLUENCE/MEGANE	Sunroof control unit	●	●	●	●	●	●	○	○	138 139 263

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
NEW SM3/FLUENCE/MEGANE	Radio	●	●	●	●	●	●	○	●	819 816 263 581 263 168 561 381 227 161 256 711 653
NEW SM3/FLUENCE/MEGANE	Parking prox can	●	●	●	●	※	●	○	●	113 816 263 289 272 669 088
NEW SM3/FLUENCE/MEGANE	Parking brake	●	●	●	●	●	●	●	●	175 015 055 816 263
NEW SM3/FLUENCE/MEGANE	PEB	●	●	●	●	○	●	●	○	263
NEW SM3/FLUENCE/MEGANE	Multimedia interface	●	●	●	●	●	●	○	○	816 263 331 665 660
NEW SM3/FLUENCE/MEGANE	Multimed. connection	●	●	●	●	○	●	○	○	820 222 263
NEW SM3/FLUENCE/MEGANE	Lighting	●	●	●	○	●	○	○	●	654 263
NEW SM3/FLUENCE/MEGANE	LBC2	●	●	●	※	○	※	※	○	630 263
NEW SM3/FLUENCE/MEGANE	LBC	●	●	●	●	○	●	●	○	416 629 673 674 263
NEW SM3/FLUENCE/MEGANE	Instrument panel	●	●	●	●	●	●	○	●	211 440 699 443 185 816 727 080 185 263 138 687 460 162 307 154 678 187 689 383 007
NEW SM3/FLUENCE/MEGANE	Injection	●	●	●	●	●	●	●	●	329 435 048 434 433 432 431 478 299 726 437 338 361 008 020 216 108 216 267 267 267 267 643 329 359 728 117 085 435 359 602 483 043 408 682 296 652 402 252 267 046 536 267 365 364 363 362 361 164 361 549 042 253 347 291 112 504 267 484 587 044 533 021 215 263 525 513 229 212 263 148
NEW SM3/FLUENCE/MEGANE	EVC	●	●	●	●	●	●	●	●	674 703 121 208 674 262 263 164 703 326
NEW SM3/FLUENCE/MEGANE	Driver's door	●	●	●	●	●	●	○	○	140 263
NEW SM3/FLUENCE/MEGANE	Communications unit	●	●	●	※	●	※	○	※	816 820 263 381 187 161
NEW SM3/FLUENCE/MEGANE	BCB	●	●	●	●	※	●	●	※	263 120 366 084
NEW SM3/FLUENCE/MEGANE	Automatic gearbox	●	●	●	●	●	●	※	○	308 518 517 522 519 617 821 427 820 532 472 816 384 128 576 244 060 263 524
NEW SM3/FLUENCE/MEGANE	Amplifier	●	●	●	●	●	●	○	●	819 051 263 649
NEW SM3/FLUENCE/MEGANE	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 696 398 555 263 621
NEW SM3/FLUENCE/MEGANE	Air conditioning	●	●	●	●	●	●	○	●	140 469 816 263
NEW SM3/FLUENCE/MEGANE	A. B. S.	●	●	●	●	※	●	※	※	628 820 816 124 401 098 679 639 263
SANDERO	Variable P. A. S.	●	●	●	●	○	●	●	●	136 819 816 263
SANDERO	UCH	●	●	●	●	●	●	○	●	816 263 599 266
SANDERO	Tracker	●	●	●	●	○	●	○	●	726 263 254 045 666 601

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
SANDERO	Radio	●	●	●	●	●	●	○	●	819 263 581 263 381 161
SANDERO	Injection	●	●	●	●	●	●	※	※	473 645 299 816 399 726 172 171 170 169 437 338 361 008 020 105 627 216 670 360 341 046 164 549 042 253 291 112 267 484 587 044 533 530 215 263 513 229 212 263
SANDERO	GAS INJ.	●	●	●	●	●	●	○	●	816 263
SANDERO	Automatic gearbox	●	●	●	●	●	●	●	○	821 427 820 816 060 263
SANDERO	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 696 398 147 555 263 621 498 200 202 496 198 486 288 287 350 495 197 604 605 485 283 278
SANDERO	A. B. S.	●	●	●	●	●	●	●	○	628 820 716 816 094 124 263
SCENIC II	Variable P. A. S.	●	●	●	●	○	●	●	※	819 641 816 136 263 537 538
SCENIC II	UPC	●	●	●	●	●	●	○	●	716 816 263 049
SCENIC II	UCH	●	●	●	●	●	●	○	●	424 240 816 125 101 467 541 263 556 564 693 125 608 258 236 322 274 207 068 307 176
SCENIC II	Radio	●	※	※	※	※	※	○	※	819 816 263 662 102 187
SCENIC II	Parking prox can	●	●	●	●	○	●	○	●	820 113 816 263 289 272 669 715 088
SCENIC II	Parking brake	●	●	●	●	●	●	※	●	106 816 600 724 596 263 711
SCENIC II	Parking assistance	●	●	●	●	○	●	○	●	113 816 263 669 715 088
SCENIC II	Multimedia interface	●	●	●	●	●	●	○	●	816 222 263 711 719
SCENIC II	Instrument panel	●	●	●	●	※	●	○	●	699 444 443 442 441 816 263 502 162 307 065 688 154 678 462 187 300 719 481 382
SCENIC II	Injection	●	●	●	●	●	●	※	※	645 299 644 399 353 726 697 178 172 171 170 169 338 105 627 530 108 241 597 216 725 222 482 530 263 525 513 212 263 664
SCENIC II	GAS INJ.	●	●	●	●	●	●	○	●	816 263
SCENIC II	Discharge lamp	●	●	●	●	●	●	○	●	816 263 719 136
SCENIC II	Communications unit	●	●	●	●	●	●	○	●	132 422 816 168 222 263 719
SCENIC II	Automatic gearbox	●	●	●	●	●	●	※	○	821 427 820 816 244 157 060 263 264
SCENIC II	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 820 696 398 147 555 263 374 373 375 372 302 301 077 078 079 492 195 206 493 621 203 271 196 494 560 491 500 202 486 488 192 191 489 568 567 288 287 167 166 719
SCENIC II	Air conditioning	●	●	●	●	○	●	○	●	816 263 327 719
SCENIC II	A. B. S.	●	●	●	●	●	●	●	○	705 248 059 515 628 820 716 816 094 124 220 263
SM7 - L47	UPC	●	●	●	●	●	●	○	●	138 582 816 173 263
SM7 - L47	UCH	●	●	●	●	●	●	●	●	726 542 101 626 467 263 130
SM7 - L47	Right-hand door	●	○	○	●	○	●	○	○	140
SM7 - L47	Radio	●	●	●	●	●	●	○	●	819 816 263 581 263 168 561 381 227 161 256 653
SM7 - L47	Passenger's door	●	●	●	●	●	●	○	○	263
SM7 - L47	Parking prox can	●	●	●	●	○	●	○	●	113 816 263 289 272 669 088
SM7 - L47	Parking brake	●	●	●	●	●	●	●	●	055 816 336 466 596 263

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
SM7 - L47	Multimedia interface	●	●	●	●	●	●	○	●	263 665 660
SM7 - L47	Multimed. connection	●	●	●	●	○	●	○	○	816 820 222 263
SM7 - L47	Lighting	●	●	●	●	●	●	○	●	654 263
SM7 - L47	Left-hand door	●	○	○	●	○	●	○	○	140
SM7 - L47	Instrument panel	●	●	●	●	●	●	○	●	816 185 263 687 460 162 307 154 678 187 689 383 007
SM7 - L47	Injection	●	●	●	●	●	●	●	●	295 118 645 299 726 333 334 222 018 019 242 714 612 613 263
SM7 - L47	Driver's position	●	●	●	●	○	●	○	○	528 263
SM7 - L47	Driver's door	●	●	●	●	●	●	○	○	263
SM7 - L47	Communications unit	●	●	●	※	●	※	○	●	816 820 263 187
SM7 - L47	Automatic gearbox	●	●	●	●	●	●	●	○	518 517 522 519 617 820 532 472 816 384 128 576 244 263 524
SM7 - L47	Amplifier	●	●	●	●	●	○	○	●	819 051 263 649
SM7 - L47	Airbag / pretensioners	●	●	●	●	○	●	○	●	696 398 263 621
SM7 - L47	Air conditioning	●	●	●	●	●	●	○	●	140 816 263 304
SM7 - L47	ADIVI	●	●	●	●	○	●	○	○	816 263
SM7 - L47	A. B. S.	●	●	●	●	●	●	●	●	628 820 640 816 124 098 679 639 263
TALISMAN	Variable P. A. S.	●	●	●	●	○	●	●	○	816 263
TALISMAN	UPC	●	●	●	●	●	●	○	○	632 329 155 138 582 329 435 173
TALISMAN	UCH	●	●	●	●	●	●	●	●	726 263 177 318 676 607 603 045 571 730 322 349 174
TALISMAN	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	263 141
TALISMAN	Radio	●	●	●	●	●	●	○	●	816 671 141 263 689 661 665 381 187 161
TALISMAN	Piloted suspension	●	●	●	●	○	●	●	○	816 263
TALISMAN	Parking prox can	●	●	●	●	●	●	○	●	816 263 620 559 273 669 088
TALISMAN	Parking brake	●	●	●	●	○	●	●	●	175 015 816 263
TALISMAN	POWER BACK DOOR	●	●	●	●	○	●	○	○	263 508
TALISMAN	Multimedia interface	●	●	●	※	●	※	○	○	816 263 141 222
TALISMAN	Left-hand door	●	●	●	●	●	●	○	○	403 566 286 816 263
TALISMAN	Instrument panel	●	●	●	●	●	●	○	●	816 263 138 460 154 187 689 007 382
TALISMAN	Injection	●	●	●	●	●	●	●	※	345 194 329 435 048 434 433 432 431 299 726 172 171 170 169 437 338 700 643 329 359 117 213 435 631 359 602 483 043 682 296 652 402 252 536 164 549 042 267 587 533 021 215 263 525 229 212 263
TALISMAN	HEAD UP DISPLAY	●	●	●	○	●	○	○	○	726 263
TALISMAN	FRONT CAMERA	●	●	●	●	○	●	○	○	816 263 136
TALISMAN	Driver's position	●	●	●	●	●	●	○	○	403 566 286 816 263
TALISMAN	Distance regulator	●	●	●	●	○	●	○	○	816 263

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
TALISMAN	Automatic gearbox	●	●	●	●	※	●	※	○	618 064 308 518 517 522 519 520 617 817 820 532 816 128 244 263 524
TALISMAN	Amplifier	●	●	●	●	●	●	○	○	816 051 263 426
TALISMAN	Airbag / pretensioners	●	●	●	●	●	●	○	●	816 696 398 263 621
TALISMAN	Air conditioning	●	●	●	●	●	●	○	○	304 140 263
TALISMAN	A. B. S.	●	●	●	●	●	●	●	●	400 680 628 640 816 576 401 098 679 639 641 263 677
TALISMAN	4 wheels steering	●	●	●	●	●	●	●	○	570 356 263
THALIA/SYMB. 2	Variable P. A. S.	●	●	●	●	○	○	●	○	819 816 263
THALIA/SYMB. 2	UCH	●	●	●	●	●	●	○	●	816 516 263 599 266
THALIA/SYMB. 2	Tracker	●	●	●	●	○	●	○	●	726 263 254 045 666 601
THALIA/SYMB. 2	Injection	●	●	●	●	●	●	※	※	299 358 816 399 514 726 172 171 170 169 338 216 725 670 360 341 046 267 587 533 530 714 234 263 513 229 212 263 429 509 037 307
THALIA/SYMB. 2	Automatic gearbox	●	●	●	●	●	●	※	※	821 427 820 816 527 060 263
THALIA/SYMB. 2	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 696 398 147 555 263 621 498 200 202 496 198 486 288 287 350 495 197 604 605 799 485
THALIA/SYMB. 2	Air conditioning	●	●	●	●	●	●	○	○	263
THALIA/SYMB. 2	A. B. S.	●	●	●	●	●	●	●	○	628 820 716 816 094 124 263
THALIA/SYMBL	Injection	●	●	●	●	●	●	※	※	399 726 697 635 328 530 525 714 234 212 263 165 664 509 037 307
THALIA/SYMBL	Immobiliser	●	●	●	●	●	※	●	○	377 516 535 534 129 181 780 739
THALIA/SYMBL	Connection unit	●	●	●	●	●	※	●	※	349 548 068 756 797 594 454 788 746 770 809 767 737 760 800 776 814 777 815 266 058 547
THALIA/SYMBL	Automatic gearbox	●	●	●	●	●	●	●	※	436 157 060 392 038 235 427 041 611 123 678 738 779 785 743 438 821 819 819
THALIA/SYMBL	Airbag / pretensioners	●	●	●	●	※	●	●	※	555 621 496 198 486 350 495 197 802 761 819 485
THALIA/SYMBL	Air conditioning	●	●	●	●	●	●	●	○	820 759 142 150 223 623 313 081 771 754 763 808 769 794 752 792 750 798 757
THALIA/SYMBL	A. B. S.	●	●	●	●	●	※	●	※	094 820 628
TRAFIC II	Injection	●	●	●	●	●	●	※	●	239 009 530 215 234 790 748 805 765 037 178 353 785 743 813 775
TRAFIC II	Immobiliser	●	●	●	●	●	※	●	○	377 516
TRAFIC II	Heater	●	●	●	●	●	●	○	○	
TRAFIC II	Connection unit	●	●	●	●	●	●	●	●	068
TRAFIC II	Automatic gearbox	●	●	●	●	●	●	●	○	127 524 525 264
TRAFIC II	Airbag / pretensioners	●	●	●	●	○	●	●	●	346 622 348 147 555 621
TRAFIC II	Adaptation unit	●	●	●	●	○	○	○	○	
TRAFIC II	A. B. S.	●	●	●	●	※	※	※	※	
TRAFIC II P2/3	UCH	●	●	●	●	●	●	○	●	419 816 726 377 337 516 626 263 324 563 462 067 610 174 176

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
TRAFIC II P2/3	Radio	●	●	●	●	●	●	○	●	151 819 816 263
TRAFIC II P2/3	Parking assistance	●	●	●	●	○	●	○	●	816 263 669 715 088
TRAFIC II P2/3	Multimedia interface	●	●	●	●	●	●	○	●	816 706 263 395 420 545 711
TRAFIC II P2/3	Multimed. connection	●	●	●	●	○	●	○	○	816 820 263 653
TRAFIC II P2/3	Instrument panel	●	●	●	●	●	●	○	●	450 261 816 727 080 263 656 004 657 138 269 502 460 605 162 307 678 187 300 383 006 481 126
TRAFIC II P2/3	Injection	●	●	●	●	●	●	※	●	468 645 299 399 353 726 697 178 437 338 008 020 259 105 627 530 108 597 216 725 342 252 511 536 164 549 042 253 267 484 076 222 215 263 525 229 212 263 664 037 740
TRAFIC II P2/3	Heater	●	●	●	●	●	●	○	○	263 245 246
TRAFIC II P2/3	Communications unit	●	●	●	●	●	●	○	●	132 816 820 263 222 263 153 187
TRAFIC II P2/3	Automatic gearbox	●	●	●	●	●	●	※	○	521 817 818 820 532 816 127 263 524 525 264
TRAFIC II P2/3	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 820 696 398 346 348 147 555 263 621
TRAFIC II P2/3	Air conditioning	●	●	●	●	●	●	○	●	816 263 133 719
TRAFIC II P2/3	Adaptation unit	●	●	●	●	○	●	●	○	263
TRAFIC II P2/3	A. B. S.	●	●	●	●	●	●	※	※	400 705 248 716 628 820 716 640 816 083 094 124 220 263
TRAFIC III	Variable P. A. S.	●	●	●	●	○	●	○	●	816 263 681
TRAFIC III	UREA DOSING CONTROL MODULE	●	●	●	●	●	●	●	○	816 027 022 024 029 026 033 030 028 032 025 263 023 031 034
TRAFIC III	UPC	●	●	●	●	●	●	○	●	138 582 816 716 435 173 047
TRAFIC III	UCH	●	●	●	●	●	●	●	●	263 397 607 322 176
TRAFIC III	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	263 141
TRAFIC III	Radio	●	●	●	●	●	●	○	●	819 263 581 263 168 649 574 420 381 161 071 050
TRAFIC III	Parking prox can	●	●	●	●	●	●	○	●	263 088
TRAFIC III	Multimedia interface	●	●	●	●	●	●	○	○	263 331 665 660
TRAFIC III	Instrument panel	●	●	●	●	●	●	○	●	699 443 263 138 154 187 383 007
TRAFIC III	Injection	●	●	●	●	●	●	●	●	329 435 048 434 433 432 431 299 726 172 171 170 169 437 338 643 329 117 213 435 631 359 602 483 043 682 296 652 402 252 536 361 164 549 042 267 021 215 263 525 229
TRAFIC III	Heater	●	●	●	●	○	●	○	○	263 245 246
TRAFIC III	HANDS-FREE MODULE	●	●	●	●	●	●	●	●	101 263 571
TRAFIC III	Communications unit	●	●	●	●	●	●	○	●	263 222 381 689 187 161
TRAFIC III	Airbag / pretensioners	●	●	●	●	●	●	○	●	696 398 263
TRAFIC III	Air conditioning	●	●	●	●	●	●	○	○	304 140 263 304
TRAFIC III	Adaptation unit	●	●	●	○	○	○	○	○	263
TRAFIC III	A. B. S.	●	●	●	●	●	●	●	●	400 680 628 640 816 576 401 098 679 639 641 263 677

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
TWINGO II	Variable P.A.S.	●	●	●	●	○	●	○	●	263 414
TWINGO II	UCH	●	●	●	●	●	●	○	●	816 263 045 378 070 066 456 731 453 660 067 551 608 110 258 236 322 274 040 176
TWINGO II	Rev counter/symbol	●	●	●	●	●	●	○	●	816 270 269 585 678 463
TWINGO II	Radio	●	●	●	●	●	●	○	●	819 816 263 581 263 168 653
TWINGO II	Parking assistance	●	●	●	●	○	●	○	●	816 263 669 715 088
TWINGO II	Multimedia interface	●	●	●	●	●	●	○	●	816 132 706 263 395 545 711 719
TWINGO II	Multimed. connection	●	●	●	●	○	●	○	○	820 263 653
TWINGO II	Instrument panel	●	●	●	●	●	●	○	●	294 450 816 263 502 225 257 605 162 307 678 462 187 300 006 586 126
TWINGO II	Injection	●	●	●	●	●	●	※	※	473 645 299 399 726 697 172 171 170 169 437 338 361 008 020 105 627 597 216 725 164 549 042 253 347 291 112 504 267 484 587 044 533 215 525 513 229 212 263
TWINGO II	Automatic gearbox	●	●	●	●	●	●	●	○	817 818 820 532 816 127 524 525 264
TWINGO II	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 696 398 555 263 621 498 200 491 500 202 496 198 486 288 287 167 166 495 197
TWINGO II	Air conditioning	●	●	●	●	●	●	○	●	816 263 327 719 304
TWINGO II	A.B.S.	●	●	●	●	●	●	●	※	059 515 628 820 716 640 816 094 124 614 263 307
TWINGO III	Variable P.A.S.	●	●	●	●	●	●	●	○	263
TWINGO III	UPC	●	●	●	●	●	●	○	●	138 582 435 173 047
TWINGO III	UCH	●	●	●	●	●	●	●	●	263 607 045 610 322 176
TWINGO III	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	263 141
TWINGO III	Radio	●	●	●	●	●	●	○	●	263 581 263 168 649 574 420 381 161 071 050
TWINGO III	Multimedia interface	●	●	●	●	●	●	○	○	263 331 665 660
TWINGO III	Instrument panel	●	●	●	●	●	●	○	●	263 138 154 187 383 007
TWINGO III	Injection	●	●	●	●	●	●	●	●	707 299 338 700 682 164 267 587 533 229 263
TWINGO III	Gearbox elec control	●	●	●	○	○	○	○	○	263
TWINGO III	FRONT CAMERA	●	●	●	●	○	●	○	○	222 263
TWINGO III	Distance regulator	●	●	●	●	○	●	○	○	816 263
TWINGO III	Communications unit	●	●	●	●	●	●	○	●	263 222 381 689 187 161
TWINGO III	Automatic gearbox	●	●	●	●	●	●	○	●	518 517 522 520 617 532 244 263 524 306
TWINGO III	Airbag / pretensioners	●	●	●	●	●	●	○	●	696 398 263
TWINGO III	Air conditioning	●	●	●	●	●	●	○	○	304 140 263
TWINGO III	A.B.S.	●	●	●	●	●	●	●	●	569 290 013 640 576 098 679 639 263
TWINGO PHASE 2	Injection	●	●	●	●	●	※	※	●	399 726 697 530 412 525 263 758 178 353 804 764 789 747
TWINGO PHASE 2	Immobiliser	●	●	●	●	●	※	●	○	377 516 535 534 129 181 780 739
TWINGO PHASE 2	GAS INJ.	●	●	●	●	●	●	●	※	
TWINGO PHASE 2	Connection unit	●	●	●	●	●	※	●	※	068 594 454 767 737 776 814 266 655 058 547

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
TWINGO PHASE 2	Automatic gearbox	●	●	●	●	●	●	●	※	127 524 525 264 307
TWINGO PHASE 2	Airbag / pretensioners	●	●	●	●	※	●	●	※	622 348 147 555 132 696 398 820 762 803 801 786
TWINGO PHASE 2	A. B. S.	●	●	●	●	●	※	●	※	094 820
TWIZY	UCH	●	●	●	●	●	●	○	●	816 263 266
TWIZY	LBC	●	●	●	●	○	●	○	○	633
TWIZY	Instrument panel	●	●	●	●	○	●	○	●	820 699 816 263 221 303 675 675 187 719
TWIZY	BCB	●	●	●	●	○	○	○	○	
TWIZY	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 696 398 263 621 498 200 202 496 198 486 288 287 350 495 197 604 605 485 283 278
TWIZY	Adaptation unit	●	●	●	●	○	●	○	○	819 816 263
VEL SATIS	UCH	●	●	●	●	●	●	○	●	816 380 692 100 099 103 263 462 396 686 510 722 461 061 698 316 188 067 668 370 115 114 069 176 411 057 224 608 322 687 207 174 550 307 319
VEL SATIS	Tyres	●	●	●	●	●	●	○	●	609 119 240 467 526 263 719
VEL SATIS	Parking brake	●	●	●	●	●	●	○	●	816 600 724 596 263 711
VEL SATIS	Parking assistance	●	●	●	●	○	●	○	●	816 263 669 715 088
VEL SATIS	Instrument panel	●	●	●	●	●	●	○	●	261 699 444 443 442 441 185 816 263 107 605 459 458 702 701 465 464 162 307 396 065 688 678 462 187 722 300 719 689 237 383 480 448 451 449 017 481 691 659 007 575
VEL SATIS	Injection	●	●	●	●	●	●	※	※	044 645 299 816 399 353 726 697 178 530 108 597 216 725 530 263 525 229 212 664 037
VEL SATIS	Heater	●	●	●	●	●	●	○	○	263 245 246
VEL SATIS	Hands-free kit	●	●	●	●	●	●	○	●	106 056 616 413 816 820 263 381
VEL SATIS	Distance regulator	●	●	●	●	○	●	●	●	816 636 247 263 824 823 820
VEL SATIS	Discharge lamp	●	●	●	●	●	●	○	●	816 263 719 136
VEL SATIS	Automatic gearbox	●	●	●	●	●	●	●	○	816 016 060 264
VEL SATIS	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 820 696 398 622 348 147 555 263 621
VEL SATIS	Air conditioning	●	●	●	●	●	●	○	●	816 263 251 686 189 134 325 719
VEL SATIS	A. B. S.	●	●	●	●	●	●	●	●	628 820 816 124 263 716 307 572 005
VELSATIS PH2	UCH	●	●	●	●	●	●	○	●	708 240 816 010 692 311 103 526 626 467 268 263 539 063 357 396 686 722 061 316 323 393 320 719 650 411 057 610 551 224 608 184 322 687 207 174 307 319 176
VELSATIS PH2	Radio	●	○	○	○	○	○	○	○	
VELSATIS PH2	Parking prox can	●	●	●	●	○	●	○	●	820 113 816 263 289 272 669 715 088
VELSATIS PH2	Parking brake	●	●	●	●	●	●	●	●	106 816 600 724 596 263 711
VELSATIS PH2	Parking assistance	●	●	●	●	○	●	○	●	113 816 263 669 715 088
VELSATIS PH2	Lighting	●	●	●	●	●	●	○	●	654 816 263 624 182 062 209 719

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
VELSATIS PH2	Instrument panel	●	●	●	●	●	●	○	●	261 699 444 443 442 441 816 263 107 605 162 307 396 065 688 678 462 187 722 300 719 689 383 480 448 451 449 481 691 659 007 575
VELSATIS PH2	Injection	●	●	●	●	●	●	※	※	044 645 299 644 816 399 514 353 726 697 178 338 530 108 597 216 725 222 530 263 525 229 212 263 664 037
VELSATIS PH2	Heater	●	●	●	●	●	●	○	○	263 245 246
VELSATIS PH2	Hands-free kit	●	●	●	●	●	●	○	●	106 056 616 413 816 820 263 381
VELSATIS PH2	Communications unit	●	●	●	●	●	●	○	●	422 816 168 222 263 719
VELSATIS PH2	Automatic gearbox	●	●	●	●	●	●	●	○	423 820 816 016 244 060 264
VELSATIS PH2	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 820 696 398 348 147 555 263 621
VELSATIS PH2	Air conditioning	●	●	●	●	●	●	○	●	816 263 251 686 189 134 325 719
VELSATIS PH2	A. B. S.	●	●	●	●	●	●	●	●	332 122 059 515 628 820 716 816 124 098 679 639 263 716 307 572 005
WIND	Variable P.A.S.	●	●	●	●	○	●	○	●	263 414
WIND	UCH	●	●	●	●	●	●	○	●	816 104 263 045 309 378 070 066 456 731 660 067 551 608 110 258 236 322 274 040 174 176
WIND	Sunroof control unit	●	●	●	●	○	●	●	○	726 263
WIND	Radio	●	●	●	●	●	●	○	●	819 816 132 263 581 263 168 653
WIND	Multimedia interface	●	●	●	●	●	●	○	●	816 263 395 545 711
WIND	Multimed. connection	●	●	●	●	○	●	○	○	816 820 263 653
WIND	Instrument panel	●	●	●	●	●	●	○	●	450 261 816 263 138 606 162 396 678 187 383 190 007
WIND	Injection	●	●	●	●	●	●	○	●	399 726 697 338 597 725 525 263
WIND	Airbag / pretensioners	●	●	●	●	○	●	○	●	816 696 398 555 263 621 498 200 202 486 288 287 495 197 497 199
WIND	Air conditioning	●	●	●	●	●	●	○	●	816 263 327 719 304
WIND	A. B. S.	●	●	●	●	●	●	●	※	059 515 628 820 716 640 816 094 124 614 263 307
XZH	Variable P.A.S.	●	●	●	●	○	●	●	○	263
XZH	UPC	●	●	●	●	●	●	○	○	632 329 155 138 582 329 435 173
XZH	UCH	●	●	●	●	●	●	●	●	726 263 177 318 676 607 603 045 571 730 322 349 174
XZH	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	●	263 141
XZH	Radio	●	●	●	●	●	●	○	●	816 671 263 263 689 661 665 381 187 161
XZH	Parking prox can	●	●	●	●	●	●	○	●	816 263 620 559 273 669 088
XZH	Parking brake	●	●	●	●	○	●	●	●	175 015 816 263
XZH	Multimedia interface	●	●	●	○	○	○	○	○	816 263
XZH	Instrument panel	●	●	●	●	●	●	○	●	816 263 138 460 154 187 689 007 382
XZH	Injection	●	●	●	●	●	●	●	※	345 194 329 435 048 299 726 338 533 643 329 359 728 014 355 435 359 111 536 267 164 361 112 267 484 587 533 229 263

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Freeze Frame	Read Configuration	Special Function
XZH	Automatic gearbox	●	●	●	●	○	●	○	○	308 820 244 263
XZH	Amplifier	●	●	●	●	●	●	○	○	816 051 263 426
XZH	Airbag / pretensioners	●	●	●	●	●	●	○	●	816 696 398 263 621
XZH	Air conditioning	●	●	●	●	●	●	○	○	304 140 263
XZH	A. B. S.	●	●	●	●	●	●	●	●	013 628 820 640 576 401 098 679 639 263
XZH	4 wheels drive	●	●	●	●	○	●	○	○	263 263
ZOE	Variable P. A. S.	●	●	●	●	●	●	●	○	641 263
ZOE	UPC	●	●	●	●	●	●	○	○	091 092 093 090 159 160 138 582 109 173
ZOE	UNCOUPLED PEDAL	●	●	●	●	●	●	●	○	729 819 690 576 263 505 409 506 097
ZOE	UCH	●	●	●	●	●	●	●	●	263 638
ZOE	TELEMATIC CTRL UNIT	●	●	●	●	●	●	○	※	816 263 141
ZOE	Radio	●	●	●	●	●	●	○	●	819 263 581 263 168 561 649 574 420 381 161 071 050
ZOE	Parking prox can	●	●	●	●	●	●	○	●	263 088
ZOE	PEB	●	●	●	●	○	●	●	○	371 263
ZOE	LBC2	●	●	●	○	○	○	○	○	263
ZOE	LBC	●	●	●	●	○	●	●	○	416 629 673 674 263
ZOE	Instrument panel	●	●	●	●	●	●	○	●	263 460 162 187 689 382
ZOE	EVC	●	●	●	●	●	●	●	●	674 703 121 208 674 262 263 164 703 326
ZOE	Communications unit	●	●	●	●	●	●	○	●	263 222 381 689 187 161
ZOE	BCB	●	●	●	●	○	●	●	●	263 120 366 084
ZOE	Airbag / pretensioners	●	●	●	●	●	●	○	●	816 696 398 555 263
ZOE	Air conditioning	●	●	●	●	●	●	○	●	140 263
ZOE	Adaptation unit	●	●	●	●	○	●	○	○	819 263
ZOE	A. B. S.	●	●	●	●	●	●	●	●	013 628 820 640 816 124 576 098 679 639 263

Special Function

Index	Special Function Name	Index	Special Function Name
001	100 Ah traction battery	002	3-button key
003	ABS type	004	ABS/ESP
005	ABS/ESP calibration	006	ADAC configuration
007	ADAC display type	008	ADAPTIVES AFTER REGENERATING PARTICLE FILTER
009	ADAPTIVES ON EGR VALVE FAULT	010	AERIAL TEST
011	Abandon key reallocation	012	Abandon programming
013	Acceleration sensor	014	Activate EVAP programming
015	Activate maintenance mode	016	Actuators sequential control
017	Adaptive cruise control	018	Adaptive value - A/F ratio
019	Adaptive value - TPS	020	Adaptives after replacing cabin filter
021	Adaptives on air intake flap fault	022	Adblue Backflow Pump Test
023	Adblue Injector Programming	024	Adblue Injector Release Test
025	Adblue dosing module catalyst	026	Adblue emptying test
027	Adblue first filling test	028	Adblue large volume test metering
029	Adblue leak test	030	Adblue pressure preparation test
031	Adblue pump module programming	032	Adblue small quantity test metering
033	Adblue spray test	034	Adblue tank programming
035	Additional heating	036	Adjust oil change counter
037	Air conditioning	038	Air conditioning connection fault finding
039	Air conditioning programming	040	Air conditioning type
041	Air conditioning with wire connection	042	Air damper valve programming
043	Air flowmeter programming	044	Air path programming
045	Alarm	046	Alcohol level prog.
047	Alternator floating voltage	048	Alternator setpoint voltage
049	Alternator type	050	Amplifier
051	Amplifier reset	052	Analogic display fuel gauge calibration
053	Angle of assembly	054	Anti-theft alarm trigger S/W
055	Assisted engagement when stationary	056	Audio links test
057	Auto locking warning sound	058	Auto locking when driving function prevention
059	Auto stop lights illumination authorisation	060	Auto-adaptives
061	Automatic closing of windows (by card)	062	Automatic fold-down headlights
063	Automatic folding of door mirrors	064	Automatic gearbox control
065	Automatic handbrake	066	Automatic lighting function
067	Automatic locking when driving	068	Automatic relocking
069	Automatic seat recall	070	Automatic wiping function
071	Auxiliary input	072	Avantime (F4R): with heated windscreen
073	Avantime (F4R): without heated windscreen	074	Avantime(except F4R):with heated windscr.
075	Avantime(expt F4R):without heated windscr.	076	Average air temperature
077	B/C with fr/rr thorax + head airbags	078	B/C with front thorax + head airbags
079	B/C without side airbags	080	BACKUP OF INSTRUMENT PANEL DATA FOR INJECTION
081	BEHR PROBE configuration	082	BII type
083	BLEEDING THE BRAKING SYSTEM	084	BMS
085	BOOST PRESSURE SENSOR PROGRAMMING	086	BRAKE LINING FRICTION LEARNING
087	BUZZER	088	BUZZER VOLUME
089	Battery charge warning information	090	Battery corrosion counter
091	Battery cycle counter	092	Battery cycle counter estimated
093	Battery cycle counter memorised	094	Bleed hydraulic unit and braking circuits
095	Bodywork type	096	Boiler
097	Brake pedal position 1 and 2 sensor status offset	098	Brake pressure offset sensor
099	CARD ACCUMULATOR CHARGE TESTER	100	CARD BATTERY CHARGE TESTER
101	CARD TESTING	102	CD changer and auxiliary input
103	CHECK CARDS	104	CHECKING A KEY
105	COMMERCIAL VEHICLE IDLE SPEED MODIFICATION	106	COMPUTER CALIBRATION AND OPERATION
107	CRUISE CONTR./SP. LIMIT. Speed DIFF.	108	Cabin filter regeneration
109	Calculate battery wear counters	110	Calibration
111	Camshaft sensor No.2 programming	112	Camshaft sensor programming
113	Caravan towing distance	114	Card locking
115	Card reminder warning	116	Card/key
117	Catalytic converter	118	Catalytic converter test
119	Change in triggering limit	120	Charge plug
121	Charge water pump	122	Chassis wear programming

Index	Special Function Name	Index	Special Function Name
123	Check motor torque by ABS	124	Check target teeth
125	Childproof lock	126	Clock
127	Clutch initial closed position	128	Clutch wear
129	Coded diesel solenoid valve engine immobiliser	130	Column steering lock
131	Commande Privee 1	132	Comp configuration
133	Compressor feedback	134	Compressor type
135	Computer address	136	Computer calibration
137	Computer configuration	138	Computer initialisation
139	Computer programming/initialisation	140	Computer reinitialisation
141	Computer reset	142	Config. without recycling flap auto-setting
143	Configuration Privee 3	144	Configuration Privee 4
145	Configuration Reservee 1	146	Configuration Reservee 10
147	Configuration of system components	148	Configuration privee 1
149	Configuration privee 2	150	Configuration with recycling flap auto-setting
151	Configuring the multimedia computer	152	Confirm programming
153	Constructor/manufacturer	154	Consumption measurement units
155	Control Headlight Motors	156	Control panel type
157	Converter lock up adaptive	158	Cornering lights
159	Corrosion battery counter estimated	160	Corrosion battery counter memorised
161	Country model	162	Cruise CTRL/SPD Limiter
163	Cruise control/speed limiter	164	Cruise control/speed limiter programming
165	Cruise ctrl/speed limiter	166	Curtain side air bag, driver's side
167	Curtain side air bag, passenger side	168	Customer settings and details
169	Cylinder 1 Injector Code	170	Cylinder 2 Injector Code
171	Cylinder 3 Injector Code	172	Cylinder 4 Injector Code
173	DTC reset	174	Daytime running lights
175	Deactivate maintenance mode	176	Deadlocking
177	Deadlocking with remote control on key	178	Decrement idle speed
179	Diesel engine immobiliser	180	Diesel injection
181	Diesel/petrol ENG immob without coded SOL valve	182	Dipped headlights raise
183	Directional headlights	184	Discharge Lamp
185	Distance before next oil change	186	Distance before next oil change configuration
187	Distance units	188	Door unlocking mode
189	Drive ratio	190	Drive type configuration
191	Driver front air bag circuit 1	192	Driver front air bag circuit 2
193	Driver lap strap pretensioner	194	Driver start counter
195	Driver's side rear frontal airbag	196	Driver's LAP STRAP/SEAT airbag
197	Driver's front airbag	198	Driver's front buckle pretensioner
199	Driver's front inertia reel	200	Driver's front side impact sensor
201	Driver's lateral sensor	202	Driver's seat buckle sensor
203	Driver's seat position sensor	204	Driver's seat sensor
205	Driver's side rear inertia reel	206	Driver's side rear strap sensor
207	Driving type	208	Driving water pump
209	Dynamic correction	210	EC5 air bag
211	EEPROM memory write procedure	212	EGR adaptives
213	EGR bypass programming	214	EGR programming
215	EGR valve programming	216	ENTER INJECTOR CODES
217	ESM Activation command	218	ESM configuration
219	ESM inhibition command	220	ESP sensor programming
221	Econometer	222	Ecu Memory
223	Eeprom probe configuration	224	Electric child safety
225	Electric power assisted steering	226	Electric pump unit
227	Emergency call number	228	End of key reallocation validation
229	Engine adaptives	230	Engine immobiliser
231	Engine immobiliser 2	232	Engine immobiliser authorisation
233	Engine immobiliser prohibition	234	Engine parameter adaptives
235	Engine torque control function	236	Engine type
237	Engine/gearbox type	238	Enter access code
239	Enter injector calibration data	240	Enter recommended pressures
241	Enter vin code	242	Erase Idle regulation adaptives
243	Erase OBD fault memory	244	Erase auto-adaptive values
245	Erase incorrect cranking counter	246	Erase overheating counter
247	Erase stored misalignment	248	Esp automatic reconnection threshold
249	Espace: with evaporator sensor	250	Espace: without evaporator sensor

Index	Special Function Name	Index	Special Function Name
251	Evaporator temperature sensor	252	Exhaust flap low setting
253	Exhaust injector circuit	254	Extern gps antenna
255	External boot aerial test	256	External components
257	External temperature	258	External temperature sensor
259	FAST IDLE SPEED MODIFICATION	260	FROST MANAGEMENT MODE
261	FUEL GAUGE CALIBRATION	262	Fan assembly
263	Fault memory	264	Fault/s memorised
265	Fixed rear screen	266	Flashing buzzer
267	Flywheel target programming	268	Following tyre change
269	Free shift	270	Free shift display
271	Front buckle pretensiometers	272	Front buzzer volume
273	Front detection	274	Front fog lights
275	Front left-hand buckle pretensioner	276	Front left-hand chest-level side airbag
277	Front left-hand external aerial test	278	Front left-hand inertia wheel
279	Front left-hand seat belt sensor	280	Front right-hand buckle pretensioner
281	Front right-hand chest-level side airbag	282	Front right-hand external aerial test
283	Front right-hand inertia wheel	284	Front right-hand seat belt sensor
285	Front seat belt retractors	286	Front slide learning
287	Front thorax side air bag, driver side	288	Front thorax side air bag, passenger side
289	Front tone setting	290	Front wheel circumference
291	Fuel flow regulator	292	Fuel gauge calibration LCD (Japan)
293	Fuel gauge calibration needle (Japan)	294	Fuel level display update
295	Fuel pump forced conversion	296	Fuel pump programming
297	Fuel sender calibration (DOI).	298	Fuel sender calibration (EUROPE)
299	Fuel supply prevention	300	Fuel type
301	G/S with head airbags	302	G/S without head airbag
303	GEAR positions memorization	304	GEOGRAPHICAL ZONE
305	Gas reserv. capac.	306	Gear change paddles
307	Gearbox type	308	Gearbox vehicle acceleration sensor init.
309	Gradual switching on and off of courtesy light	310	Gsm antenna
311	HANDS-FREE SYSTEM TEST	312	HFM programming routine
313	HOKURIKU probe configuration	314	HP TURBINE BYPASS SOLENOID VALVE PROGRAMMING
315	Hands free	316	Hands free locking
317	Hands-free cards low battery counter	318	Hands-free deadlocking
319	Hands-free function	320	Hands-free start-up
321	Hazard lamps recall on TRF	322	Hazard warning lights illumination by ABS
323	Headlight washers	324	Heated rear screen indicator light circuit
325	Heated windscreen	326	Heating
327	Heating resistor type	328	High pressure circuit leak test
329	High pressure pump counter	330	Hill start
331	Hour setting	332	Hydraulic brake compensation
333	IDLE AIR VOLUME LEARNING - FACTORY MODE	334	IDLE AIR VOLUME LEARNING - SERVICE MODE
335	IGNITION TIMING ADJUSTMENT	336	INITIALISATION AFTER AUTOMATIC CONFIGURATION
337	INSTRUMENT PANEL TYPE	338	INTERVAL OF OIL CHANGE (OCS) OXIDATION
339	Idle air volume learning - factory mode	340	Idle air volume learning - service mode
341	Idle speed learning	342	Idle speed reference
343	Idle speed setting decrementation	344	Idle speed setting incrementation
345	Idle stop and start counter	346	Igniters in series configuration
347	Ignition coil adaptive	348	Ignition module configuration
349	Illuminate hazard lamps upon impact	350	Impact information connection
351	Improved grip function	352	Increase fuel warning threshold
353	Increment of idle speed	354	Indicator light configuration
355	Inhibit EVAP strategy	356	Inhibition of 4-wheel drive function
357	Inhibition of selective door opening	358	Injection prohibition
359	Injection pump adaptatives	360	Injection time programming
361	Injector adaptives	362	Injector adaptives No. 1
363	Injector adaptives No. 2	364	Injector adaptives No. 3
365	Injector adaptives No. 4	366	Instrument panel
367	Interior Ambience lighting	368	Interior aerial 1 test
369	Interior aerial 2 test	370	Interior lighting
371	Inverter fan assembly	372	J with side AB W/O rear chest AB
373	K/L with F chest + curt airbags	374	K/L with f/R chest + curt airbags
375	K/L without side airbags	376	KEY ASSIGNMENT
377	Key programming	378	Key type
379	LCD display fuel gauge calibration	380	LOCK LATCH LOCKING

Index	Special Function Name	Index	Special Function Name
381	Language	382	Language configuration
383	Language version	384	Launch Control Counter
385	Left Hand Drive / 4 cylinder configuration	386	Left Hand Drive / 6 cylinder configuration
387	Left Hand Drive / diesel configuration	388	Left hand drive
389	Left-hand curtain airbag	390	Left-hand drive
391	Left-hand side impact sensor	392	Lever locking connection fault finding
393	Light sensor sensitivity	394	Light sensor signal
395	Lighting	396	Lights automatic illumination
397	Load Area	398	Lock computer
399	Lock injector control	400	Longitudinal acceleration sensor
401	Longitudinal acceleration sensor offset	402	Low pressure EGR valve programming
403	Lumbar learning	404	Maintenance autonomy interval in km
405	Maintenance autonomy interval in months	406	Maintenance autonomy:current value in km
407	Maintenance autonomy:current value month	408	Manifold pressure sensor programming
409	Master cylinder pressure sensor offset	410	Memorisation of speeds
411	Memorising driver's seat position	412	Memory saved
413	Microphone test	414	Mode number
415	Modification of parameters after initialisation	416	Module change
417	Modus fuel sender calibration (EUROPE)	418	Modus long fuel sender calibration (EUROPE)
419	Multiplexed network configuration	420	Navigation
421	Navigation system	422	Netherlands legislation
423	Neutral position programming	424	New vehicle storage mode deactivation
425	No ABS	426	Noise-reducing microphone
427	Note oil wear counter	428	Number of cylinders configuration
429	Number of heating elements	430	Number of starting
431	Number of starting 1	432	Number of starting 2
433	Number of starting 3	434	Number of starting 4
435	Number of starting cycles	436	OBD memory
437	OIL CHANGE INTERVAL (OCS): DILUTION	438	Oil change counter offset
439	Oil change counter reset	440	Oil change frequency
441	Oil change interval in KM	442	Oil change interval in months
443	Oil change range:current value in KM	444	Oil change range:current value in months
445	Oil level displayed 20 sec when ADAC pressed	446	Oil level displayed 20sec
447	Oil measurement	448	Oil measurement timer
449	Oil pressure warning threshold	450	Oil service and odometry miles - Km
451	Oil temperature measurement threshold	452	Oil vapour heater
453	One-Touch Electric Window(s) / Sunroof	454	One-touch central door locking button
455	One-touch electric window(s)	456	Opening elements central locking
457	Opening rear screen	458	Other at
459	Other manual	460	Overspeed Alarm
461	Overspeed alarm for arabia	462	Overspeed function - arabia
463	Overspeed light	464	P9X AT
465	P9X MANUAL	466	PREPARATION BEFORE AUTOMATIC CONFIGURATION
467	PROGRAMMING THE CODES OF THE FOUR VALVES	468	PUMP PRESSURE REGULATOR TYPE
469	Parametrage prive 1	470	Parametrage prive 159
471	Parametrage prive 160	472	Parametrage prive 2
473	Parametrage prive 237	474	Parametrage prive 250
475	Parametrage prive 3	476	Parametrage prive 4
477	Parametrage prive 9	478	Parametrage prive 98
479	Parking aid	480	Parking proximity sensor function
481	Particle filter	482	Particle filter adaptives
483	Particle filter pressure diff. sensor	484	Particle filter relative pressure sensor
485	Pass airbag deactivation warning light	486	Passenger air bag locking mode
487	Passenger compartment heating resistor	488	Passenger front air bag circuit 1
489	Passenger front air bag circuit 2	490	Passenger lap strap pretensioner
491	Passenger presence detection sensor	492	Passenger side rear frontal airbag
493	Passenger side rear strap sensor	494	Passenger's LAP strap/seat airbag
495	Passenger's front airbag	496	Passenger's front buckle pretensioner
497	Passenger's front inertia reel	498	Passenger's front side impact sensor
499	Passenger's lateral sensor	500	Passenger's seat buckle sensor
501	Passenger's side rear inertia reel	502	Personalised oil change frequency
503	Petrol injection	504	Pinking sensor programming
505	Piston pressure sensor offset	506	Piston pressure sensor status offset
507	Power assisted steering	508	Power back door cylinder
509	Power steering electric pump unit	510	Power-assisted steering program

Index	Special Function Name	Index	Special Function Name
511	Preheater unit	512	Preheating prevention
513	Pressure regulation adaptives	514	Prevention of electrical consumers
515	Prevention of stop light auto illumination	516	Program body computer
517	Program clutch 1 adjustment	518	Program clutch 2 adjustment
519	Program clutch adjustment	520	Program clutch assembly
521	Program clutch open position	522	Programme clutch position
523	Programme pneumatic suspension	524	Programme slip point
525	Programmed values	526	Programming a valve code
527	Programming of no load and full load positions	528	Programming of seat stops
529	Programming or reallocation of keys	530	Programming reinitialisation
531	Programming routine	532	Programming selection/engaging zones
533	Programming throttle limits	534	Programming with 1 key
535	Programming with 2 keys	536	Proportional richness sensor programming
537	Pulling correction	538	Pulling correction program
539	RAIN/Luminosity Sensor Type	540	READ CARD SIGNAL
541	READ VALVE SET AND MEMORISED CODES	542	READING THE VALVE SET AND VALVE CODES
543	REAR LEFT-HAND INERTIA WHEEL	544	REVERSING CAMERA CALIBRATION
545	Radio	546	Radiofrequency type
547	Raid function authorisation	548	Raid function authorisation by diag
549	Rail pressure sensor adaptives	550	Rain sensor
551	Rain/light sensor	552	Raising of elect. window(with ANTI-PINCH)
553	Range extender	554	Read card 2 signal
555	Reading impact contexts	556	Rear access aerials
557	Rear brake unit initialisation	558	Rear brake unit repositioning
559	Rear detection	560	Rear inertia reels
561	Rear loud speaker	562	Rear right-hand inertia reel
563	Rear screen demister	564	Rear screen wiper
565	Rear shelves	566	Rear slide learning
567	Rear thorax side air bag, driver side	568	Rear thorax side air bag, passenger side
569	Rear wheel circumference	570	Reinstatement of 4-wheel drive function
571	Remote Locking Buzzer	572	Remote control cruise control
573	Remote engine starting	574	Removable roof
575	Reserve capacity	576	Reset
577	Reset clutch data	578	Reset clutch data protection
579	Reset gearbox data	580	Reset oil change counter
581	Reset radio	582	Resetting internal protection
583	Restart the computer	584	Rev counter
585	Rheostat lighting	586	Rheostat presence
587	Richness regulation programming	588	Right Hand Drive / 4 cylinder configuration
589	Right Hand Drive / 6 cylinder configuration	590	Right Hand Drive / diesel configuration
591	Right hand drive	592	Right-hand curtain airbag
593	Right-hand side impact sensor	594	Rocker central door locking button
595	Roll bars	596	SAVE CLUTCH PEDAL PROGRAMMING
597	SAVE COMPUTER DATA	598	SDM air bag
599	SDO	600	SLOPE INITIALISATION
601	SVT configuration	602	SWIRL flap
603	Scandinavian runnings lights	604	Seat belt light
605	Seat belt reminder buzzer	606	Seat belt warning module
607	Second fitting alarm	608	See-me-home lighting
609	Selection of valve set	610	Selective opening of doors
611	Selector lever locking	612	Self learning value Erase - fuel Pump PWM
613	Self learning value erase -butane ratio modeling	614	Sensor offsets
615	Sensor type	616	Serial link test
617	Shift drum reference position	618	Shift fork
619	Shoe lining energy counter	620	Side detection
621	Side on which steering wheel fitted	622	Side sensor configuration
623	Siemens probe configuration	624	Signature
625	Slope sensor adjustment	626	Spare
627	Speed limiter	628	Speedo index
629	Start authorisation from BMS	630	Start authorisation from BMS safety
631	Starter adaptatives	632	Starter wear counter
633	Starting authorization	634	Static test
635	Static/autoconfiguration test	636	Steering angle offset
637	Steering angle sensor initialisation	638	Steering lock

Index	Special Function Name	Index	Special Function Name
639	Steering wheel angle offset sensor	640	Steering wheel angle sensor
641	Steering wheel angle sensor programming	642	Stop and start configuration
643	Stop and start function	644	Stop electrical consumer prevention
645	Stop fuel supply prevention	646	Stop preheating prevention
647	Stop/start function configuration	648	Stored energy management data
649	Subwoofer	650	Sunroof
651	Sunroof control unit	652	Swirl flap programming
653	System configuration	654	System initialisation
655	TYPE N4	656	TYRES
657	Tachograph	658	Tailgate flap
659	Tank capacity	660	Temperature display
661	Temperature units	662	Test parameters
663	Testing card presented	664	Thermoplungers
665	Time format	666	Timed battery voltage
667	Timed lighting supply	668	Timer courtesy light
669	Tone adjustment	670	Torque learning
671	Touch screen	672	Toxicity sensor
673	Traction battery interlock	674	Traction battery lock
675	Traction battery range	676	Trailer present
677	Trailer stability function	678	Trajectory control
679	Transverse acceleration offset sensor	680	Transverse acceleration sensor
681	Tuning version number	682	Turbocharger programming
683	Type 1 Unit	684	Type 2 unit
685	Type of parking brake	686	Type of power steering
687	Tyre pressure monitor function	688	Tyre pressure monitoring
689	Tyre pressure units	690	UBP solenoid valve
691	UCH	692	UCH connections test -> card reader
693	UPC COMP. TYPE	694	Uch type
695	Unit of volume	696	Unlock computer
697	Unlock injector control	698	Unlocking mode. doors hands free
699	Update odometer	700	Upstream oxygen sensor
701	V4Y AUTOMATIC GEARBOX	702	V4Y MANUAL
703	VACUUM pump ageing counter	704	VALVE CODE READING
705	VEH. speed at initialisation	706	VEHICLE IDENTIFIER
707	Vacuum pump operation request	708	Valve set selection
709	Van fast idle speed decrease	710	Van fast idle speed increase
711	Vehicle configuration	712	Vehicle engine type
713	Vehicle family	714	Vehicle function programming
715	Vehicle identification	716	Vehicle parameters
717	Vehicle speed limitation function	718	Vehicle speed signal transmitter
719	Vehicle type	720	Vehicle type: JEOE or JEOP
721	Vehicle type: all types except JEOP/JEOE	722	Voice synthesiser
723	W FR chest airbags w/out head-lvl airbags	724	WRITE CLUTCH PEDAL PROGRAMMING
725	WRITE SAVED DATA	726	WRITE V. I. N.
727	WRITING OF INSTRUMENT PANEL DATA FOR INJECTION	728	Waste gate regulation
729	Wheel circumference	730	Windscreen type
731	Wiper intermittent speed ring	732	With ABS
733	With AC (fixed capacity compressor)	734	With AC (variable capacity compressor)
735	With ADAC	736	With FR chest airbags+head-level airbags
737	With INFRA-RED remote control	738	With OBD
739	With SDO	740	With SWIRL flap
741	With air CON / without heated windscreen	742	With air bag
743	With air conditioning	744	With air conditioning / with heated windscreen
745	With alarm	746	With automatic RE-LOCKING
747	With automatic transmission	748	With boiler
749	With catalytic converter	750	With coolant sensor
751	With cruise control	752	With evaporator temperature sensor
753	With fuel pump cut-out	754	With harrison type compressor
755	With hazard lamps recall on TRF	756	With hazard lights upon impact
757	With heated rear screen	758	With manual gearbox
759	With one-touch type control	760	With overspeed warning

Index	Special Function Name	Index	Special Function Name
761	With passenger's airbag	762	With passenger's airbags
763	With permanent type control	764	With power assisted steering
765	With power steering electric pump unit	766	With radio display
767	With radio frequency remote control	768	With range extension
769	With recycling motor timer	770	With running lights
771	With sanden type compressor	772	With self levelling suspension
773	With side airbags	774	With tailgate module
775	With thermoplungers	776	With timed courtesy light
777	With variable w' screen wiper intermittent	778	Without ADAC
779	Without OBD	780	Without SDO
781	Without SWIRL flap	782	Without air CON / with heated windscreen
783	Without air CON. / without heated windscreen	784	Without air bag
785	Without air conditioning	786	Without airbags (pretensioners only)
787	Without alarm	788	Without automatic RE-LOCKING
789	Without automatic transmission	790	Without boiler
791	Without catalytic converter	792	Without coolant sensor
793	Without cruise control	794	Without evaporator temperature sensor
795	Without fuel pump cut-out	796	Without hazard lamps recall on TRF
797	Without hazard lights upon impact	798	Without heated rear screen
799	Without inhibition switch	800	Without overspeed warning
801	Without passenger seat	802	Without passenger's airbag
803	Without passenger's frontal airbag	804	Without power assisted steering
805	Without power steering electric pump unit	806	Without radio display
807	Without range extension	808	Without recycling motor timer
809	Without running lights	810	Without self levelling suspension
811	Without side airbags	812	Without tailgate module
813	Without thermoplungers	814	Without timed courtesy light
815	Without variable intermittent wipe	816	Write VIN
817	Write clutch initial closed position	818	Write date new clutch fitted
819	Write date of after sales operation	820	Write date of last after sales operation
821	Write transmission oil change date	822	Writing conformity
823	km	824	miles