

## MaxiSys\_AlfaRemeo\_V4. 21 Function List (Note:For reference only)

## NOTES:

- This function is supported. X This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported. rianlge This function is the new feature in this version.

As for special function please refer to the special function table.

As f	or special functio	n please refer t	o the special function table.			•					
Mode1	Version	Group	System	ECU	Read	Erase	Live	Active	Specil Function		
Model	VELSTOIL	GI Oup	System	info.	Codes	Codes	Data	Test	Specif Function		
145	1.4 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
145	1.6 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
145	1.8 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
145	2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
145	98 1.4 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
145	98 1.6 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
145	98 1.8 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
145	98 2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
145	99 1.9 JTD	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
146	1.4 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
146	1.6 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
146	1.8 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
146	2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
146	98 1.4 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
146	98 1.6 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
146	98 1.8 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
146	98 2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
146	99 1.9 JTD	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
155	1.6 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
155	1.8 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
155	2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
155	2.5 TD	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
155	TD	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
GTV	03 2.0 JTS	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
GTV	03 2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
GTV	03 3.2 V6 24V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
GTV	2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
GTV	2. 0 V6 TB	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
GTV	3.0 V6 24V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
GTV	98 1.8 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
GTV	98 2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
GTV	98 2.0 V6 TB	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
GTV	98 3.0 V6 24V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
SPIDER	03 2.0 JTS	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
SPIDER	03 2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
SPIDER	03 3.2 V6 24V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
SPIDER	2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
SPIDER	3.0 V6	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
SPIDER	98 1.8 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		
SPIDER	98 2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0		

Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
SPIDER	98 2.0 V6 TB	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
SPIDER	98 3.0 V6	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
145	1.3	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	1.4 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	1.6	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	1.6 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	1.7 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	1.8 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	98 1.4 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	98 1.6 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	98 1.8 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	98 2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	99 1.9 JTD	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	TD	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	1.3	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	1.4 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	1.6	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	1.6 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	1.7 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	1.8 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	98 1.4 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	98 1.6 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	98 1.8 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	98 2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	99 1.9 JTD	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	TD	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
155	1.6 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
155	1.7 TS	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
155	1.8 TS	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
155	1.8 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
155	2.0 TS	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
155	2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
155	2.5 TD	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
155	TD	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
155	V6	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
156	1.6 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
156	1.8 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
156	1.9 JTD	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
156	2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
156	2. 4 JTD	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
156	2. 5 V6 24V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
156	SELESPEED	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
164	2. 0 TS ECO	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
164	QV 24V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
164	SUPER 2.0 TS	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
164	SUPER TD	Safety	Bosch 5.3 ABS	•	•	•	•	•	0

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
164	SUPER V6 24V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
164	SUPER V6 24V C.A.E.	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
164	SUPER V6 TB	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
164	V6 ECO	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
164	V6 ECO C.A.	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
166	2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
166	2.4 JTD	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
166	2.5 V6 24V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
166	3.0 V6 24V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	03 2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	2. 0 V6 TB	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	3.0 V6 24V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	98 1.8 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	98 2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	98 2.0 V6 TB	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	98 3.0 V6 24V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
SPIDER	03 2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
SPIDER	2. 0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
SPIDER	3. 0 V6	Safety	Bosch 5. 3 ABS	•	•	•	•	•	0
SPIDER	98 1.8 TS 16V	Safety	Bosch 5. 3 ABS	•	•	•	•	•	0
SPIDER	98 2.0 TS 16V	Safety	Bosch 5. 3 ABS	•	•	•	•	•	0
SPIDER	98 2.0 V6 TB	Safety	Bosch 5. 3 ABS	•	•	•	•	•	0
SPIDER	98 3.0 V6	Safety	Bosch 5. 3 ABS	•	•	•	•	•	0
145	1. 3	Engine - Gearbox	Magneti Marelli IAW 18F Injection	•	0	0	•	•	0
146	1. 3	Engine - Gearbox	Magneti Marelli IAW 18F Injection	•	0	0	•	•	0
145	1. 3	Engine - Gearbox	Magneti Marelli IAW 08F Injection	•	0	0	•	•	0
146	1. 3	Engine - Gearbox	Magneti Marelli IAW 08F Injection	•	0	0	•	•	0
33	1. 3 I. E. ECO	Engine - Gearbox	Magneti Marelli IAW 08.68 Injection	•	0	0	•	•	0
33	1. 4 I. E. ECO	Engine - Gearbox	Magneti Marelli IAW 08.68 Injection	•	0	0	•	•	0
145	2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.3 Injection (2.0 TS 16v	•	•	•	•	•	0
146	2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.3 Injection (2.0 TS 16v	•	•	•	•	•	0
155	2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.3 Injection (2.0 TS 16v	•	•	•	•	•	0
GTV	2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.3 Injection (2.0 TS 16v	•	•	•	•	•	0
SPIDER	2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.3 Injection (2.0 TS 16v	•	•	•	•	•	0
145	1. 3	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	1. 4 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	1. 6	Comfort	Borletti MCC55F climate control	•	•	•	•		0
145	1. 6 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	1. 7 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	1. 8 TS 16V	Comfort	Borletti MCC55F climate control		•	•	•	•	0
145	2. 0 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	98 1.4 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	98 1.6 TS 16V	Comfort	Borletti MCC55F climate control			•	•		0
145	98 1.8 TS 16V	Comfort	Borletti MCC55F climate control			•	•		0
145	98 2.0 TS 16V	Comfort	Borletti MCC55F climate control				•		0
145	99 1.9 JTD	Comfort	Borletti MCC55F climate control	•		•	•		0
145	TD	Comfort	Borletti MCC55F climate control	•	•	•	•		0
1 10	110	COMITOT	DOLLO OLI MODOOL CITHOLO CONTITOL						$\sim$

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
146	1. 3	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	1.4 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	1. 6	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	1.6 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	1.7 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	1. 8 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	2.0 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	98 1.4 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	98 1.6 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	98 1.8 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	98 2.0 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	99 1.9 JTD	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	TD	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	1. 4 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
145	1. 6 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
145	1. 8 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
145	2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
146	1. 4 TS 16V	Engine - Gearbox	Bosch Motronic M2. 10. 4 Injection (TS 16v eng.)	•	•	•	•	•	0
146	1. 6 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•		•	•	0
146	1. 8 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•					0
146	2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M2. 10. 4 Injection (TS 16v eng.)	•	•	•			0
155	1. 6 TS 16V	Engine - Gearbox	Bosch Motronic M2. 10. 4 Injection (TS 16v eng.)	•					0
155	1. 8 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•			•	0
155	2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M2. 10. 4 Injection (TS 16v eng.)	•					0
156	1. 6 TS 16V	Engine - Gearbox	Bosch Motronic M2. 10. 4 Injection (TS 16v eng.)	•		•			0
GTV	2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M2. 10. 4 Injection (TS 16v eng.)	•			•		0
SPIDER	2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M2. 10. 4 Injection (TS 16v eng.)	•	•	•	•		0
145	1. 3	Safety	ICIT VAS 93 anti-theft device		•	•	•		0
145	1. 4 TS 16V	Safety	ICIT VAS 93 anti-theft device	•	•	•	•		0
145	1. 6	Safety	ICIT VAS 93 anti-theft device		•				0
145	1. 6 TS 16V	Safety	ICIT VAS 93 anti-theft device						0
145	1. 7 16V	Safety	ICIT VAS 93 anti-theft device						0
145	1. 8 TS 16V	Safety	ICIT VAS 93 anti-theft device	•	•	•	•		0
145	2. 0 TS 16V	Safety	ICIT VAS 93 anti-theft device						0
145	TD	Safety	ICIT VAS 93 anti-theft device						0
146	1. 3	Safety	ICIT VAS 93 anti-theft device						0
146	1. 4 TS 16V	Safety	ICIT VAS 93 anti-theft device						0
146	1. 6	Safety	ICIT VAS 93 anti-theft device	•	•				0
146	1. 6 TS 16V	Safety	ICIT VAS 93 anti-theft device						0
146	1. 7 16V	Safety	ICIT VAS 93 anti-theft device	•	•				0
146	1. 8 TS 16V	Safety	ICIT VAS 93 anti-theft device						0
146	2. 0 TS 16V	Safety	ICIT VAS 93 anti-theft device	•					0
146	TD	Safety	ICIT VAS 93 anti-theft device						0
155	1. 6 TS 16V	Safety	ICIT VAS 93 anti-theft device	•	•		•		0
155	1. 7 TS	Safety	ICIT VAS 93 anti-theft device						0
155	1. 7 13 1. 8 TS	Safety	ICIT VAS 93 anti-theft device	•					0
155	1. 8 TS 16V	Safety	ICIT VAS 93 anti-theft device						0
155	2. 0 TS	Safety	ICIT VAS 93 anti-theft device	•					0
199	4. U 13	parety	TOTI MAS 39 and Thierd device						$\cup$

Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
155	2. 0 TS 16V	Safety	ICIT VAS 93 anti-theft device	•	•	•	•	•	0
155	2.5 TD	Safety	ICIT VAS 93 anti-theft device	•	•	•	•	•	0
155	TD	Safety	ICIT VAS 93 anti-theft device	•	•	•	•	•	0
155	V6	Safety	ICIT VAS 93 anti-theft device	•	•	•	•	•	0
GTV	2.0 TS 16V	Safety	ICIT VAS 93 anti-theft device	•	•	•	•	•	0
GTV	2. 0 V6 TB	Safety	ICIT VAS 93 anti-theft device	•	•	•	•	•	0
SPIDER	2.0 TS 16V	Safety	ICIT VAS 93 anti-theft device	•	•	•	•	•	0
SPIDER	3. 0 V6	Safety	ICIT VAS 93 anti-theft device	•	•	•	•	•	0
155	1. 7 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng. El.	•	•	•	•	•	0
155	1. 8 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng. El.	•	•	•	•	•	0
155	2. 0 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng. El.	•	•	•	•	•	0
164	2. 0 TS ECO	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng. El.	•	•	•	•	•	0
164	SUPER 2.0 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng. El.	•	•	•	•	•	0
164	QV 24V	Engine - Gearbox	Bosch Motronic M1.7 Injection (V6 3.0 eng. E1.	•		•	•	•	0
164	SUPER V6 24V	Engine - Gearbox	Bosch Motronic M1.7 Injection (V6 3.0 eng. E1.	•		•	•	•	0
164		Engine - Gearbox	Bosch Motronic M1.7 Injection (V6 3.0 eng. El.	•		•	•	•	0
164	V6 ECO	Engine - Gearbox	Bosch Motronic M1.7 Injection (V6 3.0 eng. El.	<del></del>		•	<del></del>		0
164	V6 ECO C. A.	Engine - Gearbox	Bosch Motronic M1.7 Injection (Vo 3.0 eng. El.	<del></del>		•	<del></del>		0
155	1. 7 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (Vo 3.0 eng. E1.	<del>-</del>		•	<del>-</del>		0
155	1. 7 13 1. 8 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng.)				<del>-</del>		0
155	2. 0 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng.)	<del>-</del>			<del>-</del>		0
164	2. 0 TS ECO	n e e e e e e e e e e e e e e e e e e e	Bosch Motronic M1.7 Injection (TS eng.)	<del>-</del>			<del>-</del>		0
164	SUPER 2.0 TS	Engine - Gearbox		-		•	•		0
145	1. 7 16V	Engine - Gearbox Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng.) Bosch Motronic M2.10.3 Injection (1.7 16v eng.			•	•		0
			El. key) Bosch Motronic M2.10.3 Injection (1.7 16v eng.			_		_	
146	1. 7 16V	Engine - Gearbox	El. key)		•	•	•	•	0
GTV	3. 0 V6 24V	Engine - Gearbox	Bosch Motronic M3.7.1 Injection (3.0 12/24v eng. El. key)	•	•	•	•	•	0
GTV	98 3.0 V6 24V	Engine - Gearbox	Bosch Motronic M3.7.1 Injection (3.0 12/24v eng. El. key)	•	•	•	•	•	0
SPIDER	3. 0 V6	Engine - Gearbox	Bosch Motronic M3.7.1 Injection (3.0 12/24v eng. El. key)	•	•	•	•	•	0
SPIDER	98 3.0 V6	Engine - Gearbox	Bosch Motronic M3.7.1 Injection (3.0 12/24v eng. El. key)	•	•	•	•	•	0
164	Q4	Engine - Gearbox	Bosch Motronic M3.7.1 injection (3.0 24v 4X4	•	•	•	•	•	0
164	SUPER V6 TB	Engine - Gearbox	Bosch Motronic ML4.1 injection (V6 T.Petr. El. Key eng.)	•	•	•	•	•	0
GTV	2. 0 V6 TB	Engine - Gearbox	Bosch Motronic ML4.1 injection (V6 T.Petr. El. Key eng.)	•	•	•	•	•	0
GTV	98 2.0 V6 TB	Engine - Gearbox	Bosch Motronic ML4.1 injection (V6 T.Petr. El. Key eng.)	•	•	•	•	•	0
SPIDER	98 2.0 V6 TB	Engine - Gearbox	Bosch Motronic ML4.1 injection (V6 T.Petr. El. Key eng.)	•	•	•	•	•	0
164	QV 24V	Engine - Gearbox	Bosch Motronic M1.7 injection (V6 3.0 eng.)	•	•	•	•	•	0
164	SUPER V6 24V	Engine - Gearbox	Bosch Motronic M1.7 injection (V6 3.0 eng.)	•	•	•	•	•	0
164	SUPER V6 24V C.A.E.		Bosch Motronic M1.7 injection (V6 3.0 eng.)	•	•	•	•	•	0
164	V6 ECO	Engine - Gearbox	Bosch Motronic M1.7 injection (V6 3.0 eng.)	•	•	•	•	•	0

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
164	V6 ECO C. A.	Engine - Gearbox	Bosch Motronic M1.7 injection (V6 3.0 eng.)	•	•	•	•	•	0
155	V6	Engine - Gearbox	Bosch Motronic M1.7 injection (V6 2.5 El. Key	•	•	•	•	•	0
155	V6	Engine - Gearbox	Bosch Motronic M1.7 injection (V6 2.5 eng.)	•	•	•	•	•	0
164	SUPER V6 TB	Engine - Gearbox	Bosch Motronic ML4.1 injection (V6 T/Petr.	•		•		•	0
164	V6 TURBO ECO	Engine - Gearbox	Bosch Motronic ML4.1 injection (V6 T/Petr.			•	•		0
145	1. 7 16V	Engine - Gearbox	Bosch Motronic M2. 10. 3 injection (1.7 16v	•		•		•	0
146	1. 7 16V	Engine - Gearbox	Bosch Motronic M2. 10. 3 injection (1.7 16v	•		•			0
156	2. 4 JTD	Engine - Gearbox	Bosch EDC15 Diesel Injection (2.4 TD d.i.			•			0
166	2. 4 JTD	Engine - Gearbox	Bosch EDC15 Diesel Injection (2.4 TD d.i.		•	•			0
156	1. 6 TS 16V	Safety	Allied MY97 Airbag (2F-2P-I-S)			•		0	0
156	1. 8 TS 16V	Safety	Allied MY97 Airbag (2F-2P-I-S)		•	•	-	0	0
156	1. 9 JTD	Safety	Allied MY97 Airbag (2F-2F-1-5) Allied MY97 Airbag (2F-2P-I-S)					0	0
156	2. 0 TS 16V	Safety	Allied MY97 Airbag (2F-2F-1-5) Allied MY97 Airbag (2F-2P-I-S)					0	0
156	2. 4 JTD	Safety	Allied MY97 Airbag (2F-2P-I-S) Allied MY97 Airbag (2F-2P-I-S)				•	0	0
				•		·	•		
156	2. 5 V6 24V	Safety	Allied MY97 Airbag (2F-2P-I-S)			•		0	0
156	SELESPEED	Safety	Allied MY97 Airbag (2F-2P-I-S)	•	•	•	•	0	0
156	1. 6 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
156	1. 8 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
156	1.9 JTD	Comfort	Harrison climate control	•	•	•	•	0	0
156	2.0 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
156	2.4 JTD	Comfort	Harrison climate control	•	•	•	•	0	0
156	2.5 V6 24V	Comfort	Harrison climate control	•	•	•	•	0	0
156	SELESPEED	Comfort	Harrison climate control	•	•	•	•	0	0
GTV	03 2.0 JTS	Comfort	Harrison climate control	•	•	•	•	0	0
GTV	03 2.0 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
GTV	03 3.2 V6 24V	Comfort	Harrison climate control	•	•	•	•	0	0
GTV	98 1.8 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
GTV	98 2.0 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
GTV	98 2.0 V6 TB	Comfort	Harrison climate control	•	•	•	•	0	0
GTV	98 3.0 V6 24V	Comfort	Harrison climate control	•	•	•	•	0	0
SPIDER	03 2.0 JTS	Comfort	Harrison climate control	•	•	•	•	0	0
SPIDER	03 2.0 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
SPIDER	03 3.2 V6 24V	Comfort	Harrison climate control	•	•	•	•	0	0
SPIDER	98 1.8 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
SPIDER	98 2.0 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
SPIDER	98 2.0 V6 TB	Comfort	Harrison climate control	•	•	•	•	0	0
SPIDER	98 3.0 V6	Comfort	Harrison climate control	•	•	•	•	0	0
	QV	Engine - Gearbox	Bosch Motronic ML4.1 Injection (3.0 V6 eng.)	•	•	•	•	•	0
164	V6	Engine - Gearbox	Bosch Motronic ML4.1 Injection (3.0 V6 eng.)	•	•	•	•	•	0
164	V6 ECO	Engine - Gearbox	Bosch Motronic ML4.1 Injection (3.0 V6 eng.)	•	•	•	•	•	0
164	V6 ECO C. A.	Engine - Gearbox	Bosch Motronic ML4.1 Injection (3.0 V6 eng.)	•	•	•	•		0
156	1. 8 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection	•	•	•	•	•	0
156	2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection	•	•	•	•	•	0
156	2. 5 V6 24V	Engine - Gearbox	Bosch Motronic ME2.1 injection (2.5 V6 eng.)	•	•	•	•	•	0
145	99 1.9 JTD	Engine - Gearbox  Engine - Gearbox	Bosch Diesel EDC15 injection (1.9 TD d.i.		•	•	-		0
146	99 1.9 JTD	Engine - Gearbox  Engine - Gearbox	Bosch Diesel EDC15 injection (1.9 TD d.i.			•	-		0
156	1.9 JTD	Engine - Gearbox  Engine - Gearbox	Bosch Diesel EDC15 injection (1.9 TD d.i.			•	-		0
145			TRW MY 97 Airbag (2F)	•	•	•	•		0
140	1. 3	Safety	INW MI 9/ AITDAG (2F)					0	$\cup$

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
145	1. 4 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	1. 6	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	1. 6 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	1. 7 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	1. 8 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	2. 0 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	98 1.4 TS 16V	Safety	TRW MY 97 Airbag (2F)			•	•	0	0
145	98 1.6 TS 16V	Safety	TRW MY 97 Airbag (2F)			•	•	0	0
145	98 1.8 TS 16V	Safety	TRW MY 97 Airbag (2F)	<u> </u>		•	•	0	0
145	98 2. 0 TS 16V	Safety	TRW MY 97 Airbag (2F)	•		•	•	0	0
145	99 1.9 JTD	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	TD	Safety	TRW MY 97 Airbag (2F)	•		•	•	0	0
146	1. 3	Safety	TRW MY 97 Airbag (2F)	•		•	•	0	0
146	1. 4 TS 16V	Safety	TRW MY 97 Airbag (2F)	•		•	•	0	0
146		Safety	TRW MY 97 Airbag (2F)	•		•	•	0	0
146	1. 6 TS 16V	Safety	TRW MY 97 Airbag (2F)			•	•	0	0
146	1. 7 16V	Safety	TRW MY 97 Airbag (2F)	<del>-</del>		•		0	0
146	1. 8 TS 16V	Safety	TRW MY 97 Airbag (2F)			•		0	0
146	2. 0 TS 16V	Safety	TRW MY 97 Airbag (2F)			•	•	0	0
146	98 1. 4 TS 16V	Safety	TRW MY 97 Airbag (2F)				-	0	0
146	98 1. 6 TS 16V	Safety	TRW MY 97 Airbag (2F)	<del>-</del>				0	0
146	98 1.8 TS 16V	Safety	TRW MY 97 Airbag (2F)	<del>-</del>				0	0
146	98 2. 0 TS 16V	Safety	TRW MY 97 Airbag (2F)	<del>-</del>			-	0	0
146	99 1. 9 JTD	Safety	TRW MY 97 Airbag (2F)				-	0	0
146	TD	Safety	TRW MY 97 Airbag (2F)				-	0	0
164	SUPER V6 24V C. A. E.	Engine - Gearbox	ZF 4HP18 K Automatic Transmission				-	•	0
166	2. 0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-2L-I-S)			•	•	0	0
166	2. 0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P-2L-I-S)			•	•	0	0
166	2. 4 JTD	Safety	TRW MY 97 Air Bag (2F-2P-2L-I-S)			•		0	0
166	2. 5 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-2L-I-S)	<del>-</del>		•		0	0
166	3. 0 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-2L-I-S)	<del></del>		•		0	0
145	98 1.4 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS'98)	•			-		0
145	98 1. 4 13 16V 98 1. 6 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS '98)	<del>-</del>					0
145	98 1.8 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS '98)	<del>_</del>			-		0
145	98 2.0 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS '98)	<del>-</del>					0
146	98 1. 4 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS '98)				-		0
146	98 1. 6 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS '98)	<del>-</del>			-		0
146	98 1.8 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS '98)	<del>-</del>	•		-		0
146	98 2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS '98)	•			-		0
156	1. 6 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS '98)	•	•	•	•		0
156	1. 8 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. 15 98)  Bosch Motronic M1.5.5 injection (eng. TS '98)	<del>-</del>			-		0
156	2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. 15 98)  Bosch Motronic M1.5.5 injection (eng. TS '98)	<del>-</del>			-		0
166	2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. 15 98) Bosch Motronic M1.5.5 injection (eng. TS '98)	-			•		0
GTV	98 1. 8 TS 16V		Bosch Motronic M1.5.5 injection (eng. 15 98) Bosch Motronic M1.5.5 injection (eng. TS '98)	<del>-</del>			•		0
GTV	98 1.8 15 16V 98 2.0 TS 16V	Engine - Gearbox		•	•	•	•		0
SPIDER	98 2.0 15 16V 98 1.8 TS 16V	Engine - Gearbox Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS'98) Bosch Motronic M1.5.5 injection (eng. TS'98)	<del>-</del>			•		0
	98 1.8 15 16V 98 2.0 TS 16V			•		•	•		0
SPIDER		Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS '98)	•	•	•	•		0
GTV	03 2.0 JTS	Safety	TRW MY 97 Air Bag (2F-2P)				•	0	$\cup$

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GTV	03 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)	•	00000	Oucs	Data	0	0
GTV	03 3. 2 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P)			•	•	0	0
GTV	2. 0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)			•	•	0	0
GTV	2. 0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P)			•	•	0	0
GTV	3. 0 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P)				•	0	0
GTV	98 1.8 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)	•		•	•	0	0
GTV	98 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)			•	•	0	0
GTV	98 2.0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P)			•	•	0	0
GTV	98 3.0 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P)			•	•	0	0
SPIDER	03 2.0 JTS	Safety	TRW MY 97 Air Bag (2F-2P)			•	•	0	0
SPIDER	03 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)			•	•	0	0
SPIDER	03 3. 2 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P)			•	•	0	0
SPIDER	2. 0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)	•		•	•	0	0
SPIDER	3. 0 V6	Safety	TRW MY 97 Air Bag (2F-2P)	•		•	•	0	0
SPIDER	98 1.8 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)			•	•	0	0
SPIDER	98 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)					0	0
SPIDER	98 2.0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P)			•		0	0
SPIDER	98 3.0 V6	Safety	TRW MY 97 Air Bag (2F-2P)			•		0	0
145	98 1.4 TS 16V	Safety	TRW MY 97 Air Bag (2F-S)			•	•	0	0
145	98 1. 6 TS 16V	Safety	TRW MY 97 AIT Bag (2F-S)			•	-	0	0
145	98 1.8 TS 16V	Safety	TRW MY 97 Air Bag (2F-S)			•		0	0
145	98 2.0 TS 16V	Safety	TRW MY 97 AIT Bag (2F-S)			•		0	0
145	99 1.9 JTD	Safety	TRW MY 97 AIT Bag (2F-S)			•	-	0	0
146	98 1.4 TS 16V	Safety	TRW MY 97 Air Bag (2F-S)			•	-	0	0
146	98 1. 6 TS 16V	Safety	TRW MY 97 AIT Bag (2F-S)			•		0	0
146	98 1.8 TS 16V	Safety	TRW MY 97 Air Bag (2F-S)			•	•	0	0
146	98 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-S)			•	•	0	0
146	99 1.9 JTD	Safety	TRW MY 97 Air Bag (2F-S)			•	•	0	0
166	2. 0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-I)			•		0	0
166	2. 0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P-I)			•	•	0	0
166	2. 4 JTD	Safety	TRW MY 97 Air Bag (2F-2P-I)	•		•	•	0	0
166	2. 5 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-I)			•	•	0	0
166	3. 0 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-I)					0	0
GTV	03 2.0 JTS	Safety	TRW MY 97 Air Bag (2F-2P-I)			•	•	0	0
GTV	03 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-I)			•	•	0	0
GTV	03 3. 2 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-I)				•	0	0
GTV	98 1.8 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-I)		•	•	•	0	0
GTV	98 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	_	0
GTV	98 2.0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P-I)	•		•	•	0	0
GTV	98 3.0 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
SPIDER	03 2.0 JTS	Safety	TRW MY 97 Air Bag (2F-2P-I)	•		•	•	0	0
SPIDER	03 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-I)			•	•	0	0
SPIDER	03 3. 2 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-I)			•	•	0	0
SPIDER	98 1.8 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-I)			•	•	0	0
SPIDER	98 2. 0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2F-I)			•	-	0	0
SPIDER	98 2.0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P-I)			•	-	0	0
SPIDER	98 3.0 V6	Safety	TRW MY 97 Air Bag (2F-2P-I)			•	-	0	0
145	98 1.4 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)			•	•		0
140	190 1'4 19 101	Sarety	IIVII III JI AII Dag (ZI ZL S)			•		$\cup$	$\sim$

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live	Active Test	Specil Function
145	98 1.6 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)	11110.	Codes	Codes	Data	O	0
145	98 1. 8 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)				<del>-</del>	0	0
145	98 2. 0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)				<del>-</del>	0	0
145	99 1.9 JTD	Safety	TRW MY 97 Air Bag (2F-2L-S)				<del>-</del>	0	0
146	98 1.4 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)	-			<del>-</del>	0	0
146	98 1. 6 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)	-			<del>-</del>	0	0
146	98 1. 8 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)				<del>-</del>	0	0
146	98 2. 0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)				<del>-</del>	0	0
146		Safety	<u> </u>	-			<del>-</del>		0
166	99 1.9 JTD 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S) TRW MY 97 Air Bag (2F-2P-I-S)				<del>-</del>	0	0
		Safety					<del>-</del>	0	0
166 166	2. 0 V6 TB 2. 4 JTD	Safety	TRW MY 97 Air Bag (2F-2P-I-S)				•	0	0
166	2. 4 J1D 2. 5 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-I-S) TRW MY 97 Air Bag (2F-2P-I-S)	•			•		0
166	3. 0 V6 24V	Safety	TRW MY 97 Air Bag (2F-2F-1-5) TRW MY 97 Air Bag (2F-2P-I-S)	•			•	0	0
156	1. 6 TS 16V	Safety	Allied MY 97 Airbag (2F-2P)	•			•	0	0
			Allied MY 97 Airbag (2F-2F) Allied MY 97 Airbag (2F-2P)			•	•		0
156	1. 8 TS 16V	Safety				•	•	0	
156 156	1. 9 JTD 2. 0 TS 16V	Safety	Allied MY 97 Airbag (2F-2P)		-		•	0	0
		Safety	Allied MY 97 Airbag (2F-2P)		<del>                                     </del>	_			
156	2. 4 JTD	Safety	Allied MY 97 Airbag (2F-2P)			•	•	0	0
156	2. 5 V6 24V	Safety	Allied MY 97 Airbag (2F-2P)			•	•	0	0
156	SELESPEED	Safety	Allied MY 97 Airbag (2F-2P)		<del></del>	•		0	0
156	1. 6 TS 16V	Safety	Allied MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
156	1. 8 TS 16V	Safety	Allied MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
156	1. 9 JTD	Safety	Allied MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
156	2. 0 TS 16V	Safety	Allied MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
156	2. 4 JTD	Safety	Allied MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•		0	0
156	2. 5 V6 24V	Safety	Allied MY 97 Air Bag (2F-2P-2L-I-S)		•	•		0	0
156	SELESPEED	Safety	Allied MY 97 Air Bag (2F-2P-2L-I-S)	_	•	•		0	0
166	2. 5 V6 24V	Engine - Gearbox	Bosch Motronic ME2.1 injection (eng. V6 2.5 /	•	•	•	•	•	0
166	3. 0 V6 24V	Engine - Gearbox	Bosch Motronic ME2.1 injection (eng. V6 2.5 /	•	•	•	•	•	0
GTV	98 3.0 V6 24V	Engine - Gearbox	Bosch Motronic ME2.1 injection (eng. V6 2.5 /	•	•	•	•	•	0
SPIDER	98 3.0 V6	Engine - Gearbox	Bosch Motronic ME2.1 injection (eng. V6 2.5 /	•	•	•	•	•	0
166	2. 0 TS 16V	Safety	Bosch 5. 3 TC ABS	•	•	•	•	•	0
166	2. 0 V6 TB	Safety	Bosch 5. 3 TC ABS	•	•	•	•	•	0
166	2. 4 JTD	Safety	Bosch 5.3 TC ABS	_		•	•	•	0
156 MY	GTA 3.2 V6	Safety	Bosch 5. 3 ASR ABS	•	•	•	•	•	0
166	2. 5 V6 24V	Safety	Bosch 5. 3 ASR ABS	•	•	•	•	•	0
166	3. 0 V6 24V	Safety	Bosch 5. 3 ASR ABS	•	•	•	•		0
GTV	03 2.0 JTS	Safety	Bosch 5. 3 ASR ABS	•	•	•	•		0
GTV	03 3.2 V6 24V	Safety	Bosch 5. 3 ASR ABS	•	•	•	•	•	0
SPIDER	03 2.0 JTS	Safety	Bosch 5. 3 ASR ABS	•	•	•	•	•	0
SPIDER	03 3.2 V6 24V	Safety	Bosch 5. 3 ASR ABS	•	•	•	•	•	0
166	2. 0 V6 TB	Engine - Gearbox	Bosch Motronic ME2.1 injection (eng. V6 2.0	•	•	•		•	0
166	03 2.0 TS 16V	Instrumentation	Navigator/Siemens ICS instrument	•	<b>•</b>	•		0	0
166	03 2.4 JTD 20V	Instrumentation	Navigator/Siemens ICS instrument	•		•	•	0	0
166	03 2.5 V6 24V	Instrumentation	Navigator/Siemens ICS instrument	•	•	•	•	0	0
166	03 3.0 V6 24V	Instrumentation	Navigator/Siemens ICS instrument	•	•	•	•	0	0
166	03 3.2 V6 24V	Instrumentation	Navigator/Siemens ICS instrument	•	•	•	•	0	0

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
166	2. 0 TS 16V	Instrumentation	Navigator/Siemens ICS instrument	11110.	Codes	Codes	Data	O	0
166	2. 0 13 10v	Instrumentation	Navigator/Siemens ICS instrument				-	0	0
166	2. 4 JTD	Instrumentation	Navigator/Siemens ICS instrument				•	0	0
166	2. 5 V6 24V	Instrumentation	Navigator/Siemens ICS instrument				-	0	0
166	3. 0 V6 24V		Navigator/Siemens ICS instrument				-	0	0
166	03 2.5 V6 24V	Instrumentation Engine - Gearbox	ZF 4HP20 Automatic Transmission				•		0
		<u> </u>	ZF 4HP20 Automatic Transmission				•		0
166	03 3.0 V6 24V 2.5 V6 24V	Engine - Gearbox	ZF 4HP20 Automatic Transmission ZF 4HP20 Automatic Transmission			•	•		0
166		Engine - Gearbox				<u> </u>			0
166	3. 0 V6 24V	Engine - Gearbox	ZF 4HP20 Automatic Transmission	•	-	•	•	•	0
156	2. 5 V6 24V	Engine - Gearbox	AISIN Q-SYSTEM Automatic Gearbox	-	-	•	•	•	
156 MY	2. 5 V6 24V	Engine - Gearbox	AISIN Q-SYSTEM Automatic Gearbox		•	•	•		0
156	SELESPEED	Engine - Gearbox	Marelli SELESPEED Automatic Gearbox	•	•	•	•	•	0
156	SELESPEED	Engine - Gearbox	Bosch Motronic ME3.1 injection (Selespeed)	•	•	•	•	0	0
145	98 1.4 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
145	98 1.6 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
145	98 1.8 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
145	98 2.0 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
145	99 1.9 JTD	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
146	98 1.4 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
146	98 1.6 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
146	98 1.8 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
146	98 2.0 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
146	99 1.9 JTD	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
166	2.0 TS 16V	Safety	TRW MY 97 airbag (2F-2P-2L-I)	•	•	•	•	0	0
166	2.0 V6 TB	Safety	TRW MY 97 airbag (2F-2P-2L-I)	•	•	•	•	0	0
166	2.4 JTD	Safety	TRW MY 97 airbag (2F-2P-2L-I)	•	•	•	•	0	0
166	2.5 V6 24V	Safety	TRW MY 97 airbag (2F-2P-2L-I)	•	•	•	•	0	0
166	3.0 V6 24V	Safety	TRW MY 97 airbag (2F-2P-2L-I)	•	•	•	•	0	0
166	3.0 V6 24V	Safety	Bosch 5.7 VDC ABS	•	•	•	•	•	0
156	1.6 TS 16V	Safety	Allied MY 97 Airbag (2F-2P-I)	•	•	•	•	0	0
156	1.8 TS 16V	Safety	Allied MY 97 Airbag (2F-2P-I)	•	•	•	•	0	0
156	1.9 JTD	Safety	Allied MY 97 Airbag (2F-2P-I)	•	•	•	•	0	0
156	2.0 TS 16V	Safety	Allied MY 97 Airbag (2F-2P-I)	•	•	•	•	0	0
156	2. 4 JTD	Safety	Allied MY 97 Airbag (2F-2P-I)	•	•	•	•	0	0
156	2.5 V6 24V	Safety	Allied MY 97 Airbag (2F-2P-I)	•	•	•	•	0	0
156	SELESPEED	Safety	Allied MY 97 Airbag (2F-2P-I)	•	•	•	•	0	0
156	1.6 TS 16V	Safety	Allied MY 97 Airbag (2F-2P-2L-I)	•	•	•	•	0	0
156	1. 8 TS 16V	Safety	Allied MY 97 Airbag (2F-2P-2L-I)	•	•	•	•		0
156	1.9 JTD	Safety	Allied MY 97 Airbag (2F-2P-2L-I)	•	•	•	•	0	0
156	2. 0 TS 16V	Safety	Allied MY 97 Airbag (2F-2P-2L-I)	•	•	•	•	0	0
156	2. 4 JTD	Safety	Allied MY 97 Airbag (2F-2P-2L-I)	•	•	•	•	0	0
156	2. 5 V6 24V	Safety	Allied MY 97 Airbag (2F-2P-2L-I)	•		•	•	0	0
156	SELESPEED SELESPEED	Safety	Allied MY 97 Airbag (2F-2P-2L-I)			•	•	0	0
147	1. 6 TS 16V 105CV	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)			•	•	0	0
147	1. 6 TS 16V 103CV	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)			•	-	0	0
147	1. 9 JTD	Safety	Allied Airbag MY 97 (2F-2F-2L-2T-I)				•	0	0
147	1. 9 JTD 16V	Safety	Allied Airbag MY 97 (2F-2F-2L-2T-I)			•	•	0	0
147	2. 0 TS 16V	Safety	Allied Airbag MY 97 (2F-2F-2L-2T-1) Allied Airbag MY 97 (2F-2P-2L-2T-1)				-		0
141	4. U 15 10V	Sarety	ATTIEU ATIDAS MI 31 (41,-41-41-1)			•	•	$\cup$	$\cup$

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
147	GTA 3.2 V6	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	11110.	Codes	Codes		O	0
147	GTA SELESPEED	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)			•		0	0
147	SELESPEED SELESPEED	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)			•		0	0
156	1. 6 TS 16V	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)					0	0
156	1. 8 TS 16V	Safety	Allied Airbag MY 97 (2F-2F-2L-2T-I)					0	0
156	1. 9 JTD	Safety	Allied Airbag MY 97 (2F-2F-2L-2T-I)				•	0	0
156	2. 0 TS 16V	Safety	Allied Airbag MY 97 (2F-2F-2L-2T-I)				•	0	0
156	2. 4 JTD	Safety	Allied Airbag MY 97 (2F-2F-2L-2T-I)					0	0
156	2. 5 V6 24V	Safety	Allied Airbag MY 97 (2F-2F-2L-2T-1) Allied Airbag MY 97 (2F-2P-2L-2T-I)					0	0
156	SELESPEED	Safety	Allied Airbag MY 97 (2F-2F-2L-2T-1) Allied Airbag MY 97 (2F-2P-2L-2T-I)					0	0
147			t	_					0
156 MY	SELESPEED  JTS SELESPEED	Engine - Gearbox	Marelli CFC208F SELESPEED Automatic Gearbox						0
		Engine - Gearbox	Marelli CFC208F SELESPEED Automatic Gearbox						0
156 MY	SELESPEED	Engine - Gearbox	Marelli CFC208F SELESPEED Automatic Gearbox						0
156 MY	GTA SELESPEED	Engine - Gearbox	Marelli SELESPEED CFC218F Automatic Gearbox						0
147	1. 6 TS 16V 105CV	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)						
147	1. 6 TS 16V 120CV	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)				_	•	0
147	1. 9 JTD	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
147	1. 9 JTD 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
147	2. 0 TS 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
147	GTA 3.2 V6	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
147	GTA SELESPEED	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
147	SELESPEED	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	1.6 TS 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	1.8 TS 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	1.9 JTD	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	1.9 JTD 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	2.0 TS 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	2.4 JTD 10V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	2.4 JTD 20V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	2.5 V6 24V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	GTA 3.2 V6	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	GTA SELESPEED	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	JTS 2.0	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	JTS SELESPEED	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	SELESPEED	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
GT	1.8 TS 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
GT	1.9 JTD 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
GT	3. 2 V6 24V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•		0
GT	JTS 2.0	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
166	03 2.0 TS 16V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	03 2.4 JTD 20V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	03 2.5 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	03 3.0 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	03 3.2 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	2.0 TS 16V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	2.0 V6 TB	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	2.4 JTD	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	2.5 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0

Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
166	3. 0 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	03 2.0 TS 16V	Safety	TRW MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
166	03 2.4 JTD 20V	Safety	TRW MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
166	03 2.5 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
166	03 3.0 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
166	03 3.2 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	1.9 JTD	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	1.9 JTD 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	2.0 TS 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	GTA 3.2 V6	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	GTA SELESPEED	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	SELESPEED	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	1.6 TS 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	1.8 TS 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	1.9 JTD	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	1.9 JTD 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	2.0 TS 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	2. 4 JTD 10V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	2.4 JTD 20V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	2.5 V6 24V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	GTA SELESPEED	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	JTS 2.0	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	JTS SELESPEED	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	SELESPEED	Safety	Bosch ABS 5.7	•	•	•	•	•	0
GT	1.8 TS 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
GT	1.9 JTD 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
GT	3. 2 V6 24V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
GT	JTS 2.0	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
147	1.9 JTD	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
147	1.9 JTD 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
147	2.0 TS 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
147	GTA 3.2 V6	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
147	GTA SELESPEED	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
147	SELESPEED	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	1.6 TS 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	1.8 TS 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	1.9 JTD	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	1. 9 JTD 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	2. 0 TS 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	2. 4 JTD 10V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	2. 4 JTD 20V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	2. 5 V6 24V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	GTA SELESPEED	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	JTS 2.0	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	JTS SELESPEED	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0

Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
156 MY	SELESPEED	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	03 2.0 TS 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	03 2.4 JTD 20V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	03 2.5 V6 24V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	03 3.0 V6 24V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	03 3.2 V6 24V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	2.0 TS 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	2. 4 JTD	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	2.5 V6 24V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	3.0 V6 24V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
GT	1.8 TS 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
GT	1.9 JTD 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
GT	3. 2 V6 24V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
GT	JTS 2.0	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
147	1.9 JTD	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
147	1.9 JTD 16V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
147	2. 0 TS 16V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
147	GTA 3.2 V6	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
147	GTA SELESPEED	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
147	SELESPEED	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	1.6 TS 16V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	1.8 TS 16V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	1.9 JTD	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	1.9 JTD 16V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	2. 0 TS 16V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	2.4 JTD 10V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	2. 4 JTD 20V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	2. 5 V6 24V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	GTA SELESPEED	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	JTS 2.0	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	JTS SELESPEED	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	SELESPEED	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	1.9 JTD	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	1.9 JTD 16V	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	2.0 TS 16V	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	GTA 3.2 V6	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	GTA SELESPEED	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	SELESPEED	Instrumentation	Marelli Connect	•	•	•	•	•	0
GT	1.8 TS 16V	Instrumentation	Marelli Connect	•	•	•	•	•	0
GT	1. 9 JTD 16V	Instrumentation	Marelli Connect	•	•	•	•	•	0
GT	3. 2 V6 24V	Instrumentation	Marelli Connect	•	•	•	•	•	0
GT	JTS 2.0	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	1. 6 TS 16V 105CV	Other systems	TRW driver's door	•	•	•	•	•	0
147	1. 6 TS 16V 120CV	Other systems	TRW driver's door	•	•	•	•	•	0
147	1.9 JTD	Other systems	TRW driver's door	•	•	•	•	•	0

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
147	1. 9 JTD 16V	Other systems	TRW driver's door	11110.	Codes	Codes	Data	Test	0
147	2. 0 TS 16V	Other systems	TRW driver's door	<del>-</del>	•	•		•	0
147	GTA 3.2 V6	Other systems	TRW driver's door	<del>                                     </del>		•			0
147	GTA SELESPEED	Other systems	TRW driver's door	+ -		•			0
147	SELESPEED SELESPEED	Other systems	TRW driver's door	+ -		•			0
147	1. 6 TS 16V 105CV	Other systems	TRW Boot	+ -	•	•			0
147	1. 6 TS 16V 103CV	Other systems	TRW Boot	+ -	•	•	•		0
147	1. 9 JTD	Other systems	TRW Boot	+ -		•			0
147	1. 9 JTD 16V	Other systems	TRW Boot	<del>-</del>	•	•	•		0
147	2. 0 TS 16V	Other systems	TRW Boot	<del>                                     </del>		•			0
147	GTA 3. 2 V6	Other systems	TRW Boot	<del>                                     </del>		•			0
147	GTA SELESPEED	Other systems	TRW Boot						0
147	SELESPEED SELESPEED	Other systems	TRW Boot	<del>                                     </del>		•			0
147	1. 6 TS 16V 105CV	Safety	Marelli Body Computer	<del>                                     </del>		•			0
147	1. 6 TS 16V 103CV	Safety	Marelli Body Computer	<del>                                     </del>		•			0
147	1. 9 JTD	Safety	Marelli Body Computer  Marelli Body Computer	+ -	•	•			0
147	1. 9 JTD 16V	Safety		<del></del>		•	-		0
147	2. 0 TS 16V		Marelli Body Computer	<del>-</del>		•			0
		Safety	Marelli Body Computer						
147	GTA 3.2 V6	Safety	Marelli Body Computer	•	•	•	•	•	0
147	GTA SELESPEED	Safety	Marelli Body Computer	<del></del>		•	_	•	0
147	SELESPEED	Safety	Marelli Body Computer	•	•	•	•	•	0
GT	1. 8 TS 16V	Safety	Marelli Body Computer	•	•	•	•	•	0
GT	1. 9 JTD 16V	Safety	Marelli Body Computer	•	•	•	•	•	0
GT	3. 2 V6 24V	Safety	Marelli Body Computer	•	•	•	•	•	0
GT	JTS 2.0	Safety	Marelli Body Computer	•	•	•	•	•	0
147	1. 6 TS 16V 105CV	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0064 0032 0042 0034
147	1. 6 TS 16V 120CV	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0064 0032 0042 0034
147	1.9 JTD	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0064 0032 0042 0034
147	1.9 JTD 16V	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0064 0032 0042 0034
147	2. 0 TS 16V	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0064 0032 0042 0034
147	GTA 3.2 V6	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0064 0032 0042 0034
147	GTA SELESPEED	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0064 0032 0042 0034
147	SELESPEED	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0064 0032 0042 0034
GT	1. 8 TS 16V	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0064 0032 0042 0034
GT	1. 9 JTD 16V	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0064 0032 0042 0034
GT	3. 2 V6 24V	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0064 0032 0042 0034
GT	JTS 2.0	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0064 0032 0042 0034
147	1.6 TS 16V 105CV	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection (2 lambda sensors)	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
147	2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
147	GTA 3.2 V6	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
147	GTA SELESPEED	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
147	SELESPEED	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156	1.6 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156	1.8 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156	2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156	SELESPEED	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0

Madal	Varrior	Creation	Surat an	ECU	Read	Erase	Live	Active	Cassil Euroption
Model	Version	Group	System	info.	Codes	Codes	Data	Test	Specil Function
156 MY	1.6 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156 MY	1.8 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156 MY	GTA 3.2 V6	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156 MY	GTA SELESPEED	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156 MY	SELESPEED	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
166	03 2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
166	03 3.2 V6 24V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
166	2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
GT	1.8 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
GT	3. 2 V6 24V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
GTV	03 2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
GTV	03 3.2 V6 24V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
GTV	98 2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
SPIDER	03 2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
SPIDER	03 3.2 V6 24V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
SPIDER	98 2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
147	1. 6 TS 16V 105CV	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
147	1. 6 TS 16V 120CV	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
147	1. 9 JTD	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
147	1. 9 JTD 16V	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
147	2. 0 TS 16V	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
147	GTA 3.2 V6	Comfort	Delphi Climate control (Dual zone)	•		•	•	•	0
147	GTA SELESPEED	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
147	SELESPEED SELESPEED	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
GT	1. 8 TS 16V	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
GT	1. 9 JTD 16V	Comfort	Delphi Climate control (Dual zone)			•			0
GT	3. 2 V6 24V	Comfort	Delphi Climate control (Dual zone)	•		•	<del>-</del>		0
GT	JTS 2.0	Comfort	Delphi Climate control (Dual zone)		•	•	<del>-</del>		0
147	1. 6 TS 16V 105CV	Comfort	Delphi Climate control (Single zone)			•			0
147	1. 6 TS 16V 120CV	Comfort	Delphi Climate control (Single zone)			•	<del>-</del>		0
147	1. 9 JTD	Comfort	Delphi Climate control (Single zone)			•	<del>-</del>		0
147	1. 9 JTD 16V	Comfort	Delphi Climate control (Single zone)			•	<del>-</del>		0
147	2. 0 TS 16V	Comfort	Delphi Climate control (Single zone)				<del>-</del>		0
147						•	•	•	0
	GTA 3.2 V6 GTA SELESPEED	Comfort	Delphi Climate control (Single zone)				<del>-</del>		0
147 147	SELESPEED SELESPEED	Comfort Comfort	Delphi Climate control (Single zone) Delphi Climate control (Single zone)			•	•		0
									0
GT	1. 8 TS 16V	Comfort	Delphi Climate control (Single zone)	_	•		•	•	
GT	1. 9 JTD 16V	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
GT	3. 2 V6 24V	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
GT	JTS 2.0	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
156 W	2. 5 V6 24V	Engine - Gearbox	Bosch Motronic EOBD ME3. 1 Injection (eng. V6)	•	•	•	•	•	0
156 MY	2. 5 V6 24V	Engine - Gearbox	Bosch Motronic EOBD ME3. 1 Injection (eng. V6)	•	•	•		•	0
166	03 2.5 V6 24V	Engine - Gearbox	Bosch Motronic EOBD ME3.1 Injection (eng. V6)	•	•	•	•	•	0
166	03 3.0 V6 24V	Engine - Gearbox	Bosch Motronic EOBD ME3.1 Injection (eng. V6)	•	•	•	•	•	0
166	2. 5 V6 24V	Engine - Gearbox	Bosch Motronic EOBD ME3.1 Injection (eng. V6)	•	•	•	•	•	0
166	3. 0 V6 24V	Engine - Gearbox	Bosch Motronic EOBD ME3.1 Injection (eng. V6)	•	•	•	•	•	0
GTV	98 3.0 V6 24V	Engine - Gearbox	Bosch Motronic EOBD ME3.1 Injection (eng. V6)	•	•	•	•	•	0
SPIDER	98 3.0 V6	Engine - Gearbox	Bosch Motronic EOBD ME3.1 Injection (eng. V6)	•	•	•	•	•	0

Mode1	Version	Group	Crrat om	ECU	Read	Erase	Live	Active	Specil Function
		Group	System	info.	Codes	Codes	Data	Test	Specii Function
147	1.6 TS 16V 105CV	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	1.9 JTD	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	1.9 JTD 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	2.0 TS 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	GTA 3.2 V6	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	GTA SELESPEED	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	SELESPEED	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	1.6 TS 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	1.8 TS 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	1.9 JTD	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	1.9 JTD 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	2.0 TS 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	2.4 JTD 10V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	2.4 JTD 20V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	2. 5 V6 24V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	GTA 3.2 V6	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	GTA SELESPEED	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	JTS 2.0	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	JTS SELESPEED	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	SELESPEED SELESPEED	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
GT	1. 8 TS 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
GT	1. 9 JTD 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
GT	3. 2 V6 24V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
GT	JTS 2.0	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	1. 6 TS 16V 105CV	Other systems	Bosch discharge headlamp (right)		•	•	•	0	0
147	1. 6 TS 16V 120CV	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
147	1. 9 JTD	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
147	1. 9 JTD 16V	Other systems	Bosch discharge headlamp (right)		•	•		0	0
147	2. 0 TS 16V	Other systems	Bosch discharge headlamp (right)		•	•	•	0	0
147	GTA 3. 2 V6	Other systems	Bosch discharge headlamp (right)	•		•		0	0
147	GTA SELESPEED	Other systems	Bosch discharge headlamp (right)	•		•		0	0
147	SELESPEED SELESPEED	Other systems	Bosch discharge headlamp (right)			•		0	0
156 MY	1. 6 TS 16V	Other systems	Bosch discharge headlamp (right)			•	-	0	0
156 MY	1. 8 TS 16V	Other systems	Bosch discharge headlamp (right)			•		0	0
156 MY	1. 9 JTD		Bosch discharge headlamp (right)			•	-	0	0
		Other systems	• • •			•	-	0	0
156 MY 156 MY	1. 9 JTD 16V 2. 0 TS 16V	Other systems	Bosch discharge headlamp (right)	•	_		•		
		Other systems	Bosch discharge headlamp (right)	_	•	•	•	0	0
156 MY	2. 4 JTD 10V	Other systems	Bosch discharge headlamp (right)	•	<u> </u>	•		0	
156 MY	2. 4 JTD 20V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	2. 5 V6 24V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	GTA 3.2 V6	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	GTA SELESPEED	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	JTS 2.0	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	JTS SELESPEED	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	SELESPEED	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
GT	1. 8 TS 16V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
GT	1.9 JTD 16V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0

Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GT	3. 2 V6 24V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
GT	JTS 2.0	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
147	1.9 JTD	Engine - Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	•	•	•	•	•	0
156	1.9 JTD	Engine - Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	•	•	•	•	•	0
156	2.4 JTD	Engine - Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	•	•	•	•	•	0
156 MY	1.9 JTD	Engine - Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	•	•	•	•	•	0
156 MY	2.4 JTD 10V	Engine - Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	•	•	•	•	•	0
166	2.4 JTD	Engine - Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	•	•	•	•	•	0
159	1.8 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
159	1.8 JTS TB 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
159	1.9 JTS 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
159	1.9 MJET 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
159	1.9 MJET 8V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
159	2. 0 JTD 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
159	2. 2 JTS 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
159	2. 4 MJET 20V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
159	3. 2 V6 24V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
BRERA	1. 8 JTS TB 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
BRERA	2. 0 JTD 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
BRERA	2. 4 MJET 20V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
147	1. 6 TS 16V 120CV	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
147	2. 0 TS 16V	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
147	SELESPEED	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
156	1. 6 TS 16V	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
156	2. 0 TS 16V	Engine - Gearbox	Injection - Bosch Motronic Me7. 3. 1 Outside EEC	•	•	•	•	•	0
156	SELESPEED	Engine - Gearbox	Injection - Bosch Motronic Me7. 3. 1 Outside EEC	•	•	•	•	•	0
156 MY	2. 0 TS 16V	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
156 MY	GTA 3.2 V6	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
156 MY	SELESPEED SELESPEED	Engine - Gearbox	Injection - Bosch Motronic Me7. 3.1 Outside EEC	•		•	•	•	0
GTV	03 2.0 TS 16V	Engine - Gearbox	Injection - Bosch Motronic Me7. 3.1 Outside EEC	•		•	•		0
GTV	98 2.0 TS 16V	Engine - Gearbox	Injection - Bosch Motronic Me7. 3.1 Outside EEC	<u> </u>		•	•		0
SPIDER	03 2.0 TS 16V	Engine - Gearbox	Injection - Bosch Motronic Me7. 3.1 Outside EEC	•	•	•	•	•	0
SPIDER	98 2.0 TS 16V	Engine - Gearbox	Injection - Bosch Motronic Me7. 3.1 Outside EEC	•	•	•	•	•	0
147	1. 6 TS 16V 105CV	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC (2 lambdas)	•	•	•	•	•	0
156	2. 5 V6 24V	Engine - Gearbox	Injection - Bosch Motronic Me3.1 (eng. V6) Outside EEC	•	•	•	•	•	0
166	03 2.5 V6 24V	Engine - Gearbox	Injection - Bosch Motronic Me3.1 (eng. V6) Outside EEC	•	•	•	•	•	0

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
166	03 3.0 V6 24V	Engine - Gearbox	Injection - Bosch Motronic Me3.1 (eng. V6) Outside EEC	•	•	•	•	•	0
166	2. 5 V6 24V	Engine - Gearbox	Injection - Bosch Motronic Me3.1 (eng. V6) Outside EEC	•	•	•	•	•	0
166	3. 0 V6 24V	Engine - Gearbox	Injection - Bosch Motronic Me3.1 (eng. V6) Outside EEC	•	•	•	•	•	0
GTV	98 3.0 V6 24V	Engine - Gearbox	Injection - Bosch Motronic Me3.1 (eng. V6) Outside EEC	•	•	•	•	•	0
SPIDER	98 3.0 V6	Engine - Gearbox	Injection - Bosch Motronic Me3.1 (eng. V6) Outside EEC	•	•	•	•	•	0
159	1.8 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	1.8 JTS TB 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	1.9 JTS 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	1.9 MJET 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	1.9 MJET 8V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	2.0 JTD 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	2. 2 JTS 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	2.4 MJET 20V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	3. 2 V6 24V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
BRERA	1.8 JTS TB 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
BRERA	2.0 JTD 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
BRERA	2. 2 JTS 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
BRERA	2.4 MJET 20V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
BRERA	3. 2 V6 24V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
156 MY	JTS 2.0	Engine - Gearbox	Bosch Motronic MeD7.11 EOBD injection	•	•	•	•	•	0
156 MY	JTS SELESPEED	Engine - Gearbox	Bosch Motronic MeD7.11 EOBD injection	•	•	•	•	•	0
GT	JTS 2.0	Engine - Gearbox	Bosch Motronic MeD7.11 EOBD injection	•	•	•	•	•	0
GTV	03 2.0 JTS	Engine - Gearbox	Bosch Motronic MeD7.11 EOBD injection	•	•	•	•	•	0
SPIDER	03 2.0 JTS	Engine - Gearbox	Bosch Motronic MeD7.11 EOBD injection	•	•	•	•	•	0
156 MY	1.6 TS 16V	Comfort	Delphi Climate Control	•	•	•	•	•	0
156 MY	1.8 TS 16V	Comfort	Delphi Climate Control	•	•	•	•	•	0
156 MY	1.9 JTD	Comfort	Delphi Climate Control	•	•	•	•	•	0
156 MY	1.9 JTD 16V	Comfort	Delphi Climate Control	•	•	•	•	•	0
156 MY	2.0 TS 16V	Comfort	Delphi Climate Control	•	•	•	•	•	0
156 MY	2.4 JTD 10V	Comfort	Delphi Climate Control	•	•	•	•	•	0
156 MY	2.4 JTD 20V	Comfort	Delphi Climate Control	•	•	•	•	•	0
156 MY	2.5 V6 24V	Comfort	Delphi Climate Control	•	•	•	•	•	0
156 MY	GTA 3.2 V6	Comfort	Delphi Climate Control	•	•	•	•	•	0
156 MY	GTA SELESPEED	Comfort	Delphi Climate Control	•	•	•	•	•	0
156 MY	JTS 2.0	Comfort	Delphi Climate Control	•	•	•	•	•	0
156 MY	JTS SELESPEED	Comfort	Delphi Climate Control	•	•	•	•	•	0
156 MY	SELESPEED	Comfort	Delphi Climate Control	•	•	•	•	•	0
147	1.9 JTD 16V	Engine - Gearbox	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4 eng.)	•	•	•	•	•	0
156 MY	1.9 JTD 16V	Engine - Gearbox	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4 eng.)	•	•	•	•	•	0
156 MY	2.4 JTD 20V	Engine - Gearbox	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4 eng.)	•	•	•	•	•	0

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
166	03 2.4 JTD 20V	Engine - Gearbox	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4 eng.)	•	•	•	•	•	0
GT	1.9 JTD 16V	Engine - Gearbox	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4 eng.)	•	•	•	•	•	0
156 MY	JTS 2.0	Engine - Gearbox	Bosch Motronic MeD7.11 Extra EEC Injection	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	1.9 JTD	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	1.9 JTD 16V	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	2.0 TS 16V	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	GTA 3.2 V6	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	GTA SELESPEED	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	SELESPEED	Safety	Bosch 8 ABS	•	•	•	•	•	0
GT	1.8 TS 16V	Safety	Bosch 8 ABS	•	•	•	•	•	0
GT	1.9 JTD 16V	Safety	Bosch 8 ABS	•	•	•	•	•	0
GT	3. 2 V6 24V	Safety	Bosch 8 ABS	•	•	•	•	•	0
GT	JTS 2.0	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	1.9 JTD	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	1.9 JTD 16V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	2. 0 TS 16V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	GTA 3.2 V6	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	GTA SELESPEED	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	SELESPEED	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
166	03 2.0 TS 16V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
166	03 2.4 JTD 20V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
166	03 2.5 V6 24V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
166	03 3.0 V6 24V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
166	03 3.2 V6 24V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
MITO	1. 4 16V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
MITO	1. 4 TURBO 16V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
147	1.9 JTD	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
147	1.9 JTD 16V	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
147	2. 0 TS 16V	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
147	GTA 3.2 V6	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
147	GTA SELESPEED	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
147	SELESPEED	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
GT	1. 8 TS 16V	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
GT	1. 9 JTD 16V	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
GT	3. 2 V6 24V	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
GT	JTS 2.0	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
156 MY	1.6 TS 16V	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0
156 MY	1.8 TS 16V	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0

Mode1	Version	Group	System	ECU	Read Codes	Erase Codes	Live	Active	Specil Function
156 MY	1.9 JTD	Comfort	Delphi Climate Control MY 03 (Single-zone)	info.	Codes	Codes	Data	Test	0
156 MY	1. 9 JTD 16V	Comfort	Delphi Climate Control MY 03 (Single-zone)	+ ÷					0
156 MY	2. 0 TS 16V	Comfort	Delphi Climate Control MY 03 (Single-zone)	+ ÷					0
156 MY	2. 4 JTD 10V	Comfort	Delphi Climate Control MY 03 (Single-zone)						0
156 MY	2. 4 JTD 20V	Comfort	Delphi Climate Control MY 03 (Single-zone)	<b>—</b>					0
156 MY	2. 5 V6 24V	Comfort	Delphi Climate Control MY 03 (Single-zone)	<del>                                     </del>					0
156 MY	GTA 3.2 V6	Comfort	Delphi Climate Control MY 03 (Single-zone)	<del>                                     </del>					0
156 MY	GTA SELESPEED	Comfort	Delphi Climate Control MY 03 (Single-zone)	+ -		•			0
156 MY	JTS 2.0	Comfort	Delphi Climate Control MY 03 (Single-zone)	<del>-</del>		•			0
156 MY	JTS SELESPEED	Comfort	Delphi Climate Control MY 03 (Single-zone)	•					0
156 MY	SELESPEED SELESPEED	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0
147	1. 6 TS 16V 105CV	Other systems	Valeo discharge headlamp (right)	•	•	•	•		0
147	1. 6 TS 16V 120CV	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
147	1. 9 JTD	Other systems	Valeo discharge headlamp (right)	•	•		•	•	0
147	1. 9 JTD 16V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
147	2. 0 TS 16V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
147	GTA 3.2 V6	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
147	GTA SELESPEED	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
147	SELESPEED	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
166	03 2.0 TS 16V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
166	03 2.4 JTD 20V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
166	03 2.5 V6 24V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
166	03 3.0 V6 24V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
166	03 3.2 V6 24V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
MITO	1. 4 16V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
166	03 2.4 JTD 20V	Engine - Gearbox	AISIN YLII 5 Automatic Gearbox (1)	•	•	•	•	•	0
GT	1.8 TS 16V	Other systems	TRW Driver's Door (1)	•	•	•	•	•	0
GT	1.9 JTD 16V	Other systems	TRW Driver's Door (1)	•	•	•	•	•	0
GT	3. 2 V6 24V	Other systems	TRW Driver's Door (1)	•	•	•	•	•	0
GT	JTS 2.0	Other systems	TRW Driver's Door (1)	•	•	•	•	•	0
159	1.8 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	1.8 JTS TB 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	1.9 JTS 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	1.9 MJET 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	1.9 MJET 8V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	2. 0 JTD 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	2. 2 JTS 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	2.4 MJET 20V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	3. 2 V6 24V	Safety	TRW Lucas ABS	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Safety	TRW Lucas ABS	•	•	•		•	0
BRERA	2.0 JTD 16V	Safety	TRW Lucas ABS	•	•	•		•	0
BRERA	2. 2 JTS 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Safety	TRW Lucas ABS	•	•	•		•	0
BRERA	3. 2 V6 24V	Safety	TRW Lucas ABS	•	•	•	•	•	0
147	GTA SELESPEED	Engine - Gearbox	Marelli Automatic Gearbox SELESPEED CFC218F	•	•	•	•	•	0118

Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
147	SELESPEED	Engine - Gearbox	Marelli Automatic Gearbox SELESPEED CFC208F	11110.	Codes	Codes			0118
GT	JTS 2.0	Engine - Gearbox	Marelli Automatic Gearbox SELESPEED CFC208F				•		0118
166	03 2.0 TS 16V	Comfort	Valeo Parking control unit (1)				•	0	0
166	03 2.4 JTD 20V	Comfort	Valeo Parking control unit (1)				•	0	0
166	03 2. 5 V6 24V	Comfort	Valeo Parking control unit (1)				•	0	0
166	03 3.0 V6 24V	Comfort	Valeo Parking control unit (1)	•		•	•	0	0
166	03 3. 2 V6 24V	Comfort	Valeo Parking control unit (1)	•		•	•	0	0
147	1.9 JTD	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•		0029 0058 0059 0060 0061 0055 0030 0043 0014 0063 0054 0053 0037 0002 0020 0052 0047 0046
147	1.9 JTD 16V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029     0058     0059     0060     0061     0055       0030     0043     0014     0063     0054     0053       0037     0002     0020     0052     0047     0046
156 MY	1.9 JTD 16V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029       0058       0059       0060       0061       0055         0030       0043       0014       0063       0054       0053         0037       0002       0020       0052       0047       0046
159	1.9 MJET 16V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029       0058       0059       0060       0061       0055         0030       0043       0014       0063       0054       0053         0037       0002       0020       0052       0047       0046
159	1.9 MJET 8V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029       0058       0059       0060       0061       0055         0030       0043       0014       0063       0054       0053         0037       0002       0020       0052       0047       0046
159	2.4 MJET 20V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029       0058       0059       0060       0061       0055         0030       0043       0014       0063       0054       0053         0037       0002       0020       0052       0047       0046
166	03 2.4 JTD 20V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029       0058       0059       0060       0061       0055         0030       0043       0014       0063       0054       0053         0037       0002       0020       0052       0047       0046
BRERA	2.4 MJET 20V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029 0058 0059 0060 0061 0055 0030 0043 0014 0063 0054 0053 0037 0002 0020 0052 0047 0046
GT	1.9 JTD 16V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029 0058 0059 0060 0061 0055 0030 0043 0014 0063 0054 0053 0037 0002 0020 0052 0047 0046
159	1.8 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	1.8 JTS TB 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	1.9 JTS 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	1.9 MJET 16V	Comfort	Driver's seat Lear 2	•	•	•	•		0
159	1.9 MJET 8V	Comfort	Driver's seat Lear 2	•	•	•	•	1	0
159	2. 0 JTD 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	2. 2 JTS 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	2. 4 MJET 20V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	3. 2 V6 24V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
BRERA	1. 8 JTS TB 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
BRERA	2. 0 JTD 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
BRERA	2. 4 MJET 20V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
BRERA	3.2 V6 24V	Comfort	Driver's seat Lear 2	•	•		•	•	0

Model	Version	Group	System	ECU	Read	Erase	Live	Active	Specil Function
				info.	Codes	Codes	Data	Test	•
159	1. 8 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	1. 8 JTS TB 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	1. 9 JTS 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	1. 9 MJET 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	1. 9 MJET 8V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	2. 0 JTD 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	2. 2 JTS 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	2. 4 MJET 20V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	3. 2 V6 24V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
BRERA	1. 8 JTS TB 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
BRERA	2. 0 JTD 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	1.8 16V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	1.8 JTS TB 16V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	1.9 JTS 16V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	1.9 MJET 16V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	1.9 MJET 8V	Other systems	Front Door G. E. PROCOND	•	•	•	•	•	0
159	2.0 JTD 16V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	2. 2 JTS 16V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	2.4 MJET 20V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	3. 2 V6 24V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	1.8 16V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.8 JTS TB 16V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.9 JTS 16V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.9 MJET 16V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.9 MJET 8V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	2.0 JTD 16V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	2. 2 JTS 16V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	2.4 MJET 20V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	3. 2 V6 24V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.8 16V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.8 JTS TB 16V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.9 JTS 16V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.9 MJET 16V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.9 MJET 8V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	2.0 JTD 16V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	2. 2 JTS 16V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	2.4 MJET 20V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	3. 2 V6 24V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.8 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0070 0064 0065 0066 0034 0069
159	1.8 JTS TB 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0070 0064 0065 0066 0034 0069
159	1.9 JTS 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0070 0064 0065 0066 0034 0069
159	1.9 MJET 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0070 0064 0065 0066 0034 0069
159	1.9 MJET 8V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0070 0064 0065 0066 0034 0069
159	2.0 JTD 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0070 0064 0065 0066 0034 0069
159	2. 2 JTS 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0070 0064 0065 0066 0034 0069

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
159	2. 4 MJET 20V	Instrumentation	Instrument panel Siemens 2	- IIII 0.	Oucs	Oodes	Data	1050	0070 0064 0065 0066 0034 0069
159	3. 2 V6 24V	Instrumentation	Instrument panel Siemens 2			•	•	•	0070 0064 0065 0066 0034 0069
BRERA	1. 8 JTS TB 16V	Instrumentation	Instrument panel Siemens 2				•	•	0070 0064 0065 0066 0034 0069
BRERA	2. 0 JTD 16V	Instrumentation	Instrument panel Siemens 2				•	•	0070 0064 0065 0066 0034 0069
BRERA	2. 2 JTS 16V	Instrumentation	Instrument panel Siemens 2				•		0070 0064 0065 0066 0034 0069
BRERA	2. 4 MJET 20V	Instrumentation	Instrument panel Siemens 2						0070 0064 0065 0066 0034 0069
BRERA	3. 2 V6 24V	Instrumentation	Instrument panel Siemens 2	+ -			•		0070 0064 0065 0066 0034 0069
159	1. 8 16V	Instrumentation	Marelli 3 Connect (multi-model)	+ -					O
159	1. 8 JTS TB 16V	Instrumentation	Marelli 3 Connect (multi-model)			•	•		0
159	1. 9 JTS 16V	Instrumentation	Marelli 3 Connect (multi-model)				-		0
159	1. 9 MJET 16V	Instrumentation	`				-		0
159 159	1. 9 MJET 8V		Marelli 3 Connect (multi-model) Marelli 3 Connect (multi-model)				-		0
159 159		Instrumentation	Marelli 3 Connect (multi-model)				-		0
	2. 0 JTD 16V 2. 2 JTS 16V	Instrumentation					-		0
159		Instrumentation	Marelli 3 Connect (multi-model)				-		0
159	2. 4 MJET 20V	Instrumentation	Marelli 3 Connect (multi-model)			<del></del>	_		
159	3. 2 V6 24V	Instrumentation	Marelli 3 Connect (multi-model)	•		•	•	•	0
BRERA	1. 8 JTS TB 16V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
BRERA	2. 0 JTD 16V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
BRERA	2. 4 MJET 20V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
159	1.8 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	1.8 JTS TB 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	1. 9 JTS 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	1.9 MJET 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	1.9 MJET 8V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	2.0 JTD 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	2. 2 JTS 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	2.4 MJET 20V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	3. 2 V6 24V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	1.8 16V	Other systems	Litronic discharge headlamp (right)	•	•	•	•	0	0
159	1.8 JTS TB 16V	Other systems	Litronic discharge headlamp (right)	•	•	•	•	0	0
159	1.9 JTS 16V	Other systems	Litronic discharge headlamp (right)	•	•	•	•	0	0
159	1.9 MJET 16V	Other systems	Litronic discharge headlamp (right)	•	•	•	•	0	0
159	1.9 MJET 8V	Other systems	Litronic discharge headlamp (right)	•	•	•	•	0	0
159	2.0 JTD 16V	Other systems	Litronic discharge headlamp (right)	•	•	•	•	0	0
159	2. 2 JTS 16V	Other systems	Litronic discharge headlamp (right)	•	•	•	•	0	0
159	2. 4 MJET 20V	Other systems	Litronic discharge headlamp (right)	•	•	•	•	0	0
159	3. 2 V6 24V	Other systems	Litronic discharge headlamp (right)	•	•	•	•	0	0
BRERA	1.8 JTS TB 16V	Other systems	Litronic discharge headlamp (right)	•	•	•	•	0	0
BRERA	2. 0 JTD 16V	Other systems	Litronic discharge headlamp (right)	•	•	•	•	0	0
BRERA	2. 2 JTS 16V	Other systems	Litronic discharge headlamp (right)	•	•	•	•	0	0
BRERA	2. 4 MJET 20V	Other systems	Litronic discharge headlamp (right)	•	•	•	•	0	0

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
BRERA	3. 2 V6 24V	Other systems	Litronic discharge headlamp (right)	•	•	•	•	0	0
159	1.8 16V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
159	1. 8 JTS TB 16V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
159	1. 9 JTS 16V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
159	1. 9 MJET 16V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
159	1. 9 MJET 8V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
159	2. 0 JTD 16V	Comfort	Climate control Delphi 2 (Single-zone)			•	•	•	0
159	2. 2 JTS 16V	Comfort	Climate control Delphi 2 (Single-zone)			•	•		0
159	2. 4 MJET 20V	Comfort	Climate control Delphi 2 (Single-zone)			•	•	•	0
159	3. 2 V6 24V	Comfort	Climate control Delphi 2 (Single-zone)			•			0
BRERA	1. 8 JTS TB 16V	Comfort	Climate control Delphi 2 (Single-zone)			•	•		0
BRERA	2. 0 JTD 16V	Comfort	Climate control Delphi 2 (Single-zone)						0
BRERA	2. 2 JTS 16V	Comfort	Climate control Delphi 2 (Single-zone)						0
BRERA	2. 4 MJET 20V	Comfort	Climate control Delphi 2 (Single-zone)						0
BRERA	3. 2 V6 24V	Comfort	Climate control Delphi 2 (Single-zone)						0
159	1. 8 16V	Other systems	Boot G. E. PROCOND 2						0
159						•			0
	1. 8 JTS TB 16V	Other systems	Boot G. E. PROCOND 2	+ -	-				
159	1. 9 JTS 16V	Other systems	Boot G. E. PROCOND 2	-	-				0
159	1. 9 MJET 16V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	1. 9 MJET 8V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	2. 0 JTD 16V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	2. 2 JTS 16V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	2. 4 MJET 20V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	3. 2 V6 24V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	1.8 16V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
159	1.8 JTS TB 16V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
159	1.9 JTS 16V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
159	1.9 MJET 16V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
159	1.9 MJET 8V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
159	2.0 JTD 16V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
159	2.2 JTS 16V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
159	2.4 MJET 20V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
159	3.2 V6 24V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
159	1.9 JTS 16V	Engine - Gearbox	Bosch Motronic Injection MeD7.6.1 CF4/EOBD (eng. 1.9/2.2)	•	•	•	•	•	0
159	2. 2 JTS 16V	Engine - Gearbox	Bosch Motronic Injection MeD7.6.1 CF4/EOBD (eng. 1.9/2.2)	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Engine - Gearbox	Bosch Motronic Injection MeD7.6.1 CF4/EOBD (eng. 1.9/2.2)	•	•	•	•	•	0
159	1.8 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
159	1. 8 JTS TB 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
159	1. 9 JTS 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
159	1. 9 MJET 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
159	1.9 MJET 8V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
159	2. 0 JTD 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
159	2. 2 JTS 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
159	2. 4 MJET 20V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
159	3. 2 V6 24V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
BRERA	1. 8 JTS TB 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
BRERA	2. 0 JTD 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)			•	•	•	0
BRERA	2. 2 JTS 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)			•	<u> </u>		0
BRERA	2. 4 MJET 20V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)			•	•		0
BRERA	3. 2 V6 24V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)			•	•		0
159	1. 8 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)			•	•		0
159	1. 8 JTS TB 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)						0
159	1. 9 JTS 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)			•			0
159	1. 9 MJET 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)				<del></del>		0
159	1. 9 MJET 8V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)				<del></del>		0
159	2. 0 JTD 16V	Safety	Air Bag TRW MY 03 (2F-2F-2L-2T-2G-I)				$\overline{}$		0
159	2. 2 JTS 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)				<del>-</del>		0
159	2. 4 MJET 20V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)				<del>-</del>		0
				_			<del>-</del>		
159	3. 2 V6 24V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	-		<u> </u>			0
BRERA	1. 8 JTS TB 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	-		•	•	•	0
BRERA	2. 0 JTD 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
BRERA	2. 4 MJET 20V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
147	1. 6 TS 16V 105CV	Safety	Bosch 8 ASR ABS	•	•	•		•	0
147	1. 6 TS 16V 120CV	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
147	1.9 JTD	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
147	1.9 JTD 16V	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
147	2.0 TS 16V	Safety	Bosch 8 ASR ABS	•	•	•	<u> </u>	•	0
147	GTA 3.2 V6	Safety	Bosch 8 ASR ABS	•	•	•	<u> </u>	•	0
147	GTA SELESPEED	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
147	SELESPEED	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
GT	1.8 TS 16V	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
GT	1.9 JTD 16V	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
GT	3. 2 V6 24V	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
GT	JTS 2.0	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
159	1.8 16V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	1.8 JTS TB 16V	Safety	Body Computer Marelli 3	•	•	•	•		0
159	1.9 JTS 16V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	1.9 MJET 16V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	1.9 MJET 8V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	2.0 JTD 16V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	2. 2 JTS 16V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	2.4 MJET 20V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	3. 2 V6 24V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	1.8 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	1.8 JTS TB 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	1. 9 JTS 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
159	1.9 MJET 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	1.9 MJET 8V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	2.0 JTD 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	2. 2 JTS 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	2.4 MJET 20V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	3. 2 V6 24V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	1.8 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	1.8 JTS TB 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	1.9 JTS 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	1.9 MJET 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	1.9 MJET 8V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	2.0 JTD 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	2. 2 JTS 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	2.4 MJET 20V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	3. 2 V6 24V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	1. 8 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0084 0012 0013 0006
159	1.8 JTS TB 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0084 0012 0013 0006
159	1.9 JTS 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0084 0012 0013 0006
159	1.9 MJET 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0084 0012 0013 0006
159	1.9 MJET 8V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0084 0012 0013 0006
159	2.0 JTD 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0084 0012 0013 0006
159	2. 2 JTS 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0084 0012 0013 0006
159	2.4 MJET 20V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0084 0012 0013 0006
159	3. 2 V6 24V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0084 0012 0013 0006
BRERA	1.8 JTS TB 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0084 0012 0013 0006
BRERA	2.0 JTD 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0084 0012 0013 0006

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
BRERA	2. 2 JTS 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0084 0012 0013 0006
BRERA	2.4 MJET 20V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0084 0012 0013 0006
BRERA	3. 2 V6 24V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0084 0012 0013 0006
159	1.9 MJET 16V	Engine - Gearbox	Automatic Gearbox AISIN AF40-6	•	•	•	•	•	0
159	1.9 MJET 8V	Engine - Gearbox	Automatic Gearbox AISIN AF40-6	•	•	•	•	•	0
159	2.4 MJET 20V	Engine - Gearbox	Automatic Gearbox AISIN AF40-6	•	•	•	•	•	0
159	3. 2 V6 24V	Engine - Gearbox	Automatic Gearbox AISIN AF40-6	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Engine - Gearbox	Automatic Gearbox AISIN AF40-6	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Engine - Gearbox	Automatic Gearbox AISIN AF40-6	•	•	•	•	•	0
GIULIETTA (191)	1.4 TURBO 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.6 MJET 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.8 JTS TB 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
GIULIETTA (191)	2.0 MJET 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
MITO	1.4 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
147	1.9 JTD	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
147	1.9 JTD 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
147	2.0 TS 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
147	GTA 3.2 V6	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
147	GTA SELESPEED	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
147	SELESPEED	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	1.8 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	1.8 JTS TB 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	1.9 JTS 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	1.9 MJET 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	1.9 MJET 8V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	2.0 JTD 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	2. 2 JTS 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	2.4 MJET 20V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	3.2 V6 24V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
BRERA	3.2 V6 24V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
GT	1.8 TS 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
GT	1.9 JTD 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0

Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GT	3. 2 V6 24V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
GT	JTS 2.0	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
MITO	1.3 MJET 16V	Comfort	Denso Climate Control (EP)	•	•	•	•	•	0
MITO	1. 4 16V	Comfort	Denso Climate Control (EP)	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Comfort	Denso Climate Control (EP)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Comfort	Denso Climate Control (EP)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Comfort	Denso Heater (EP)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Comfort	Denso Heater (EP)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Safety	TRW Tyre Pressure Control (EP)	•	•	•	•	•	0007 0005 0084 0012 0013 0006 0041 0014
MITO	1. 4 16V	Safety	TRW Tyre Pressure Control (EP)	•	•	•	•	•	0007 0005 0084 0012 0013 0006 0041 0014
MITO	1.4 TURBO 16V	Safety	TRW Tyre Pressure Control (EP)	•	•	•	•	•	0007 0005 0084 0012 0013 0006 0041 0014
MITO	1.6 MJET 16V	Safety	TRW Tyre Pressure Control (EP)	•	•	•	•	•	0007 0005 0084 0012 0013 0006 0041 0014
BRERA	1.8 JTS TB 16V	Safety	Body Computer Marelli 4	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Safety	Body Computer Marelli 4	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Safety	Body Computer Marelli 4	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Safety	Body Computer Marelli 4	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Safety	Body Computer Marelli 4	•	•	•	•	•	0
159	3. 2 V6 24V	Engine - Gearbox	Bosch Motronic MeD7.6.2 CF4/EOBD injection (eng. 3.2)	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Engine - Gearbox	Bosch Motronic MeD7.6.2 CF4/EOBD injection (eng. 3.2)	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Other systems	G.E. PROCOND 4 Driver's Door	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Other systems	G.E. PROCOND 4 Driver's Door	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Other systems	G.E. PROCOND 4 Driver's Door	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Other systems	G.E. PROCOND 4 Driver's Door	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Other systems	G.E. PROCOND 4 Driver's Door	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Safety	WEBASTO hood/luggage compartment	•	•	•	•	•	0
BRERA	2. 0 JTD 16V	Safety	WEBASTO hood/luggage compartment	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Safety	WEBASTO hood/luggage compartment	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Safety	WEBASTO hood/luggage compartment	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Safety	WEBASTO hood/luggage compartment	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Other systems	G.E. PROCOND 4 Passenger's Door	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Other systems	G.E. PROCOND 4 Passenger's Door	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Other systems	G.E. PROCOND 4 Passenger's Door	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Other systems	G.E. PROCOND 4 Passenger's Door	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Other systems	G.E. PROCOND 4 Passenger's Door	•	•	•	•	•	0
159	1.8 16V	Engine - Gearbox	Siemens VDO CF4/EOBD injection (eng. 1.8)	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
147	1.9 JTD	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
147	1.9 JTD 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
147	2.0 TS 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
147	GTA 3.2 V6	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
147	GTA SELESPEED	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
147	SELESPEED	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	1.8 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	1.8 JTS TB 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	1. 9 JTS 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	1.9 MJET 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	1.9 MJET 8V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
	2. 0 JTD 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	2. 2 JTS 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	2.4 MJET 20V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	3. 2 V6 24V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
BRERA	2. 0 JTD 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
BRERA	2. 4 MJET 20V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•		0
	3. 2 V6 24V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
GT	1. 8 TS 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•		•	0
GT	1. 9 JTD 16V	Instrumentation	Marelli/Microsoft C3 Convergence			•	<del>-</del>		0
GT	3. 2 V6 24V	Instrumentation	Marelli/Microsoft C3 Convergence			•	<del>-</del>		0
GT	JTS 2. 0		Marelli/Microsoft C3 Convergence			•	<del>-</del>		0
	1.3 MJET 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	-			<del>-</del>		0
MITO	1. 4 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	-			<del>-</del>		0
MITO MITO	1. 4 TURBO 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence  Marelli/Microsoft C3 (EP) Convergence	•			•	•	0
	1. 6 MJET 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence  Marelli/Microsoft C3 (EP) Convergence	•	•	•	•	•	0
MITO	· ·	Instrumentation		•	•	•	•	•	0
BRERA	1. 8 JTS TB 16V	Safety	TRW Air Bag MY 03 (2F-2P-2L-1G-I)						
BRERA	2. 0 JTD 16V	Safety	TRW Air Bag MY 03 (2F-2P-2L-1G-I)	•	•	•		•	0
BRERA	2. 2 JTS 16V	Safety	TRW Air Bag MY 03 (2F-2P-2L-1G-I)	•	•	•		•	0
BRERA	3. 2 V6 24V	Safety	TRW Air Bag MY 03 (2F-2P-2L-1G-I)	•	•	•		•	0
BRERA	1. 8 JTS TB 16V	Safety	TRW Air Bag MY 03 (2F-2P-2L-2G-I)	•	•	•	•	•	0
BRERA	2. 0 JTD 16V	Safety	TRW Air Bag MY 03 (2F-2P-2L-2G-I)	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Safety	TRW Air Bag MY 03 (2F-2P-2L-2G-I)	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Safety	TRW Air Bag MY 03 (2F-2P-2L-2G-I)	•	•	•	•	•	0
159	2.2 JTS 16V	Engine - Gearbox	Marelli SELESPEED CFC300 Automatic Gearbox	•	•	•	•		0014 0118 0164 0172
BRERA	2.2 JTS 16V	Engine - Gearbox	Marelli SELESPEED CFC300 Automatic Gearbox	•	•	•	<u> </u>	•	0014 0118 0164 0172
GIULIETTA (191)	1.4 TURBO 16V	Engine - Gearbox	Bosch Motronic Injection Me7.9.10 CF5/EOBD (EP eng. 1.4)	•	•	•	•	•	0
MITO	1. 4 16V	Engine - Gearbox	Bosch Motronic Injection Me7. 9. 10 CF5/EOBD (EP eng. 1.4)	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Engine - Gearbox	Bosch Motronic Injection Me7.9.10 CF5/EOBD (EP eng. 1.4)	•	•	•	•	•	0
GIULIETTA (191)	1.4 TURBU 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
GIULIETTA (191)	1.6 MJET 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
GIULIETTA (191)	1.8 JTS TB 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
GIULIETTA (191)	2.0 MJEI 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
MITO	1.3 MJET 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MITO	1.4 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
MITO	1.4 TURBO 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
MITO	1.6 MJET 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
MITO	1.3 MJET 16V	Engine - Gearbox	Marelli 6F3 EOBD CAN Diesel Injection (EP eng. 1.3 JTD) 2	•	•	•	•	•	0043 0014 0047 0046
159	2.0 JTD 16V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF5/EOBD (1.6/1.9/2.0 eng.)	•	•	•	•	•	0029     0058     0059     0060     0061     0030       0043     0014     0022     0080     0054     0057       0003     0020     0052     0047     0062     0046       0198     0199
BRERA	2. 0 JTD 16V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF5/EOBD (1.6/1.9/2.0 eng.)	•	•	•	•	•	0029 0058 0059 0060 0061 0030 0043 0014 0022 0080 0054 0057 0003 0020 0052 0047 0062 0046 0198 0199
GIULIETTA (191)	1.4 TURBO 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0070 0064 0066 0065 0034
GIULIETTA (191)	1.6 MJET 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0070 0064 0066 0065 0034
GIULIETTA (191)	1.8 JTS TB 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0070 0064 0066 0065 0034
GIULIETTA (191)	2.0 MJET 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0070 0064 0066 0065 0034
MITO	1.3 MJET 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0070 0064 0066 0065 0034
MITO	1.4 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0070 0064 0066 0065 0034
MITO	1.4 TURBO 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0070 0064 0066 0065 0034
MITO	1.6 MJET 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0070 0064 0066 0065 0034
MITO	1.3 MJET 16V	Safety	Delphi (EP) 3 Body computer	•	•	•	•	•	0
MITO	1.4 16V	Safety	Delphi (EP) 3 Body computer	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Safety	Delphi (EP) 3 Body computer	•	•	•	•	•	0
MITO	1.6 MJET 16V	Safety	Delphi (EP) 3 Body computer	•	•	•	•	•	0
MITO	1.3 MJET 16V	Safety	DELPHI (EP) 3 Electric Steering	•	•	•	•	0	0051
MITO	1.4 16V	Safety	DELPHI (EP) 3 Electric Steering	•	•	•	•	0	0051
MITO	1.4 TURBO 16V	Safety	DELPHI (EP) 3 Electric Steering	•	•	•	•	0	0051
MITO	1.6 MJET 16V	Safety	DELPHI (EP) 3 Electric Steering	•	•	•	•	0	0051
GIULIETTA (191)	1.6 MJET 16V	Engine - Gearbox	Diesel Bosch Injection EDC16C39 CF5/EOBD CAN (EP 1.6/2.0 eng.)	•	•	•	•	•	0043 0198 0199 0014 0062 0046
GIULIETTA (191)	2.0 MJET 16V	Engine - Gearbox	Diesel Bosch Injection EDC16C39 CF5/EOBD CAN (EP 1.6/2.0 eng.)	•	•	•	•	•	0043 0198 0199 0014 0062 0046
MITO	1.6 MJET 16V	Engine - Gearbox	Diesel Bosch Injection EDC16C39 CF5/EOBD CAN (EP 1.6/2.0 eng.)	•	•	•	•	•	0043 0198 0199 0014 0062 0046
MITO	1.3 MJET 16V	Safety	Bosch ABS 8 ESP (EP) 2	•	•	•	•	•	0039
MITO	1.4 16V	Safety	Bosch ABS 8 ESP (EP) 2	•	•	•	•	•	0039
MITO	1.4 TURBO 16V	Safety	Bosch ABS 8 ESP (EP) 2	•	•	•	•	•	0039
MITO	1.6 MJET 16V	Safety	Bosch ABS 8 ESP (EP) 2	•	•	•	•	•	0039
MITO	1.3 MJET 16V	Safety	CONTINENTAL Airbag (EP-Proxy) 2	•	•	•	•	•	0
MITO	1. 4 16V	Safety	CONTINENTAL Airbag (EP-Proxy) 2	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Safety	CONTINENTAL Airbag (EP-Proxy) 2	•	•	•	•	•	0
MITO	1.6 MJET 16V	Safety	CONTINENTAL Airbag (EP-Proxy) 2	•	•	•	•	•	0

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
159	1.8 JTS TB 16V	Engine - Gearbox	Bosch Injection Motronic MeD17.3.1 CF5/EOBD (eng. 1.8)	•	•	•	•	•	0102 0014
BRERA	1.8 JTS TB 16V	Engine - Gearbox	Bosch Injection Motronic MeD17.3.1 CF5/EOBD (eng. 1.8)	•	•	•	•	•	0102 0014
MITO	1.4 TURBO 16V	Comfort	Magneti Marelli suspension (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.4 TURBO 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.6 MJET 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.8 JIS IB 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
GIULIETTA (191)	2.0 MJET 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
MITO	1. 4 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
159	1.8 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	1.8 JTS TB 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	1.9 JTS 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	1.9 MJET 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	1.9 MJET 8V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	2.0 JTD 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	2.2 JTS 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	2.4 MJET 20V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	3. 2 V6 24V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
BRERA	3.2 V6 24V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Engine - Gearbox	Injection Landi Renzo LCO2 Gas	•	•	•	•	•	0
GIULIETTA (191)	1.4 TURBO 16V	Engine - Gearbox	Magneti Marelli Injection IAW 8GMF CF5/EOBD (EP eng. 1.4)	•	•	•	•	•	0102 0207
MITO	1. 4 16V	Engine - Gearbox	Magneti Marelli Injection IAW 8GMF CF5/EOBD (EP eng. 1.4)	•	•	•	•	•	0102 0207
MITO	1.4 TURBO 16V	Engine - Gearbox	Magneti Marelli Injection IAW 8GMF CF5/EOBD (EP eng. 1.4)	•	•	•	•	•	0102 0207
GIULIETTA (191)	1.4 TURBO 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.6 MJET 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.8 JIS IB 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
GIULIETTA (191)	2.0 MJET 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
MITO	1.4 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MITO	1.4 TURBO 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Engine - Gearbox	Marelli Diesel Injection 8DF CF5/EOBD (EP eng. 1.3 JTD)	•	•	•	•	•	0102 0198 0199 0014 0212 0213
MITO	1.3 MJET 16V	Safety	CONTINENTAL Airbag (EP)	•	•	•	•	•	0
MITO	1.4 16V	Safety	CONTINENTAL Airbag (EP)	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Safety	CONTINENTAL Airbag (EP)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Safety	CONTINENTAL Airbag (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.4 TURBO 16V	Safety	Continental MK60EC ABS (EP)	•	•	•	•	•	0216 0075 0074
GIULIETTA (191)	1.6 MJET 16V	Safety	Continental MK60EC ABS (EP)	•	•	•	•	•	0216 0075 0074
GIULIETTA (191)	1.8 JTS TB 16V	Safety	Continental MK60EC ABS (EP)	•	•	•	•	•	0216 0075 0074
GIULIETTA (191)	2.0 MJET 16V	Safety	Continental MK60EC ABS (EP)	•	•	•	•	•	0216 0075 0074
GIULIETTA (191)	1.4 TURBO 16V	Safety	Bosch Air bag (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.6 MJET 16V	Safety	Bosch Air bag (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.8 JTS TB 16V	Safety	Bosch Air bag (EP)	•	•	•	•	•	0
GIULIETTA (191)	2.0 MJET 16V	Safety	Bosch Air bag (EP)	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Engine - Gearbox	Marelli DDCT CFC8TDF Automatic Gearbox (EP)	•	•	•	•	•	0164 0014 0220 0172
GIULIETTA (191)	1.8 JTS TB 16V	Engine - Gearbox	Bosch Motronic Injection MeD17.3.1 CF5/EOBD (EP eng. 1.8)	•	•	•	•	•	0102 0014
GIULIETTA (191)	1.4 TURBO 16V	Comfort	Marelli climate control Two-zone (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.6 MJET 16V	Comfort	Marelli climate control Two-zone (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.8 JTS TB 16V	Comfort	Marelli climate control Two-zone (EP)	•	•	•	•	•	0
GIULIETTA (191)	2.0 MJET 16V	Comfort	Marelli climate control Two-zone (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.4 TURBU 10V	Comfort	Marelli Manual Climate control (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.6 MJET 16V	Comfort	Marelli Manual Climate control (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.8 JTS TB 16V	Comfort	Marelli Manual Climate control (EP)	•	•	•	•	•	0
GIULIETTA (191)	2.0 MJET 16V	Comfort	Marelli Manual Climate control (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.4 TURBO 16V	Safety	Marelli 10 Body Computer	•	•	•	•	•	0
GIULIETTA (191)	1.6 MJET 16V	Safety	Marelli 10 Body Computer	•	•	•	•	•	0

Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GIULIETTA (191)	1.8 JTS TB 16V	Safety	Marelli 10 Body Computer	•	•	•	•	•	0
CILLIETTA	2.0 MJET 16V	Safety	Marelli 10 Body Computer	•	•	•	•	•	0
GIULIETTA (191)	1.4 TURBO 16V	Comfort	Lear driver's seat (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.6 MJET 16V	Comfort	Lear driver's seat (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.8 JTS TB 16V	Comfort	Lear driver's seat (EP)	•	•	•	•	•	0
GIULIETTA (191)	2.0 MJET 16V	Comfort	Lear driver's seat (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.4 TURBO 16V	Comfort	Lear passenger seat (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.6 MJET 16V	Comfort	Lear passenger seat (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.8 JTS TB 16V	Comfort	Lear passenger seat (EP)	•	•	•	•	•	0
GIULIETTA (191)	2.0 MJET 16V	Comfort	Lear passenger seat (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.4 TURBO 16V	Other systems	Automotive Lighting discharge headlights (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.6 MJET 16V	Other systems	Automotive Lighting discharge headlights (EP)	•	•	•	•	•	0
GIULIETTA (191)	1.8 JTS TB 16V	Other systems	Automotive Lighting discharge headlights (EP)	•	•	•	•	•	0
(191)	2.0 MJET 16V	Other systems	Automotive Lighting discharge headlights (EP)	•	•	•	•	•	0
159	1.8 16V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
159	1.8 JTS TB 16V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
159	1.9 JTS 16V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
159	1.9 MJET 16V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
159	1.9 MJET 8V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
	2. 0 JTD 16V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
	2. 2 JTS 16V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
159	2. 4 MJET 20V	Safety	Convergence Lauberhorn C1	•		•	•		0
	3. 2 V6 24V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
Giulietta		20100)	EPS		<b>A</b>	<u> </u>			F007D
Giulietta		1	PAM		<u> </u>			<u> </u>	F0050 F0051
Graffetta	2011		1 AM		_	_	_		F0092 F0093 F0094 F0096 F0098
Giulietta	2011		TCM	•	•	<b>A</b>	<b>A</b>	0	F0095 F0097 F0091 F003D F009B F003C F0042 F0099 F009A F003E F0040 F003B F009D
Giulietta	2011		ETM	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	F0078 F0077 F0076 F0079 F007A F007B
Giulietta	2011		ORC	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	
					_				F00A8 F00A6 F00A3 F00A7 F00A9
Giulietta	2011		ABS	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	F00AA

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Giulietta	2011		ЕСМ	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	F0036 F0011 F0067 F001E F006A F0031 F001F F000E F0068 F000B F0069 F0032 F0021 F0020 F0025 F0012 F0013 F0014 F0015 F000C F0016 F0024 F000D F0017 F0022 F002B F0064 F0066 F0065 F00AD
Giulietta	2011		AFLS	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	F0035 F006F F0033 F0072 F00AE
Giulietta			DSTM		<u> </u>	<u> </u>		<u> </u>	TOOKE
Giulietta			ВСМ	•	•	<b>A</b>	<b>A</b>	•	F00AF F0059 F005A F0057 F0058 F00B0 F00B1 F00B2 F00B3 F0061 F0062 F0060
Giulietta	2011		HVAC	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	F00A5
Giulietta			RMN	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>		
Giulietta			CTM	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	F0053 F0054
Giulietta			IPC	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	F0003 F0001 F0004 F0005 F0006
Giulietta			PSTM	<b>A</b>	<b>A</b>	<b>A</b>		<b>A</b>	
4C	2013		PAM	<u> </u>	<u> </u>	<u> </u>		0	F0127
4C	2013 2013		IPC ORC	<b>A</b>	<b>A</b>	<b>A</b>			F0003 F0001 F0004 F0005 F0006
4C 4C	2013		TPM	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<u>○</u>	F0089 F0090 F01CD F008B F008A F008C F0088 F008D F01CE
4C	2013		ECM	0	0	0	0	0	F0022 F0036 F0011 F0067 F00AD F000D F000B F0069
4C	2013		ABS	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>		F00A3 F00A4 F0009 F000A
4C	2013		BCM	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	F0057 F0058
4C	2013		TCM	•	•	<b>A</b>	<b>A</b>	0	F0092 F0094 F0096 F0095 F0097 F003D F009B F003B F003C F0042 F0099 F009A F003E F0091



## ${\tt Special\_Function}$

Index	Specil Function Name	Index	Specil Function Name
0001	Air conditioner Learn	0002	Air flow meter replacement (only for version with Lambda sensor)
0003	Air flow meter sensor replacement	0004	Air flow sensor replacement
0005	Alarm deletion	0006	Alarm state check
0007	Antenna replacement		Automatic Configuration Read
0009	Automatic Configuration Write		Brake bleed
0011	Cam edges zeroing (VVT)		Control unit activation
	Control unit deactivation		Control unit replacement
0015	Cruise Control Learn		Cyl. 1 injector classification
0017	Cyl. 2 injector classification	0018	Cyl. 3 injector classification
	Cyl. 4 injector classification	0020	Differential pressure sensor replacement (only for version with DPF)
0021	EGR valve learn	0022	EGR valve replacement
	Engine - Control Unit Group Replacement	0024	Engine type configuration
0025	FAP Replacement	0026	Fuel supply system
0027	Headlamp pos. correct.	0028	Injector classification (4 cyl. bank)
0029	Injector codes read	0030	Injector replacement (per bank)
0031	Inputs status	0032	Inspection service value
0033	Instrument panel lighting	0034	Instrument panel replacement
0035	Knock counter reset	0036	Lambda sensor check
0037	Lambda sensor replacement (only for version with Lambda sensor)	0038	LED colours configuration
0039	Longit. acc. sensor calibration	0040	Looks for faulty wheel transmitter
0041	Manual System Configuration	0042	Odometer write
0043	Oil change (only for version with DPF)	0044	Oil change servicing information delete
0045	Overboost counter reset	0046	Particulate filter regeneration (only for version
0047	Particulate filter replacement (only for version with	0048	Phase sensor learn zeroing
0049	Phonic wheel learn reset	0050	Phonic wheel replacement
0051	Position sensor calibration	0052	Pre-catalyser replacement (only for version with DPF
0053	Rail pressure sensor and injector/s replacement	0054	Rail pressure sensor replacement
0055	Replacement injector cyl. 5		Replacement injectors (4 cyl. bank)
0057	Replacement Lambda sensor		Replacement of injector cyl. 1
0059	Replacement of injector cyl. 2	0060	Replacement of injector cyl. 3
0061	Replacement of injector cyl. 4	0062	Replacement of particulate filter with built-in pre- catalyzer (only for versions with DPF)
0063	Replacment of control unit and injector/s	0064	Reset odometer
0065	Seat belts alarm Enable	0066	Seat belts alarm exclusion
0067	Secondary wheel identification deletion	0068	Self-learnt functions reset
0069	Services Interval KM message	0070	Servicing information delete
0071	Servo Mechanism Group Replacement	0072	Speed limit setting
0073	Startup with Code Card	0074	Steering angle calibration
0075	Steering angle reset	0076	System configuration
0077	Throttle learn storage	0078	Tow hook presence disable
0079	Tow hook presence enable	0800	Variable geometry turbo replacement
0081	Vehicle configuration deletion	0082	Vehicle type learn reset
	Wheel identification check	0084	Wheel transmitters learning
0085	Zeroing of self-adaption parameters	0086	Engine control unit programming
0087	System calibration	0088	Total additive quantity
0089	Part. Filter regeneration	0090	Customer mode
0091	Mounting check	0092	Tyre Pressure check
0093	Control Unit Replacement	0094	Additive type configuration
0095	RH distribution flap learn	0096	LH distribution flap learn
0097	LH mixing flap learn	0098	RH mixing flap learn
	United Kingdom (Thatcham std)	0100	Date daylight time changed
0101	Fuel level regulat.		Oil change
	Self-adaptive parameters	0104	Phonic wheel learn
0105	Injector classification	0106	Recognition of speed sensor type
0107	Actuator tests	0108	Self-adaptation Parameter erasure
0109	Sensor vibration time too long	0110	Dist. To Next Service Zeroing (Coupon)
0111	Maintenance Services Config.	0112	Call buttons configuration
	Clutch replacement	0114	KIT/Gearbox replacement
	Electropump replacement	0116	Statistical data deletion
0117	Tunnel lever replacement	0118	Steering wheel levers replacement
		(1100	Pump relay replacement
	KIT/Pump replacement	0120	
0121	KIT/Pump replacement AUTO switch replacement System Configuration Read	0122	Key storage System Configuration Write

Index	Specil Function Name	Index	Specil Function Name
0125	Reset self-adapt. param. and idle act.	0126	Electronic Key control unit programming
0127	Engine Control + Electronic Key control units		Clutch bleed
	Accumulator depressurisation		Clutch self-calibration enable
0131	End of line / service self-calibration		New actuators
0133 0135	Flap actuators learning test Engagement lever pin securing screw diagnosis	0134 0136	0il Counter Write Selection lever return diagnosis
	Memory mode write	0138	Control Unit Unlock
	Calculation of clutch degradation index		Test limit speed disable
	Test limit speed restore		VIN Code Configuration
	Personal data deletion		Cyl. 5 injector classification
	Injector classification (5 cyl. bank) CITY switch replacement	0146 0148	Deletion of statistical data relating to errors SPORT switch replacement
0149	Activation/Deactivation 'Auxiliary video input'	0150	Cruise control learn zeroing
0151	Zeroing fan mode learn	0152	Borg Warner sol. valves compatibility
0153	Self-adapting parameters zeroing (air)	0154	Self-adapting parameters zeroing (knock)
0155	Gearbox Lever Position Learn	0156	Deletion stored buttons
0157 0159	Audio System Test CAN Network Activation	0158 0160	Convergence System Restart  Deletion of air temperature sensor data
0161	High pressure pump replacement	0162	Additional diesel circuit filling
0163	Gearbox replacement	0164	Gearbox oil accumulator replacement
0165	Pilot injection learn	0166	ECO switch replacement
0167	End of line self-calibration	0168	Forced trim correction
0169 0171	Vehicle geometry height setting Pneumatic circuit unloading	0170 0172	Pneumatic circuit filling Longitudinal acceleration signal learn
0173	JukeBox data deletion	0174	ECO/SPORT switch replacement
0175	'UP Function' switch replacement	0176	Services Interval KM write (only 1.6 MJET 16V 105 hp
0177	Automatic gearbox replacement	0178	Automatic gearbox and Control unit replacement
0179	Automatic gearbox oil replacement	0180	Services Interval KM write (only for 1.4 TURBO 16v
0181	Static test	0182	120/150 bhp eng.) C.P.H control unit programming
0183	C.P.H. control unit and engine control unit	0184	Remote control programming
0185	Key programming	0186	New vehicle preparation
0187	Reset distance till next servicing	0188	FAP Temperature Probe presence configuration
0189	Replacement of particulate filter and interventions	0190	Replacement of the additive, or the pump, or the
0191	on diesel additive circuit. System configuration via Examiner Web	0192	tubes. Performance limiting deactivation
	Volumetric sensors automatic diagnosis	0194	Neutral signal learn
	Hydraulic Kit replacement		Sensors module replacement
0197	Selection and/or engagement clutch electrovalve	0198	Resetting distance travelled with Water Temp. w. lamp
0199	Resetting distance travelled with Water in diesel w. lamp ON	0200	Accelerometer calibration
0201	Control unit Replacement / Reprogramming	0202	Motorised throttle replacement
0203	Upstream lambda sensor replacement	0204	MultiAir Rolling finger replacement
0205 0207	Timing sensor and/or cam replacement Oil temperature sensor replacement	0206 0208	Rpm sensor and/or distribution belt replacement UniAir module replacement
			Downstream lambda sensor and/or catalyzer and/or
0209	Supercharging system components replacement	0210	Injectors replacement
0211	Differential pressure sensor replacement	0212	Particulate filter with integrated pre-cat
0213	Particulate filter regeneration	0214	Mechanical waste-gate valve replacement
0215	Replacement of variable geometry turbo and/or turbo posit. sensor	0216	Lateral and longitud. acceleration sensor calibration
0217	Pressure sensor calibration	0218	Load valves calibration
0219 0221	Pilot valves calibration Even no. gear clutch pressure sensor replacement	0220 0222	Longitudinal acceleration sensor replacement Odd no. gear clutch position sensor replacement
0223	Odd and/or even gear clutch replacement	0224	Electropump drive unit replacement
0225	Gearbox button panel replacement	0226	Replacement injectors
0227	Additive quantity volume	0228	Air flow meter replacement
0229	Air metering unit replacement	0230	Supercharg, air cooling SV replacement
0231 0233	Replacement of Lambda sensor Speed limit	0232 0234	Homologation number Levers on steering wheel learn
0235	Gearbox and hydraulic KIT replacement	0234	Parking manoeuvre status
0237	Phonic wheel and/or phase sensor and/or rev sensor replacement	0238	Replacement of lambda sensor and/or spark plugs and/or injectors
0239	Replacement of pressure/temperature sensor in methane	0240	Pre-catalyzer replacement
0241	Particulate filter replacement	0242	Alcohol fuel setting
0243	Petrol fuel setting	0244	Air/Fuel learn setting
	Disable seat belts reminder		Check PCM Odometer
	Ecu Replacement Enable seat belts reminder		Clear Learned Variable Line Pressure (VLP) Counters Enable Emissions Rolls Test Mode (PowerNet)
	Reset Odometer	F00E1	Enable Emissions Rolls Test Mode (TIPM)
	•		

Index Specil Function Name	Index	Specil Function Name
F0006 Reset Service Information		Exhaust Phaser 1 Cleaning
F0007 Instrument Panel Cluster Replacement		Exhaust Phaser 2 Cleaning
F0008 Longitudinal G-Sensor Calibration Test	F00D0	Intake Phaser 1 Cleaning
F0009 Static test		Intake Phaser 2 Cleaning
F000A Steering angle sensor calibration F0011 Self-learnt functions reset		Learn ETC New Engine Installed
F0010 Speed limit setting		Quicklearn (62TE)
F0012 Cylinder 1 injector replacement		Quicklearn (Non-RFE)
F0013 Cylinder 2 injector replacement		Quicklearn (RFE)
F0014 Cylinder 3 injector replacement		Reset Memory
F0015 Cylinder 4 injector replacement F000C Injector codes read		TCC Break-In (62TE) TCC Break-In (Non-RFE)
F0016 Injector replacement (per bank)		ITM and Siren Communication Test
F000D 0il change		ITM Self Test
F000E Phonic wheel replacement		ITM Siren Test
F0017 Pail recovery replacement		Ultrasonic Motion Detection Test
F0017 Rail pressure sensor replacement F000B Startup with CODE CARD		Initialize Siren View Last Successful Remote Start Event Data
F0022 Fan cooling activation		View Last VTA Trigger Cause Data
F0021 Resetting distance travelled with Water in diesel warning lamp ON		View Remote Start Abort Data
F0025 Air flow meter sensor replacement		View Remote Start Enable Data
F001E Intelligent alternator (IAM) replacement	1	View Remote Start Inhibit Data
F0024 Lambda sensor replacement F001F Neutral signal learning		View VTA Enable Data Auto Door Lock
F002B Clutch group and/or clutch potentiometer replacement		Auto High Beam Aim Test
F002C Fuel press. regulator replacement (high press. pump		Exit Shipping Mode
F002D Rail overpressure waste gate valve replacement		Light Rain Sensor Re-Adaption
F0030 Reset Learned Adaptives		Program Tire Size
F002F Reset vehicle configuration F0033 Adaptive parameters reset		Remote Start Temporary Disable Amp Input Test
F0035 Vehicle Configuration reset		Amp Software Test
F0031 Motorised throttle replacement		Actuator Calibration Test
F0034 Phonic wheel Reset		HVAC Cool Down Test
F0032 Timing sensor and/or cam replacement		First Pass Cool Down Test Results
F0036 Self-adaptive parameters reset F0038 Fuel supply system components replacement		Most Recent Cool Down Test Results System Wiring Test
F003F Clutch Replacement		Configure License Plate Size
F0043 ECO function switch Replacement		Sensor Rolls Test
F003D Electropump replacement		Activate TPM High Gain Mode
F003B Gearbox oil accumulator replacement F003C Gearbox replacement		TPM Sensor Position Parameter Update Anti-Theft Override Test
F0041 Longitudinal acceleration sensor replacement		Enable/Disable Front Seat Video
F003A Pump Relay Replacement		ROW Map Configuration
F0039 Tunnel lever replacement	F0122	TGW Tone Test
F004D Accumulator Oil replacement		Wheel speed sensor type test
F0046 Clutch bleed F0048 Clutch group replacement		tow hook enabled tow hook exclusion
F0044 Clutch self-calibration enable		Reset learning gear neutral position value
F004E Hydraulic pressure depressurisation		Self learning throttle body
F004A Kit replacement	F009C	Control unit reprogramming
F004B Levers at wheel replacement		Steering Angle Sensor
F0045 New actuators F0049 Pump replacement		Body Blinking Lights Configuration TPM FGA Proxi Configuration
F0047 Reset statistical data		Pressure sensor calibration
F004C Swtich AUTO replacement		Reset gear configuration
F0050 Trailer Hook presence disabling		Program Keys TRM 343
F0051 Trailer Hook presence enabling		First Passed Cool Down Test Results IPC Disable Seatbelt Minder Chime
F0052 Self Learning Working Mode F0053 Audio System Test		IPC Disable Seatbelt Minder Chime IPC Enable Seatbelt Minder Chime
F0054 ECU Restart routine		Proxi Configuration
F0059 Blinking Lights Configuration		CTM Proxi Configuration
F005A Change Country Code		Clear Steering Pull Compensation
F0057 Exit Logistic Mode F0058 Fire Protection System Activate		Initialize EPS Clear Self Learning data
F005C LIN Anti-tilt Sensor Check	1	Neutral Position Self-Learning
F005D LIN Line Request Check		Bleed Hydraulic Circuit
F005E LIN Ultrasonic Sensors Check		Hydraulic Circuit Depressurization
F0061 Modify lateral anti-tilt sensor		Learn Clutches Contact Point
F0062 Modify longitudinal anti-tilt sensor	FU143	Learn Long Acceleration Signal

Index	Specil Function Name	Index	Specil Function Name
F0060	Modify volumetric sensors sensibility	F0140	Quick Learn
	Self adaptive parameters reset		Reset of Data Group
	Megaknock counter reset		ABS Static Test
	Over boost counter reset		Enable Front Fog Lamp Output
	Deactivation of the Power Limitation function		Initialize Power Top RADIO Proxi Configuration
	Lambda sensor and/or catalytic convertor replacement  Rpm sensor and/or timing chain replacement		Air-Conditioning Self Learning
	Supercharging system components replacement		Brake Switch Learn
F006F	Lambda sensor and/or catalytic convertor and/or		Clear Misfire TLC
	injector replacement	1.0120	clear wistife itc
F0020	Resetting distance travelled with water temperature	F014F	Clutch Pedal Learn
	warning lamp ON Clutch pedal learning	F0151	Emissions Rolls Test Mode
	Motorized Throttle learning		Reset Accelerator Pedal Adaptives
	Reset phases front		Reset ECU
	Overboost counter Reset		Throttle Body Self Learning
	Neutral Signal learning with engine off		1st Gear Clutch Test 62TE
	Power Down Power on and Disable User Inputs		2nd Gear Clutch Test 62TE 3rd Gear Clutch Test 62TE
	Reset Parameters to Default		4th Gear Clutch Test 62TE
	X65 Multi Package Factory Activation - Query Routine		Quicklearn (62TE - PCM Var16)
F007A	X65 Multi Package Factory Activation - Select Routine		Quicklearn (62TE - PCM Var17)
	X65 Multi Package Factory Activation - Validate		TCC Break-In
	Flap actuators learning test		Initialize EPPM Clear Multi-Module VIN Handshake Immobilizer Failure
	Steering Angle Calibration Alarms deletion		ESCL Replaced
	Antenna replacement		View Recent Multi-Module VIN Handshake Immobilizer
	Control unit activation		Denormalize Window
	Control unit deactivation		Cool Down Test
	Manual System Configuration		Bleed Brakes
	Wheel trasmitters learning TPM Sensor Rolls Test		Initialize ABS Accessory Delay Time
	Clear TPM Sensor Rolls Test Results		Actuate Engine Battery Feed
	Clear TPM Warnings		Actuate Transmission Relay
	Program Left Front Tire Sensor ID		Acutate Fuel Pump
	Program Left Rear Tire Sensor ID		Add Navigation Radio
	Program Right Front Tire Sensor ID Program Right Rear Tire Sensor ID		Combined Rear Lighting Enable/Disable DRL
	Update Front and Rear Axle Nominal Tire Pressure		Enable/Disable Front Fog Lamp
	Electric pump drive unit command		Flash Hazard Lamps on Lock
	Engagement electrovalve PPV1 command		Hard Top / Soft Top Configuration
	Engagement electrovalve PPV2 command		Headlamps Delay Time
	Even gear clutch (K2) control solenoid valve command Lever release solenoid command		Headlamps On With Wipers Horn Chirp Duration
	Odd gear clutch (K1) control solenoid valve command		Illuminated Entry Time
	Range selection electrovalve command (PPVS)		Program Network Configuration
	Electropump drive unit replacement		Sound Horn on Lock
	Even no. gear clutch pressure sensor replacement		Tip Start Temporary Disable
	Hydraulic circuit depressurisation Hydraulic Kit replacement		Update Radio Market Select and DVD Region Code Self Test
	Odd and/or even gear clutch replacement		Auto Door Unlock
	Odd no. gear clutch position sensor replacement		Change Language Preference
	Selection and/or engagement clutch electrovalve		Seatbelt Alert Minder
	Sensors module replacement		Unlock Driver Door On 1st Press
	Reversing lights command Reset adaptative parameter		Update Measurement Unit Radio Anti Theft Override Test
	Motorized throttle replacement		RADIO Tone Test
	Reset learn flag wheel tooth		Radio Hard-drive Back-up
F00A3	Longitudinal and Lateral sensor calibration	F017D	Radio Anti-Theft Override Test
	Longitudinal and Lateral sensor decalibration		Radio_Enable/Diable_Front_Video
	Self Learning Motor Test Brake pressure sensor calibration		Antenna Loop Test TPM Trigger Module Test
	Inlet Valve Calibration		ELV Replaced
	Pilot Valve calibration		PCM Replaced
	Steering wheel angle sensor offset calibration		WCM Replaced
	TPMS calibration		View Satellite Sensor Information
	Engine replacement		Reset Adaptive Values
	AFLS Calibration Anti tilt sensor check		Store Learned Adaptives Disable/Enable Seatbelt Minder Chime
	LIN line check request		Actuate Seat Recall
_			

Index Specil Function Name	Index	Specil Function Name
FOOB1 Rain Lights Sensors and Automatic Lights Sensors	F018C	MSMD Self Test
F00B2 Siren check		Clear All Learned Seat Parameters
F00B3 Ultrasonic sensors check	F018B	Easy Entry/Exit
F00B4 Activate Driver and Passenger Head Restraint		Key Fobs Linked to Memory
F00B6 Initialize ORC		Standardization
FOOB5 Rollover Detection		Tilt Mirrors in Reverse
FOOB7 ABS Bleed Brakes		Sensor Connectivity and HMI Test
FOODS ABS Initialization		Disable tow hook presence
FOOB9 Brake Pedal Calibration FOOBA HFM Self Test		Enable tow hook presence Reset Adaptative Parameters
FOOBB IPC Self Test		Deactivation of Power Limitation
FOOCO Door Handle Verification Test		Phonic wheel learning
FOOBD Immobilizer Antenna Test		Injector/s replacement
FOOBF Locate Learned Keys		Actuator Calibration
FOOBE ELV Replace	F019C	Front Blower State
FOOC1 Erase Ignition FOBIKs	F019D	Rear Blower State
FOOBC Program Ignition FOBIKs	-	First Passed Cooldown Test Results
FOOC2 RF-HUB Replace		Calibrate Liftgate Full Close Position
FOOC9 Air Flow Meter Replace		Calibrate Liftgate Full Open Position
FOOCA Check PCM VIN		Ramp Van Configuration
FOOCD Compression Test		Diesel Particulate Filter Replacement
FOOCS DPF Reset Option FOOCF ECU Replacement With Value Transfer		Fuel Mean Value Adaption Initialization IMA Quick Calibration
FOOCA Injector Quantity Adjustment		Lambda Sensor 1 Initialization
FOOC7 Lambda Sensor Replace		Oxidation Catalyst Initialization
FOOCB Program Variant Coding		Rail Pressure Control Switchover
F00C6 Reset of Lambda Values	1	Request Anti-Slugging For Air Condition Compressor
FOOCE Reset Oil Change Indicator	F01A8	TIPM Enable Emissions Rolls Test Mode
FOOC5 Reset Zero Fuel Quantity Calibration	F01AA	Latch Cinch Test
FOOCC Service Diesel Particulate Filter Regeneration		Latch Release Test
FOOD8 1st Gear Clutch Test (62TE)		Learn Latch Sector Home
FOODD 1st Gear Clutch Test (Non-RFE)		LF Antenna Verification Test
F0100 1st Gear Clutch Test (RFE)		PEM Replace
F00D9 2nd Gear Clutch Test (62TE) F00DE 2nd Gear Clutch Test (Non-RFE)	1	Actuate Drive Clutch Engage Sliding Door Close Test
F0101 2nd Gear Clutch Test (Non-RFE)		Sliding Door Open Test
FOODA 3rd Gear Clutch Test (ALE)		Learn Side Identifier
FOODF 3rd Gear Clutch Test (Non-RFE)		Calibrate Full Recline
FOOE3 3rd Gear Clutch Test (RFE)		Calibrate Stow
FOODB 4th Gear Clutch Test (62TE)	F01B3	Write Left Rear Seat Position
FOOFE EGR System Test	F01B4	Write Right Rear Seat Position
FOOD4 Electric Vacuum Pump Test		LRSM Re-adaption
FOOE2 ESIM Forced Monitor Test	1	Reset WIN Configuration
FOOE6 ETC Throttle Follower Test	1	WIN Replaced
FOOF Injector Kill Test		Siren Test
FOOEC Neutral Gate Test (62TE) FOOEA Neutral Gate Test (Non-RFE)		ITM Initialize ITM Initialize Siren
FOOEB Neutral Gate Test (NOIT-NE)		Heated Steering Wheel Configuration
FOOF3 O2 System Heater Test		HIDT Calibration
FOOES Overdrive Switch Test (Non-RFE)	1	View Last VTA Trigger Cause
F00E9 Overdrive Switch Test (RFE)		Auto Wipers
F00F4 Purge Vapors System Test		Disable Radio Clock Display
FOODC Reverse Gear Clutch Test (62TE)		Unlock All Doors First Press
F00E0 Reverse Gear Clutch Test (Non-RFE)	1	VTM transport mode status
FOOE4 Reverse Gear Clutch Test (RFE)	1	Active Grille Shutter Test
FOODS Set Engine RPM		Coolant Three Way Valve Test
FOOED Shift Lever Position Test (62TE)		Active Grille Shutter Replaced
FOOEE Shift Lever Position Test (Non-RFE)		Clear Stored Accumulated Fuel Mass
FOOEF Shift Lever Position Test (RFE) FOOF9 Thermistor Test (62TE)		Coolant Three Way Valve Replaced Reset VCM Adaptives
FOOFB Thermistor Test (Non-RFE)		ECU SERIAL NUMBER Management
FOOFC Thermistor Test (RFE)		Write Front and Rear nominal tire pressure values
FOOF7 VVT System Test		Aim Test
FOOE7 Cam Crank Relearn		
-	•	